

HONDA

TILLER

FQ650

PARTS CATALOGUE

1

FOREWORD INDEX

1

ENGINE GROUP

2

FRAME GROUP

3

PART NUMBER INDEX

4

PART NAME INDEX

5

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of July 01, 2020.**
 - See the parts catalogue news for any revision that is made after July 01, 2020.
- **Always specify the part number when ordering a part.**
 - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
 - Note that the illustrations (part drawings) can differ from the actual parts in shape.
They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**


Initial version issue date July 01, 2020
Honda Motor Co., Ltd.

CONTENTS

	Page
•Instruction for use of parts catalogue	1
•How to refer to the part information	2
•Part catalogue structure.....	3
•When the parts were revised.....	4
•Abbreviations used in the parts catalogue.....	4
•How to check the part block and serial numbers.....	5
•Models, parts catalogue codes and applicable serial numbers	6
•Fuel hose, general purpose hoses and vinyl hose.....	7
•FLAT RATE SERVICE TIME	8
•Illustrated index	13
•ENGINE GROUP	17
•FRAME GROUP.....	36
•PART NO. INDEX.....	49
•PART NAME INDEX.....	51

How to refer to the part information

A Reference with "Illustrated index"

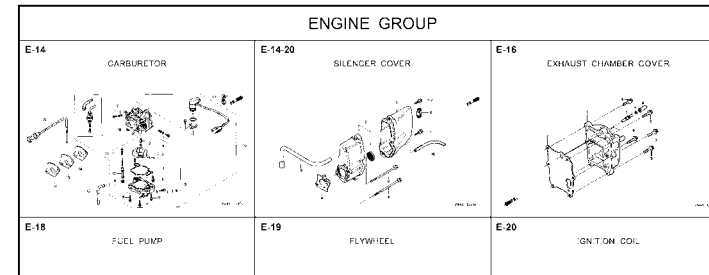

B Reference with "Part number index"

PART NO. INDEX				
Part Number	Page	Ref.	Part Number	Page
06000			15212-ZW9-000	49
06316-ZW9-000	104	1	15220-ZW9-003	49
11000			15332-ZW9-000	74
11300-ZW9-000	46	1	15332-ZW9-A30	76
11300-ZW9-800	46	1	15400-PFB-004	46
11340-ZW9-000	46	2	15422-ZW9-000	49
11342-ZW9-000	46	3	15473-881-000	49
11381-ZW9-003	47	1	15474-ZW9-000	49
			15611-921-000	45
			15655-ZW9-000	46
12000			16000	
12000-ZW9-000ZA	46	4	16010-ZV4-005	55
12155-ZV4-A00	48	1	16011-ZV4-005	55
12166-ZW9-000	45	1	16013-ZW9-003	55
12209-GB4-681	51	1	16016-ZW9-003	55
12210-ZW9-000ZA	45	2	16016-ZW9-721	55
12216-ZE2-300	74	1	16023-ZW9-003	55
			16024-ZV4-650	55
			16028-ZV4-650	55

C Reference with "Part name index"

PART NAME INDEX		
Part name	Page	Ref.
[A]		
ABSORBER, FUEL	80	5
ARMATURE COMP.	62	7
ARM COMP., LINK JOINT	102	18
ARM COMP., SHIFT LINK	102	14
ARM COMP., TILT	97	20
ARM, FUEL PUMP ROCKER	51	4
ARM, REVERSE LOCK	97	18
ARM, SHIFT LINK	92	7
ARM, STOPPER	52	12
ARM, THROTTLE REMOTE	92	6
ARM, VALVE ROCKER	51	3
[B]		
BAG, TOOL, 160MM	101	10
BAND	103	37
BAND B1, WIRE	87	1
BAND, CORD	35	18
BAND, TUBE CLIP, 11MM	81	20
BAND, TUBE CLIP, 12.5MM	81	19

E-2

CYLINDER HEAD

Block No.

Ref No.

ZW#3-ED200


Service Item

F.R.


O-RING, 26X2.7	0
PLUG, SPARK	0
O-RING, 9.5X1.5	0
SENSOR ASSY., WATER	0
COVER COMP., HEAD	0
PACKING, HEAD COVER	1
GASKET, CYLINDER HEAD	2
OIL SEAL, 20X32X6	3
HEAD COMP., CYLINDER	3

Ref. No.	Part No.	Description	Reqd. QTY								Serial No.	Parts catalogue code
			BF	BF	BF	BF	BF	BF	BF	BF		
			9901	9901	1001	1001	1001	1001	1001	1001		
1	12166-ZU9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	2	2		
2	12210-ZU9-000ZA	HEAD COMP., CYLINDER	1	1	1	1	1	1	1	1		
		W/ENG. DARK GRAY	1	1	1	1	1	1	1	1		
3	12251-ZU9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1	1	1		
4	12310-ZU9-000	COVER COMP., HEAD	1	1	1	1	1	1	1	1		
5	12312-ZU9-000	PACKING, HEAD COVER	1	1	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL	1	1	1	1	1	1	1	1		
		(NO GAUGE)										
7	16617-ZU9-000	HOLDER, CABLE	1	1	1	1	1	1	1	1	SC, S6	
	16617-ZU9-010		1	1	1	1	1	1	1	1	1001800	LHC, LHD
			1	1	1	1	1	1	1	1	1001801	LHC, LHD
8	35673-ZU5-003	SENSOR ASSY., WATER	1	1	1	1	1	1	1	1		
		TEMPERATURE	1	1	1	1	1	1	1	1		
9	90003-ZU9-000	BOLT, FLANGE, 6X22	4	4	4	4	4	4	4	4		
10	90007-ZU9-003	BOLT, FLANGE, 8X83	6	6	6	6	6	6	6	6		
11	90011-ZU9-000	BOLT, FLANGE, 6X14 (CT200)	1	1	1	1	1	1	1	1		
12	90020-ZU9-000	BOLT, FLANGE, 8X40	2	2	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1	1	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7	1	1	1	1	1	1	1	1		
15	91307-H62-005	O-RING, 9.5X1.5 (HONDA KITAKI)	1	1	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2	2	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16ER9)	2	2	2	2	2	2	2	2		

Part catalogue structure

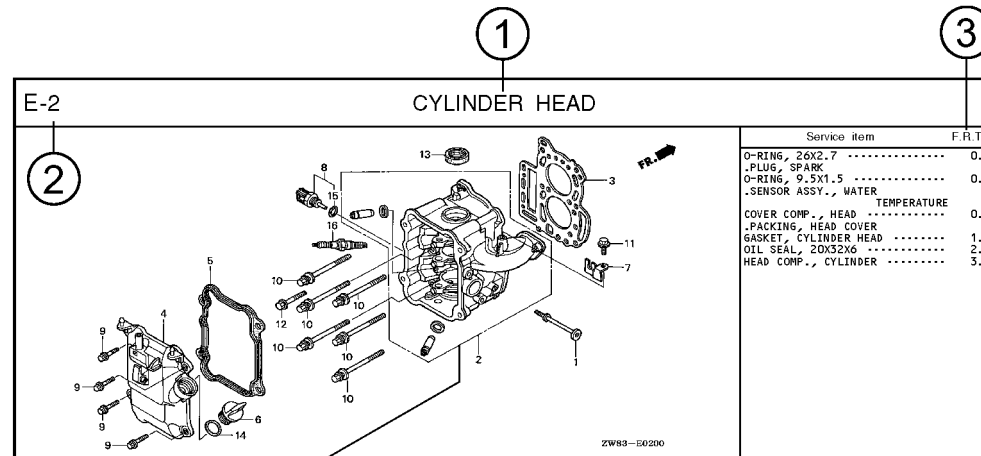

Ref. No.	Part No.	Description	Reqd. QTY						Serial No.	Parts catalogue code
			BF	BFP	BF	BFP	BF	BFP		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER								
		NH8	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL	1	1	1	1	1	1		
		(NO GAUGE)								
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1	SC,SG	
	16617-ZW9-010		1	1	1	1	1	1	1001800 LHC,LHD	

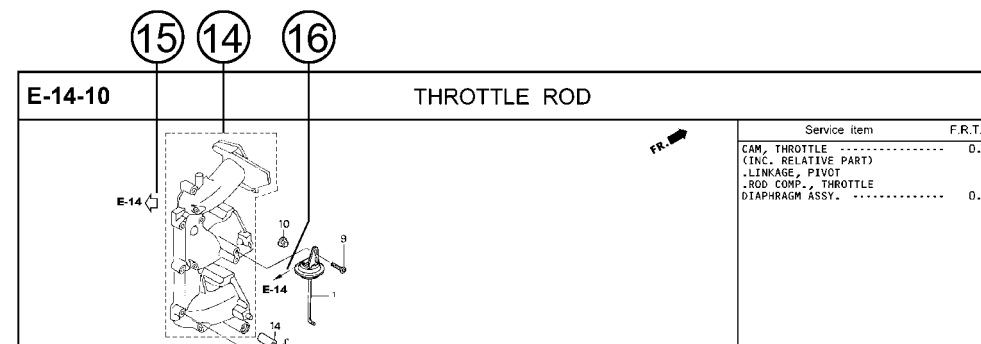

① Block title ② Block number

③ Service item/Flat rate time

④ Reference number

- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑤ Part number ⑥ Honda color code

⑦ Description

⑧ Assemblies

- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑨ Color description

⑩ Note

- Notes are shown with the parentheses in the part name column.

⑪ Required quantity

- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with "N" Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑫ Serial number

⑬ Type

- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the "parts catalogue, type" please refer to "Models, types and applicable serial numbers" for confirmation.

⑭

- Parts enclosed within a dotted line are covered in a different block.

⑮

- A hollow arrow indicates the block No. for the parts enclosed within a dotted line.

⑯

- A solid arrow indicates the block No. the part in question is connected to.

When the parts were revised



Be sure to check the serial number!!



Ref. No.	Part No.	Description	Reqd. QTY						Serial No.
			BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER							
3	12251-ZW9-003	*NH8*.....DARK GRAY	1	1	1	1	1	1	
4	12310-ZW9-000	GASKET, CYLINDER HEAD	1	1	1	1	1	1	
5	12312-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1	
6	15611-921-000	PACKING, HEAD COVER	1	1	1	1	1	1	
7	16617-ZW9-000	CAP, OIL	1	1	1	1	1	1	
	16617-ZW9-010	(NO GAUGE)							
		HOLDER, CABLE (###).....	1	1	1	1	1	1	
			1	1	1	1	1	1	

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.



- The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).

Abbreviations used in the parts catalogue



- The following abbreviations are used in the parts name column.

AAmpere	FR. Front
A.C. Alternating current	IN. Inlet
ASSY. Assembly	L (100L) ... Link (100 Links)
AT. Automatic transmission	L. Left
C.D.I. Capacitive discharge ignition	MM Millimeter
COMP. Complete	MT. Manual Transmission
D.C. Direct current	P.T.O. Power take off
EX. Exhaust	R. Right
G.F.C.I. Ground fault circuit interruptor	RR. Rear
HEX. Hexagonal	STD. Standard
H.S.T. Hydrostatic transmission	T (22T) Tooth (22 Teeth)
	V Volt
	W Watt

How to check the part block and serial numbers

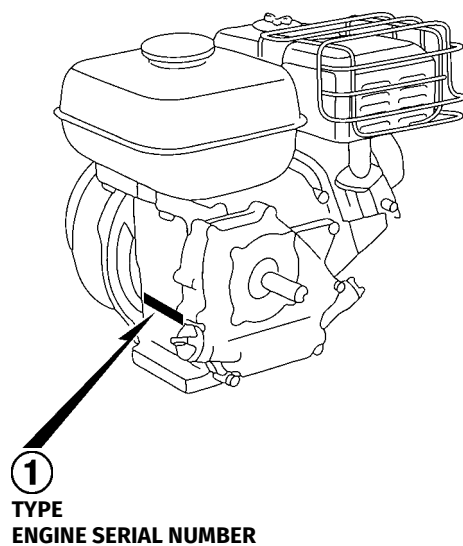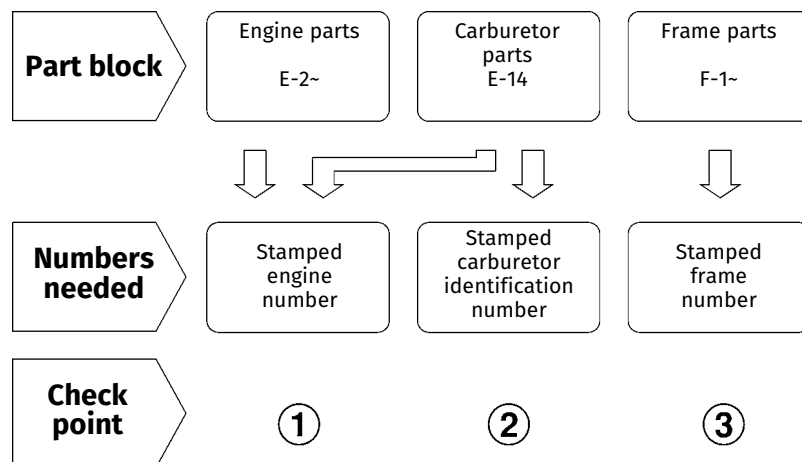

②
CARBURETOR IDENTIFICATION
NUMBER

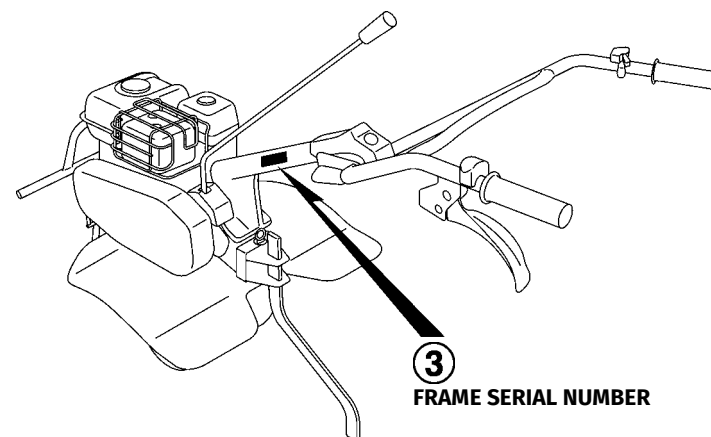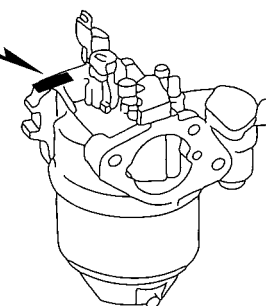

1

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
FQ650	DH	DH	GP200H	FY1	GCATH-2000001~	FAFC-1000001~	RA07 A
	WH	WH		FY2			

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

RA07 A KC ナ

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
(For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:

Refers to the bulk part.

Marking code (fuel hose and general purpose hose)

Change code (Vinyl hose)

Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

- Fuel hose
 - 2: Red outside braid (3 mm inside dia. only)
 - 5: Black inside braid
 - 3: Red (3 mm inside dia. only)
 - 4: Ash gray with red stripe (3 mm inside dia. only)
 - 6: Black

- General hose
 - 1: Ash gray
 - 2: Ash gray
 - 3: Black
 - 5: Black

- Vinyl hose
 - 1: Clear
 - 2: Black
 - 3: Light red
 - 6: Light red
 - 7: Pale black

Lengths:

001: 1 m (standard)
003: 3 m
008: 8 m

} Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm
35: 3.5 mm
45: 4.5 mm

50: 5.0 mm
55: 5.3 mm, 5.5 mm
65: 6.5 mm

70: 7.0 mm
75: 7.3 mm, 7.5 mm
80: 8.0 mm

11: 11 mm
91: 12 (outside dia. 15) mm
92: 12 (outside dia. 16) mm

12: 12 (outside dia. 17) mm
14: 14 mm
17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm
03: ID. 3.0, OD. 6.0 mm
05: ID. 3.5, OD. 6.5 mm
07: ID. 4.0, OD. 7.0 mm
08: ID. 4.5, OD. 6.5 mm
09: ID. 4.5, OD. 8.0 mm

12: ID. 5.0, OD. 7.0 mm
10: ID. 5.0, OD. 8.0 mm
11: ID. 5.0, OD. 9.0 mm
14: ID. 6.0, OD. 9.0 mm
17: ID. 7.0, OD. 9.0 mm
19: ID. 7.0, OD. 11.0 mm

21: ID. 8.0, OD. 9.0 mm
23: ID. 8.0, OD. 12.0 mm
25: ID. 9.0, OD. 11.0 mm
27: ID. 9.0, OD. 13.0 mm
33: ID. 10.0, OD. 14.0 mm
36: ID. 11.0, OD. 13.0 mm

37: ID. 11.0, OD. 15.0 mm
38: ID. 12.0, OD. 13.0 mm
39: ID. 12.0, OD. 14.0 mm
40: ID. 12.0, OD. 16.0 mm
43: ID. 13.0, OD. 15.0 mm
45: ID. 14.0, OD. 18.0 mm

50: ID. 16.0, OD. 19.0 mm
55: ID. 17.5, OD. 20.5 mm
60: ID. 22.0, OD. 27.0 mm

Hose type:

- 1: Fuel hose
- 3: Vinyl hose
- 5: General hose


⊙ CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

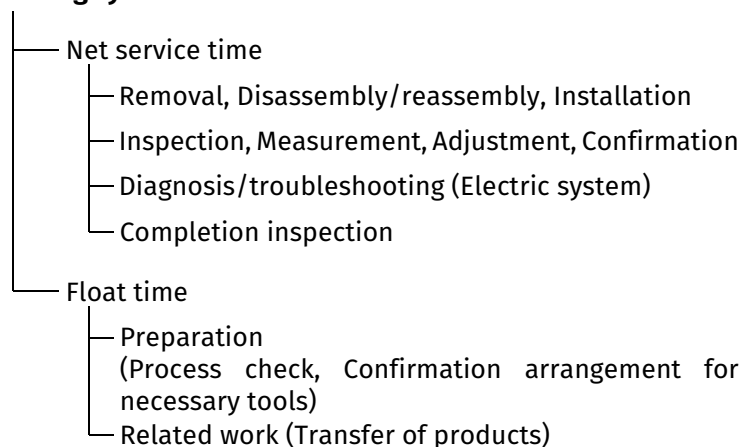

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
Example: (0.1)→6 minutes, (0.2)→12 minutes
[Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
 - Locations with little aging deterioration or breakage during normal use.
 - Service work that can be finished by one touch.
 - Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
 - Products and parts whose location for installation differs according to its status of use and application.
- * When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water draining, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
① ②	1111L1	(1, 3, 4, 7) VALVE, INTAKE 4.1	②
③	1111L1A	• NOTE: OHV type • Includes: Engine removal and installation One head (intake all) add1.4	⑦ ⑤

- ① Reference No. of the illustration of part that shows location of the replacement work.
- ② FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.
- ③ LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.

 
- ④ Indicating the intake valve replacement and FRT4.1.
- ⑤ Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

- ⑥ Indicating work condition or application condition of the service item.
- ⑦ Indicating work contents that are included in the service item.
- ⑧ Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
 (intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.



Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111L1	VALVE, INTAKE	4.1
	.	.	.
	.	.	.

+

Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION	

• LON code system

1	11	1	L1	A
a	b	c	d	e

- a) Category code..... Engine
- b) Location/function code..... Engine upper
- c) Operation code..... Replace
- d) Operation sequence number (Unit code can be shown with alphabet)
..... Intake valve
(No regular rule of code)
- e) Additional code..... One head (intake all)
(No regular rule of code)

1	11	1	L1	A
a		c		

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurement
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts

Removal/Installation, Adjustment, Inspection/Measurement, Overhaul, Other work

E: Engine, T: Transmission, D: Drive system, B: Body and related parts

• Removal/Installation

Set with the parts configuration in the status of being removed from the product.

	LON	DESCRIPTION	FRT
E	1001A2	ENGINE-REMOVAL/INSTALLATION	0.9
D	2101D9	TRANSMISSION-REMOVAL/INSTALLATION INCLUDES: Engine-removal/installation	1.7

• Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	VALVE CLEARANCE-ADJUSTMENT NOTE: For 1 product	0.3
	1163A0	CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT	0.3
	3113A2	CARBURETOR IDLE-ADJUSTMENT	0.2
	8113B1	THROTTLE CABLE-ADJUSTMENT	0.1
D	2133A0	TRANSMISSION DRIVE BELT TENSION-ADJUSTMENT	0.3
	8113B8	TRANSMISSION DRIVE CLUTCH CABLE-ADJUSTMENT	0.1

• Inspection/Measurement

	LON	DESCRIPTION	FRT
E	1105A0	ENGINE OIL-INSPECTION	0.1
	3115A2	CARBURETOR FLOAT LEVEL-MEASUREMENT	0.2

• Overhaul

Work conditions: The required measurements, inspections, adjustments, and cleaning/washing for each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	CARBURETOR-OVERHAUL INCLUDES: All necessary adjustment	0.6


• Other work

	LON	DESCRIPTION	FRT
E	1101E1	ENGINE OIL-CHANGE INCLUDES: Engine oil-inspection	0.2
	3120A0	AIR CLEANER-CLEANING INCLUDES: Air cleaner-inspection	0.1
	6140A0	SPARK PLUG-ADJUSTMENT/CLEANING INCLUDES: Spark plug check NOTE: For 1 product	0.1

ENGINE GROUP

E-2


CYLINDER HEAD

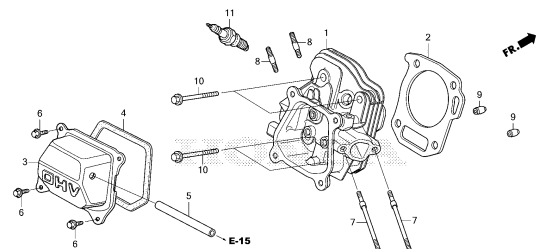

YX48E0200

E-3


CYLINDER BARREL

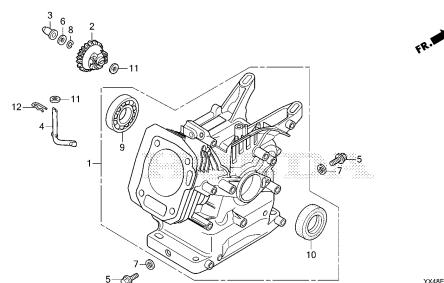

YX48E0300

E-6


CRANKCASE COVER

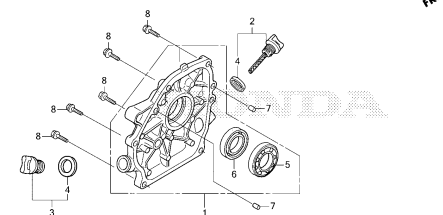

YX48E0600

E-7


CRANKSHAFT/PISTON

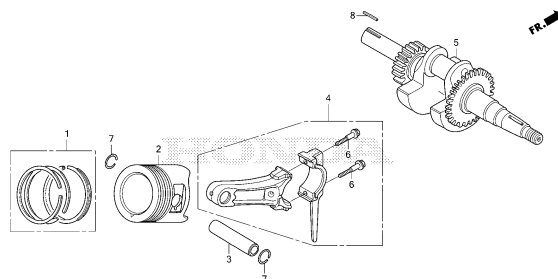

YX48E0700

E-9


CAMSHAFT

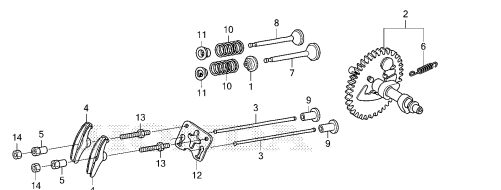

YX48E0900

E-11


RECOIL STARTER

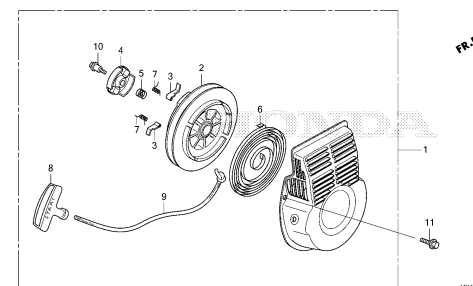

YX48E1100

E-12


FAN COVER

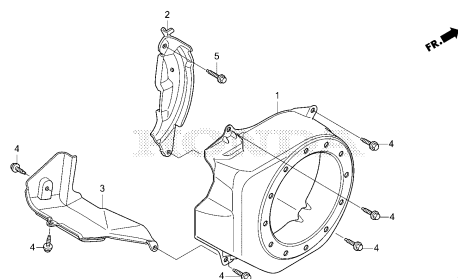

YX48E1200

E-14


CARBURETOR

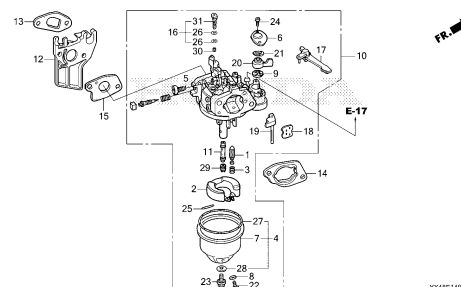

YX48E1400

E-15

AIR CLEANER

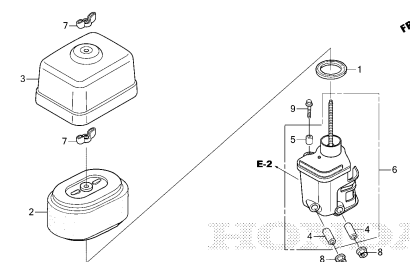


YX48E1500

2

ENGINE GROUP

E-16


MUFFLER

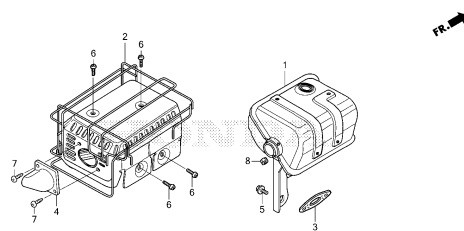

YX4BE1600

E-17


FUEL TANK

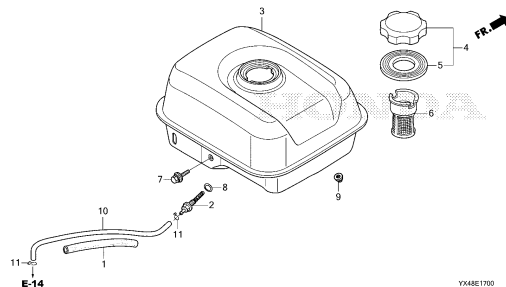

YX4BE1700

E-19


FLYWHEEL

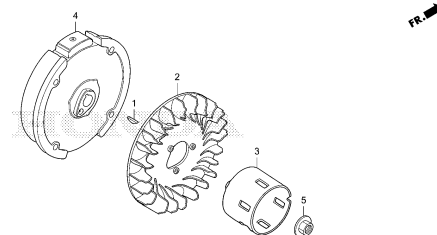

YX4BE1900

E-20


IGNITION COIL

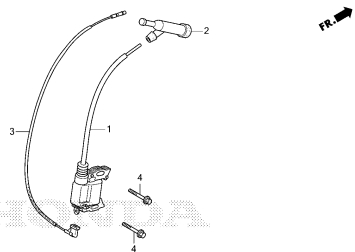

YX4BE2000

E-22


CONTROL

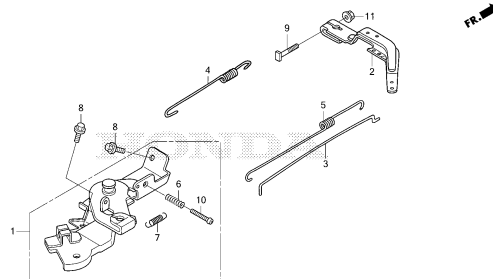

YX4BE2200

E-28


LABEL

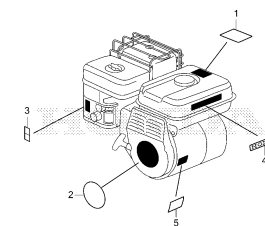

YX4BE2800

EOP-1

GASKET KIT

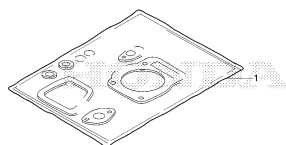


YX4BX0100

FRAME GROUP

F-1


HANDLE PIPE

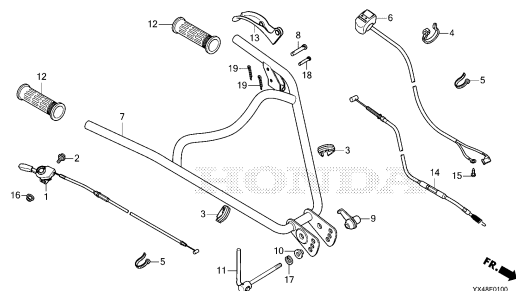

YX48F0100

F-3


HANDLE COLUMN

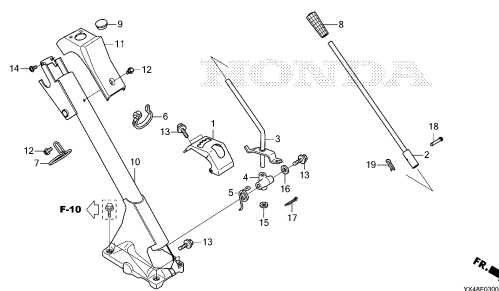

YX48F0300

F-8


BELT COVER

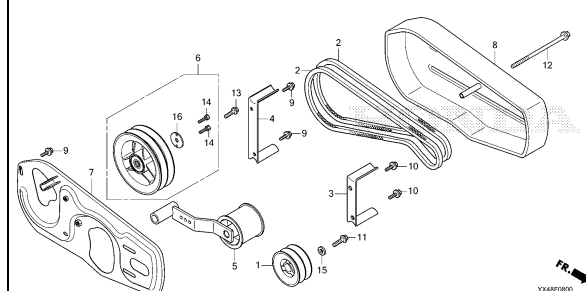

YX48F0800

F-10


TRANSMISSION CASE

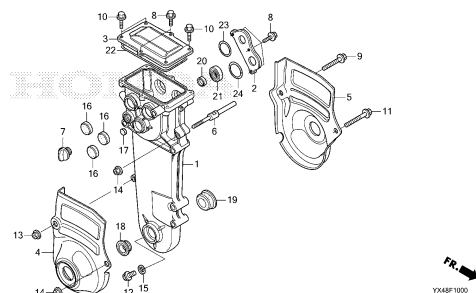

YX48F1000

F-11


TRANSMISSION GEAR

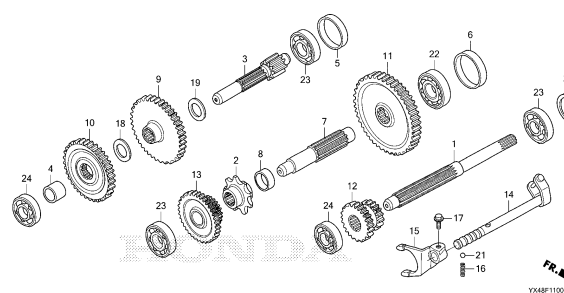

YX48F1100

F-12


WHEEL SHAFT

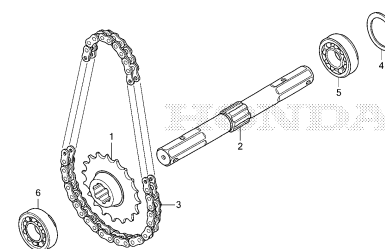

YX48F1200

F-14


WHEEL/FENDER

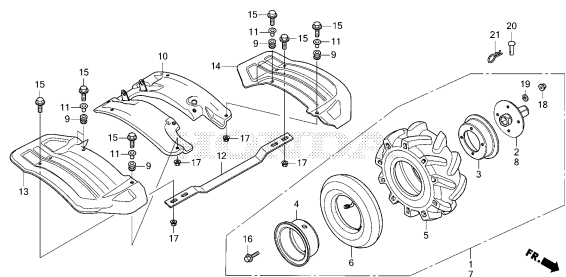

YX48F1400

F-20


ENGINE BED

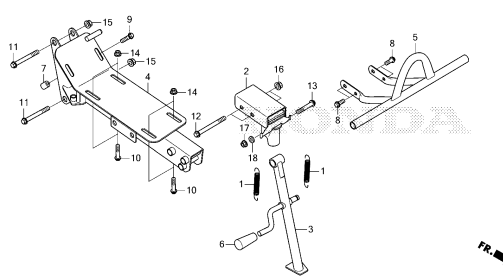

YX48F2000

F-21

HITCH BOX/DAG BAR

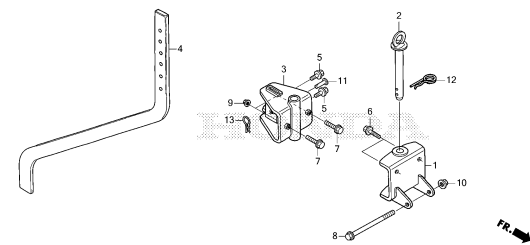

YX48F2100

3


FRAME GROUP

This diagram shows the exploded view of the YX48F2500 engine assembly. The components are numbered as follows:

- 1: A curved metal bracket or handle.
- 2: A long, thin metal rod or pin.
- 3: A small metal plate or bracket at the base.
- 4: A small metal plate or bracket on the side.
- 5: A small metal plate or bracket at the bottom left.
- 6: A rectangular metal plate at the top.
- 7: A rectangular metal plate at the bottom.
- 8: A small metal plate or bracket on the right side.
- 9: A small metal plate or bracket at the top right.

This diagram shows the exploded view of the YX48F2500 engine assembly. The components are numbered as follows:

- 1: A curved metal bracket or handle.
- 2: A long, thin metal rod or pin.
- 3: A small metal plate or bracket at the base.
- 4: A small metal plate or bracket on the side.
- 5: A small metal plate or bracket at the bottom left.
- 6: A rectangular metal plate at the top.
- 7: A rectangular metal plate at the bottom.
- 8: A small metal plate or bracket on the right side.
- 9: A small metal plate or bracket at the top right.

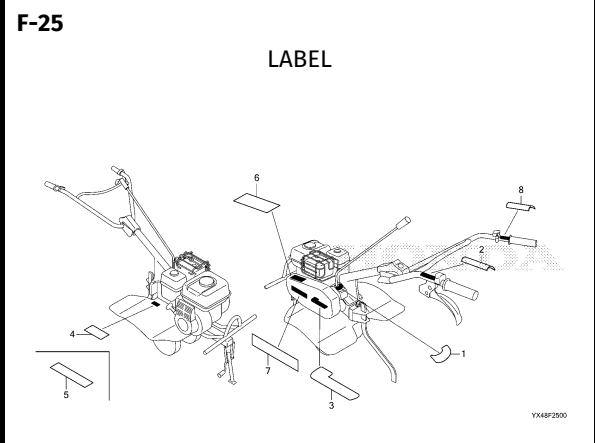


This diagram shows the exploded view of the YX48F2500 engine assembly. The components are numbered as follows:

- 1: A curved metal bracket or handle.
- 2: A long, thin metal rod or pin.
- 3: A small metal plate or bracket at the base.
- 4: A small metal plate or bracket on the side.
- 5: A small metal plate or bracket at the bottom left.
- 6: A rectangular metal plate at the top.
- 7: A rectangular metal plate at the bottom.
- 8: A small metal plate or bracket on the right side.
- 9: A small metal plate or bracket at the top right.

F-26

TOOL

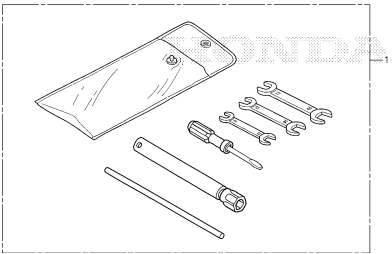


A line drawing of various tools arranged on a dashed rectangular background. The tools include: a large zippered bag with a small circular logo; three open-end wrenches of different sizes; a hex key (Allen key); a long, thin metal rod or pin; and a shorter, thicker metal pin or bolt with a hexagonal head. A small number '1' is located to the right of the bag.

YX48F2600


F-26

TOOL

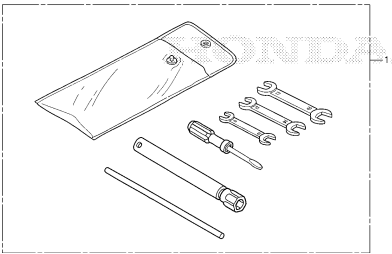


A line drawing of various tools arranged on a dashed rectangular background. The tools include: a large zippered bag with a small circular logo; three open-end wrenches of different sizes; a hex key (Allen key); a long, thin metal rod or pin; and a shorter, thicker metal pin or bolt with a hexagonal head. A small number '1' is located to the right of the bag.

YX48F2600

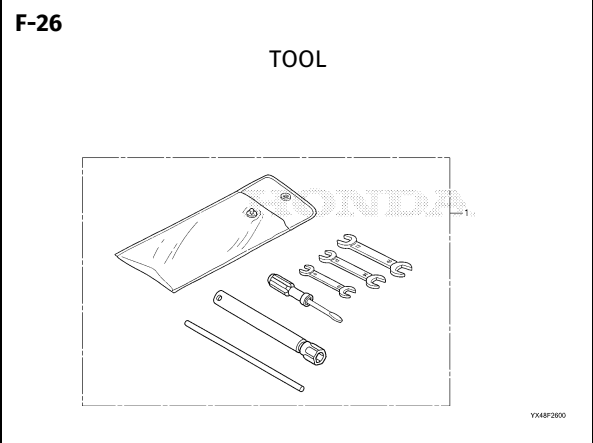

F-26

TOOL

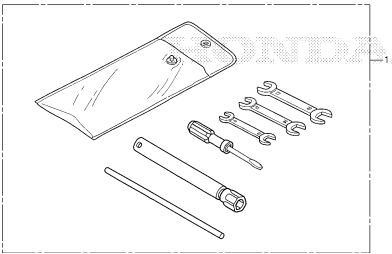


A line drawing of various tools arranged on a dashed rectangular background. The tools include: a large zippered bag with a small circular logo; three open-end wrenches of different sizes; a hex key (Allen key); a long, thin metal rod or pin; and a shorter, thicker metal pin or bolt with a hexagonal head. A small number '1' is located to the right of the bag.

YX48F2600

E-2

CYLINDER HEAD

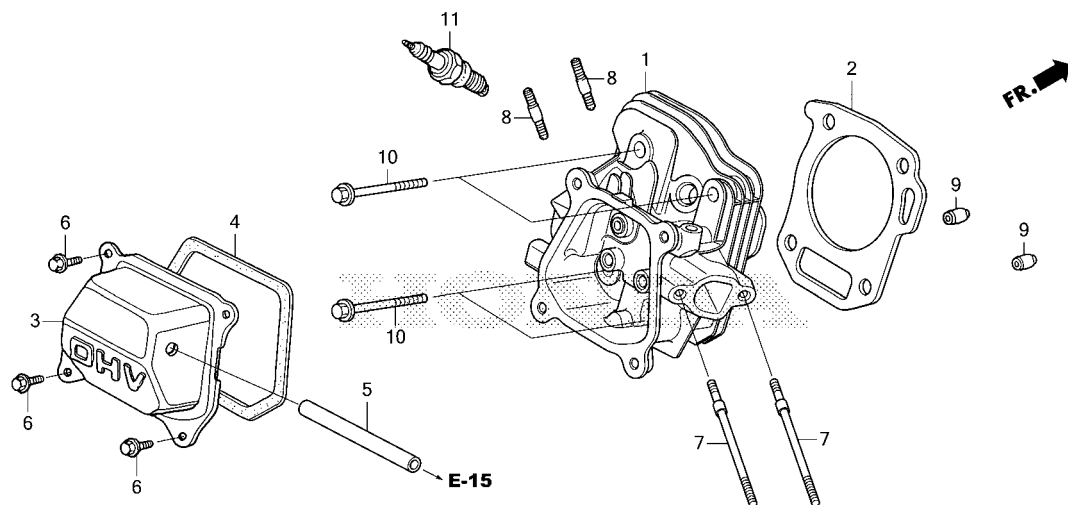


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111N3	HEAD, CYLINDERINCLUDES: Valve clearance adjustment	1.5
2	1111N4	GASKET, CYLINDER HEADINCLUDES: Valve clearance adjustment	1.2
3	1111D5	CYLINDER HEAD COVER AND/OR PACKING	0.1
5	1111K5	TUBE, BREATHER	0.1
11	6141C1	PLUG, SPARKINCLUDES: Spark plug check	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	12210-ZDK-405	HEAD COMP., CYLINDER.....	1		
2	12251-ZL0-003	GASKET, CYLINDER HEAD (NIPPON LEAKLESS)	1		
3	12310-ZE1-020	COVER COMP., HEAD.....	1		
4	12312-Z1T-701	PACKING, HEAD COVER (NINGBO SIL GASKET)	1		
5	15721-ZH8-000	TUBE, BREATHER.....	1		
6	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	4		
7	90043-ZDK-000	BOLT, STUD, 6X112.....	2		
8	90047-ZDK-000	BOLT, STUD, 8X32.....	2		
9	94301-10160	DOWEL PIN, 10X16.....	2		
10	95701-08060-00	BOLT, FLANGE, 8X60.....	4		
11	98079-56846	PLUG, SPARK(BPR6ES)(NGK).....	1		
	98079-56855	PLUG, SPARK(W20EPR-U)(DENSO)·	1		

E-3

CYLINDER BARREL

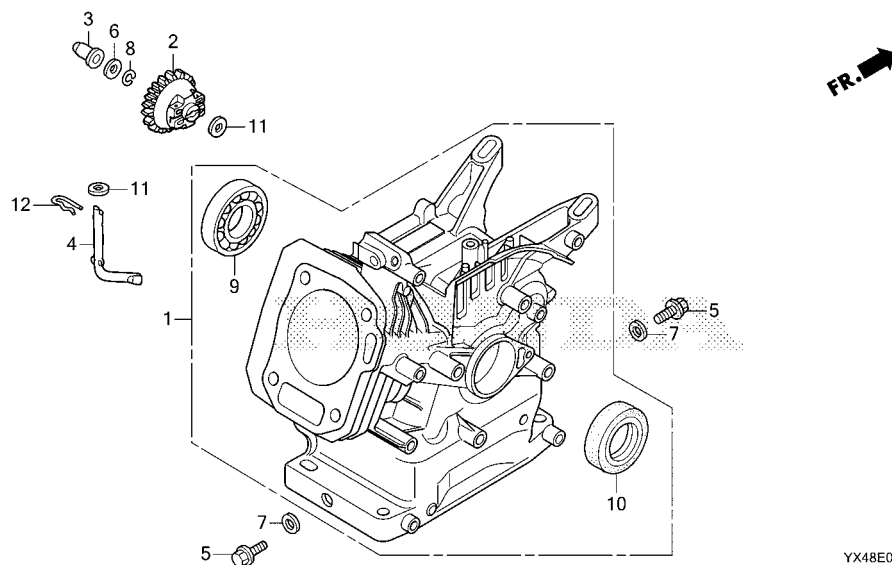


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101A0	BARREL, CYLINDERINCLUDES: Engine removal and installation	2.5
2	1161C4	GOVERNOR ASSEMBLYINCLUDES: Engine removal and installation	2.4
3	1161B6	SLIDER, GOVERNORINCLUDES: Engine removal and installation	1.7
4	1161B4	SHAFT, GOVERNOR ARMINCLUDES: Engine removal and installation	2.4
9	1101A7	BEARING, CRANKSHAFT :RIGHTINCLUDES: Engine removal and installation	2.6
10	1101E3	OIL SEAL, CRANKSHAFT :RIGHT .. .INCLUDES: Engine removal and installation	2.3

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	12000-ZDL-405	BARREL ASSY., CYLINDER.....	1		
2	16510-ZDL-000	GOVERNOR ASSY.	1		
3	16531-Z1T-000	SLIDER, GOVERNOR.....	1		
4	16541-Z1T-000	SHAFT, GOVERNOR ARM.....	1		
5	90131-ZE1-000	BOLT, DRAIN PLUG.....	2		
6	90451-Z1T-000	WASHER, THRUST, 6MM.....	1		
7	90601-ZE1-000	WASHER, DRAIN PLUG, 10.2MM...	2		
8	90602-ZE1-000	CLIP, GOVERNOR HOLDER.....	1		
9	91001-ZDK-005	BEARING, RADIAL BALL, 6205...	1		
10	91202-Z1T-003	OIL SEAL, 25X41X6(ARAI).....	1		
11	94101-06800	WASHER, PLAIN, 6MM.....	2		
12	94251-08000	PIN, LOCK, 8MM.....	1		

E-6

CRANKCASE COVER

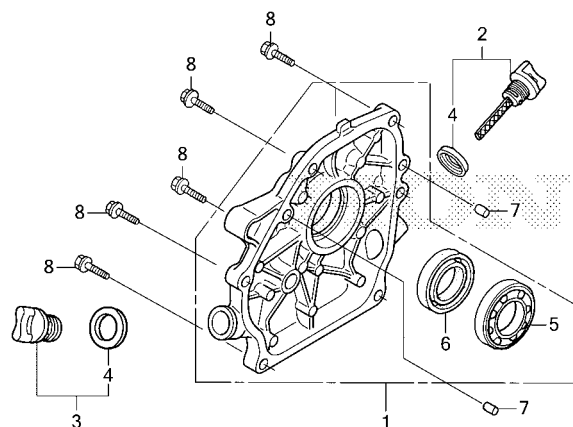


FR.

YX48E0600

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F1	COVER, CRANKCASEINCLUDES: Engine removal and installation	1.4
5	1101A5	BEARING, CRANKSHAFT :LEFTINCLUDES: Engine removal and installation	1.5
6	1101C0	OIL SEAL, CRANKSHAFT :LEFTINCLUDES: Engine removal and installation	1.4

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	11300-ZDK-630	COVER ASSY., CRANKCASE.....	1		
2	15600-Z1T-000	CAP ASSY., OIL FILLER.....	1		
3	15600-Z1T-600	CAP ASSY., OIL FILLER.....	1		
4	15625-Z1T-000	PACKING, OIL FILLER CAP.....	2		
5	91002-ZDK-005	BEARING, RADIAL BALL, 6205...	1		
6	91202-Z1T-003	OIL SEAL, 25X41X6(ARAI).....	1		
7	94301-08140	DOWEL PIN, 8X14.....	2		
8	95701-08032-00	BOLT, FLANGE, 8X32.....	6		

2

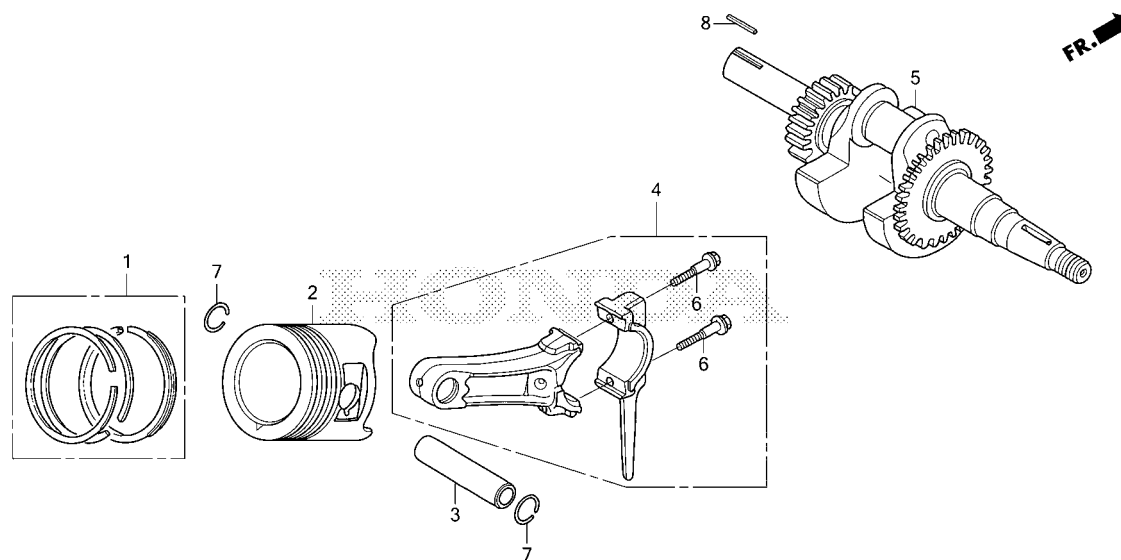


YX48E0700

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111J4	RING SET, PISTONINCLUDES: Engine removal and installation	2.3
2	1111R1	PISTON AND/OR RING SET AND/OR BEARING AND/OR RODINCLUDES: Engine removal and installation .INCLUDES: Inspection/Measurement/Cleaning	2.3
3	1101X0	PIN, PISTONINCLUDES: Engine removal and installation	2.2
4	1101F3	ROD, CONNECTINGINCLUDES: Engine removal and installation	2.2
5	1101F0	CRANKSHAFTINCLUDES: Engine removal and installation	2.3

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	13010-Z4K-004	RING SET, PISTON(STD.)(TPR) ..	1		
	13010-Z4P-003	RING SET, PISTON(STD.)(RIKEN)	1		
	13011-Z4K-004	RING SET, PISTON(0.25)(TPR) ..	(1)		
	13011-Z4P-003	RING SET, PISTON(0.25)(RIKEN)	(1)		
	13012-Z4K-004	RING SET, PISTON(0.50)(TPR) ..	(1)		
	13012-Z4P-003	RING SET, PISTON(0.50)(RIKEN)	(1)		
	13013-Z4K-004	RING SET, PISTON(0.75)(TPR) ..	(1)		
	13013-Z4P-003	RING SET, PISTON(0.75)(RIKEN)	(1)		
2	13101-ZDL-003	PISTON(STD.)	1		
	13102-ZDL-003	PISTON(0.25)	(1)		
	13103-ZDL-003	PISTON(0.50)	(1)		
	13104-ZDL-003	PISTON(0.75)	(1)		
3	13111-ZDK-003	PIN, PISTON	1		
4	13200-Z1T-305	ROD ASSY., CONNECTING (UNDER SIZE)	(1)		
	13200-ZDK-003	ROD ASSY., CONNECTING	1		
5	13310-ZDL-003	CRANKSHAFT COMP.	1		
6	90001-Z1T-000	BOLT, CONNECTING ROD	(2)		
	90001-ZDK-003		2		
7	90551-ZE1-000	CLIP, PISTON PIN, 18MM	2		
8	90741-883-810	KEY, 5X5X33(YELLOW)	1		

E-9

CAMSHAFT

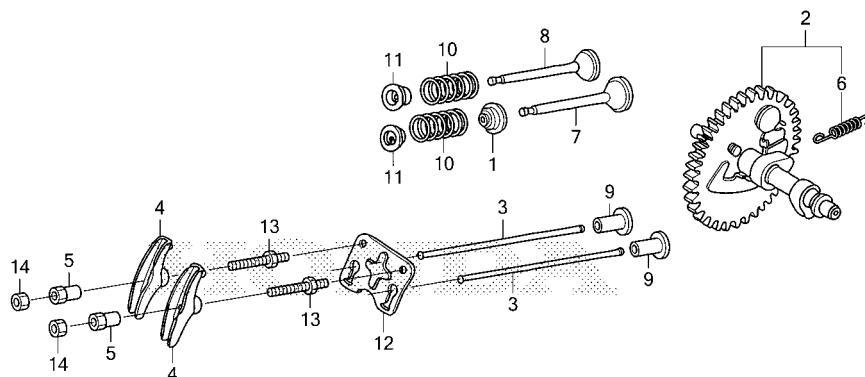

YX48E0900


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K2	SEAL, INTAKE VALVE STEMINCLUDES: Valve clearance adjustment	1.4
2	1111C2	CAMSHAFTINCLUDES: Engine removal and installation .INCLUDES: Valve clearance adjustment	1.5
3	1111L6	ROD, PUSH :INTAKEINCLUDES: Valve clearance adjustment	0.3
	1111L7	ROD, PUSH :EXHAUSTINCLUDES: Valve clearance adjustment	0.3
	1111L8	ROD, PUSH :BOTHINCLUDES: Valve clearance adjustment	0.3
4	1111A2	ARM, ROCKER :INTAKEINCLUDES: Valve clearance adjustment	0.3
	1111A1	ARM, ROCKER :EXHAUSTINCLUDES: Valve clearance adjustment	0.3
+	1111S6	ARM, ROCKER :BOTH Valve clearance adjustment	0.3

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	12209-ZH8-003	SEAL, VALVE STEM.....	1		
2	14100-ZDL-003	CAMSHAFT ASSY.....	1		
3	14410-ZE1-010	ROD, PUSH.....	2		
4	14431-Z1T-000	ARM, VALVE ROCKER.....	2		
	14431-ZE1-000		2		
5	14451-Z7E-000	PIVOT, ROCKER ARM.....	2		
6	14568-ZE1-000	SPRING, WEIGHT RETURN.....	1		
7	14711-ZDK-003	VALVE, IN.	1		
8	14721-ZDK-013	VALVE, EX.	1		
9	14731-ZL0-000	LIFTER, VALVE.....	2		
10	14751-ZF1-000	SPRING, VALVE.....	2		
11	14771-Z1T-000	RETAINER, VALVE SPRING.....	2		
12	14791-ZE1-010	PLATE, PUSH ROD GUIDE.....	1		
13	90012-ZE0-010	BOLT, PIVOT, 8MM.....	2		
14	90206-ZE1-000	NUT, PIVOT ADJUSTING.....	2		

2

E-9

CAMSHAFT

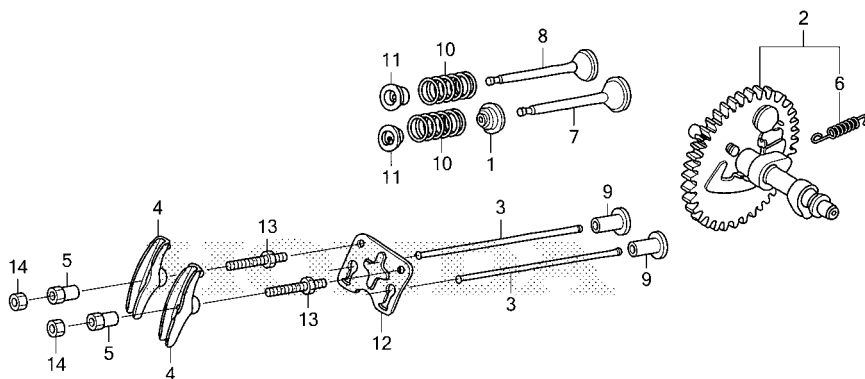


YX48E0900

FR. →

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 4		.INCLUDES: Valve clearance adjustment	
7 1111L1		VALVE, INTAKE	1.4
		.INCLUDES: Valve clearance adjustment and reface	
1111L1E		.Replace intake and exhaust all add	0.1
8 1111L0		VALVE, EXHAUST	1.4
		.INCLUDES: Valve clearance adjustment and reface	
1111L0E		.Replace intake and exhaust all add	0.1
9 1111L9		LIFTER, VALVE :INTAKE	1.5
		.INCLUDES: Engine removal and installation	
		.INCLUDES: Valve clearance adjustment	
1111M0		LIFTER, VALVE :EXHAUST	1.5
		.INCLUDES: Engine removal and installation	
		.INCLUDES: Valve clearance adjustment	
1111M1		LIFTER, VALVE :BOTH	1.5
		.INCLUDES: Engine removal and installation	
+			

E-9

CAMSHAFT

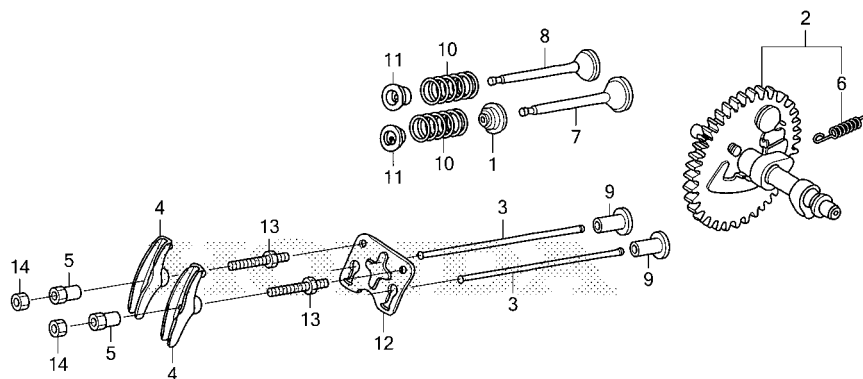


YX48E0900

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 9		.INCLUDES: Valve clearance adjustment	
10	1111P3	SPRING, VALVE :INTAKE	1.3
		.INCLUDES: Valve clearance adjustment	
	1111P3A	.Replace intake and exhaust all add	0.1
	1111P4	SPRING, VALVE :EXHAUST	1.3
		.INCLUDES: Valve clearance adjustment	
	1111P4A	.Replace intake and exhaust all add	0.1

E-11

RECOIL STARTER

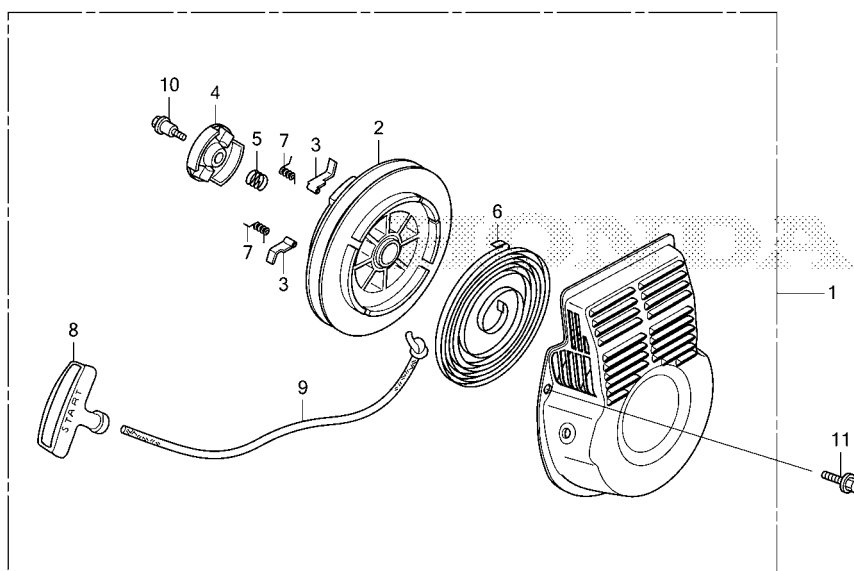


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL	0.1
2	1121B1	REEL, RECOIL STARTER	0.3
3	1121B0	STARTER RATCHET AND/OR SPRING .NOTE: Same time for two units (5)	0.3
4	1121A4	GUIDE, RATCHET	0.3
6	1121B7	SPRING, RECOIL STARTER RETURN	0.3
8	1121A3	GRIP, RECOIL STARTER	0.1
9	1121B3	ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	28400-ZDL-A01	STARTER ASSY., RECOIL	1		
2	28421-ZDL-A01	REEL, RECOIL STARTER	1		
3	28422-ZDL-A01	RATCHET, STARTER	2		
4	28433-ZDL-A01	GUIDE, RATCHET	1		
5	28441-ZDL-A01	SPRING, FRICTION	1		
6	28442-ZDL-A01	SPRING, RECOIL STARTER	1		
7	28443-ZDL-A01	SPRING, RETURN	2		
8	28461-ZDL-A01	KNOB, RECOIL STARTER	1		
9	28462-ZDL-A01	ROPE, RECOIL STARTER	1		
10	90003-ZDL-A01	SCREW, SETTING	1		
11	95701-06010-00	BOLT, FLANGE, 6X10	3		

E-12

FAN COVER

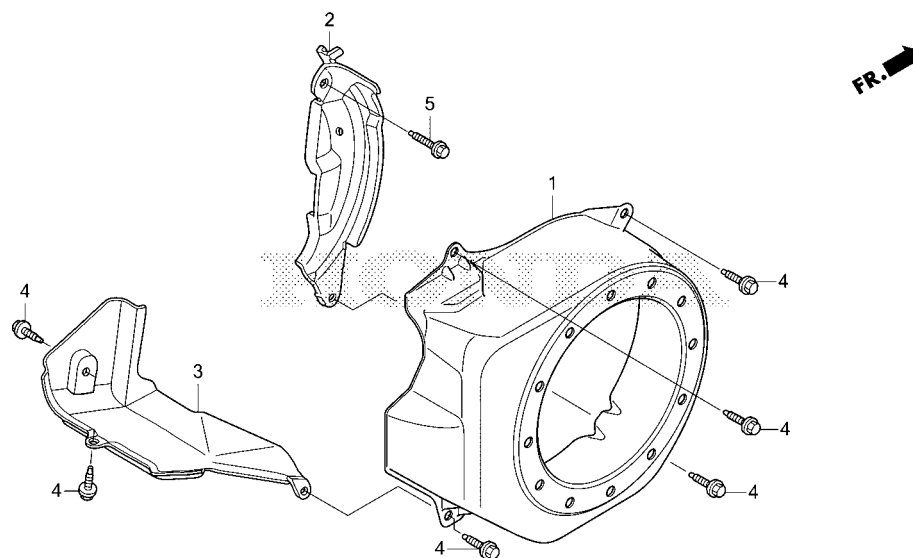

YX48E1200


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G8	COVER, ENGINE COOLING FAN	0.1
2	1121A7	PLATE, SIDE	0.1
3	4141E3	SHROUD, ENGINE	0.6

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	19610-ZDK-800ZC	COVER COMP., FAN			
		R280.....POWER RED	1		
2	19612-ZH8-000	PLATE, SIDE(STD.).....	1		
3	19631-ZDK-000	SHROUD	1		
4	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	6		
5	90022-888-010	BOLT, FLANGE, 6X20(CT200)....	1		

2

E-14

CARBURETOR

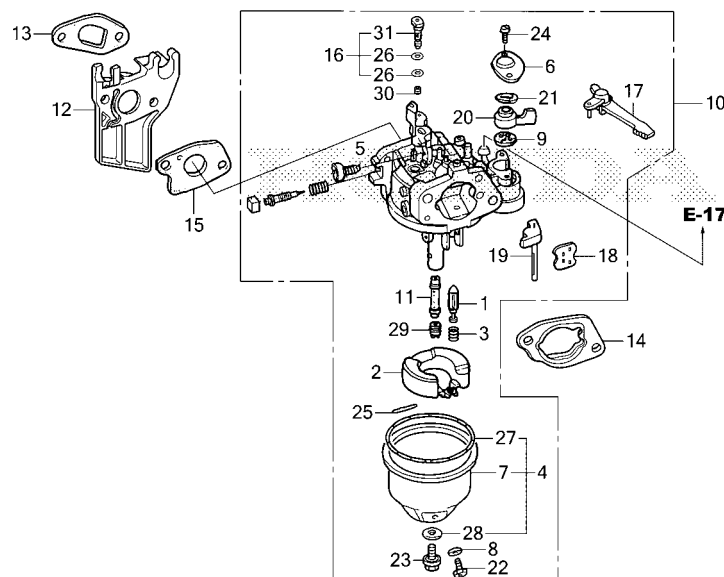


YX48E1400

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111E1	(2) FLOAT VALVE SET AND/OR FLOAT SET	0.3
4	3111A3	FLOAT CHAMBER SET AND/OR GASKET	0.2
9	3101C5	(6,20,21) PACKING, FUEL COCK	0.1
10	3111F3	CARBURETOR	0.3
12	3111C0	(13) CARBURETOR INSULATOR AND/OR PACKING	0.2
14	3111D9	SPACER, CARBURETOR	0.1
15	3111C8	PACKING, CARBURETOR	0.2
17	8101F9	LEVER, CARBURETOR CHOKE	0.2
19	3111J4	(18) SHAFT, CARBURETOR CHOKE	0.2
29	3111C3	(11) JET, MAIN	0.2

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	16011-ZDK-005	VALVE ASSY., NEEDLE.....	1		
2	16013-ZDK-005	FLOAT	1		
3	16014-ZDK-005	SPRING	1		
4	16015-ZDK-005	CHAMBER SET, FLOAT	1		
5	16016-ZDK-005	SCREW, ADJUSTING	1		
6	16018-ZDK-005	COVER	1		
7	16019-ZDK-005	BOWL ASSY.	1		
8	16020-ZDK-005	GASKET	1		
9	16021-ZDK-005	GASKET	1		
10	16100-ZDL-704	CARBURETOR ASSY.(RA07 A).....	1		
11	16166-ZDL-704	NOZZLE, MAIN.....	1		
12	16211-ZCW-000	INSULATOR, CARBURETOR	1		
13	16212-Z1T-701	PACKING, INSULATOR (NINGBO SIL GASKET)	1		
14	16220-ZE1-020	SPACER COMP., CARBURETOR	1		
15	16221-Z1T-701	PACKING, CARBURETOR (NINGBO SIL GASKET)	1		
16	16364-ZDL-703	JET SET, SLOW	1		
17	16610-ZDK-005	LEVER, CHOKE	1		
18	16616-ZDL-703	CHOKE	1		
19	16617-ZDK-005	SHAFT, CHOKE	1		
20	16953-ZDK-005	LEVER, SHUT OFF	1		
21	16964-ZDK-005	WASHER, WAVE	1		
22	90001-ZDK-005	BOLT	1		
23	90002-ZDK-005	BOLT	1		

E-14


CARBURETOR

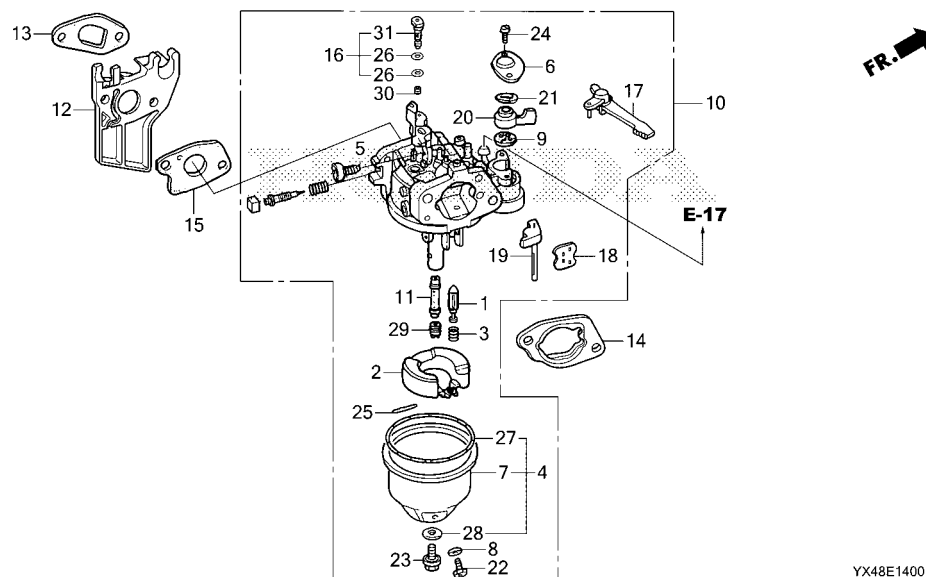

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
24	90003-ZDK-005	SCREW(M3X8).....	2		
25	90701-ZDK-005	PIN.....	1		
26	91301-ZDK-005	O-RING.....	2		
27	91302-ZDK-005	O-RING.....	1		
28	91303-ZDK-005	O-RING.....	1		
29	99151-ZDK-0620	JET, MAIN, #62.....	(1)		
	99151-ZDK-0650	JET, MAIN, #65.....	(1)		
	99151-ZDK-0680	JET, MAIN, #68.....	1		
30	99153-ZDK-0380	JET, PILOT, (#38).....	1		
31	99154-ZDK-0050	BODY, SLOW JET.....	1		

E-15

AIR CLEANER

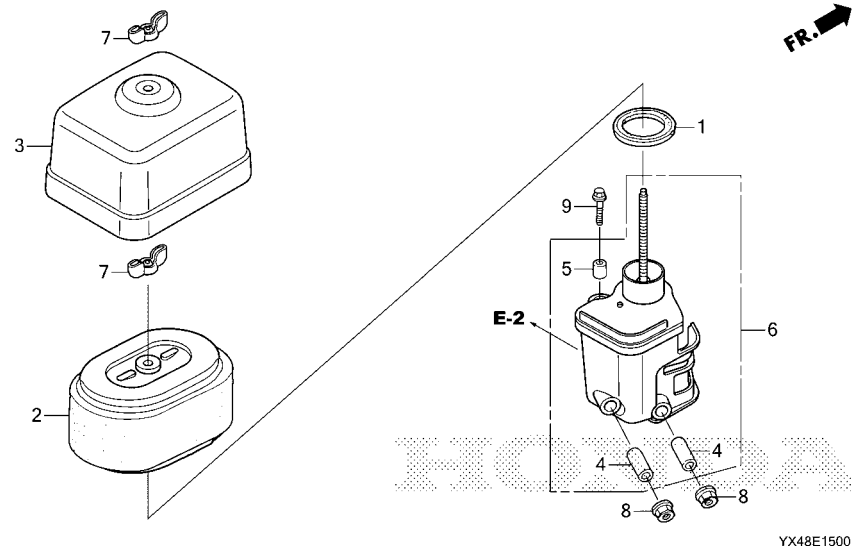


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121E1	PACKING, ELBOW	0.1
2	3121B8	ELEMENT, AIR CLEANER	0.1
		.INCLUDES: Air cleaner element -inspection	
6	3121B4	ELBOW, AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	16271-ZE1-000	PACKING, ELBOW.....	1		
2	17210-Z1T-621	ELEMENT, AIR CLEANER(DUAL)...	1		
3	17231-ZDK-820	COVER, AIR CLEANER.....	1		
4	17238-ZE7-010	COLLAR, AIR CLEANER.....	2		
5	17239-ZE1-000	COLLAR B, AIR CLEANER.....	1		
6	17410-ZDK-000	ELBOW COMP., AIR CLEANER.....	1		
7	90325-044-000	NUT, TOOL BOX SETTING.....	2		
8	94050-06000	NUT, FLANGE, 6MM.....	2		
9	95701-06020-00	BOLT, FLANGE, 6X20.....	1		

E-16

MUFFLER

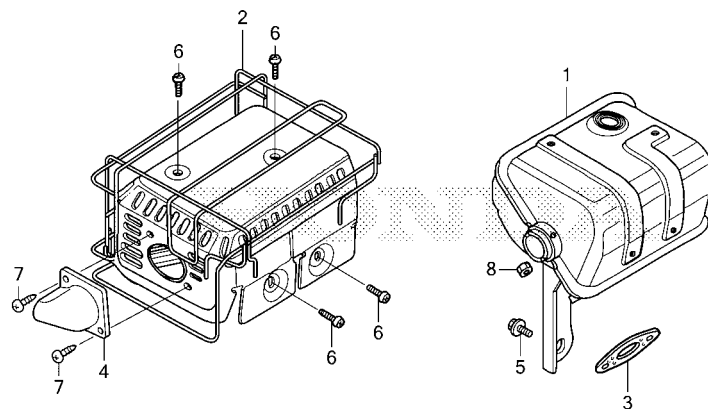


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.6
2	3131D6	PROTECTOR, EXHAUST MUFFLER ...	0.6
3	3131B4	GASKET, EXHAUST MUFFLER	0.5

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	18310-ZDL-000	MUFFLER COMP.....	1		
2	18320-ZDL-A01	PROTECTOR COMP., MUFFLER.....	1		
3	18381-Z1T-701	GASKET, MUFFLER (NINGBO SIL GASKET)	1		
4	18431-ZDL-A01	DEFLECTOR, MUFFLER.....	1		
5	90016-ZE1-000	BOLT, FLANGE, 6X13(CT200)....	1		
6	90050-ZE1-000	SCREW, TAPPING, 5X8	4		
7	90056-ZL0-000	SCREW, TAPPING, 4X6	2		
8	94001-08000-0S	NUT, HEX., 8MM	2		


2

FUEL TANK

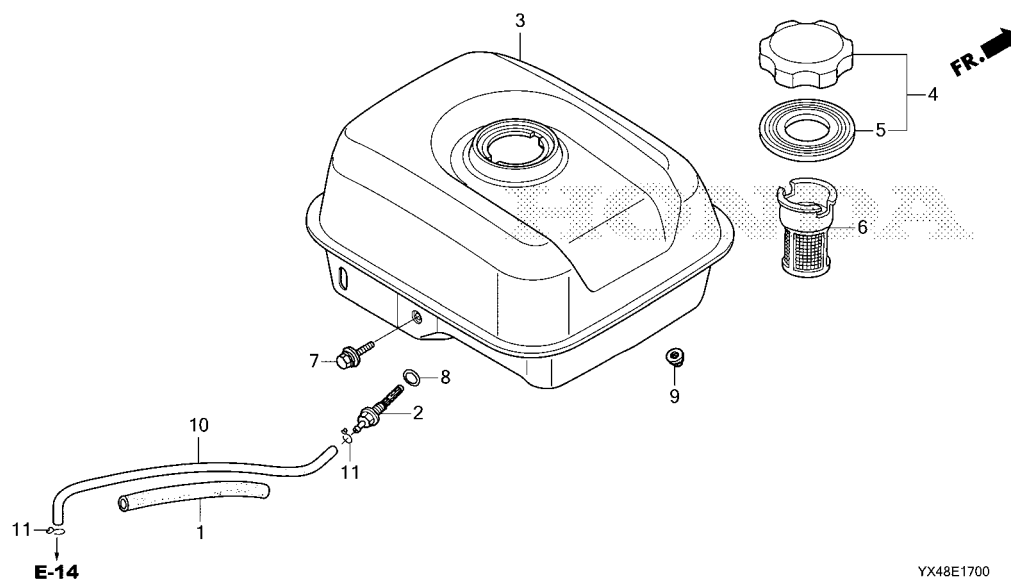

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(8)	
	3101H6	JOINT, FUEL STRAINER	0.2
3	3101H7	TANK, FUEL	0.2
4		(5)	
	3101M7	CAP, FUEL FILLER	0.1
6	3101A6	FILTER, FUEL	0.1
10	3101F6	TUBE, FUEL	0.2

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	16854-ZH8-000	RUBBER, SUPPORTER(107MM).....	1		
2	16955-Z1T-010	JOINT, FUEL TANK.....	1		
3	17510-ZDK-000ZB	TANK COMP., FUEL *R280*.....POWER RED	1		
4	17620-ZDK-004	CAP COMP., FUEL FILLER.....	1		
5	17631-Z1T-800	PACKING, FUEL FILLER CAP (39X62X3)(TOYOSHA)	1		
6	17670-Z1T-A10	FILTER COMP., FUEL.....	1		
7	90004-ZCW-000	BOLT, FLANGE, 6X34.....	1		
8	91353-671-004	O-RING, 14MM(NOK).....	1		
9	94050-06000	NUT, FLANGE, 6MM.....	2		
10	95001-45145-40	TUBE, FUEL, 4.5X145 (95001-45001-60M)	1		
11	95002-02080	CLIP, TUBE(B8).....	2		

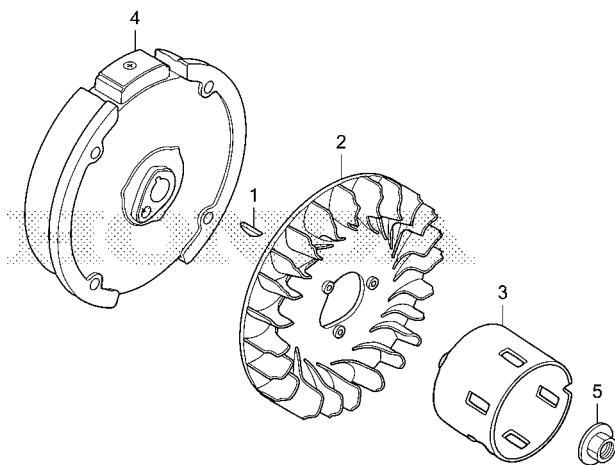


YX48E1900

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1141G7	FAN, ENGINE COOLING	0.4
3	1121A9	PULLEY, RECOIL STARTER	0.4
4	2161B5	FLYWHEEL	0.5

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	13331-Z8B-900	KEY, SPECIAL WOODRUFF, 25X18	1		
2	19511-Z1T-000	FAN, COOLING	1		
3	28451-ZDL-003	PULLEY, STARTER	1		
4	31110-ZDL-004	FLYWHEEL COMP.	1		
	31110-ZDL-800		1		
5	90201-Z1T-000	NUT, SPECIAL, 14MM	1		

E-20

IGNITION COIL

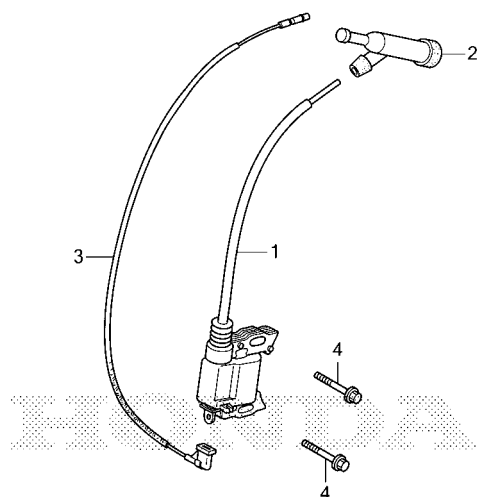

FR. →


YX48E2000

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION(ONE)	0.4
2	6141B8	TERMINAL, HIGH TENSION	0.1
3	6111B3	CORD, STOP SWITCH	0.3

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	30500-ZDK-004	COIL ASSY., IGNITION.....	1		
2	30700-ZDK-004	CAP ASSY., NOISE SUPPRESSOR..	1		
3	32195-ZDK-004	CORD, STOP SWITCH.....	1		
4	90121-952-000	BOLT, FLANGE, 6X25(CT200)....	2		

E-22


CONTROL

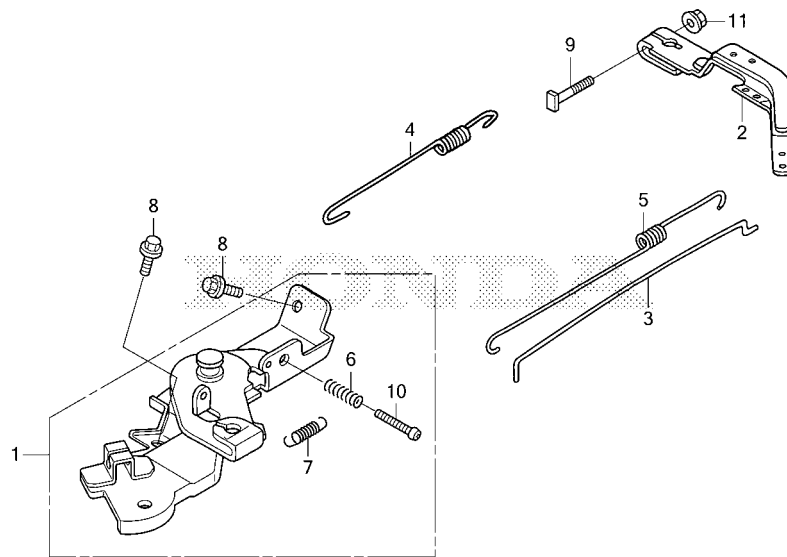

YX48E2200

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1161A5	CONTROL, THROTTLE/GOVERNOR ...	0.3
2	1161A0	ARM, GOVERNOR	0.2
3	1161B1	ROD, GOVERNOR	0.3
4	1161C5	SPRING, GOVERNOR	0.2
5	1161C2	SPRING, THROTTLE RETURN	0.3

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	16500-Z1T-A10	CONTROL ASSY.....	1		
2	16551-ZL0-000	ARM, GOVERNOR	1		
3	16555-ZE1-000	ROD, GOVERNOR	1		
4	16561-ZDL-000	SPRING, GOVERNOR.....	1		
5	16562-ZE1-020	SPRING, THROTTLE RETURN	1		
6	16584-883-300	SPRING, CONTROL ADJUSTING	1		
7	16592-ZE1-810	SPRING, CABLE RETURN.....	1		
8	90013-883-000	BOLT, FLANGE, 6X12(CT200)....	2		
9	90015-ZE5-010	BOLT, GOVERNOR ARM.....	1		
10	93500-05028-0H	SCREW, PAN, 5X28	1		
11	94050-06000	NUT, FLANGE, 6MM	1		

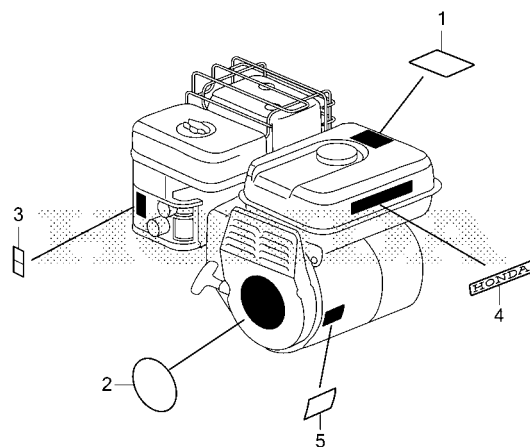

YX48E2800


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
----------	--------	---------------------------------------	--------

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	87519-ZDL-A00	LABEL, OPERATOR CAUTION.....	1	-----	DH
	87106-ZDL-A10	MARK, FUEL WARNING.....	1	-----	WH
2	87521-ZDL-000	EMBLEM	1		
3	87528-ZH7-000	MARK, CHOKE(GRAY)	1		
4	87536-Z1T-A10	MARK, HONDA	1		
5	87594-YB3-T00	MARK, OIL CAUTION	1		

EOP-1

GASKET KIT

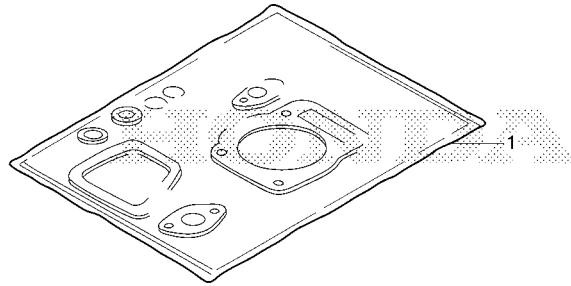

YX48X0100

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
----------	--------	---------------------------------------	--------


NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	06111-ZDK-000	GASKET KIT.....	(1)		

2

F-1

HANDLE PIPE

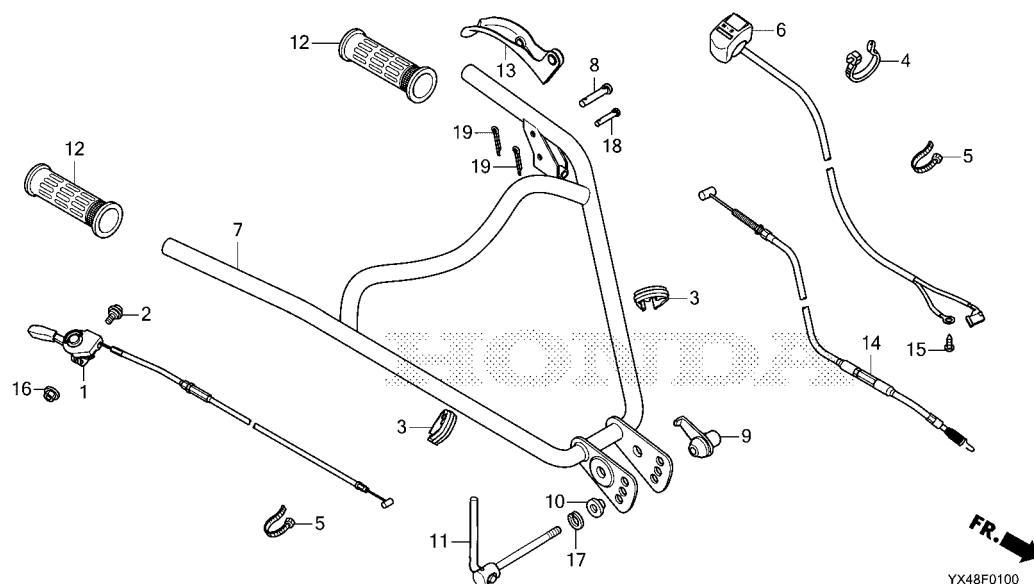


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	8111C8	CABLE, THROTTLE	0.2
6	6151D9	SWITCH, ENGINE STOP	0.2
7	8101J5	PIPE, HANDLE	0.4
12	4131E0	GRIP, HANDLE :LEFT	0.1
	4131E1	GRIP, HANDLE :RIGHT	0.1
13	2121B9	LEVER, CLUTCH	0.2
14	8111B0	CABLE, CLUTCH	0.5

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	17910-YX4-J01	CABLE COMP., THROTTLE	1		
2	17911-YX4-J01	SCREW, PAN, 5X25	1		
3	32901-YX4-J01	BAND, HARNESS(BLACK)	2		
4	32902-YX4-J01	BAND, CABLE, 8X200	1		
5	32903-YX4-J01	BAND, CABLE, 5X200	2		
6	35120-YX4-J01	SWITCH ASSY., ENGINE STOP	1		
7	53111-YX4-J01	PIPE COMP., HANDLE	1		
8	53132-YX4-J01	PIN, 8X27	1		
9	53137-YX4-J01	NUT, HANDLE LOCK	1		
10	53139-YX4-J01	WASHER, SPECIAL	1		
11	53142-YX4-J01	HANDLE ASSY., STOPPER	1		
12	53165-YX4-J01	GRIP, HANDLE	2		
13	54410-YX4-J01	LEVER COMP., CLUTCH	1		
14	54510-YX4-J01	CABLE COMP., MAIN CLUTCH	1		
15	90162-YX4-J01	SCREW, 5X10	1		
16	90320-YX4-J01	NUT, HEX., 5MM	1		
17	90507-YX4-J01	WASHER, SPRING, 10MM	1		
18	90753-YX4-J01	PIN, 6X24	1		
19	90754-YX4-J01	PIN, SPLIT, 1.6X14	2		

F-3

HANDLE COLUMN

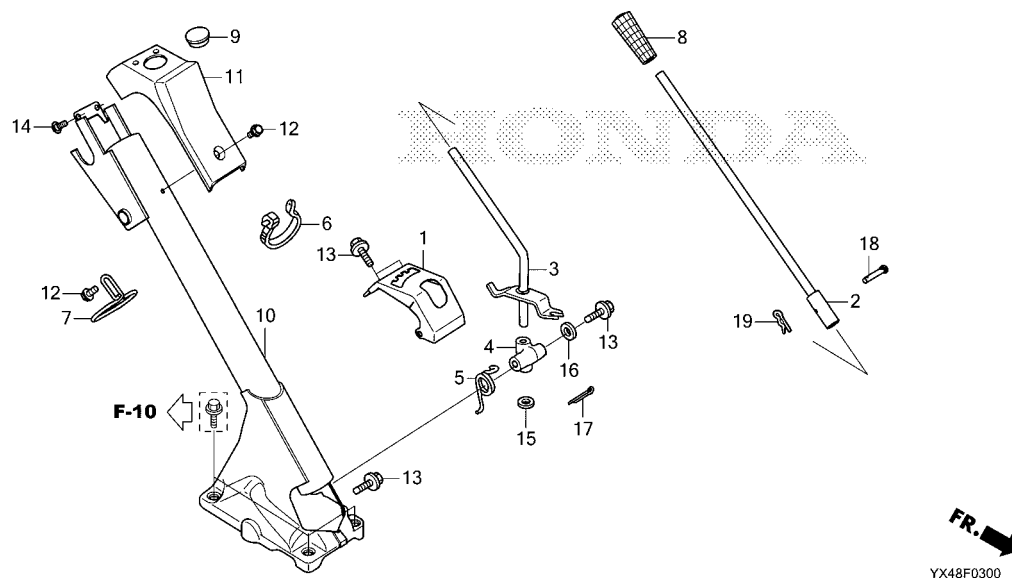


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4131P3	COVER, CHANGE	0.1
2	2101GU	LEVER, CHANGE :UPPER	0.1
3	2101GV	LEVER, CHANGE :LOWER	0.4
4	2101J2	HOLDER, CHANGE LEVER	0.4
5	2101Q2	SPRING, CHANGE LEVER RETURN ..	0.4
8	8101D2	GRIP, CHANGE LEVER	0.1
10	810110	COLUMN, HANDLE	0.5
11	8101BG	COVER, HANDLE COLUMN :LOWER ..	0.1

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	21310-YX4-J01	COVER COMP., CHANGE	1		
2	24410-YX4-J01	LEVER COMP., UPPER CHANGE	1		
3	24412-YX4-J01	LEVER COMP., LOWER CHANGE	1		
4	24413-YX4-J01	HOLDER, CHANGE LEVER	1		
5	24466-YX4-J01	SPRING, CHANGE LEVER RETURN ..	1		
6	32902-YX4-J01	BAND, CABLE, 8X200	1		
7	50275-YX4-J01	GUIDE, CABLE	1		
8	53166-YX4-J01	GRIP, HANDLE	1		
9	53176-YX4-J01	PLUG, SEALING	1		
10	53211-YX4-J01ZA	COLUMN COMP., HANDLE *R280*.....POWER RED	1		
11	53291-YX4-J01	COVER, HANDLE	1		
12	90101-YX4-J01	BOLT, FLANGE, 5X8	2		
13	90130-YX4-J01	BOLT, FLANGE, 6X12	4		
14	90160-YX4-J01	SCREW, PAN, 5X12	2		
15	90508-YX4-J01	WASHER, PLAIN, 13X24X2	1		
16	90509-YX4-J01	WASHER, 6.4X18X1.6	1		
17	90755-YX4-J01	PIN, LOCK, 2X30	1		
18	90761-YX4-J01	PIN, 4X25	1		
19	90762-YX4-J01	PIN, LOCK, 1.2X27	1		

F-8

BELT COVER

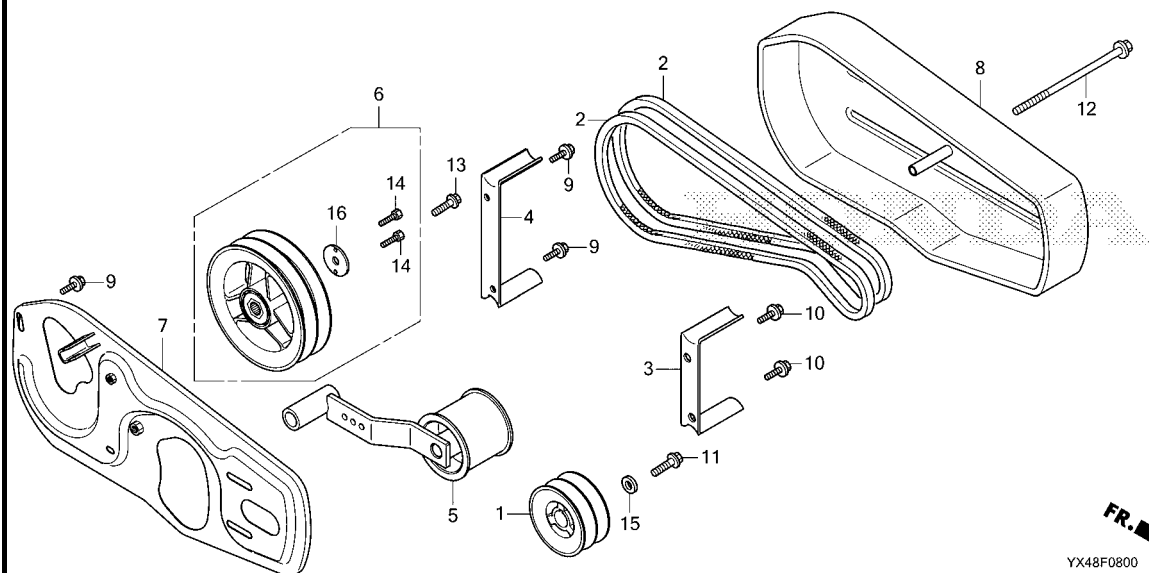


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2131G8	PULLEY, DRIVE	0.3
2	2131B3	BELT, TRANSMISSION DRIVE	0.2
		.NOTE: Same time for two units	
3	2131M7	STOPPER A, BELT	0.3
4	2131Z3	STOPPER B, BELT	0.1
5	2131Q4	ROLLER, TRANSMISSION DRIVE BELT TENSION	0.5
6	2131G9	PULLEY, DRIVEN	0.3
7	2131M2	STAY, BELT COVER	0.5
8	4141C4	COVER, TRANSMISSION DRIVE BELT	0.1

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	22411-YX4-J01	PULLEY, DRIVE	1		
2	22431-YX4-J01	V-BELT	2		
3	22443-YX4-J01	STOPPER, BELT(A)	1		
4	22444-YX4-J01	STOPPER, BELT(B)	1		
5	22460-YX4-J01	ROLLER COMP., TENSION	1		
6	24423-YX4-J01	PULLEY COMP., DRIVEN	1		
7	50650-YX4-J01	COVER COMP., INNER BELT	1		
8	63610-YX4-J01ZA	COVER COMP., BELT *R280*	1		
9	90130-YX4-J01	BOLT, FLANGE, 6X12	3		
10	90140-YX4-J01	BOLT, FLANGE, 8X16	2		
11	90142-YX4-J01	BOLT, FLANGE, 8X25	1		
12	90148-YX4-J01	BOLT, FLANGE, 8X85	1		
13	90149-YX4-J01	BOLT, FLANGE, 8X20	1		
14	90161-YX4-J01	BOLT, SOCKET, 4X10	2		
15	90512-YX4-J01	WASHER, 9X27X3	1		
16	90513-YX4-J01	WASHER	1		

F-10

TRANSMISSION CASE

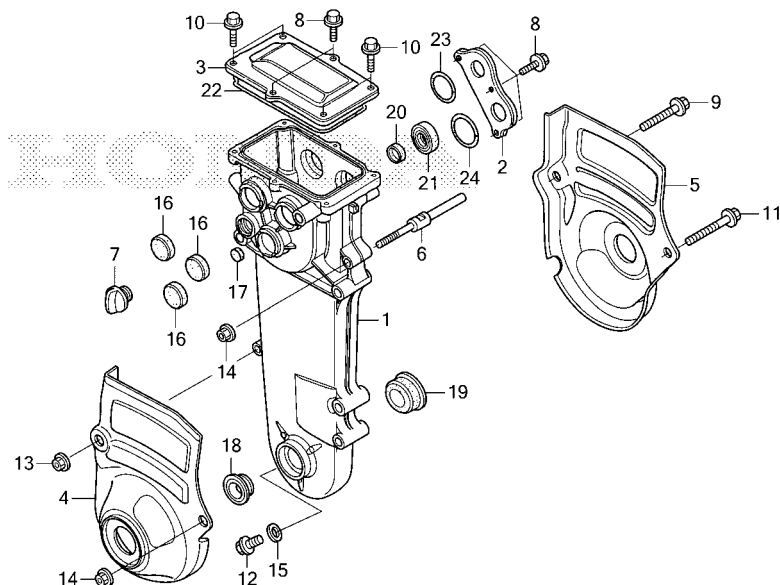


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2101F1	CASE, TRANSMISSIONINCLUDES: Engine removal and installation (23,24)	3.2
2	2101CL	PLATE, BEARING HOLDER	0.5
4	2101S8	PROTECTOR, TRANSMISSION CASE :RIGHT	0.2
	2101CN	PROTECTOR, TRANSMISSION CASE :BOTH	0.2
5	2101S7	PROTECTOR, TRANSMISSION CASE :LEFT	0.2
	2101CN	PROTECTOR, TRANSMISSION CASE :BOTH	0.2
16	2101Y6	PLUG, TRANSMISSION CASE SEALING	0.1
	2101Y6A	.Replace one add	0.1
17	2101CM	PLUG, INPUT SHAFT SEALING	0.1
18	7101F8	WATER SEAL, WHEEL SHAFT :RIGHT .INCLUDES: Engine removal and installation	1.9
	7101F8A	.Replace left wheel shaft water seal add	0.1
19	7101F7	WATER SEAL, WHEEL SHAFT :LEFT .INCLUDES: Engine removal and installation	1.9
+			

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	21111-YX4-J01	CASE, TRANSMISSION	1		
2	21521-YX4-J01	PLATE, BEARING HOLDER	1		
3	21525-YX4-J01	COVER, TRANSMISSION TOP	1		
4	21911-YX4-J01	PROTECTOR, R. CASE	1		
5	21921-YX4-J01	PROTECTOR, L. CASE	1		
6	22523-YX4-J01	SHAFT, TENSION ARM	1		
7	25611-YX4-J01	CAP, OIL	1		
8	90130-YX4-J01	BOLT, FLANGE, 6X12	5		
9	90132-YX4-J01	BOLT, FLANGE, 6X50	1		
10	90141-YX4-J01	BOLT, FLANGE, 8X20	4		
11	90146-YX4-J01	BOLT, FLANGE, 8X60	1		
12	90147-YX4-J01	BOLT, DRAIN PLUG	1		
13	90330-YX4-J01	NUT, FLANGE, 6MM	1		
14	90340-YX4-J01	NUT, FLANGE, 8MM	2		
15	90503-YX4-J01	WASHER, DRAIN PLUG	1		
16	90871-YX4-J01	PLUG, SEAL, 24X28.3X6.5	3		
17	90875-YX4-J01	PLUG, SEAL, 16.2X5.7	1		
18	91251-YX4-J01	SEAL, WATER, 25X41X9.5/13	1		
19	91252-YX4-J01	SEAL, WATER, 25X52X9.5/13	1		
20	91253-YX4-J01	OIL SEAL, 12X22X6	1		
21	91271-YX4-J01	OIL SEAL, 15X35X7	1		
22	91371-YX4-J01	O-RING A, CASE	1		
23	91374-YX4-J01	O-RING, 39X2.6	1		
24	91375-YX4-J01	O-RING, 43.5X2.6	1		

F-10

TRANSMISSION CASE

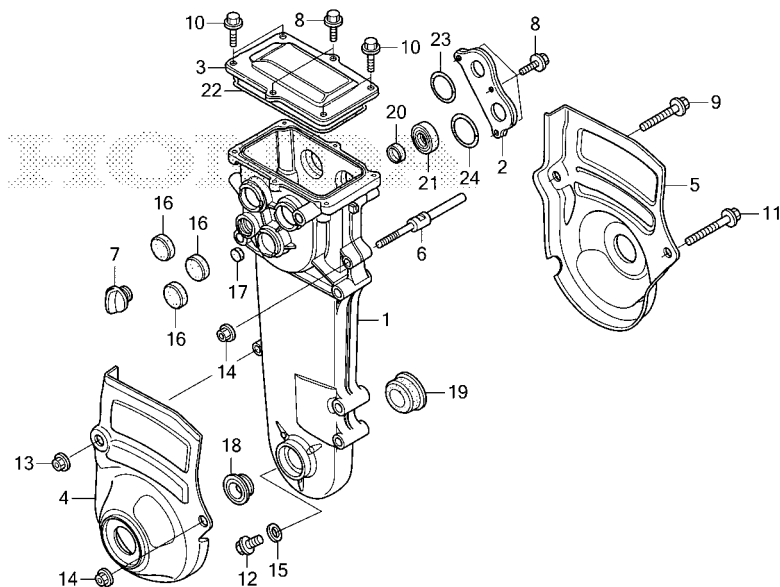


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+19	7101F7A	.Replace right wheel shaft water seal add	0.1
20	2101M4	OIL SEAL, SHIFT FORK SHAFTINCLUDES: Engine removal and installation	1.8
21	2121D7	OIL SEAL, INPUT SHAFT	0.6
22	(3)		
	2101BZ	O-RING, TRANSMISSION CASE	0.4

FR. 
YX48F1000

F-11

TRANSMISSION GEAR

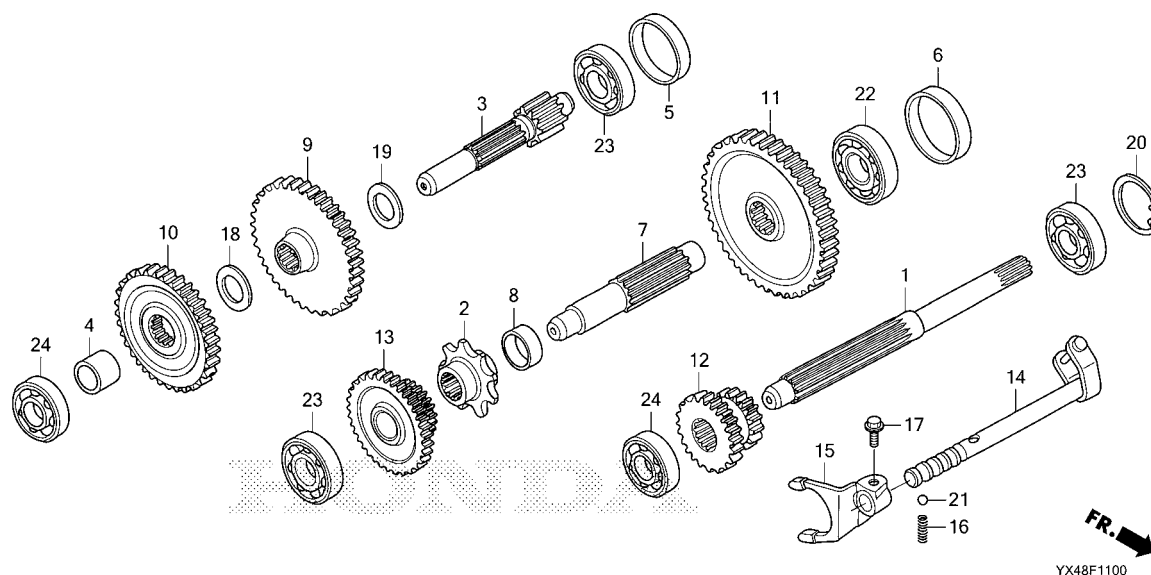


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2121C6	(12) SHAFT, INPUTINCLUDES: Engine removal and installation (4,9,10,18,19)	2.2
3	2091A2	COUNTERSHAFTINCLUDES: Engine removal and installation (2,8,11,13)	2.1
7	2091H1	SHAFT, TRANSMISSION FINALINCLUDES: Engine removal and installation (16,21)	2.6
14	2091D8	SHAFT, SHIFT FORKINCLUDES: Engine removal and installation	1.9
15	2101H1	FORK, SHIFTINCLUDES: Engine removal and installation	1.9
22	2101W5	BEARING, FINAL SHAFT :LEFTINCLUDES: Engine removal and installation	2.6
23	2101B1	BEARING, COUNTERSHAFT :LEFT .. .INCLUDES: Engine removal and installation	2.1
+			

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	23111-YX4-J01	SHAFT, INPUT.....	1		
2	23121-YX4-J01	SPROCKET, DRIVE(9T).....	1		
3	23221-YX4-J01	COUNTERSHAFT.....	1		
4	23226-YX4-J01	COLLAR, COUNTERSHAFT.....	1		
5	23227-YX4-J01	COLLAR, DISTANCE.....	1		
6	23228-YX4-J01	COLLAR, DISTANCE.....	1		
7	23251-YX4-J01	SHAFT, FINAL.....	1		
8	23255-YX4-J01	COLLAR, FINAL SHAFT.....	1		
9	23341-YX4-J01	GEAR, COUNTERSHAFT FIRST(44T)	1		
10	23342-YX4-J01	GEAR, COUNTERSHAFT SECOND(40T)	1		
11	23351-YX4-J01	GEAR, FINAL(52T).....	1		
12	23361-YX4-J01	GEAR, CHANGE.....	1		
13	23465-YX4-J01	GEAR COMP., REVERSE IDLE (22T/44T)	1		
14	24111-YX4-J01	SHAFT, SHIFT FORK.....	1		
15	24112-YX4-J01	FORK, SHIFT.....	1		
16	24271-YX4-J01	SPRING, BALL SET.....	1		
17	90131-YX4-J01	BOLT, FLANGE, 6X16.....	1		
18	90504-YX4-J01	WASHER, COUNTERSHAFT.....	1		
19	90505-YX4-J01	WASHER, COUNTERSHAFT, 18X23X1	1		
20	90510-YX4-J01	CIRCLIP, INTERNAL, 35MM.....	1		
21	90951-YX4-J01	BALL, STEEL.....	1		
22	91061-YX4-J01	BEARING, RADIAL BALL, 6203...	1		
23	91062-YX4-J01	BEARING, RADIAL BALL, 6202...	3		
24	91063-YX4-J01	BEARING, RADIAL BALL, 6002...	2		

F-11

TRANSMISSION GEAR

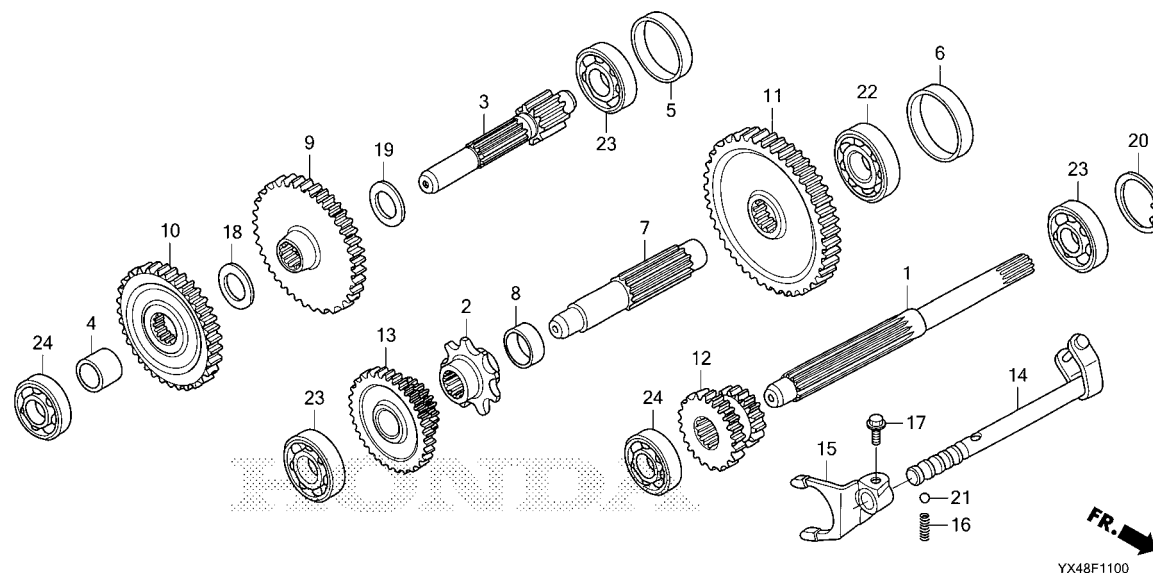


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+23	2101U5	BEARING, INPUT SHAFT :LEFTINCLUDES: Engine removal and installation	2.2
	2101W6	BEARING, FINAL SHAFT :RIGHT .. .INCLUDES: Engine removal and installation	2.6
24	2101B2	BEARING, COUNTERSHAFT :RIGHT . .INCLUDES: Engine removal and installation	2.1
	2101U6	BEARING, INPUT SHAFT :RIGHT .. .INCLUDES: Engine removal and installation	2.2

F-12

WHEEL SHAFT


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2131L5	SPROCKET, DRIVENINCLUDES: Engine removal and installation	2.6
2	2091E4	SHAFT, WHEELINCLUDES: Engine removal and installation	2.2
3	2131C1	CHAIN, FINALINCLUDES: Engine removal and installation	2.6
5	7101B1	BEARING, WHEEL SHAFT :LEFTINCLUDES: Engine removal and installation	2.2
6	7101B2	BEARING, WHEEL SHAFT :RIGHT .. .INCLUDES: Engine removal and installation	2.8

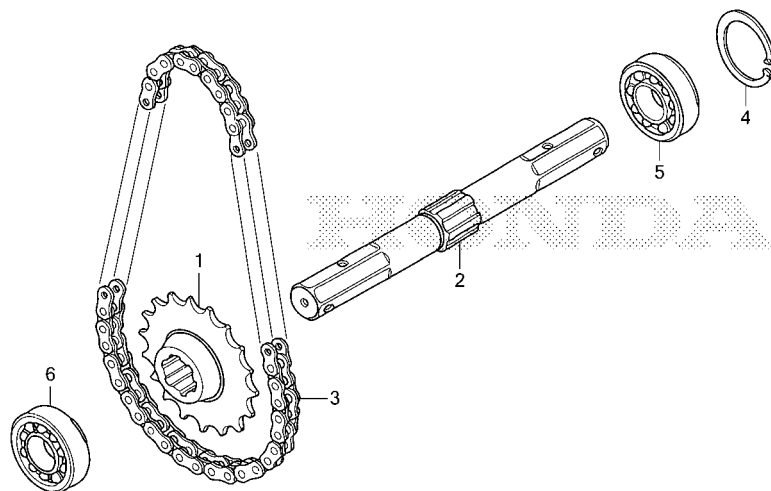

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	23281-YX4-J01	SPROCKET, DRIVEN(18T)	1		
2	23371-YX4-J01	SHAFT, WHEEL	1		
3	23861-YX4-J01	CHAIN, FINAL	1		
4	90511-YX4-J01	CIRCLIP, INTERNAL, 52MM	1		
5	91060-YX4-J01	BEARING, RADIAL BALL, 6205 ...	1		
6	91064-YX4-J01	BEARING, RADIAL BALL, 6005 ...	1		

F-14

WHEEL/FENDER

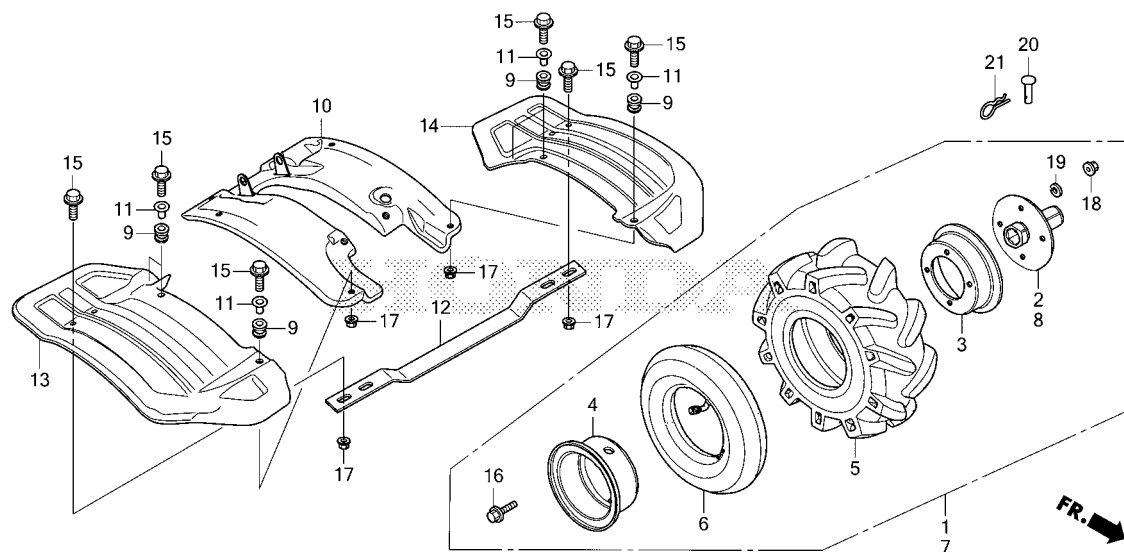


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	7101P7	TIRE/WHEEL ASSEMBLY :RIGHT ... (2,8)	0.1
3	7101Q4	RIM, WHEEL :LEFT INNER	0.3
	7101Q5	RIM, WHEEL :RIGHT INNER	0.3
4		(2,8)	
	7101Q6	RIM, WHEEL :LEFT OUTER	0.3
	7101Q7	RIM, WHEEL :RIGHT OUTER	0.3
5	7101G6	TIRE :LEFT	0.4
	7101E6	TIRE :RIGHT	0.4
6	7101G2	TUBE, TIRE :LEFT	0.4
	7101G3	TUBE, TIRE :RIGHT	0.4
7	7101P6	TIRE/WHEEL ASSEMBLY :LEFT ...	0.1
10	4131D3	FENDER, MAIN	1.2
13	4131P5	SUB FENDER :RIGHT	0.5
14	4131P4	SUB FENDER :LEFT	0.9

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	42700-YX4-J01	WHEEL ASSY., R.....	1		
2	42701-YX4-J01	SHAFT, WHEEL.....	1		
3	42711-YX4-J01	RIM, INNER SIDE.....	2		
4	42721-YX4-J01	RIM, OUTER SIDE.....	2		
5	42751-YX4-J01	TIRE, OUTER.....	2		
6	42752-YX4-J01	TIRE, INNER.....	2		
7	42800-YX4-J01	WHEEL ASSY., L.....	1		
8	42801-YX4-J01	SHAFT, WHEEL.....	1		
9	53175-YX4-J01	GRIP, FENDER.....	6		
10	61110-YX4-J01ZA	FENDER COMP., MAIN			
		R280.....POWER RED	1		
11	61122-YX4-J01	COLLAR.....	6		
12	65114-YX4-J01	PLATE, REINFORCE.....	1		
13	65141-YX4-J01ZA	FENDER, R.			
		R280.....POWER RED	1		
14	65151-YX4-J01ZA	FENDER, L.			
		R280.....POWER RED	1		
15	90131-YX4-J01	BOLT, FLANGE, 6X16.....	10		
16	90141-YX4-J01	BOLT, FLANGE, 8X20.....	8		
17	90330-YX4-J01	NUT, FLANGE, 6MM.....	10		
18	90342-YX4-J01	NUT, HEX., 8MM.....	8		
19	90502-YX4-J01	WASHER, SPRING, 8MM.....	8		
20	90751-YX4-J01	PIN, SHAFT, 8X40.....	2		
21	90758-YX4-J01	PIN, LOCK, 2X9X38.....	2		

F-20

ENGINE BED

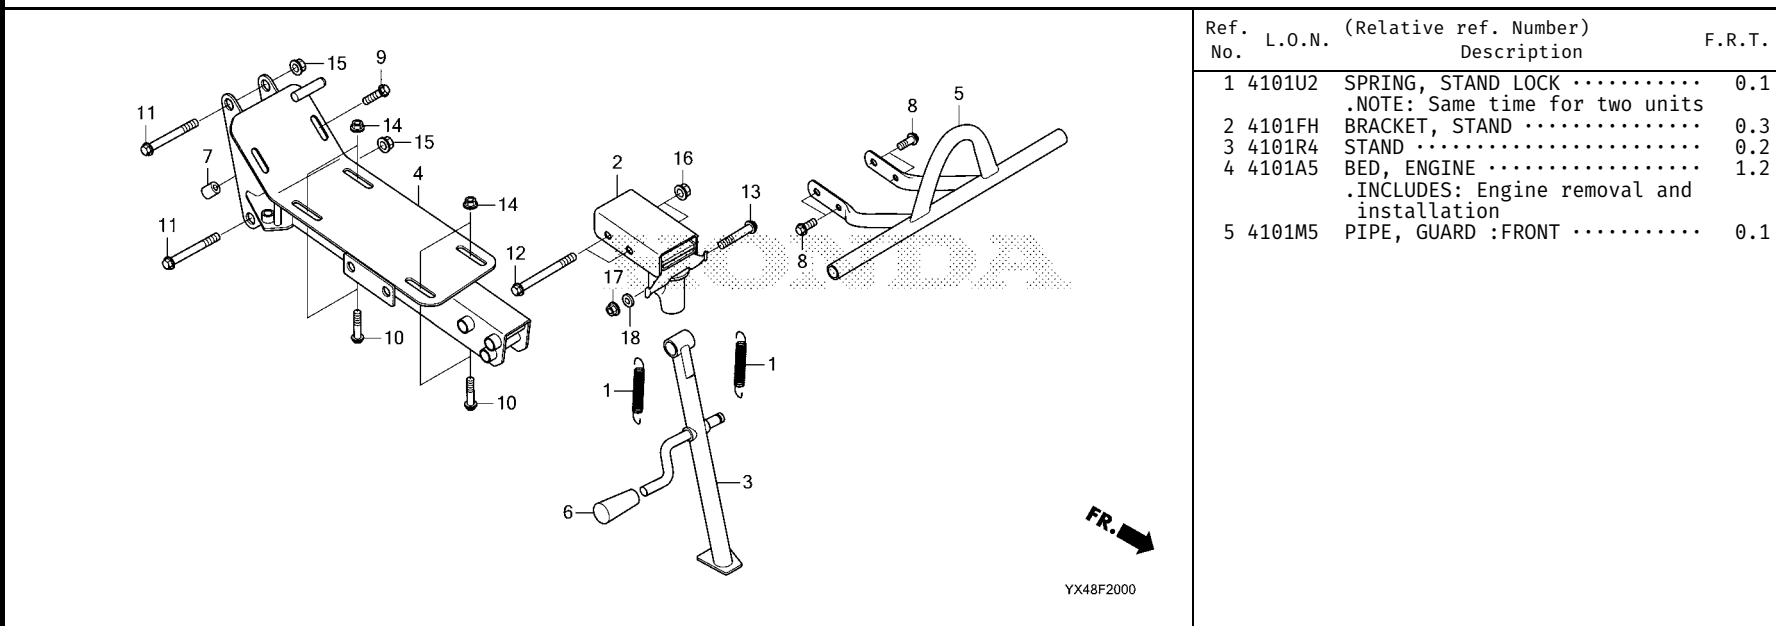


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4101U2	SPRING, STAND LOCK	0.1
2	4101FH	BRACKET, STAND	0.3
3	4101R4	STAND	0.2
4	4101A5	BED, ENGINE	1.2
		.INCLUDES: Engine removal and installation	
5	4101M5	PIPE, GUARD :FRONT	0.1

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	43151-YX4-J01	SPRING, RETURN	2		
2	44510-YX4-J01	BRACKET COMP., FR. STAND	1		
3	44520-YX4-J01	STAND COMP., FR.	1		
4	51110-YX4-J01	BED COMP., ENGINE	1		
5	51120-YX4-J01	PIPE COMP., FR. GUARD	1		
6	54420-YX4-J01	RUBBER, HANDLE	1		
7	61121-YX4-J01	COLLAR, FENDER	2		
8	90140-YX4-J01	BOLT, FLANGE, 8X16	4		
9	90143-YX4-J01	BOLT, FLANGE, 8X30	2		
10	90144-YX4-J01	BOLT, FLANGE, 8X35	4		
11	90145-YX4-J01	BOLT, FLANGE, 8X65	2		
12	90150-YX4-J01	BOLT, FLANGE, 10X75X1.25	2		
13	90151-YX4-J01	BOLT, 10X45	1		
14	90340-YX4-J01	NUT, FLANGE, 8MM	4		
15	90343-YX4-J01	NUT, LOCK, 8MM	2		
16	90350-YX4-J01	NUT, FLANGE, 10X1.25	2		
17	90351-YX4-J01	NUT, LOCK, 10MM	1		
18	90506-YX4-J01	WASHER, PLAIN, 10MM	1		

F-21

HITCH BOX/DRAW BAR

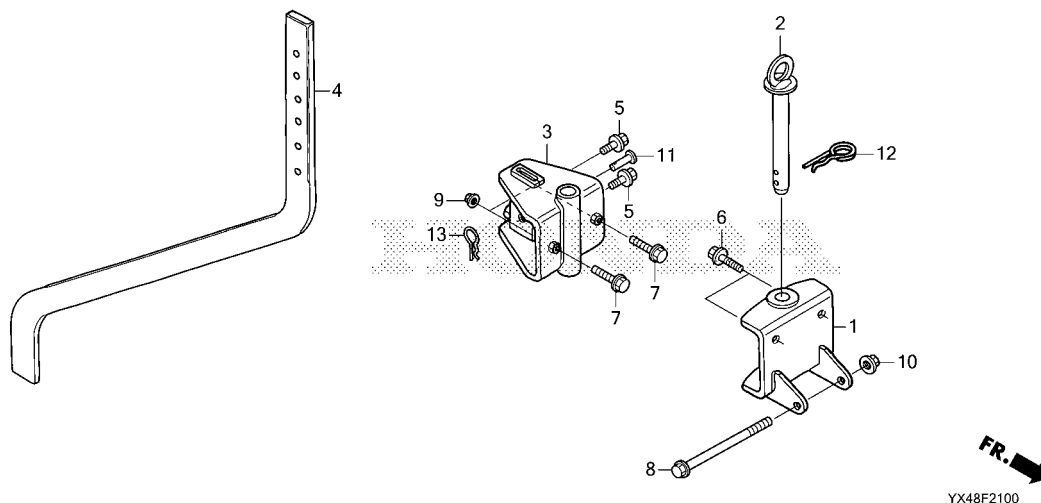


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4101B2	BOX, HITCH	1.0
3	4101X5	HITCH, ATTACHMENT	0.1
4	8101P9	BAR, DRAG	0.1

Ref. No.	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
1	50610-YX4-J01	BOX COMP., HITCH	1		
2	50625-YX4-J01	PIN COMP., HITCH	1		
3	50661-YX4-J01	HITCH, ATTACHMENT	1		
4	72481-YX4-J00	BAR, DRAG	1		
5	90140-YX4-J01	BOLT, FLANGE, 8X16	2		
6	90142-YX4-J01	BOLT, FLANGE, 8X25	2		
7	90143-YX4-J01	BOLT, FLANGE, 8X30	2		
8	90152-YX4-J01	BOLT, FLANGE, 10X85	1		
9	90340-YX4-J01	NUT, FLANGE, 8MM	2		
10	90350-YX4-J01	NUT, FLANGE, 10X1.25	1		
11	90751-YX4-J01	PIN, SHAFT, 8X40	1		
12	90757-YX4-J01	PIN, LOCK, 3.5X13X81	1		
13	90758-YX4-J01	PIN, LOCK, 2X9X38	1		

F-25

LABEL

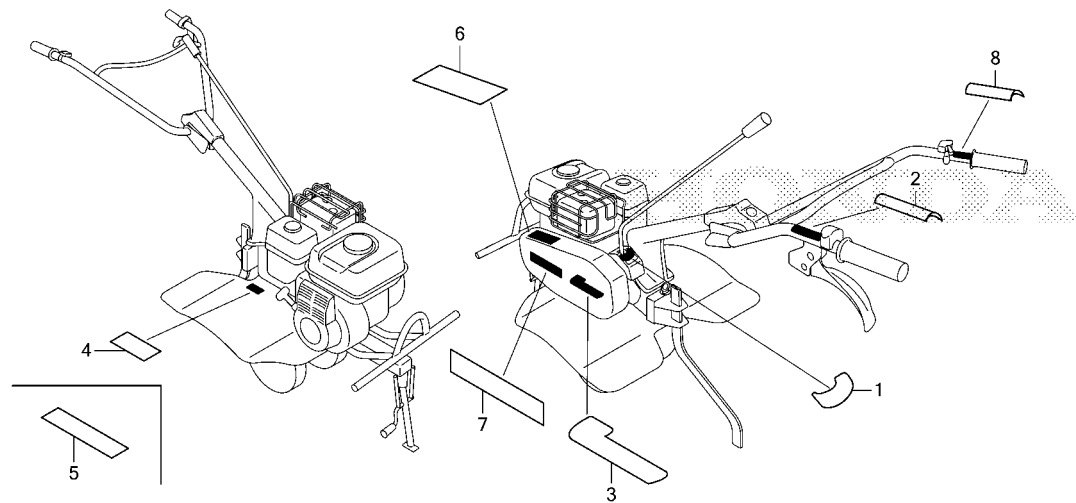

YX48F2500

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.


NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	87111-YX4-J00	MARK, CHANGE	1	-----	DH
	87111-YX4-J10	MARK, CHANGE(TAIWAN)	1	-----	WH
2	87216-YX4-J00	MARK, COMBINATION	1	-----	DH
	87216-YX4-J10	MARK, COMBINATION(TAIWAN)	1	-----	WH
3	87302-YX4-J00	MARK, BELT COVER EMBLEM	1	-----	
4	87406-YX4-J00	MARK, TINE CAUTION	1	-----	DH
5	87406-YX4-J10	MARK, TINE DANGER	1	-----	WH
6	87526-YX4-J10	MARK B, COMBINATION	1	-----	WH
7	87531-V42-000	MARK, HONDA	1	-----	
8	87532-YX4-J00	MARK, THROTTLE	1	-----	DH
	87532-YX4-J10	MARK, THROTTLE(TAIWAN)	1	-----	WH

3

F-26

TOOL

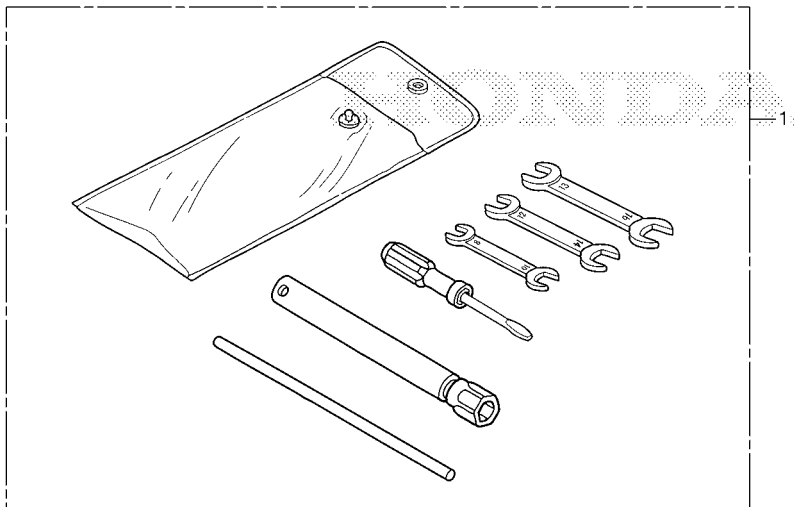

YX48F2600

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
----------	--------	---------------------------------------	--------

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY	Serial No.	Parts catalogue code
			FQ 650		
1	89000-YX4-J01	TOOL KIT	1		

3

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
06000			16000			19000			28000			50625-YX4-J01	46	2	87519-ZDL-A00	34	1
06111-ZDK-000	35	1	16011-ZDK-005	26	1	19511-Z1T-000	31	2	28400-ZDL-A01	24	1	50650-YX4-J01	38	7	87521-ZDL-000	34	2
			16013-ZDK-005	26	2	19610-ZDK-800ZC	25	1	28421-ZDL-A01	24	2	50661-YX4-J01	46	3	87526-YX4-J10	47	6
11000			16014-ZDK-005	26	3	19612-ZH8-000	25	2	28422-ZDL-A01	24	3				87528-ZH7-000	34	3
			16015-ZDK-005	26	4	19631-ZDK-000	25	3	28433-ZDL-A01	24	4	51000			87531-V42-000	47	7
11300-ZDK-630	19	1	16016-ZDK-005	26	5				28441-ZDL-A01	24	5	51110-YX4-J01	45	4	87532-YX4-J00	47	8
			16018-ZDK-005	26	6	21000			28442-ZDL-A01	24	6	51120-YX4-J01	45	5	87532-YX4-J10	47	8
12000			16019-ZDK-005	26	7				28443-ZDL-A01	24	7				87536-Z1T-A10	34	4
12000-ZDL-405	18	1	16020-ZDK-005	26	8	21111-YX4-J01	39	1	28451-ZDL-003	31	3	53000			87594-YB3-T00	34	5
12209-ZH8-003	21	1	16021-ZDK-005	26	9	21310-YX4-J01	37	1	28461-ZDL-A01	24	8				89000		
12210-ZDK-405	17	1	16100-ZDL-704	26	10	21521-YX4-J01	39	2	28462-ZDL-A01	24	9	53111-YX4-J01	36	7			
12251-ZL0-003	17	2	16166-ZDL-704	26	11	21525-YX4-J01	39	3				53132-YX4-J01	36	8	89000-YX4-J01	48	1
12310-ZE1-020	17	3	16211-ZCW-000	26	12	21911-YX4-J01	39	4	30000			53137-YX4-J01	36	9			
12312-Z1T-701	17	4	16212-Z1T-701	26	13	21921-YX4-J01	39	5	30500-ZDK-004	32	1	53139-YX4-J01	36	10	90000		
			16220-ZE1-020	26	14				30700-ZDK-004	32	2	53142-YX4-J01	36	11			
13000			16221-Z1T-701	26	15	22000						53165-YX4-J01	36	12	90001-Z1T-000	20	6
			16271-ZE1-000	28	1				31000			53166-YX4-J01	37	8	90001-ZDK-003	20	6
13010-Z4K-004	20	1	16364-ZDL-703	26	16	22411-YX4-J01	38	1				53175-YX4-J01	44	9	90001-ZDK-005	26	22
13010-Z4P-003	20	1	16500-Z1T-A10	33	1	22431-YX4-J01	38	2	31110-ZDL-004	31	4	53176-YX4-J01	37	9	90002-ZDK-005	26	23
13011-Z4K-004	20	1	16510-ZDL-000	18	2	22443-YX4-J01	38	3	31110-ZDL-800	31	4	53211-YX4-J01ZA	37	10	90003-ZDK-005	27	24
13011-Z4P-003	20	1	16531-Z1T-000	18	3	22444-YX4-J01	38	4				53291-YX4-J01	37	11	90003-ZDL-A01	24	10
13012-Z4K-004	20	1	16541-Z1T-000	18	4	22460-YX4-J01	38	5	32000						90004-ZCW-000	30	7
13012-Z4P-003	20	1	16551-ZL0-000	33	2	22523-YX4-J01	39	6	32195-ZDK-004	32	3	54410-YX4-J01	36	13	90012-ZE0-010	21	13
13013-Z4K-004	20	1	16555-ZE1-000	33	3				32901-YX4-J01	36	3	54420-YX4-J01	45	6	90013-883-000	17	6
13013-Z4P-003	20	1	16561-ZDL-000	33	4	23000			32902-YX4-J01	36	4	54510-YX4-J01	36	14			
13101-ZDL-003	20	2	16562-ZE1-020	33	5	23111-YX4-J01	41	1	32903-YX4-J01	36	5				90015-ZE5-010	33	9
13102-ZDL-003	20	2	16584-883-300	33	6	23121-YX4-J01	41	2				61000			90016-ZE1-000	29	5
13103-ZDL-003	20	2	16592-ZE1-810	33	7	23221-YX4-J01	41	3				61110-YX4-J01ZA	44	10	90022-888-010	25	5
13104-ZDL-003	20	2	16610-ZDK-005	26	17	23226-YX4-J01	41	4	35000			61121-YX4-J01	45	7	90043-ZDK-000	17	7
13111-ZDK-003	20	3	16616-ZDL-703	26	18	23227-YX4-J01	41	5	35120-YX4-J01	36	6	61122-YX4-J01	44	11	90047-ZDK-000	17	8
13200-Z1T-305	20	4	16617-ZDK-005	26	19	23228-YX4-J01	41	6							90050-ZE1-000	29	6
13200-ZDK-003	20	4	16854-ZH8-000	30	1	23251-YX4-J01	41	7	42000						90056-ZL0-000	29	7
13310-ZDL-003	20	5	16953-ZDK-005	26	20	23255-YX4-J01	41	8	42700-YX4-J01	44	1				90101-YX4-J01	37	12
13331-Z8B-900	31	1	16955-Z1T-010	30	2	23281-YX4-J01	43	1	42701-YX4-J01	44	2	63000			90121-952-000	32	4
			16964-ZDK-005	26	21	23341-YX4-J01	41	9	42711-YX4-J01	44	3	63610-YX4-J01ZA	38	8	90130-YX4-J01	37	13
14000			17000			23342-YX4-J01	41	10	42721-YX4-J01	44	4						
14100-ZDL-003	21	2	17210-Z1T-621	28	2	23351-YX4-J01	41	11	42751-YX4-J01	44	5	65000			90131-YX4-J01	41	17
14410-ZE1-010	21	3	17231-ZDK-820	28	3	23361-YX4-J01	41	12	42752-YX4-J01	44	6						
14431-Z1T-000	21	4	17238-ZE7-010	28	4	23371-YX4-J01	43	2	42800-YX4-J01	44	7	65114-YX4-J01	44	12	90131-ZE1-000	18	5
14431-ZE1-000	21	4	17239-ZE1-000	28	5	23465-YX4-J01	41	13	42801-YX4-J01	44	8	65141-YX4-J01ZA	44	13	90132-YX4-J01	39	9
14451-Z7E-000	21	5	17410-ZDK-000	28	6	23861-YX4-J01	43	3				65151-YX4-J01ZA	44	14	90140-YX4-J01	38	10
14568-ZE1-000	21	6	17510-ZDK-000ZB	30	3	24000											
14711-ZDK-003	21	7	17620-ZDK-004	30	4	24111-YX4-J01	41	14				72000					
14721-ZDK-013	21	8	17631-Z1T-800	30	5	24112-YX4-J01	41	15	43151-YX4-J01	45	1	72481-YX4-J00	46	4	90141-YX4-J01	39	10
14731-ZL0-000	21	9	17670-Z1T-A10	30	6	24271-YX4-J01	41	16							90142-YX4-J01	38	11
14751-ZF1-000	21	10	17910-YX4-J01	36	1	24410-YX4-J01	37	2									
14771-Z1T-000	21	11	17911-YX4-J01	36	2	24412-YX4-J01	37	3	44000						90143-YX4-J01	46	6
14791-ZE1-010	21	12				24413-YX4-J01	37	4	44510-YX4-J01	45	2						
			18000			24423-YX4-J01	38	6	44520-YX4-J01	45	3	87106-ZDL-A10	34	1	90144-YX4-J01	45	10
15000			18310-ZDL-000	29	1	24466-YX4-J01	37	5				87111-YX4-J10	47	1	90145-YX4-J01	45	11
15600-Z1T-000	19	2	18320-ZDL-A01	29	2				50000			87216-YX4-J00	47	2	90146-YX4-J01	39	11
15600-Z1T-600	19	3	18381-Z1T-701	29	3	25000			50275-YX4-J01	37	7	87216-YX4-J10	47	2	90147-YX4-J01	39	12
15625-Z1T-000	19	4	18431-ZDL-A01	29	4				50610-YX4-J01	46	1	87302-YX4-J00	47	3	90148-YX4-J01	38	12
15721-ZH8-000	17	5				25611-YX4-J01	39	7				87406-YX4-J00	47	4	90149-YX4-J01	38	13
												87406-YX4-J10	47	5	90150-YX4-J01	45	12

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
90151-YX4-J01	45	13	91064-YX4-J01	43	6												
90152-YX4-J01	46	8	91202-Z1T-003	18	10												
90160-YX4-J01	37	14		19	6												
90161-YX4-J01	38	14	91251-YX4-J01	39	18												
90162-YX4-J01	36	15	91252-YX4-J01	39	19												
90201-Z1T-000	31	5	91253-YX4-J01	39	20												
90206-ZE1-000	21	14	91271-YX4-J01	39	21												
90320-YX4-J01	36	16	91301-ZDK-005	27	26												
90325-044-000	28	7	91302-ZDK-005	27	27												
90330-YX4-J01	39	13	91303-ZDK-005	27	28												
	44	17	91353-671-004	30	8												
90340-YX4-J01	39	14	91371-YX4-J01	39	22												
	45	14	91374-YX4-J01	39	23												
	46	9	91375-YX4-J01	39	24												
90342-YX4-J01	44	18															
90343-YX4-J01	45	15	93000														
90350-YX4-J01	45	16															
	46	10	93500-05028-0H	33	10												
90351-YX4-J01	45	17															
90451-Z1T-000	18	6	94000														
90502-YX4-J01	44	19															
90503-YX4-J01	39	15	94001-08000-0S	29	8												
90504-YX4-J01	41	18	94050-06000	28	8												
90505-YX4-J01	41	19		30	9												
90506-YX4-J01	45	18		33	11												
90507-YX4-J01	36	17	94101-06800	18	11												
90508-YX4-J01	37	15	94251-08000	18	12												
90509-YX4-J01	37	16	94301-08140	19	7												
90510-YX4-J01	41	20	94301-10160	17	9												
90511-YX4-J01	43	4															
90512-YX4-J01	38	15	95000														
90513-YX4-J01	38	16															
90551-ZE1-000	20	7	95001-45145-40	30	10												
90601-ZE1-000	18	7	95002-02080	30	11												
90602-ZE1-000	18	8	95701-06010-00	24	11												
90701-ZDK-005	27	25	95701-06020-00	28	9												
90741-883-810	20	8	95701-08032-00	19	8												
90751-YX4-J01	44	20	95701-08060-00	17	10												
	46	11															
90753-YX4-J01	36	18	98000														
90754-YX4-J01	36	19															
90755-YX4-J01	37	17	98079-56846	17	11												
90757-YX4-J01	46	12	98079-56855	17	11												
90758-YX4-J01	44	21															
	46	13	99000														
90761-YX4-J01	37	18															
90762-YX4-J01	37	19	99151-ZDK-0620	27	29												
90871-YX4-J01	39	16	99151-ZDK-0650	27	29												
90875-YX4-J01	39	17	99151-ZDK-0680	27	29												
90951-YX4-J01	41	21	99153-ZDK-0380	27	30												
			99154-ZDK-0050	27	31												
91000																	
91001-ZDK-005	18	9															
91002-ZDK-005	19	5															
91060-YX4-J01	43	5															
91061-YX4-J01	41	22															
91062-YX4-J01	41	23															
91063-YX4-J01	41	24															

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[A]			BOLT, FLANGE, 8X60	17	10	[D]		
ARM, GOVERNOR	33	2		39	11	DEFLECTOR, MUFFLER	29	4
ARM, VALVE ROCKER	21	4	BOLT, FLANGE, 8X65	45	11	DOWEL PIN, 10X16	17	9
[B]			BOLT, FLANGE, 8X85	38	12	DOWEL PIN, 8X14	19	7
BALL, STEEL	41	21	BOLT, GOVERNOR ARM	33	9	[E]		
BAND, CABLE, 5X200	36	5	BOLT, PIVOT, 8MM	21	13	ELBOW COMP., AIR CLEANER	28	6
BAND, CABLE, 8X200	36	4	BOLT, SOCKET, 4X10	38	14	ELEMENT, AIR CLEANER	28	2
	37	6	BOLT, STUD, 6X112	17	7	EMBLEM	34	2
BAND, HARNESS	36	3	BOLT, STUD, 8X32	17	8			
BARREL ASSY., CYLINDER	18	1	BOWL ASSY.	26	7	[F]		
BAR, DRAG	46	4	BOX COMP., HITCH	46	1	FAN, COOLING	31	2
BEARING, RADIAL BALL, 6002	41	24	BRACKET COMP., FR. STAND	45	2	FENDER COMP., MAIN	44	10
BEARING, RADIAL BALL, 6005	43	6	[C]			FENDER, L.	44	14
BEARING, RADIAL BALL, 6202	41	23	CABLE COMP., MAIN CLUTCH	36	14	FENDER, R.	44	13
BEARING, RADIAL BALL, 6203	41	22	CABLE COMP., THROTTLE	36	1	FILTER COMP., FUEL	30	6
BEARING, RADIAL BALL, 6205	18	9	CAMSHAFT ASSY.	21	2	FLOAT	26	2
	19	5	CAP ASSY., NOISE SUPPRESSOR ..	32	2	FLYWHEEL COMP.	31	4
	43	5	CAP ASSY., OIL FILLER	19	2	FORK, SHIFT	41	15
BED COMP., ENGINE	45	4						
BODY, SLOW JET	27	31	CAP COMP., FUEL FILLER	30	4	[G]		
BOLT	26	22	CAP, OIL	39	7	GASKET	26	8
		23	CARBURETOR ASSY.	26	10			
BOLT, 10X45	45	13	CASE, TRANSMISSION	39	1	GASKET KIT	35	1
BOLT, CONNECTING ROD	20	6	CHAIN, FINAL	43	3	GASKET, CYLINDER HEAD	17	2
BOLT, DRAIN PLUG	18	5	CHAMBER SET, FLOAT	26	4	GASKET, MUFFLER	29	3
	39	12	CHOKE	26	18	GEAR COMP., REVERSE IDLE	41	13
BOLT, FLANGE, 10X75X1.25	45	12	CIRCLIP, INTERNAL, 35MM	41	20	GEAR, CHANGE	41	12
BOLT, FLANGE, 10X85	46	8	CIRCLIP, INTERNAL, 52MM	43	4	GEAR, COUNTERSHAFT FIRST	41	9
BOLT, FLANGE, 5X8	37	12	CLIP, GOVERNOR HOLDER	18	8	GEAR, COUNTERSHAFT SECOND	41	10
BOLT, FLANGE, 6X10	24	11	CLIP, PISTON PIN, 18MM	20	7	GEAR, FINAL	41	11
BOLT, FLANGE, 6X12	17	6	CLIP, TUBE	30	11	GOVERNOR ASSY.	18	2
	25	4	COIL ASSY., IGNITION	32	1	GRIP, FENDER	44	9
	33	8	COLLAR	44	11	GRIP, HANDLE	36	12
	37	13	COLLAR B, AIR CLEANER	28	5		37	8
	38	9	COLLAR, AIR CLEANER	28	4	GUIDE, CABLE	37	7
	39	8	COLLAR, COUNTERSHAFT	41	4	GUIDE, RATCHET	24	4
BOLT, FLANGE, 6X13	29	5	COLLAR, DISTANCE	41	5			
BOLT, FLANGE, 6X16	41	17			6	[H]		
	44	15	COLLAR, FENDER	45	7	HANDLE ASSY., STOPPER	36	11
BOLT, FLANGE, 6X20	25	5	COLLAR, FINAL SHAFT	41	8	HEAD COMP., CYLINDER	17	1
	28	9	COLLAR, HANDLE	37	10	HITCH, ATTACHMENT	46	3
BOLT, FLANGE, 6X25	32	4	COLUMN COMP., HANDLE	33	1	HOLDER, CHANGE LEVER	37	4
BOLT, FLANGE, 6X34	30	7	CONTROL ASSY.	33	1			
BOLT, FLANGE, 6X50	39	9	CORD, STOP SWITCH	32	3	[I]		
BOLT, FLANGE, 8X16	38	10	COUNTERSHAFT	41	3	INSULATOR, CARBURETOR	26	12
	45	8	COVER	26	6			
	46	5	COVER ASSY., CRANKCASE	19	1	[J]		
BOLT, FLANGE, 8X20	38	13	COVER COMP., BELT	38	8	JET SET, SLOW	26	16
	39	10	COVER COMP., CHANGE	37	1	JET, MAIN, #62	27	29
	44	16	COVER COMP., FAN	25	1	JET, MAIN, #65	27	29
BOLT, FLANGE, 8X25	38	11	COVER COMP., HEAD	17	3	JET, MAIN, #68	27	29
	46	6	COVER COMP., INNER BELT	38	7			
BOLT, FLANGE, 8X30	45	9	COVER, AIR CLEANER	28	3			
	46	7	COVER, HANDLE	37	11			
BOLT, FLANGE, 8X32	19	8	COVER, TRANSMISSION TOP	39	3			
BOLT, FLANGE, 8X35	45	10	CRANKSHAFT COMP.	20	5			

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
JET, PILOT,	27	30	[O]			REEL, RECOIL STARTER	24	2
JOINT, FUEL TANK	30	2	OIL SEAL, 12X22X6	39	20	RETAINER, VALVE SPRING	21	11
[K]			OIL SEAL, 15X35X7	39	21	RIM, INNER SIDE	44	3
KEY, 5X5X33	20	8	OIL SEAL, 25X41X6	18	10	RIM, OUTER SIDE	44	4
KEY, SPECIAL WOODRUFF, 25X18 ..	31	1	O-RING	19	6	RING SET, PISTON	20	1
KNOB, RECOIL STARTER	24	8		27	26	ROD ASSY., CONNECTING	20	4
[L]			O-RING A, CASE	39	22	ROD, GOVERNOR	33	3
LABEL, OPERATOR CAUTION	34	1	O-RING, 14MM	30	8	ROD, PUSH	21	3
LEVER COMP., CLUTCH	36	13	O-RING, 39X2.6	39	23	ROLLER COMP., TENSION	38	5
LEVER COMP., LOWER CHANGE	37	3	O-RING, 43.5X2.6	39	24	ROPE, RECOIL STARTER	24	9
LEVER COMP., UPPER CHANGE	37	2				RUBBER, HANDLE	45	6
LEVER, CHOKE	26	17	[P]			RUBBER, SUPPORTER	30	1
LEVER, SHUT OFF	26	20	PACKING, CARBURETOR	26	15	[S]		
LIFTER, VALVE	21	9	PACKING, ELBOW	28	1	SCREW	27	24
[M]			PACKING, FUEL FILLER CAP	30	5	SCREW, 5X10	36	15
MARK B, COMBINATION	47	6	PACKING, HEAD COVER	17	4	SCREW, ADJUSTING	26	5
MARK, BELT COVER EMBLEM	47	3	PACKING, INSULATOR	26	13	SCREW, PAN, 5X12	37	14
MARK, CHANGE	47	1	PACKING, OIL FILLER CAP	19	4	SCREW, PAN, 5X25	36	2
MARK, CHOKE	34	3	PIN	27	25	SCREW, PAN, 5X28	33	10
MARK, COMBINATION	47	2	PIN COMP., HITCH	46	2	SCREW, SETTING	24	10
MARK, FUEL WARNING	34	1	PIN, 4X25	37	18	SCREW, TAPPING, 4X6	29	7
MARK, HONDA	34	4	PIN, 6X24	36	18	SCREW, TAPPING, 5X8	29	6
	47	7	PIN, 8X27	36	8	SEAL, VALVE STEM	21	1
MARK, OIL CAUTION	34	5	PIN, LOCK, 1.2X27	37	19	SEAL, WATER, 25X41X9.5/13	39	18
MARK, THROTTLE	47	8	PIN, LOCK, 2X30	37	17	SEAL, WATER, 25X52X9.5/13	39	19
MARK, TINE CAUTION	47	4	PIN, LOCK, 2X9X38	44	21	SHAFT, CHOKE	26	19
MARK, TINE DANGER	47	5		46	13	SHAFT, FINAL	41	7
MUFFLER COMP.	29	1	PIN, LOCK, 3.5X13X81	46	12	SHAFT, GOVERNOR ARM	18	4
			PIN, LOCK, 8MM	18	12	SHAFT, INPUT	41	1
[N]			PIN, PISTON	20	3	SHAFT, SHIFT FORK	41	14
NOZZLE, MAIN	26	11	PIN, SHAFT, 8X40	44	20	SHAFT, TENSION ARM	39	6
NUT, FLANGE, 10X1.25	45	16		46	11	SHAFT, WHEEL	43	2
	46	10		36	19		44	2
NUT, FLANGE, 6MM	28	8	PIN, SPLIT, 1.6X14	36	19		8	
	30	9	PIPE COMP., FR. GUARD	45	5	SHROUD	25	3
	33	11	PIPE COMP., HANDLE	36	7	SLIDER, GOVERNOR	18	3
	39	13	PISTON	20	2	SPACER COMP., CARBURETOR	26	14
	44	17	PIVOT, ROCKER ARM	21	5	SPRING	26	3
NUT, FLANGE, 8MM	39	14	PLATE, BEARING HOLDER	39	2	SPRING, BALL SET	41	16
	45	14	PLATE, PUSH ROD GUIDE	21	12	SPRING, CABLE RETURN	33	7
	46	9	PLATE, REINFORCE	44	12	SPRING, CHANGE LEVER RETURN ..	37	5
NUT, HANDLE LOCK	36	9	PLATE, SIDE	25	2	SPRING, CONTROL ADJUSTING	33	6
NUT, HEX., 5MM	36	16	PLUG, SEALING	37	9	SPRING, FRICTION	24	5
NUT, HEX., 8MM	29	8	PLUG, SEAL, 16.2X5.7	39	17	SPRING, GOVERNOR	33	4
	44	18	PLUG, SEAL, 24X28.3X6.5	39	16	SPRING, RECOIL STARTER	24	6
NUT, LOCK, 10MM	45	17	PLUG, SPARK	17	11	SPRING, RETURN	24	7
NUT, LOCK, 8MM	45	15	PROTECTOR COMP., MUFFLER	29	2		45	1
NUT, PIVOT ADJUSTING	21	14	PROTECTOR, L. CASE	39	5	SPRING, THROTTLE RETURN	33	5
NUT, SPECIAL, 14MM	31	5	PROTECTOR, R. CASE	39	4	SPRING, VALVE	21	10
NUT, TOOL BOX SETTING	28	7	PULLEY COMP., DRIVEN	38	6	SPRING, WEIGHT RETURN	21	6
			PULLEY, DRIVE	38	1	SPROCKET, DRIVE	41	2
			PULLEY, STARTER	31	3	SPROCKET, DRIVEN	43	1
			[R]			STAND COMP., FR.	45	3
			RATCHET, STARTER	24	3	STARTER ASSY., RECOIL	24	1
						STOPPER, BELT	38	3
							4	
						SWITCH ASSY., ENGINE STOP	36	6

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[T]								
TANK COMP., FUEL	30	3						
TIRE, INNER	44	6						
TIRE, OUTER	44	5						
TOOL KIT	48	1						
TUBE, BREATHER	17	5						
TUBE, FUEL, 4.5X145	30	10						
[V]								
VALVE ASSY., NEEDLE	26	1						
VALVE, EX.	21	8						
VALVE, IN.	21	7						
V-BELT	38	2						
[W]								
WASHER	38	16						
WASHER, 6.4X18X1.6	37	16						
WASHER, 9X27X3	38	15						
WASHER, COUNTERSHAFT	41	18						
WASHER, COUNTERSHAFT, 18X23X1	41	19						
WASHER, DRAIN PLUG	39	15						
WASHER, DRAIN PLUG, 10.2MM	18	7						
WASHER, PLAIN, 10MM	45	18						
WASHER, PLAIN, 13X24X2	37	15						
WASHER, PLAIN, 6MM	18	11						
WASHER, SPECIAL	36	10						
WASHER, SPRING, 10MM	36	17						
WASHER, SPRING, 8MM	44	19						
WASHER, THRUST, 6MM	18	6						
WASHER, WAVE	26	21						
WHEEL ASSY., L.	44	7						
WHEEL ASSY., R.	44	1						

1

FOREWORD INDEX

2

ENGINE GROUP

3

FRAME GROUP

4

PART NUMBER INDEX

5

PART NAME INDEX

HONDA


HONDA PARTS CATALOGUE NEWS

PARTS CATALOGUE - CORRECTED

CODE NO.	18YX4L01
PARTS CATALOGUE NEWS	FQ650
NEWS NO.	001

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY FQ 650	Serial No.	Parts catalogue code
-----------	----------	------	----------	-------------	------------------------	------------	----------------------

F-1 HANDLE PIPE

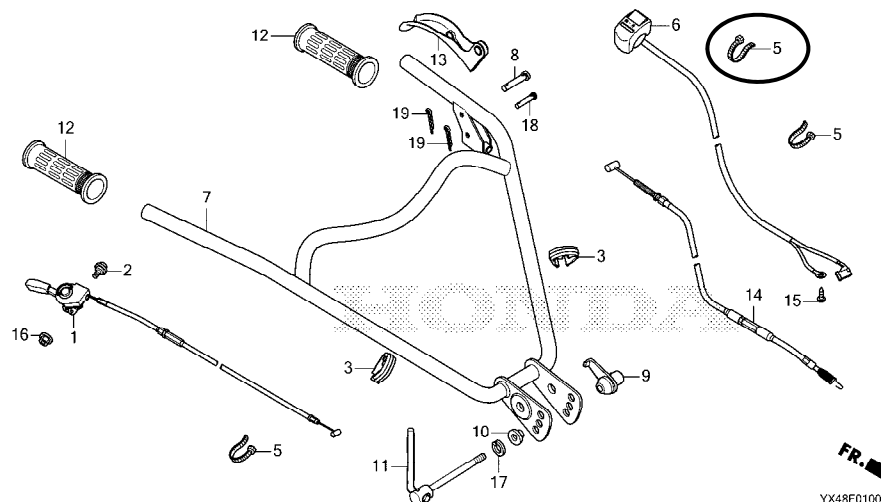

F-1	4	E	32902-YX4-J01	*PART NO. DELETION	
	5	K	32903-YX4-J01	BAND, CABLE, 5X200.....	3

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE