

GENERATOR

**EG5500CX
EG6500CX
EG5500CXS
EG6500CXS
EG5500CL**

PARTS CATALOGUE

4

FOREWORD INDEX

1

ENGINE GROUP

2

FRAME GROUP

3

PART NUMBER INDEX

4

PART NAME INDEX

5

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of October 10, 2014.**
 - See the parts catalogue news for any revision that is made after October 10, 2014.
- **Always specify the part number when ordering a part.**
 - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
 - Note that the illustrations (part drawings) can differ from the actual parts in shape.
They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**

Initial version issue date July 01, 2010
Honda Motor Co., Ltd.

CONTENTS

	Page	
● Instruction for use of parts catalogue	1	1
● How to refer to the part information	2	
● Part catalogue structure	3	
● When the parts were revised	4	
● Abbreviations used in the parts catalogue	4	
● How to check the part block and serial numbers	5	
● Models, parts catalogue codes and applicable serial numbers	6	
● Features of each type	9	
● Fuel hose, general purpose hoses and vinyl hose	14	
● FLAT RATE SERVICE TIME	15	
● Illustrated index	20	
● ENGINE GROUP	25	2
● FRAME GROUP	53	3
● PART NO. INDEX	90	4
● PART NAME INDEX	94	5

How to refer to the part information


B Reference with "Part number index"

PART NO. INDEX				
Part Number	Page	Ref.	Part Number	Page
06000			15212-ZW9-000	49
06316-ZW9-000	104	1	15220-ZW9-003	49
11000			15332-ZW9-000	74
11300-ZW9-000	46	1	15332-ZW9-A30	76
11300-ZW9-800	46	1	15400-PFB-004	46
11340-ZW9-000	46	2	15422-ZW9-000	49
11342-ZW9-000	46	3	15473-881-000	49
11381-ZW9-003	47	1	15474-ZW9-000	49
			15611-921-000	45
			15655-ZW9-000	46
12000			16000	
12000-ZW9-000ZA	46	4	16010-ZV4-005	55
12155-ZV4-A00	48	1	16011-ZV4-005	55
12166-ZW9-000	45	1	16013-ZW9-003	55
12209-GB4-681	51	1	16016-ZW9-003	55
12210-ZW9-000ZA	45	2	16016-ZW9-721	55
12216-ZE2-300	74	1	16023-ZW9-003	55
			16024-ZV4-650	55
			16028-ZV4-650	55

C Reference with "Part name index"

PART NAME INDEX		
Part name	Page	Ref.
[A]		
ABSORBER, FUEL	80	5
ARMATURE COMP.	62	7
ARM COMP., LINK JOINT	102	18
ARM COMP., SHIFT LINK	102	14
ARM COMP., TILT	97	20
ARM, FUEL PUMP ROCKER	51	4
ARM, REVERSE LOCK	97	18
ARM, SHIFT LINK	92	7
ARM, STOPPER	52	12
ARM, THROTTLE REMOTE	92	6
ARM, VALVE ROCKER	51	3
[B]		
BAG, TOOL, 160MM	101	10
BAND	103	37
BAND B1, WIRE	87	1
BAND, CORD	35	18
BAND, TUBE CLIP, 11MM	81	20
BAND, TUBE CLIP, 12.5MM	81	19

A Reference with "Illustrated index"

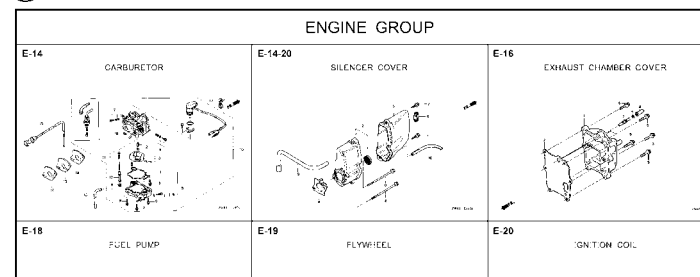

E-2

CYLINDER HEAD

Block No.

Ref No.

ZW83-50200

Service item	F.R.
O-RING, 26X2.7	0.1
PLUG, SPARK	
O-RING, 9.5X1.5	0.2
SENSOR ASSY., WATER	
COVER COMP., HEAD	TEMPERATURE
PACKING, HEAD COVER	
GASKET, CYLINDER HEAD	1.8
OIL SEAL, 20X32X6	2.4
HEAD COMP., CYLINDER	3.1


Ref. No.	Part No.	Description	Reqd. QTY						Serial No.	Parts catalogue code
			BF	BFP	BF	BFP	BF	BFP		
			9301	9301	1001	1001	1001	1001		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL	1	1	1	1	1	1		
		(NO GAUGE)								
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1		
	16617-ZW9-010		1	1	1	1	1	1		
8	35673-ZW5-003	SENSOR ASSY., WATER	1	1	1	1	1	1		
9	90003-ZW9-000	BOLT, FLANGE, 6X22	4	4	4	4	4	4		
10	90007-ZW9-003	BOLT, FLANGE, 8X83	6	6	6	6	6	6		
11	90011-ZW9-000	BOLT, FLANGE, 6X14(CT200)	1	1	1	1	1	1		
12	90020-ZW9-000	BOLT, FLANGE, 8X40	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7	1	1	1	1	1	1		
15	91307-PK2-005	O-RING, 9.5X1.5(HONDA KIKAKI)	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16F9)	2	2	2	2	2	2		

SC, S6
1001800 LHC, LHD
1001801 LHC, LHD


Page No.

2000.09.20 E

Part catalogue structure

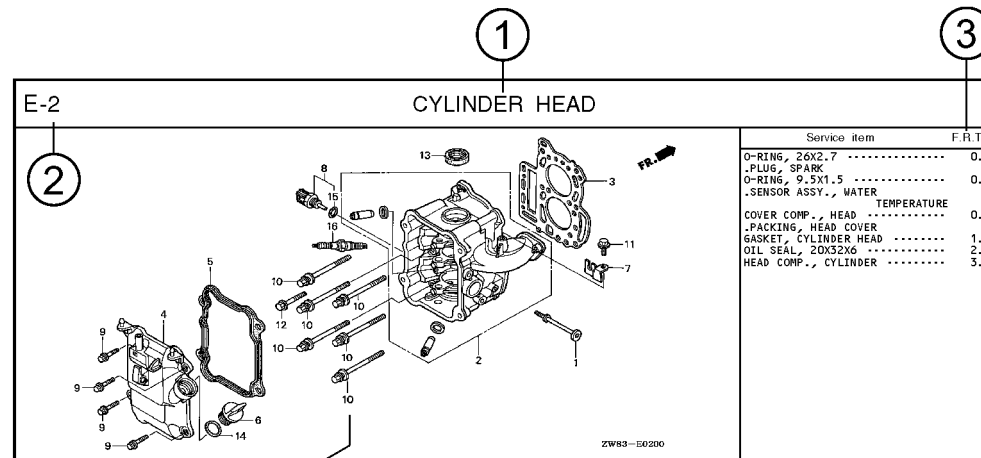

Ref. No.	Part No.	Description	Reqd. QTY						Serial No.	Parts catalogue code
			BF	BFP	BF	BFP	BF	BFP		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER								
		NH8	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL	1	1	1	1	1	1		
		(NO GAUGE)								
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1		
	16617-ZW9-010		1	1	1	1	1	1	----- SC,SG 1001800 LHC,LHD	

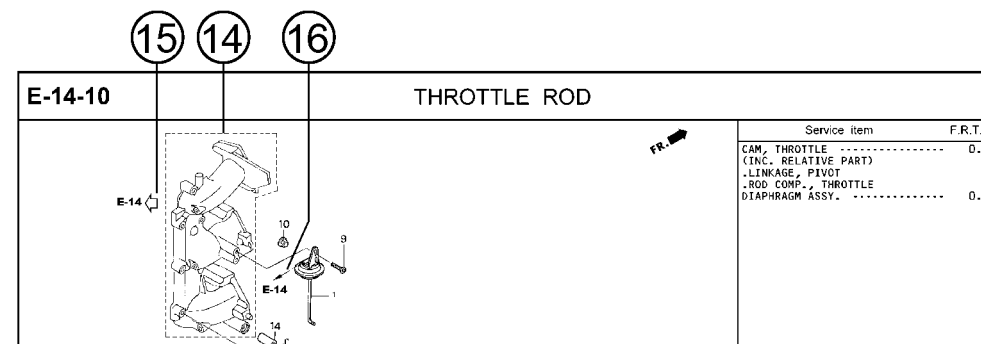

① Block title ② Block number

③ Service item/Flat rate time

④ Reference number

- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑤ Part number ⑥ Honda color code

⑦ Description

⑧ Assemblies

- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑨ Color description

⑩ Note

- Notes are shown with the parentheses in the part name column.

⑪ Required quantity

- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with "N" Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑫ Serial number

⑬ Type

- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the "parts catalogue, type" please refer to "Models, types and applicable serial numbers" for confirmation.

⑭

- Parts enclosed within a dotted line are covered in a different block.

⑮

- A hollow arrow indicates the block No. for the parts enclosed within a dotted line.

⑯

- A solid arrow indicates the block No. the part in question is connected to.

When the parts were revised



Be sure to check the serial number!!



Ref. No.	Part No.	Description	Reqd. QTY						Serial No.
			BF 99D1	BFP 99D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER							
3	12251-ZW9-003	*NH8*.....DARK GRAY	1	1	1	1	1	1	
4	12310-ZW9-000	GASKET, CYLINDER HEAD	1	1	1	1	1	1	
5	12312-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1	
6	15611-921-000	PACKING, HEAD COVER	1	1	1	1	1	1	
7	16617-ZW9-000	CAP, OIL	1	1	1	1	1	1	
		(NO GAUGE)							
	16617-ZW9-010	HOLDER, CABLE (###)	1	1	1	1	1	1	
			1	1	1	1	1	1	

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.


- The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).

Abbreviations used in the parts catalogue

- The following abbreviations are used in the parts name column.



A Ampere	FR.Front
A.C. Alternating current	IN.Inlet
ASSY. Assembly	L (100L) .Link (100 Links)
AT. Automatic transmission	L.Left
C.D.I. Capacitive discharge ignition	MMMillimeter
COMP. ... Complete	MT.Manual Transmission
D.C. Direct current	P.T.O.Power take off
EX. Exhaust	R.Right
G.F.C.I ... Ground fault circuit interruptor	RR.Rear
HEX. Hexagonal	STD.Standard
H.S.T. Hydrostatic transmission	T (22T) ...Tooth (22 Teeth)
	VVolt
	WWatt

How to check the part block and serial numbers

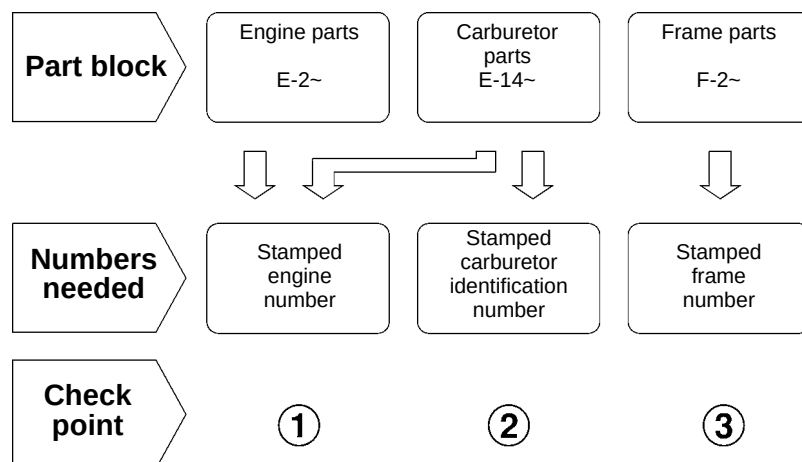


②-B
CARBURETOR IDENTIFICATION
NUMBER

②-A
CARBURETOR IDENTIFICATION
NUMBER

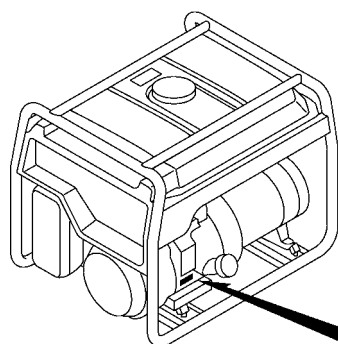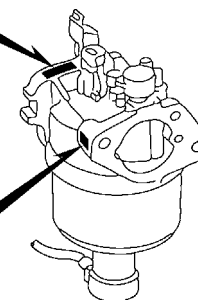

①

ENGINE SERIAL NUMBER

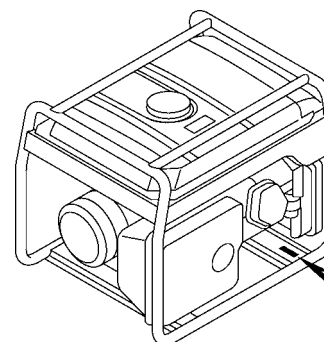

③

FRAME SERIAL NUMBER

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
EG5500CX	UH	UH	GX390H1	ED1	GCAFH-0000001~	EBCC-1000001~	BE89V A BE95H A
EG6500CX	KH	KH		ED8			BE89V A
	LD1H	LD1H		ED1			BE89V A BE95H A
	LDH	LDH		ED8			BE89V A
	LT1H	LT1H		ED1			BE89V A BE95H A
	LTH	LTH					BE95H A
	MH	MH					BE89V A BE95H A
	REH	REH					BE89V A BE95H A
	RH	RH					BE89V A
	S1H	S1H		ED8			BE89V A BE95H A
	SH	SH		ED1			BE89V A
	SK1H	SK1H		ED8			BE89V A BE95H A
	SKH	SKH		ED1			BE89V A BE95H A

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.		
			Model	Type					
EG5500CXS	RGH	RGH	GX390H1	ED2	GCAFH-0000001~	EBDC-1000001~	BE89V A BE95H A		
	UH	UH					BE89V A		
EG6500CXS	KH	KH		ED9				EBDC-1000001~	BE89V A
	LBH	LBH							
	LD1H	LD1H							
	LDH	LDH		ED2		EBDC-1000001~9999999	BE89V A BE95H A		
	LT1H	LT1H		ED9		EBDC-1000001~	BE89V A		
	LTH	LTH		ED2		EBDC-1000001~9999999	BE89V A BE95H A		
	MH	MH				EBDC-1000001~		BE95H A	
	REH	REH					BE89V A BE95H A		
	RH	RH					BE89V A		
	S1H	S1H		ED9		EBDC-1000001~9999999	BE89V A BE95H A		
	SH	SH		ED2		EBDC-1000001~	BE89V A		
	SK1H	SK1H		ED9		EBDC-1000001~9999999	BE89V A BE95H A		
	SKH	SKH		ED2		EBDC-1000001~9999999	BE89V A BE95H A		

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
EG5500CL	BT	BT	GX390T2	ED1	GCBDT-1000001~	EBBC-1000001~	BE95A A
	CLT	CLT					
	FT	FT					
	GT	GT					
	GWT	GWT					
	GWT1	GWT1					
	ITT	ITT					

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

BE 89V A KC ナ
 (A) (B)

Features of each type

- See the following table for the features of each type. (Items in brackets are optional)

Model Type		EG5500CX	EG6500CX					
		UH	KH	LD1H	LDH	LT1H	LTH	MH
Rated output	5.0kVA	●	●					●
	5.5kVA			●	●	●	●	
	3.68/5.0kVA							
Consent plug	15A / 125V			●	●	●	●	
	16A / 250V (VDE standard in Germany and Austria)							
	20A / 250V		●					
Spark arrester		●						
Starter motor								

Model Type		EG6500CX						EG5500CXS
		REH	RH	S1H	SH	SK1H	SKH	RGH
Specifications	Rated output	5.0kVA	●	●				●
		5.5kVA			●	●	●	
		3.68/5.0kVA						
Consent plug		15A / 125V						
		16A / 250V (VDE standard in Germany and Austria)				●	●	●
		20A / 250V	●	●	●	●		
Spark arrester								●
Starter motor								●

Specifications		Model	EG5500CXS						
		Type	EG6500CXS						
			UH	KH	LBH	LD1H	LDH	LT1H	LTH
Rated output	5.0kVA		●	●					
	5.5kVA				●	●	●	●	●
	3.68/5.0kVA								
Consent plug	15A / 125V					●	●	●	●
	16A / 250V (VDE standard in Germany and Austria)								
	20A / 250V			●					
Spark arrester			●	●			●		●
Starter motor			●	●	●	●	●	●	●

Model Type		EG6500CXS						
		MH	REH	RH	S1H	SH	SK1H	SKH
Specifications	Rated output							
	5.0kVA	●	●	●				
	5.5kVA				●	●	●	●
	3.68/5.0kVA							
Consent plug	15A / 125V							
	16A / 250V (VDE standard in Germany and Austria)						●	●
	20A / 250V		●	●	●	●		
Spark arrester		●	●	●		●		●
Starter motor		●		●	●	●	●	●

Specifications		Model	EG5500CL						
		Type	BT	CLT	FT	GT	GWT	GWT1	ITT
Rated output	5.0kVA			●	●	●	●	●	●
	5.5kVA								
	3.68/5.0kVA	●							
Consent plug	15A / 125V								
	16A / 250V (VDE standard in Germany and Austria)		●	●	●	●	●		
	20A / 250V								
Spark arrester		●	●	●	●	●	●	●	●
Starter motor									

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
(For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:

Refers to the bulk part.

Marking code (fuel hose and general purpose hose)

Change code (Vinyl hose)

Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

- Fuel hose
 - 2: Red outside braid (3 mm inside dia. only)
 - 5: Black inside braid
 - 3: Red (3 mm inside dia. only)
 - 4: Ash gray with red stripe (3 mm inside dia. only)
 - 6: Black

- General hose
 - 1: Ash gray
 - 2: Ash gray
 - 3: Black
 - 5: Black

- Vinyl hose
 - 1: Clear
 - 2: Black
 - 3: Light red
 - 6: Light red
 - 7: Pale black

Lengths:

001: 1 m (standard)
003: 3 m
008: 8 m

} Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm
35: 3.5 mm
45: 4.5 mm

50: 5.0 mm
55: 5.3 mm, 5.5 mm
65: 6.5 mm

70: 7.0 mm
75: 7.3 mm, 7.5 mm
80: 8.0 mm

11: 11 mm
91: 12 (outside dia. 15) mm
92: 12 (outside dia. 16) mm

12: 12 (outside dia. 17) mm
14: 14 mm
17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm
03: ID. 3.0, OD. 6.0 mm
05: ID. 3.5, OD. 6.5 mm
07: ID. 4.0, OD. 7.0 mm
08: ID. 4.5, OD. 6.5 mm
09: ID. 4.5, OD. 8.0 mm

12: ID. 5.0, OD. 7.0 mm
10: ID. 5.0, OD. 8.0 mm
11: ID. 5.0, OD. 9.0 mm
14: ID. 6.0, OD. 9.0 mm
17: ID. 7.0, OD. 9.0 mm
19: ID. 7.0, OD. 11.0 mm

21: ID. 8.0, OD. 9.0 mm
23: ID. 8.0, OD. 12.0 mm
25: ID. 9.0, OD. 11.0 mm
27: ID. 9.0, OD. 13.0 mm
33: ID. 10.0, OD. 14.0 mm
36: ID. 11.0, OD. 13.0 mm

37: ID. 11.0, OD. 15.0 mm
38: ID. 12.0, OD. 13.0 mm
39: ID. 12.0, OD. 14.0 mm
40: ID. 12.0, OD. 16.0 mm
43: ID. 13.0, OD. 15.0 mm
45: ID. 14.0, OD. 18.0 mm

50: ID. 16.0, OD. 19.0 mm
55: ID. 17.5, OD. 20.5 mm
60: ID. 22.0, OD. 27.0 mm

Hose type:

- 1: Fuel hose
- 3: Vinyl hose
- 5: General hose


⊙ **CAUTION:** It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

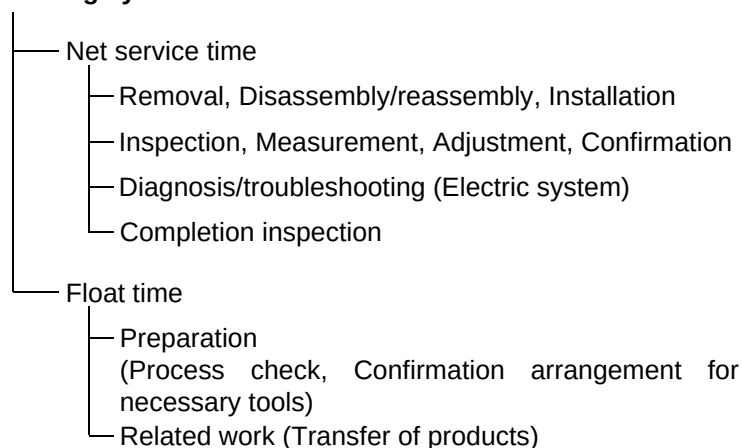

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
Example: (0.1) → 6 minutes, (0.2) → 12 minutes
[Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
- Locations with little aging deterioration or breakage during normal use.
- Service work that can be finished by one touch.
- Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
- Products and parts whose location for installation differs according to its status of use and application.

* When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water draining, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
① ②	1111L1	(1, 3, 4, 7) VALVE, INTAKE 4.1	②
③	1111L1A	• NOTE: OHV type • Includes: Engine removal and installation One head (intake all) add 1.4	⑦ ⑤

- ① Reference No. of the illustration of part that shows location of the replacement work.
- ② FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.
- ③ LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.


- ④ Indicating the intake valve replacement and FRT4.1.
- ⑤ Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

- ⑥ Indicating work condition or application condition of the service item.
- ⑦ Indicating work contents that are included in the service item.
- ⑧ Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
 (intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.



Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111L1	VALVE, INTAKE	4.1
	.	.	.
	.	.	.

+

Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION	

• LON code system

1	11	1	L1	A
a	b	c	d	e

- a) Category code..... Engine
- b) Location/function code..... Engine upper
- c) Operation code..... Replace
- d) Operation sequence number (Unit code can be shown with alphabet)
 - Intake valve
 - (No regular rule of code)
- e) Additional code One head (intake all)
 - (No regular rule of code)

1	11	1	L1	A
a		c		

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurement
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts

Removal/Installation, Adjustment, Inspection/Masurement, Overhaul, Other work

E: Engine, T: Transmission, D: Drive system, B: Body and related parts

• Removal/Installation

Set with the parts configuration in the status of being removed from the product.

	LON	DESCRIPTION	FRT
E	1001A0	ENGINE AND GENERATOR-REMOVAL/INSTALLATION	1.1
B	6221R4	CONTROL BOX ASSEMBLY-REMOVAL/INSTALLATION	0.5

• Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	VALVE CLEARANCE-ADJUSTMENT NOTE: For 1 product	0.3
	3113A2	CARBURETOR IDLE-ADJUSTMENT	0.2

• Inspection/Masurement

	LON	DESCRIPTION	FRT
E	1105A0	ENGINE OIL-INSPECTION	0.1
	3115A2	CARBURETOR FLOAT LEVEL-MEASUREMENT	0.5
	3115A3	CARBURETOR FLOAT LEVEL-MEASUREMENT(A) NOTE: CL model	0.3

• Overhaul

Work condition: The required Measurements, inspections, adjustments, and cleaning/washing of each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	CARBURETOR-OVERHAUL INCLUDES: All necessary adjustment	0.7
	3112A3	CARBURETOR-OVERHAUL(A) INCLUDES: All necessary adjustment NOTE: CL model	0.5

• Other work


	LON	DESCRIPTION	FRT
E	1101E1	ENGINE OIL-CHANGE INCLUDES: Engine oil-inspection	0.1
	3120A0	AIR CLEANER-CLEANING INCLUDES: Air cleaner-inspection	0.2
	3130A0	SPARK ARRESTER-CLEANING INCLUDES: Spark arrester-inspection	0.2
	6140A0	SPARK PLUG-ADJUSTMENT/CLEANING INCLUDES: Spark plug check NOTE: For 1 product	0.2

[illegible]

ENGINE GROUP


E-12

FAN COVER

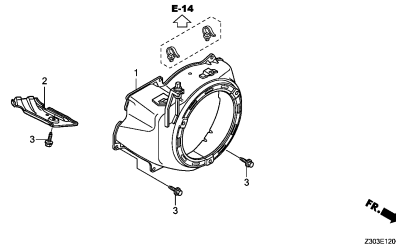


E-14

CARBURETOR(1)

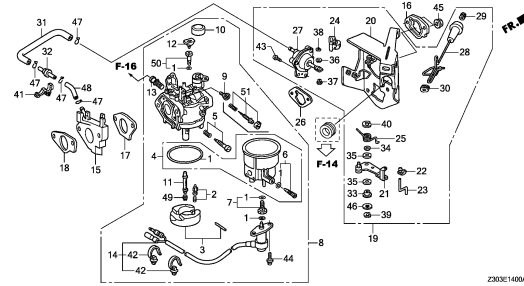


E-14-1

CARBURETOR(2)

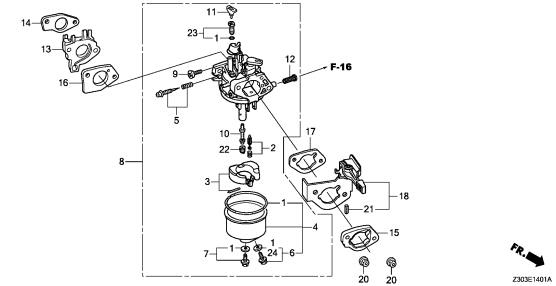


E-19

FLYWHEEL

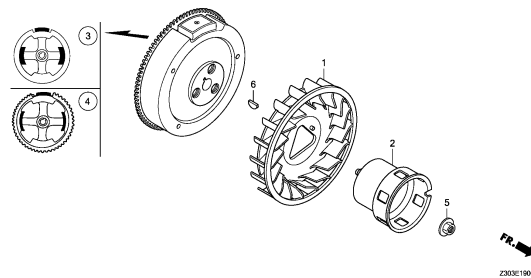


E-20

IGNITION COIL(1)

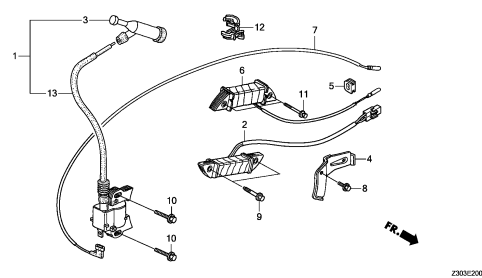


E-20-1

IGNITION COIL(2)

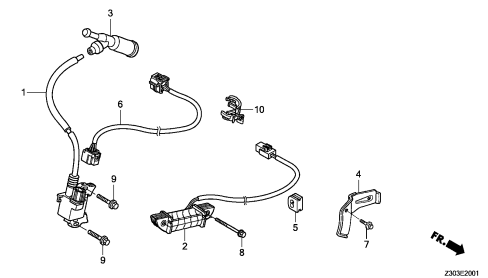


E-21

STARTER MOTOR(1)

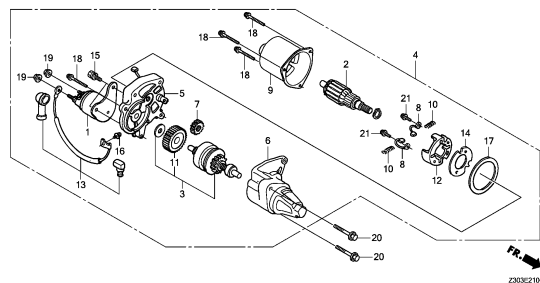


E-21-1

STARTER MOTOR(2)

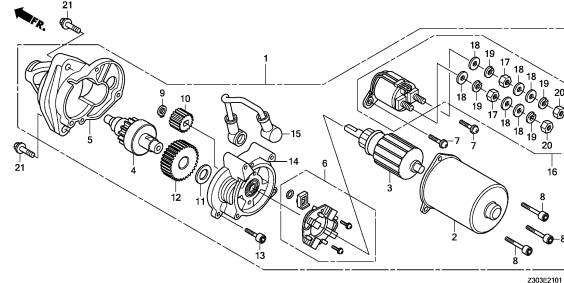

E-22

CONTROL

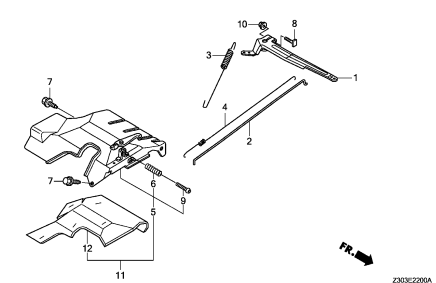


2

FRAME GROUP


F-2

CONTROL PANEL(1)

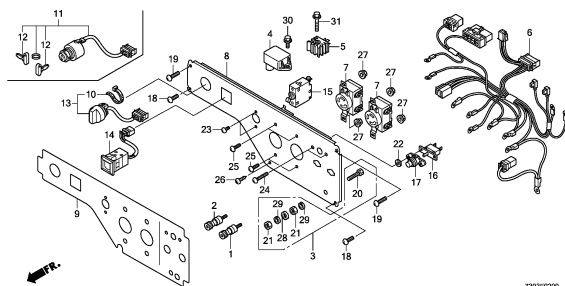


F-2-1

CONTROL PANEL(2)

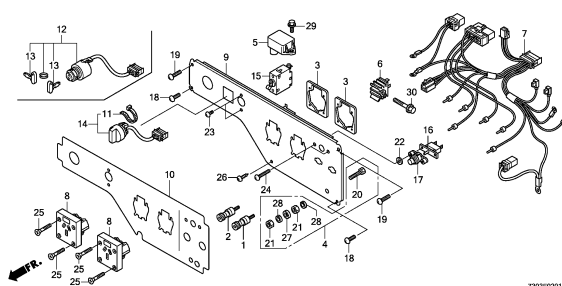


F-2-2

CONTROL PANEL(3)

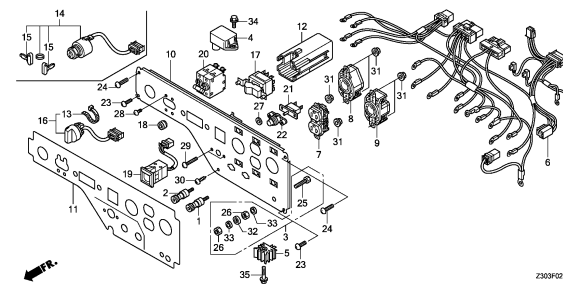


F-2-3

CONTROL PANEL(4)

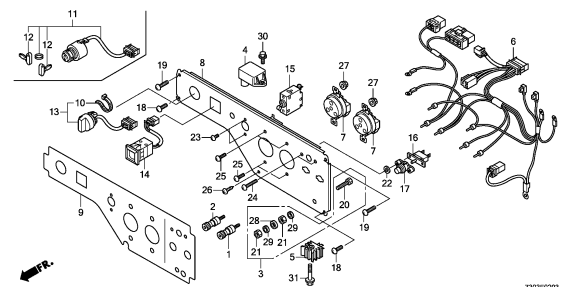


F-2-4

CONTROL PANEL(5)

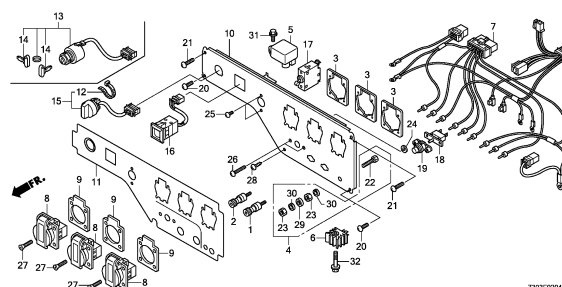


F-2-5

CONTROL PANEL(6)

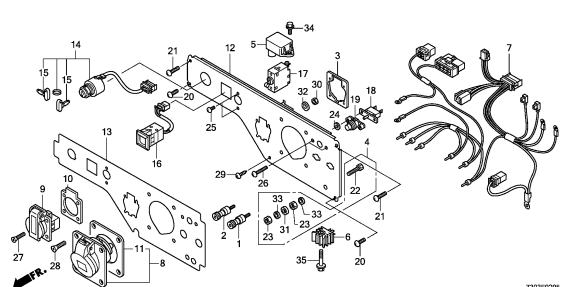


F-2-8

CONTROL PANEL(7)

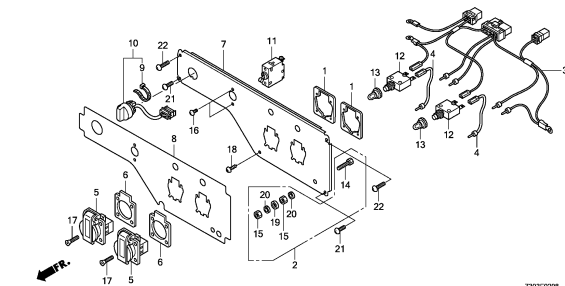


F-2-9

CONTROL PANEL(8)

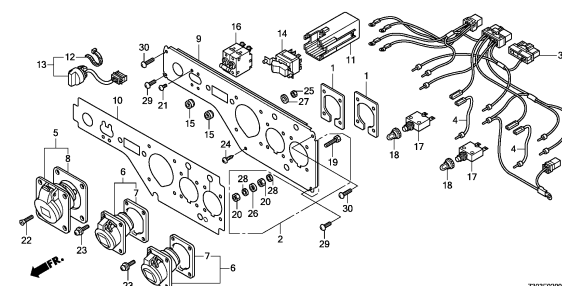

F-2-10


CONTROL PANEL(9)

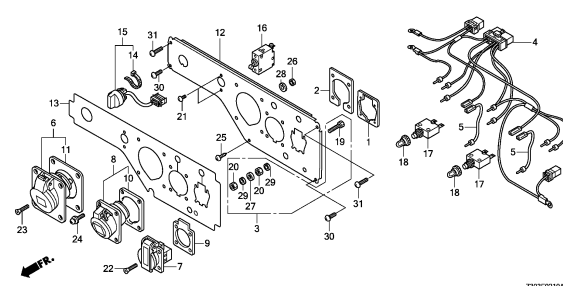

FRAME GROUP

F-2-11


CONTROL PANEL(10)

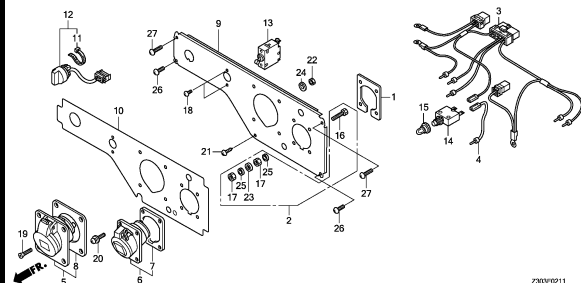

Z303F0211

F-2-20


A.V.R. UNIT

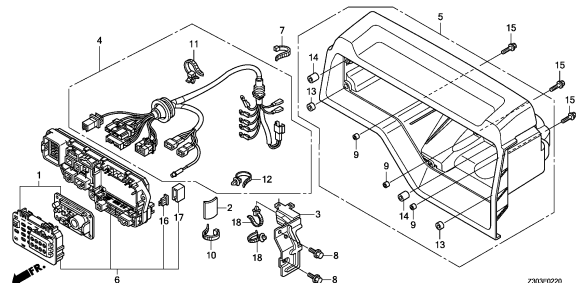

Z303F0220

F-14


AIR CLEANER

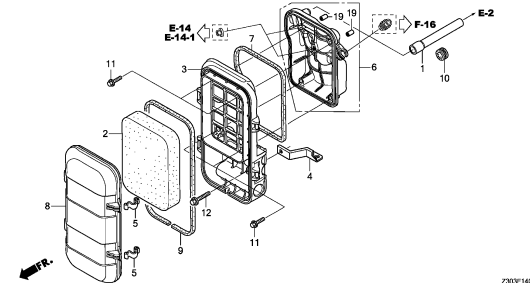

Z303F14000

F-15


MUFFLER(1)

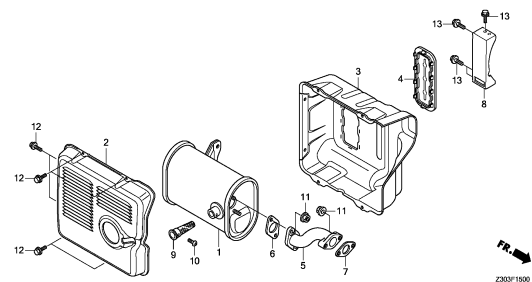

Z303F1500

F-15-1


MUFFLER(2)

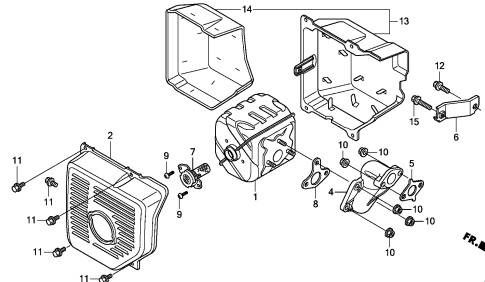

Z303F1501

F-16


FUEL TANK

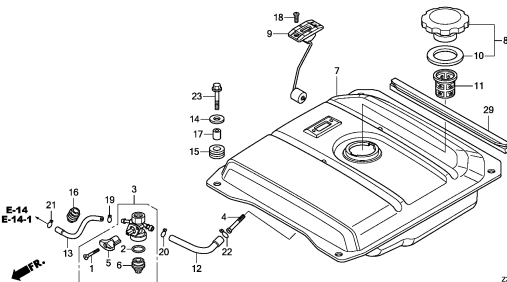

Z303F1600A

F-25


FRAME

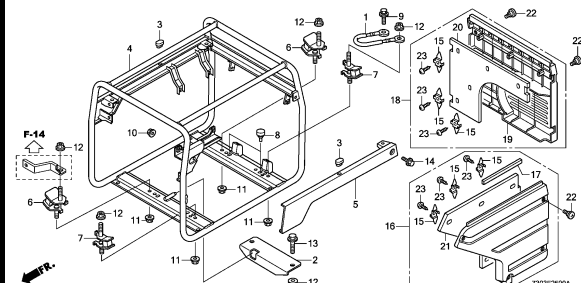

Z303F2500A

F-25-10


BATTERY TRAY

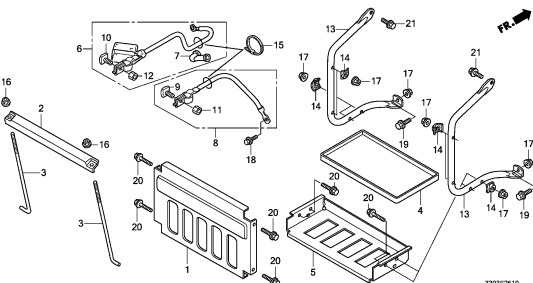

Z303F2510

F-29

ROTOR/STATOR

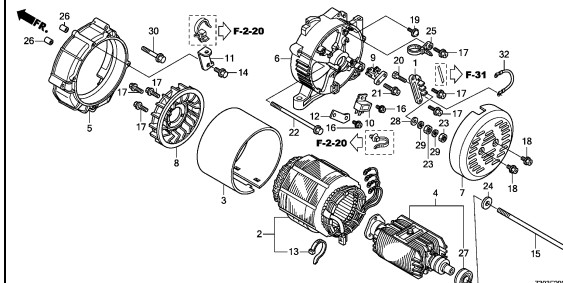


Z303F2900A

FRAME GROUP

F-31


LABEL

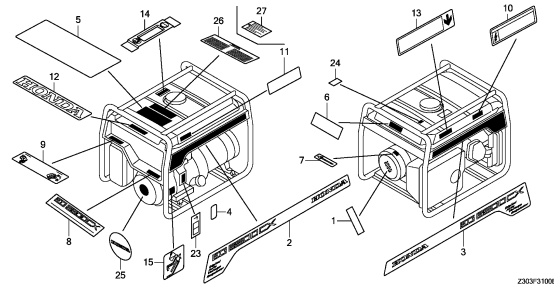

Z303F31006

F-32


TOOL

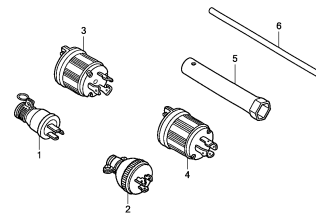

Z303F32000

FOP-1


WHEEL KIT(4-WHEELS)

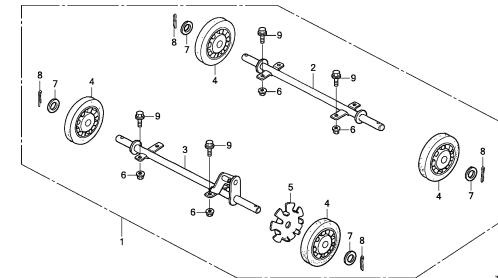

Z303Y0100

FOP-2


WHEEL KIT

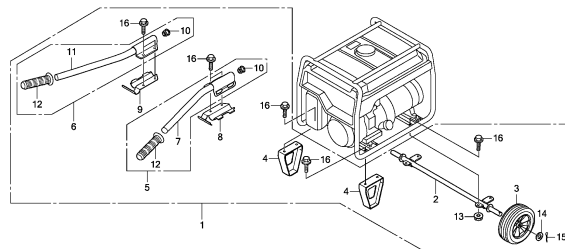

Z303Y0200

FOP-3

CONSENT KIT

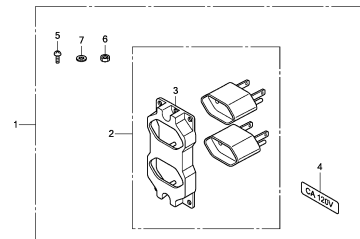


Z303Y0300

3

E-2

CYLINDER HEAD

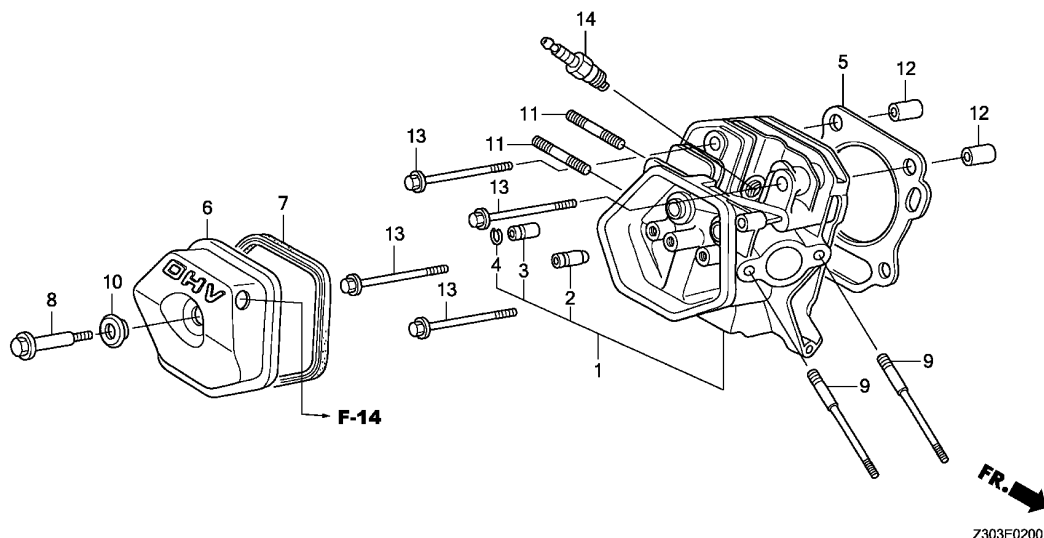


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111N3	HEAD, CYLINDERINCLUDES: Valve clearance adjustment and reface	2.2
	1111AZ	HEAD, CYLINDER(A)INCLUDES: Valve clearance adjustment and reface .NOTE: CL model	2.1
2	1111E9	GUIDE, INTAKE VALVEINCLUDES: Valve clearance adjustment	1.9
	1111E9E	.Replace intake and exhaust all add	0.3
	1111BA	GUIDE, INTAKE VALVE(A)INCLUDES: Valve clearance adjustment .NOTE: CL model	1.8
	1111BAA	.Replace intake and exhaust all add	0.3
3	1111E8	GUIDE, EXHAUST VALVEINCLUDES: Valve clearance adjustment	1.9
	1111E8E	.Replace intake and exhaust all add	0.3
+	1111BB	GUIDE, EXHAUST VALVE(A)	1.8

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	12200-ZF6-406	HEAD COMP., CYLINDER	1	1	1	1	-		
	12210-Z5T-406		-	-	-	-	1		
2	12204-ZE2-306	GUIDE, IN. VALVE(O.S.)	1	1	1	1	1		
3	12205-ZE2-305	GUIDE, EX. VALVE(O.S.)	1	1	1	1	1		
4	12216-ZE2-300	CLIP, VALVE GUIDE	1	1	1	1	1		
5	12251-ZF6-W01	GASKET, CYLINDER HEAD	1	1	1	1	-		
	12251-Z5T-003	GASKET, CYLINDER HEAD (NIPPON LEAKLESS)	-	-	-	-	1		
6	12310-ZE2-020	COVER COMP., HEAD	1	1	1	1	1		
7	12391-ZE2-020	PACKING, HEAD COVER	1	1	1	1	1		
8	90014-ZE2-000	BOLT, HEAD COVER	1	1	1	1	-		
	90014-Z5T-000		-	-	-	-	1		
9	90042-ZK6-D70	BOLT, STUD, 8X115	2	2	2	2	2		
	90042-Z7E-D00		-	2	-	2	-	-----	LBH,LD1H,LT1H,REH,S1H,SK1H
10	90441-ZE2-010	WASHER COMP., HEAD COVER	1	1	1	1	1		
11	92900-08032-0E	BOLT, STUD, 8X32	2	2	2	2	2		
12	94301-12200	DOWEL PIN, 12X20	2	2	2	2	2		
13	95701-10080-00	BOLT, FLANGE, 10X80	4	4	4	4	4		
14	98079-55846	PLUG, SPARK(BPR5ES)(NGK)	1	1	1	1	-		
	98079-55876		-	-	-	-	1		

2

E-2


CYLINDER HEAD

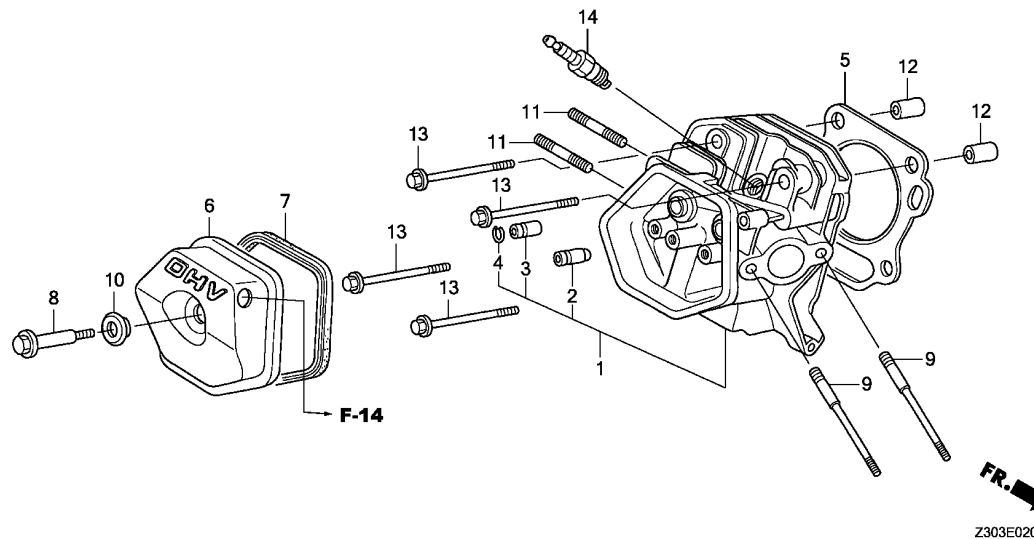

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 3		.INCLUDES: Valve clearance adjustment .NOTE: CL model	
1111BBA		.Replace intake and exhaust all add	0.3
5 1111N4		GASKET, CYLINDER HEAD	1.5
1111BC		GASKET, CYLINDER HEAD(A)	1.4
6		.NOTE: CL model (7) 1111D5 CYLINDER HEAD COVER AND/OR PACKING	0.1
14 6141C1		PLUG, SPARK	0.1
		.INCLUDES: Spark plug check	

E-3


CYLINDER BARREL

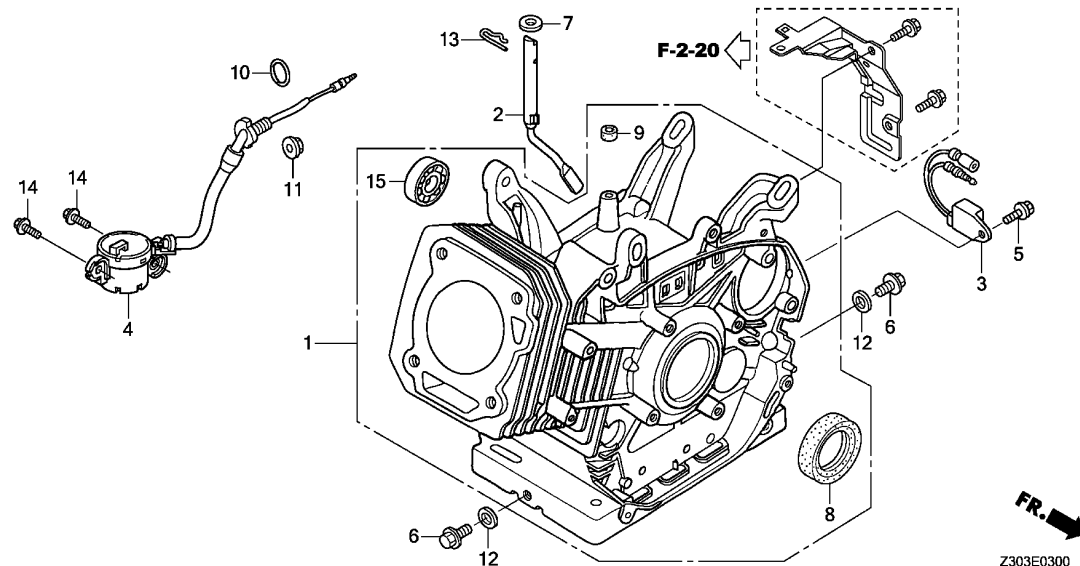

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101A0	BARREL, CYLINDERINCLUDES: Engine removal and installation	3.1
	1101A0F	.With starter motor add	0.1
2	1161B4	SHAFT, GOVERNOR ARMINCLUDES: Engine removal and installation	2.8
	1161B4C	.With starter motor add	0.1
3	6151A0	ALERT UNIT, ENGINE OIL (10)	0.1
4	6151E8	SWITCH, OIL LEVELINCLUDES: Engine removal and installation	1.9
8	1101E4	OIL SEAL, CRANKSHAFT :FRONT .. .INCLUDES: Engine removal and installation	2.9
	1101E4B	.With starter motor add	0.1
9	1101C4	OIL SEAL, GOVERNOR ARM SHAFT .. .INCLUDES: Engine removal and installation	2.8
	1101C4A	.With starter motor add	0.1
15	1101F4	BEARING, BALANCER WEIGHT :FRONTINCLUDES: Engine removal and installation	2.9

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	12000-Z7E-406	BARREL ASSY., CYLINDER(ALERT)	1	1	-	-	-		
	12000-Z7E-407	BARREL ASSY., CYLINDER (SELFSTARTER+ALERT)	-	-	1	1	-		
	12000-Z5T-407	BARREL ASSY., CYLINDER(ALERT)	-	-	-	-	1		
2	16541-Z7E-000	SHAFT, GOVERNOR ARM	1	1	1	1	-		
	16541-ZE3-010		-	-	-	-	1		
3	34150-ZH7-013	ALERT UNIT, OIL	1	1	1	1	-	----- KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH	
	34150-ZH7-023		-	1	-	1	-	----- REH	
4	35480-Z7E-003	SWITCH ASSY., OIL LEVEL	1	1	1	1	-		
	35480-ZF6-003		-	-	-	-	1		
5	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	1	1	1	-		
6	90131-883-000	BOLT, DRAIN PLUG, 12X15	2	2	2	2	2		
7	90446-Z7E-000	WASHER, 8.2X17X0.8	1	1	1	1	-		
	90446-KE1-000		-	-	-	-	1		
8	91201-Z7E-003	OIL SEAL, 35X52X8	1	1	1	1	-		
	91201-Z1C-003	OIL SEAL, 35X52X8(NOK)	-	-	-	-	1		
9	91203-Z7E-003	OIL SEAL, 8X14X5	1	1	1	1	-		
	91203-952-771		-	-	-	-	1		
10	91353-Z7E-003	O-RING, 14MM	1	1	1	1	-		
	91353-671-004	O-RING, 14MM(NOK)	-	-	-	-	1		
11	94050-10000	NUT, FLANGE, 10MM	1	1	1	1	1		
12	94109-12000	WASHER, DRAIN PLUG, 12MM	2	2	2	2	2		
13	94251-10000	PIN, LOCK, 10MM	1	1	1	1	1		
14	95701-06012-00	BOLT, FLANGE, 6X12	2	2	2	2	2		
15	96100-62020-00	BEARING, RADIAL BALL, 6202 ..	1	1	1	1	1		


2

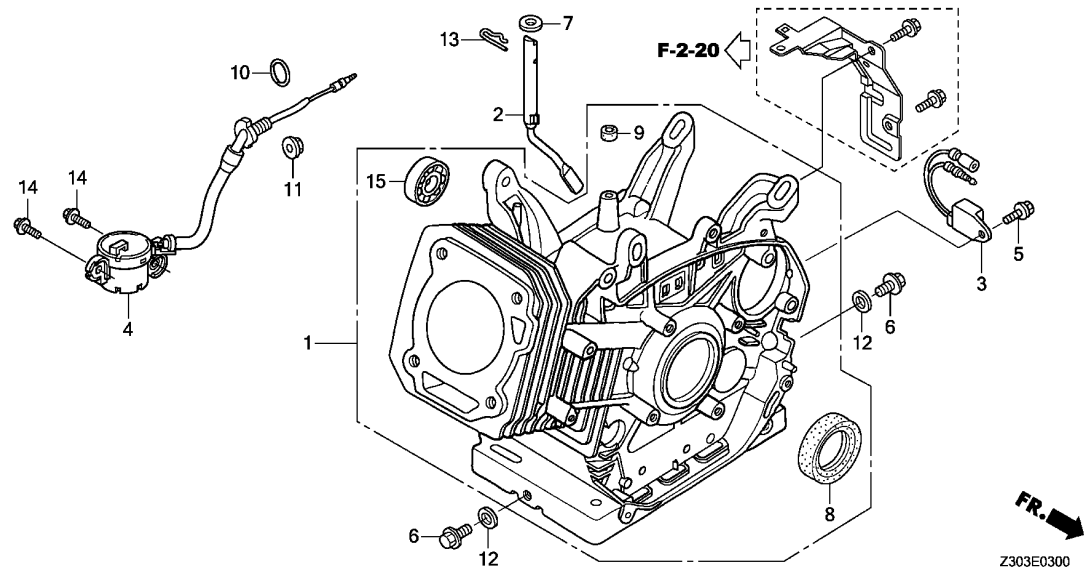

Ref. No.	L.O.N. (Relative ref. Number)	Description	F.R.T.
+15	1101F4B	.With starter motor add	0.1


E-6

CRANKCASE COVER

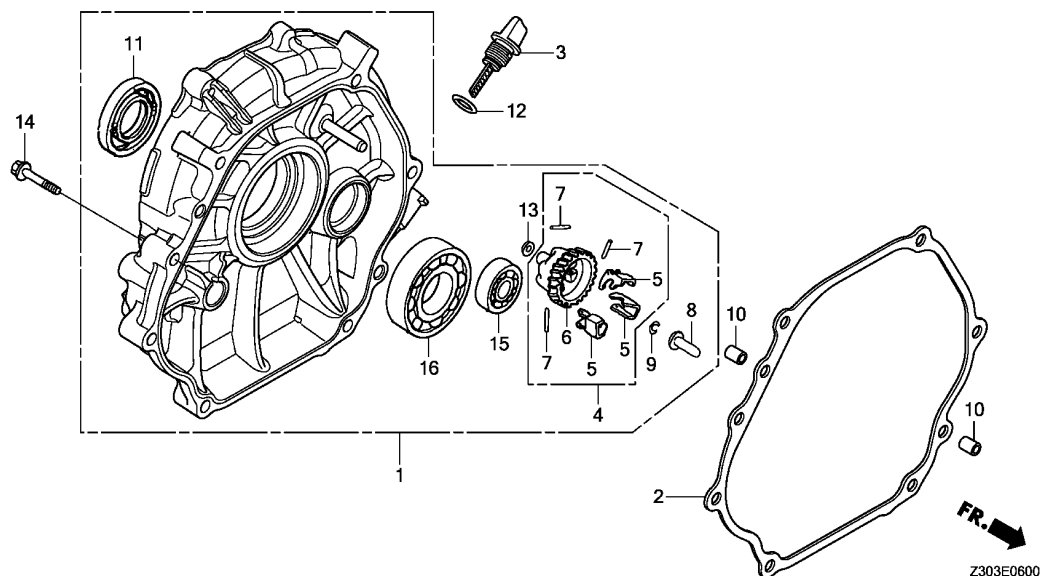

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F1	COVER, CRANKCASEINCLUDES: Engine removal and installation	1.7
2	1101E9	PACKING, CRANKCASE COVERINCLUDES: Engine removal and installation	1.7
4	1161C4	GOVERNOR ASSEMBLYINCLUDES: Engine removal and installation	1.7
6	1161A7	HOLDER, GOVERNOR WEIGHTINCLUDES: Engine removal and installation	1.8
8	1161B6	SLIDER, GOVERNORINCLUDES: Engine removal and installation	1.7
11	1101E5	OIL SEAL, CRANKSHAFT :REARINCLUDES: Engine removal and installation	1.8
15	1101F5	BEARING, BALANCER WEIGHT :REAR .INCLUDES: Engine removal and installation	1.8
16	1101A6	BEARING, CRANKSHAFT :REARINCLUDES: Engine removal and installation	1.8

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	11300-Z7E-E60	COVER ASSY., CRANKCASE(E-TYPE)	1	1	1	1	-		
	11300-Z1C-E20		-	-	-	-	1		
2	11381-Z7E-701	PACKING, CASE COVER (NINGBO SIL GASKET)	1	1	1	1	-		
	11381-ZE3-801	PACKING, CASE COVER	1	1	1	1	-		
	11381-Z5T-000	PACKING, CRANKCASE COVER	-	-	-	-	1		
3	15620-Z7E-800	CAP, OIL FILLER	1	1	1	1	-		
	15620-ZE2-700		-	-	-	-	1		
4	16510-Z7E-000	GOVERNOR ASSY.	1	1	1	1	-		
	16510-ZE3-000		-	-	-	-	1		
5	16511-ZE8-000	WEIGHT, GOVERNOR	3	3	3	3	3		
6	16512-Z7E-000	HOLDER, GOVERNOR WEIGHT	1	1	1	1	-		
	16512-ZE3-000		-	-	-	-	1		
7	16513-ZE2-000	PIN, GOVERNOR WEIGHT	3	3	3	3	3		
8	16531-Z0A-000	SLIDER, GOVERNOR	1	1	1	1	1		
9	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	1	1	1	1		
10	90701-Z7E-000	DOWEL PIN, 8X12	2	2	2	2	-		
	90701-HC4-000		-	-	-	-	2		
11	91201-Z7E-003	OIL SEAL, 35X52X8	1	1	1	1	-		
	91201-Z1C-003	OIL SEAL, 35X52X8(NOK)	-	-	-	-	1		
12	91301-805-000	O-RING, 26X2.7	1	1	1	1	1		
13	94101-06800	WASHER, PLAIN, 6MM	1	1	1	1	1		
14	95701-08040-00	BOLT, FLANGE, 8X40	7	7	7	7	7		
15	96100-62020-00	BEARING, RADIAL BALL, 6202	1	1	1	1	1		
16	96100-62070-00	BEARING, RADIAL BALL, 6207	1	1	1	1	1		
	91001-Z7E-003		-	1	-	1	-	----- REH	

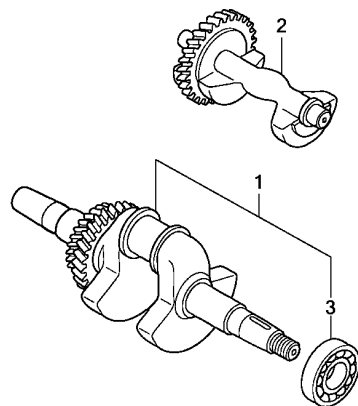


Z303E0700

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F0	CRANKSHAFTINCLUDES: Engine removal and installation	2.8
	1101F0G	.With starter motor add	0.1
2	1101D8	WEIGHT, BALANCERINCLUDES: Engine removal and installation	1.8
3	1101A4	BEARING, CRANKSHAFT :FRONTINCLUDES: Engine removal and installation	3.0
	1101A4B	.With starter motor add	0.1

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	13310-Z7E-700	CRANKSHAFT COMP.	1	1	1	1	-		
	13310-ZK6-D41		-	-	-	-	1		
2	13351-Z7E-000	WEIGHT, BALANCER	1	1	1	1	-		
	13351-ZE3-010		-	-	-	-	1		
3	91001-ZF6-013	BEARING, RADIAL BALL, 6207SH	1	1	1	1	1		
	91002-Z7E-003	BEARING, BALL RADIAL, 6207SH2	-	1	-	1	-	-----	REH

E-8

PISTON/CONNECTING ROD

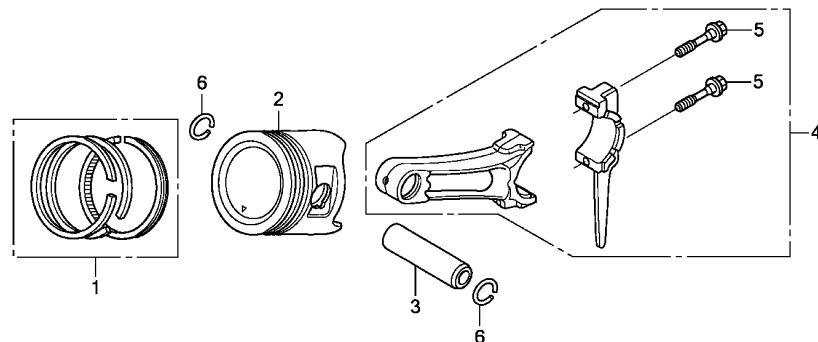


Z303E0800

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1,3,4)	
1111R1		PISTON AND/OR RING SET AND/OR BEARING AND/OR RODINCLUDES: Engine removal and installation .INCLUDES: Inspection/Measurement/Cleaning	2.9
1111R1K		.With starter motor add	0.1

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	13010-Z5R-004	RING SET, PISTON(STD.)							
		(TEIKOKU)	1	1	1	1	1		
	13010-Z5T-003	RING SET, PISTON(STD.) (RIKEN)	1	1	1	1	1		
	13011-Z5R-004	RING SET, PISTON(0.25)							
		(TEIKOKU)	(1)	(1)	(1)	(1)	(1)		
	13011-Z5T-003	RING SET, PISTON(0.25) (RIKEN)	(1)	(1)	(1)	(1)	(1)		
	13012-Z5R-004	RING SET, PISTON(0.50)							
		(TEIKOKU)	(1)	(1)	(1)	(1)	(1)		
	13012-Z5T-003	RING SET, PISTON(0.50) (RIKEN)	(1)	(1)	(1)	(1)	(1)		
	13013-Z5R-004	RING SET, PISTON(0.75)							
		(TEIKOKU)	(1)	(1)	(1)	(1)	(1)		
	13013-Z5T-003	RING SET, PISTON(0.75) (RIKEN)	(1)	(1)	(1)	(1)	(1)		
	13010-Z7E-701	RING SET, PISTON(STD.)							
		(FUJIAN DONGYA MACHINERY)	1	1	1	1	-	-----	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	13011-Z7E-701	RING SET, PISTON(0.25)							
		(FUJIAN DONGYA MACHINERY)	(1)	(1)	(1)	(1)	-	-----	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	13012-Z7E-701	RING SET, PISTON(0.50)							
		(FUJIAN DONGYA MACHINERY)	(1)	(1)	(1)	(1)	-	-----	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	13013-Z7E-701	RING SET, PISTON(0.75)							
		(FUJIAN DONGYA MACHINERY)	(1)	(1)	(1)	(1)	-	-----	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
2	13101-Z7E-800	PISTON(STD.)							
			1	1	1	1	-		
	13102-Z7E-800	PISTON(0.25)							
			(1)	(1)	(1)	(1)	-		
	13103-Z7E-800	PISTON(0.50)							
			(1)	(1)	(1)	(1)	-		
	13104-Z7E-800	PISTON(0.75)							
			(1)	(1)	(1)	(1)	-		
	13101-Z5T-800	PISTON(STD.)					1		
			-	-	-	-	(1)		
	13102-Z5T-800	PISTON(0.25)					(1)		
			-	-	-	-	(1)		
	13103-Z5T-800	PISTON(0.50)					(1)		
			-	-	-	-	(1)		
	13104-Z5T-800	PISTON(0.75)					(1)		
			-	-	-	-	(1)		
3	13111-Z7E-000	PIN, PISTON							
			1	1	1	1	-		

2

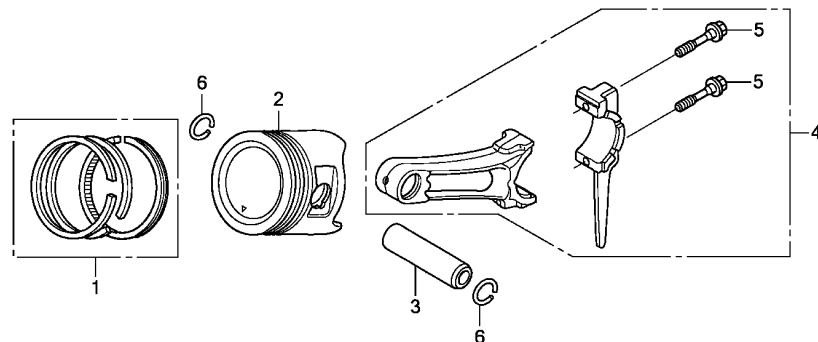


Z303E0800

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
(3)	13111-Z5T-000	PIN, PISTON	-	-	-	-	1		
4	13200-Z1C-000	ROD ASSY., CONNECTING(STD.) -	1	1	1	1	1		
	13200-ZE3-315	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	(1)	(1)	(1)	-		
	13200-Z7E-000	ROD ASSY., CONNECTING	-	1	-	1	-	-----	REH
	13200-Z1C-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	-	-	-	-	(1)		
5	90001-ZE8-000	BOLT, CONNECTING ROD	2	2	2	2	2		
	90001-Z7E-000		-	2	-	2	-	-----	REH
6	90601-ZE3-000	CLIP, PISTON PIN, 20MM	2	2	2	2	2		

E-9

CAMSHAFT

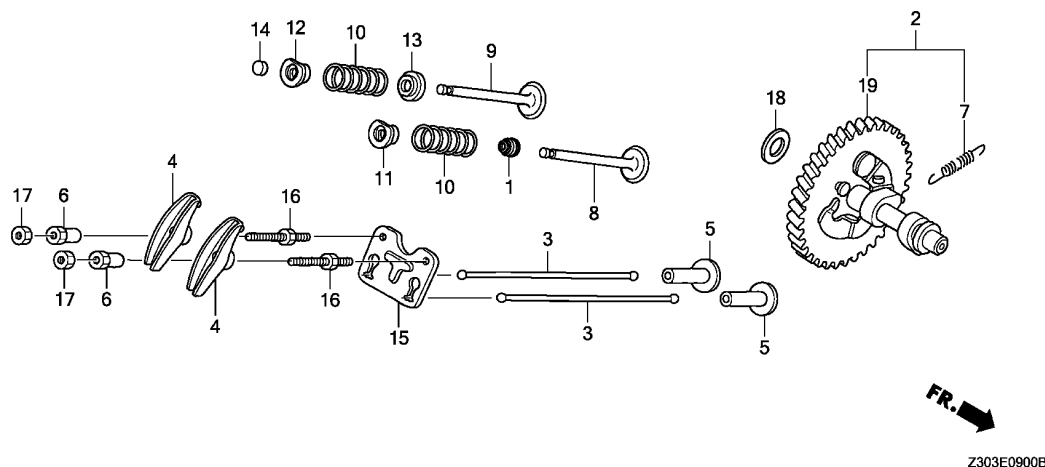


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K2	SEAL, INTAKE VALVE STEMINCLUDES: Valve clearance adjustment	1.5
	1111BH	SEAL, INTAKE VALVE STEM(A)INCLUDES: Valve clearance adjustment .NOTE: CL model (19)	1.4
2	1111C2	CAMSHAFTINCLUDES: Engine removal and installation .INCLUDES: Valve clearance adjustment	2.0
3	1111L6	ROD, PUSH :INTAKEINCLUDES: Valve clearance adjustment	0.2
	1111L6A	.Replace exhaust push rod add	0.1
	1111L7	ROD, PUSH :EXHAUSTINCLUDES: Valve clearance adjustment	0.2
	1111L7A	.Replace intake push rod add	0.1
4	1111A2	ARM, ROCKER :INTAKEINCLUDES: Valve clearance adjustment	0.2

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	12209-Z7E-003	SEAL, VALVE STEM	1	1	1	1	-	----- 1098051	
	12209-ZE8-003		-	-	-	-	1		
2	14100-ZF6-W01	CAMSHAFT ASSY.	1	1	1	1	-		
	14100-Z5T-820		-	-	-	-	1		
3	14410-Z7E-000	ROD, PUSH	2	2	2	2	-		
	14410-ZK6-880	ROD COMP., PUSH	-	-	-	-	2		
4	14431-ZE2-010	ARM, VALVE ROCKER	2	2	2	2	2		
5	14441-Z7E-000	LIFTER, VALVE	2	2	2	2	-		
	14441-ZE2-000		-	-	-	-	2		
6	14451-Z7E-000	PIVOT, ROCKER ARM	2	2	2	2	-		
	14451-ZE1-013		-	-	-	-	2		
7	14568-ZE1-000	SPRING, WEIGHT RETURN	1	1	1	1	-	----- 1098051	
	14711-Z7E-000	VALVE, IN.	1	1	1	1	-		
	14711-Z5T-000		-	-	-	-	1		
9	14721-Z7E-800	VALVE, EX.(STELLITE)	1	1	1	1	-		
	14721-Z5T-000	VALVE, EX.	-	-	-	-	1		
10	14751-Z7E-000	SPRING, VALVE	2	2	2	2	-		
	14751-Z1C-000		-	-	-	-	2		
11	14771-ZE2-000	RETAINER, IN. VALVE SPRING ..	1	1	1	1	-		
	14771-Z8S-000		-	-	-	-	1		
12	14773-ZE2-000	RETAINER, EX. VALVE SPRING ..	1	1	1	1	-		
	14771-Z8S-000	RETAINER, IN. VALVE SPRING ..	-	-	-	-	1		
		(EXHAUST SIDE)	-	-	-	-	1		
13	14775-ZE2-010	SEAT, VALVE SPRING	1	1	1	1	1		
14	14781-Z7E-000	ROTATOR, VALVE	1	1	1	1	-		
15	14791-Z7E-000	GUIDE, PUSH ROD	1	1	1	1	-		

2

E-9

CAMSHAFT

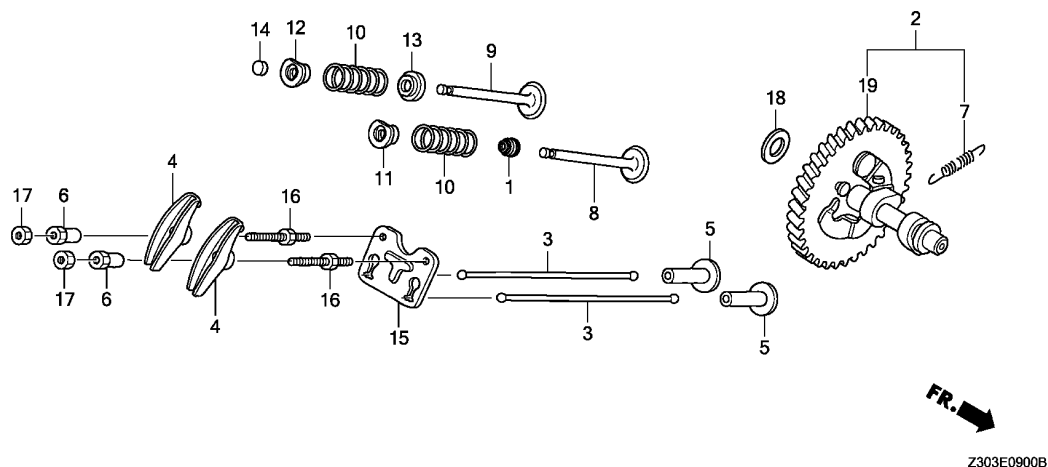


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 4	1111A2A	.Replace exhaust rocker arm add	0.1
	1111A1	ARM, ROCKER :EXHAUST	0.2
		.INCLUDES: Valve clearance adjustment	
5	1111A1A	.Replace intake rocker arm add	0.1
	1111L9	LIFTER, VALVE :INTAKE	2.0
		.INCLUDES: Engine removal and installation .INCLUDES: Valve clearance adjustment .NOTE: Same time for two units	
	1111M0	LIFTER, VALVE :EXHAUST	2.0
		.INCLUDES: Engine removal and installation .INCLUDES: Valve clearance adjustment .NOTE: Same time for two units	
8	1111L1	VALVE, INTAKE	1.6
		.INCLUDES: Valve clearance adjustment and reface	
	1111L1E	.Replace intake and exhaust all add	0.2
+	1111BD	VALVE, INTAKE(A)	1.5

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
15)	14791-ZK6-880	GUIDE, PUSH ROD	-	-	-	-	1		
	16	90012-ZE0-010	2	2	2	2	2		
	17	90206-ZE1-000	2	2	2	2	2		
	18	90413-ZK6-880	-	-	-	-	1		
	19	14100-Z5T-920	-	-	-	-	1	1098052	-----

E-9

CAMSHAFT

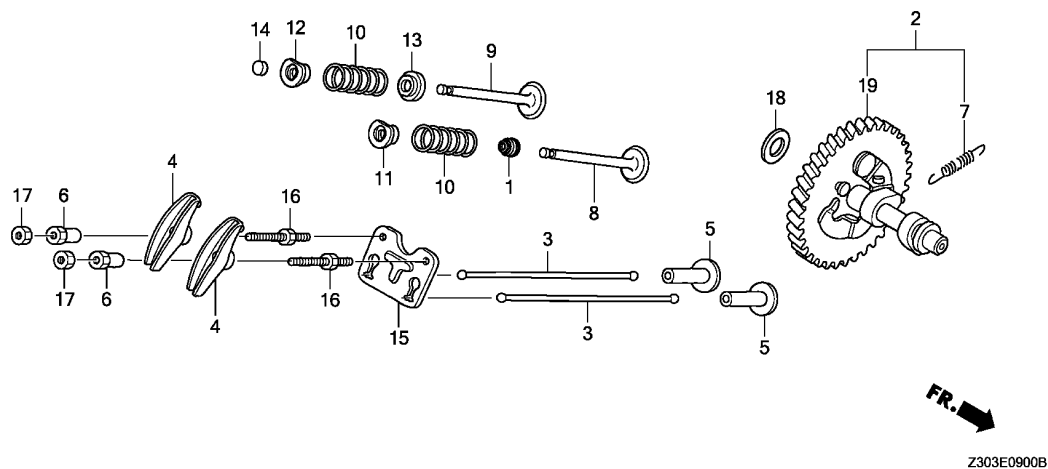


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 8		.INCLUDES: Valve clearance adjustment and reface .NOTE: CL model	
1111BDA		.Replace intake and exhaust all add	0.2
9 1111L0		VALVE, EXHAUST	1.6
		.INCLUDES: Valve clearance adjustment and reface	
1111LOE		.Replace intake and exhaust all add	0.2
1111BE		VALVE, EXHAUST(A)	1.5
		.INCLUDES: Valve clearance adjustment and reface .NOTE: CL model	
1111BEA		.Replace intake and exhaust all add	0.2
10 1111P3		SPRING, VALVE :INTAKE	1.5
		.INCLUDES: Valve clearance adjustment	
1111P3A		.Replace intake and exhaust all add	0.1
1111P4		SPRING, VALVE :EXHAUST	1.5
		.INCLUDES: Valve clearance adjustment	
+			

2

E-9

CAMSHAFT

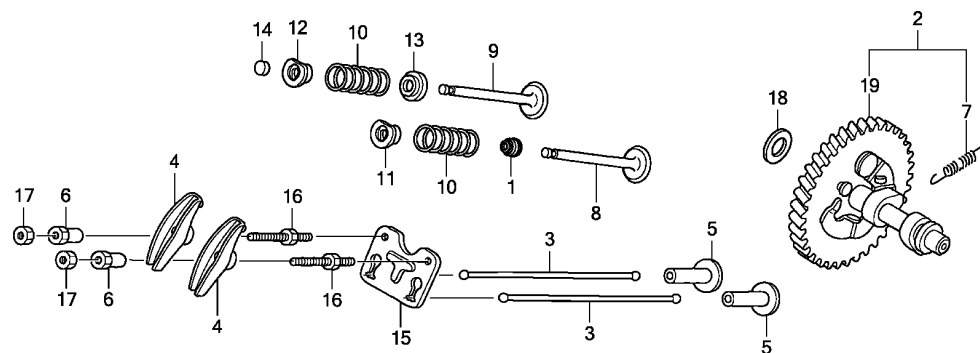


Z303E0900B

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+10	1111P4A	.Replace intake and exhaust all add	0.1
	1111BF	SPRING, VALVE(A) :INTAKEINCLUDES: Valve clearance adjustment .NOTE: CL model	1.4
	1111BFA	.Replace intake and exhaust all add	0.1
	1111BG	SPRING, VALVE(A) :EXHAUSTINCLUDES: Valve clearance adjustment .NOTE: CL model	1.4
	1111BGA	.Replace intake and exhaust all add	0.1
14	1111J7	ROTATOR, VALVEINCLUDES: Valve clearance adjustment	0.2

E-11

RECOIL STARTER(1)

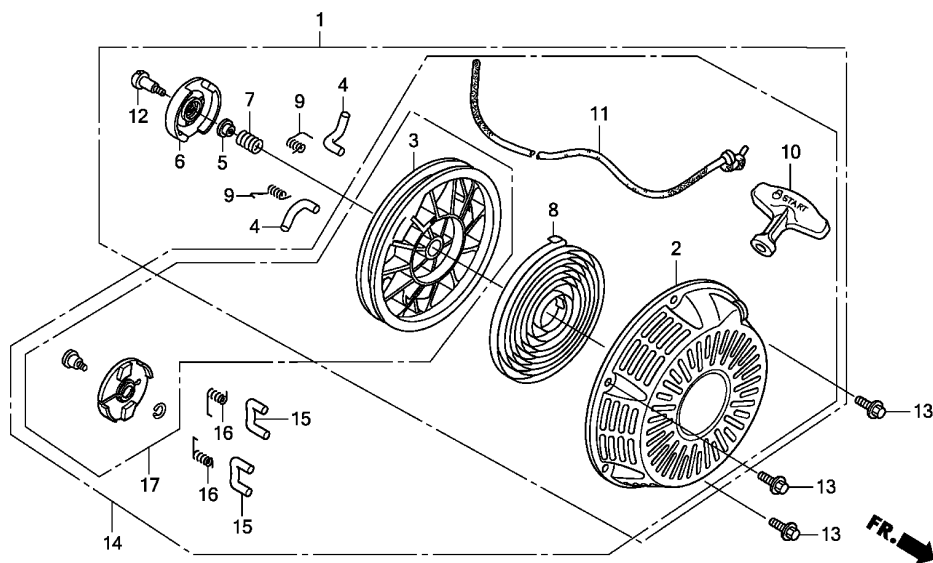


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(14)	
1121B9		STARTER, RECOIL	0.1
3		(17)	
1121B1		REEL, RECOIL STARTER	0.3
4		(9,15,16)	
1121B0		STARTER RATCHET AND/OR SPRING	0.2
6		(7)	
1121A4		GUIDE, RATCHET	0.2
8		1121B7 SPRING, RECOIL STARTER RETURN	0.3
10		1121A3 GRIP, RECOIL STARTER	0.1
11		1121B3 ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	28400-Z7E-E61ZA	STARTER ASSY., RECOIL							
		NH1.....BLACK	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
2	28410-Z7E-003ZA	CASE COMP., RECOIL STARTER							
		NH1.....BLACK	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	28410-Z7E-701ZB	*NH1*.....BLACK	1	1	1	1	-	0294457	0391628 KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
3	28420-Z7E-003	REEL, RECOIL STARTER	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
4	28422-ZH8-801	RATCHET, STARTER	2	2	2	2	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
5	28431-ZH8-801	PLATE, FRICTION	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
6	28433-Z2E-003	GUIDE, RATCHET	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
7	28441-Z2E-003	SPRING, FRICTION	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
8	28442-Z7E-003	SPRING, RECOIL STARTER	1	1	1	1	-	0391628	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
9	28443-ZH8-801	SPRING, RETURN	2	2	2	2	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
10	28461-Z2E-003	GRIP, STARTER	1	1	1	1	-	0391628	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
11	28462-Z7E-E61	ROPE, RECOIL STARTER	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	28462-Z7E-E71		1	1	1	1	-	0294457	0391628 KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
12	90003-ZH8-801	SCREW, SETTING	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
13	90008-Z1T-000	BOLT, FLANGE, 6X10	3	3	3	3	-	0391628	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
14	28400-Z7E-E71ZB	STARTER ASSY., RECOIL							
		NH1.....BLACK	1	1	1	1	-	0294457	0391628 KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
15	28422-Z7E-701	RATCHET, STARTER	2	2	2	2	-	0294457	0391628 KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
16	28443-Z1T-701	SPRING, RETURN	2	2	2	2	-	0294457	0391628 KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
17	06280-Z7E-305	STARTER SET, RECOIL	1	1	1	1	-	0294457	0391628 KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH

E-11-1

RECOIL STARTER(2)

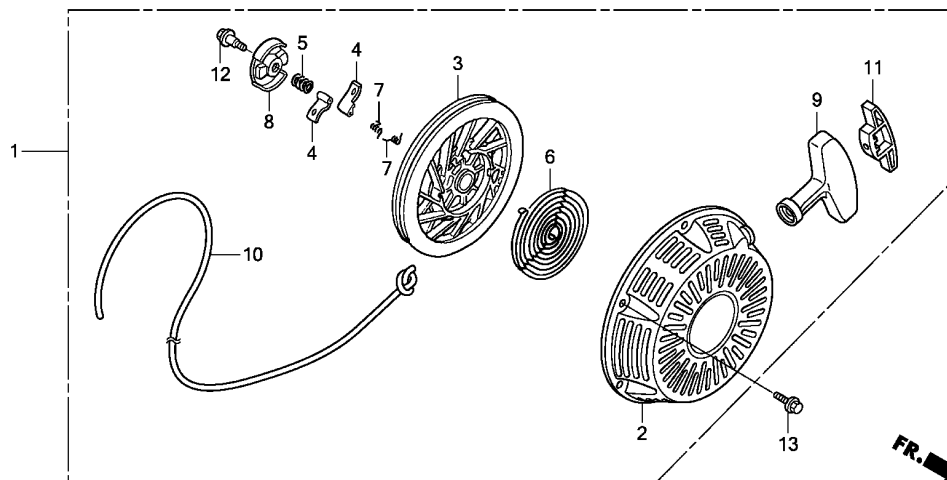


Z303E1101

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL	0.1
3	1121B1	REEL, RECOIL STARTER	0.3
4		(7)	
	1121B0	STARTER RATCHET AND/OR SPRING	0.2
6	1121B7	SPRING, RECOIL STARTER RETURN	0.3
8		(5)	
	1121B2	RETAINER, SPRING	0.2
9	1121A3	GRIP, RECOIL STARTER	0.1
10	1121B3	ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	28400-Z1C-E21ZA	STARTER ASSY., RECOIL	-	-	-	-	-	1	----- 1088983
	28400-Z1C-E22ZA	*NH1*.....BLACK	-	-	-	-	-	1	1088984 -----
2	28410-ZE3-W01ZB	CASE COMP., RECOIL STARTER	-	-	-	-	-	1	
		NH1.....BLACK	-	-	-	-	-	1	
3	28421-ZE3-W01	PULLEY, RECOIL STARTER	-	-	-	-	-	1	
4	28422-ZE2-W01	RATCHET, STARTER	-	-	-	-	-	2	
5	28441-ZE2-W01	SPRING, FRICTION	-	-	-	-	-	1	
6	28442-ZE2-W01	SPRING, STARTER RETURN	-	-	-	-	-	1	
7	28443-ZE2-W01	SPRING, RATCHET	-	-	-	-	-	2	
8	28444-ZE2-W01	RETAINER, SPRING	-	-	-	-	-	1	
9	28461-Z5T-003	GRIP, STARTER	-	-	-	-	-	1	
10	28462-Z1C-801	ROPE, RECOIL STARTER	-	-	-	-	-	1	
11	28463-Z5T-003	GRIP, REINFORCEMENT	-	-	-	-	-	1	----- 1088983
	28463-Z5T-013		-	-	-	-	-	1	1088984 -----
12	90004-ZE2-W01	SCREW, CENTER	-	-	-	-	-	1	
13	90008-ZE2-003	BOLT, FLANGE, 6X10	-	-	-	-	-	3	

E-11-2

RECOIL STARTER(3)

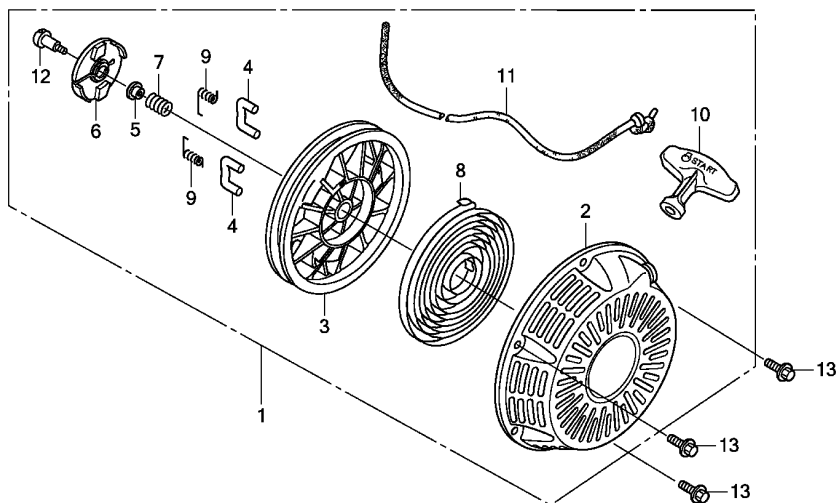


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL	0.1
3	1121B1	REEL, RECOIL STARTER	0.3
4		(9)	
	1121B0	STARTER RATCHET AND/OR SPRING	0.2
6		(7)	
	1121A4	GUIDE, RATCHET	0.2
8	1121B7	SPRING, RECOIL STARTER RETURN	0.3
10	1121A3	GRIP, RECOIL STARTER	0.1
11	1121B3	ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	28400-Z7E-E72ZB	STARTER ASSY., RECOIL *NH1*.....BLACK	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
2	28410-Z7E-701ZB	CASE COMP., RECOIL STARTER *NH1*.....BLACK	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
3	28420-Z7E-702	REEL, RECOIL STARTER (BLACK)	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
4	28422-Z7E-701	RATCHET, STARTER	2	2	2	2	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
5	28431-Z2E-003	PLATE, FRICTION	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
6	28433-Z7E-702	GUIDE, RATCHET	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
7	28441-Z2E-003	SPRING, FRICTION	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
8	28442-Z7E-003	SPRING, RECOIL STARTER	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
9	28443-Z1T-701	SPRING, RETURN	2	2	2	2	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
10	28461-Z2E-003	GRIP, STARTER	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
11	28462-Z7E-E71	ROPE, RECOIL STARTER	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
12	90003-ZH8-801	SCREW, SETTING	1	1	1	1	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH
13	90008-Z1T-000	BOLT, FLANGE, 6X10	3	3	3	3	-	0391629	----- KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH, UH ----- REH

E-12

FAN COVER

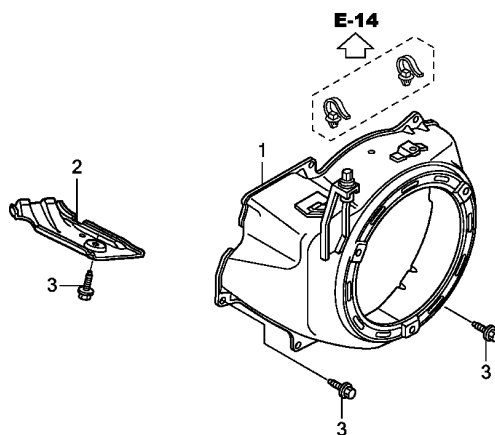

FR. →

Z303E1200


Ref. No.	L.O.N.	(Relative ref. Number)	Description	F.R.T.
----------	--------	------------------------	-------------	--------

1	1141G8	COVER, ENGINE COOLING FAN	----	0.3
---	--------	---------------------------	------	-----

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	19610-Z7E-E60ZA	COVER COMP., FAN							
		NH1.....BLACK	1	1	1	1	-		
	19610-Z1C-E20ZA	*NH1*.....BLACK	-	-	-	-	1		
2	19631-ZE3-W00	SHROUD	1	1	1	1	-		
	19631-Z5T-000		-	-	-	-	1		
3	90013-883-000	BOLT, FLANGE, 6X12(CT200) ---	6	6	6	6	6		

E-14

CARBURETOR(1)

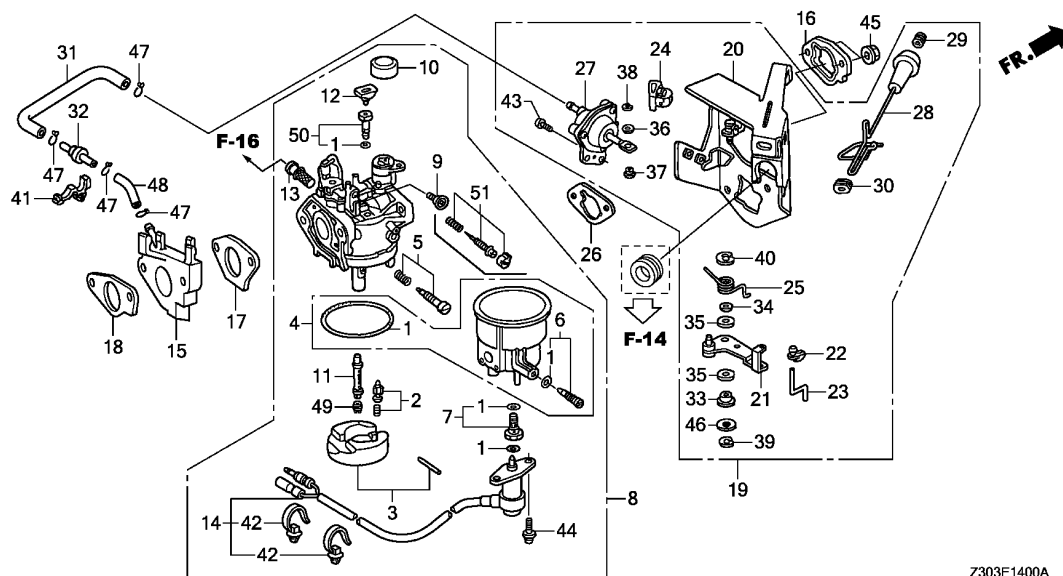

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111B1	GASKET SET, CARBURETOR (3)	0.5
2	3111E1	FLOAT VALVE SET AND/OR FLOAT SET	0.4
4	3111A3	FLOAT CHAMBER SET AND/OR GASKET (51)	0.4
5	3111D7	SCREW SET, PILOT	0.2
8	3111F3	CARBURETOR	0.4
13	3111T4	SCREEN, CARBURETOR FUEL STRAINER	0.2
14	6211C0	VALVE, CARBURETOR SOLENOID (18)	0.4
15	3111C0	CARBURETOR INSULATOR AND/OR PACKING	0.4
16	3111D9	SPACER, CARBURETOR	0.2
17	3111C8	PACKING, CARBURETOR	0.4
19	8101R1	STAY, MANUAL CHOKE	0.2
21	8101F9	LEVER, CARBURETOR CHOKE	0.3
26	3121D9	PACKING, AIR CLEANER	0.2
27	3111A7	DIAPHRAGM, CARBURETOR	0.3
28	8101Q2	ROD, CHOKE CONTROL	0.2
32	3111T5	VALVE, DASHPOT CHECK (11)	0.2
49	3111C3	JET, MAIN	0.4

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	16010-ZE3-701	GASKET SET	1	1	1	1	-		
2	16011-ZA0-931	VALVE SET, FLOAT	1	1	1	1	-		
3	16013-Z1C-003	FLOAT SET	1	1	1	1	-		
4	16015-Z7B-D11	CHAMBER SET, FLOAT	1	1	1	1	-		
5	16016-ZF6-D40	SCREW SET (CARBURETOR NO.)	1	1	1	1	-	BE89V A KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH	
			-	1	-	1	-	LBH,LD1H,LT1H,S1H,SK1H	
6	16024-124-760	SCREW SET, DRAIN	1	1	1	1	-		
7	16028-ZA0-931	SCREW SET	1	1	1	1	-		
8	16100-Z7E-E61	CARBURETOR ASSY.(BE89V A)	1	1	1	1	-	0208126 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH	
	16100-Z7E-E71	CARBURETOR ASSY.(BE95H A)	1	1	1	1	-	0208127 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH	
	16100-Z7E-E61	CARBURETOR ASSY.(BE89V A)	-	1	-	1	-	LBH,LD1H,LT1H,S1H,SK1H	
	16100-Z7E-E71	CARBURETOR ASSY.(BE95H A)	-	1	-	1	-	REH	
9	16124-ZE0-005	SCREW, THROTTLE STOP	1	1	1	1	-		
10	16148-141-881	CAP, CHOKE DUST	1	1	1	1	-		
11	16166-ZF6-005	NOZZLE, MAIN	1	1	1	1	-		
12	16172-ZE3-W10	COLLAR, SETTING	1	1	1	1	-		
13	16176-Z2G-D51	SCREEN, FUEL STRAINER	1	1	1	1	-		
14	16200-Z7E-E61	VALVE ASSY., SOLENOID	1	1	1	1	-		
15	16211-Z7E-700	INSULATOR, CARBURETOR	1	1	1	1	-		
16	16220-ZA0-702	SPACER COMP., CARBURETOR	1	1	1	1	-		
17	16221-Z7E-701	PACKING, CARBURETOR (NINGBO SIL GASKET)	1	1	1	1	-		
	16221-ZF6-800	PACKING, CARBURETOR	1	1	1	1	-		
18	16212-Z7E-701	PACKING, INSULATOR (NINGBO SIL GASKET)	1	1	1	1	-		

FR.




50	3111N2	JET SET, PILOT	0.4
----	--------	----------------------	-----

42

E-14

CARBURETOR(1)

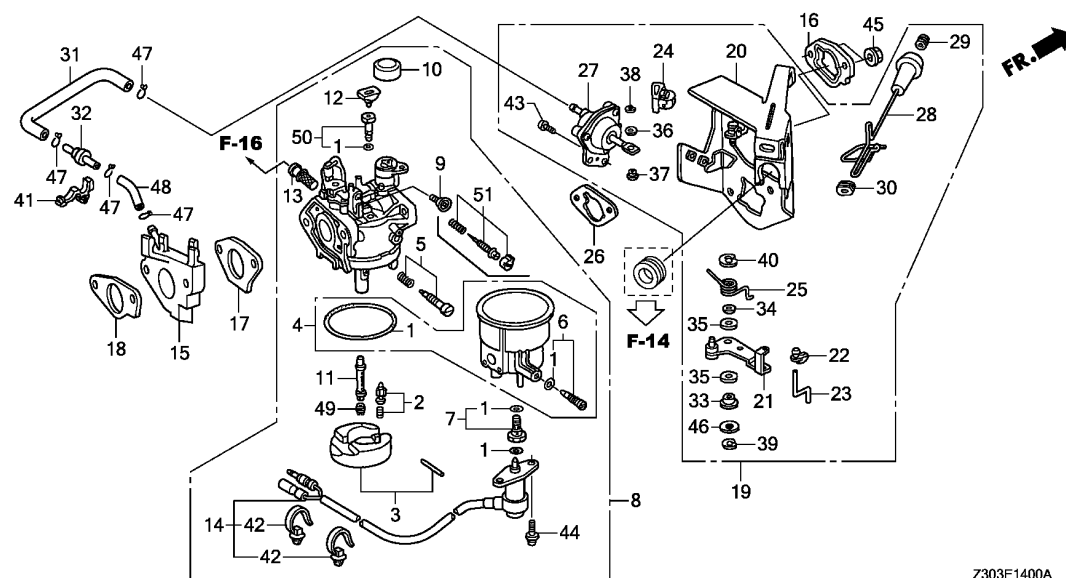


Z303E1400A

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
42	91541-S0A-003	CLIP, HARNESS BAND(BLACK) (145MM)	2	2	2	2	-		
43	93500-05012-0A	SCREW, PAN, 5X12	2	2	2	2	-		
44	93892-05012-18	SCREW-WASHER, 5X12	2	2	2	2	-		
45	94050-06000	NUT, FLANGE, 6MM	2	2	2	2	-		
46	94103-05000	WASHER, PLAIN, 5MM	1	1	1	1	-		
47	95002-02070	CLIP, TUBE(B7)	4	4	4	4	-		
48	95005-35075-10	TUBE, 3.5X75(95005-35001-10M)	1	1	1	1	-		
49	99101-ZH8-0980	JET, MAIN, #98	(1)	(1)	(1)	(1)	-		
	99101-ZH8-1000	JET, MAIN, #100	(1)	(1)	(1)	(1)	-		
	99101-ZH8-1020	JET, MAIN, #102	1	1	1	1	-		
50	99204-ZA0-0450	JET SET, PILOT, #45	1	1	1	1	-		
51	16016-ZH8-W01	SCREW SET	1	1	1	1	-	BE95H A	
		(CARBURETOR NO.)	-	1	-	1	-		
									KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH

E-14-1

CARBURETOR(2)

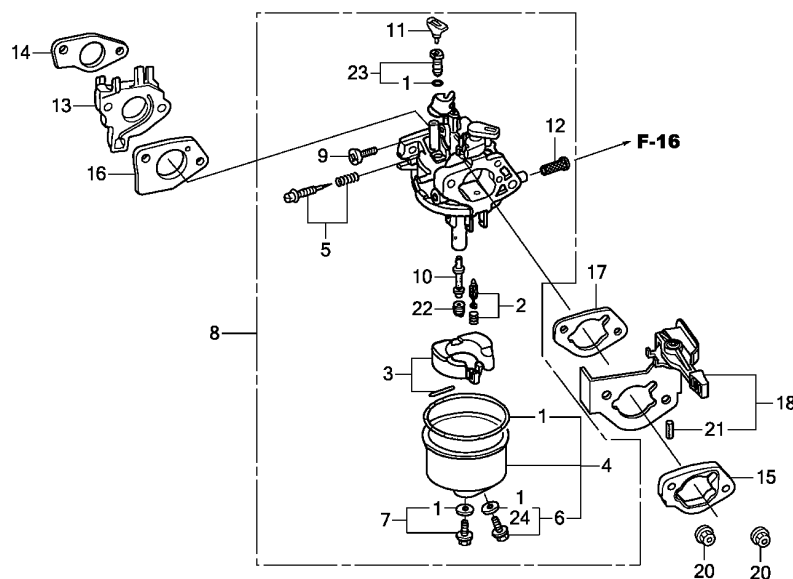


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111G1	GASKET SET, CARBURETOR(A)	0.3
2	3101P3	FLOAT SET, VAPOR SEPARATOR(A)	0.3
4	3111A3	FLOAT CHAMBER SET AND/OR GASKET	0.2
5	3111D7	SCREW SET, PILOT	0.2
8	3111G7	CARBURETOR(A)	0.2
12	3111T4	SCREEN, CARBURETOR FUEL STRAINER	0.2
13	3111G2	CARBURETOR INSULATOR AND/OR PACKING(A)	0.2
15	3111D9	SPACER, CARBURETOR	0.2
16	3111G5	PACKING, CARBURETOR(A)	0.2
17	3121H2	PACKING, AIR CLEANER(A)	0.2
18	3111A5	CONTROL, CARBURETOR CHOKE	0.2
22	3111G4	JET, MAIN(A)	0.3
23	3111W9	JET SET, PILOT(A)	0.2

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	16010-ZF5-900	GASKET SET	-	-	-	-	1		
2	16011-ZA0-931	VALVE SET, FLOAT	-	-	-	-	1		
3	16013-Z1C-003	FLOAT SET	-	-	-	-	1		
4	16015-ZE8-005	CHAMBER SET, FLOAT	-	-	-	-	1		
5	16016-ZF6-D40	SCREW SET	-	-	-	-	1		
6	16024-ZE1-811	SCREW SET, DRAIN	-	-	-	-	1		
7	16028-ZE0-005	SCREW SET	-	-	-	-	1		
8	16100-Z1C-E22	CARBURETOR ASSY.(BE95A A) ...	-	-	-	-	1		
9	16124-ZE0-005	SCREW, THROTTLE STOP	-	-	-	-	1		
10	16166-Z1C-E21	NOZZLE, MAIN	-	-	-	-	1		
11	16172-ZE3-W10	COLLAR, SETTING	-	-	-	-	1		
12	16176-Z2G-D51	SCREEN, FUEL STRAINER	-	-	-	-	1		
13	16211-Z5T-000	INSULATOR, CARBURETOR	-	-	-	-	1		
14	16212-Z5T-000	PACKING, CARBURETOR INSULATOR	-	-	-	-	1		
15	16220-ZA0-702	SPACER COMP., CARBURETOR	-	-	-	-	1		
16	16221-Z5T-000	PACKING, CARBURETOR	-	-	-	-	1		
17	16269-ZA0-800	PACKING, AIR CLEANER	-	-	-	-	1		
18	16620-Z1C-000	BASE COMP., CHOKE	-	-	-	-	1		
20	94050-06000	NUT, FLANGE, 6MM	-	-	-	-	2		
21	94305-20122	PIN, SPRING, 2X12	-	-	-	-	1		
22	99101-ZH8-0980	JET, MAIN, #98	-	-	-	-	(1)		
	99101-ZH8-1020	JET, MAIN, #102	-	-	-	-	(1)		
	99101-ZH8-1050	JET, MAIN, #105	-	-	-	-	1		
23	99204-ZA0-0400	JET SET, PILOT, #40	-	-	-	-	1		
24	16141-Z0S-003	WASHER, PLAIN	-	-	-	-	(1)		

E-19

FLYWHEEL

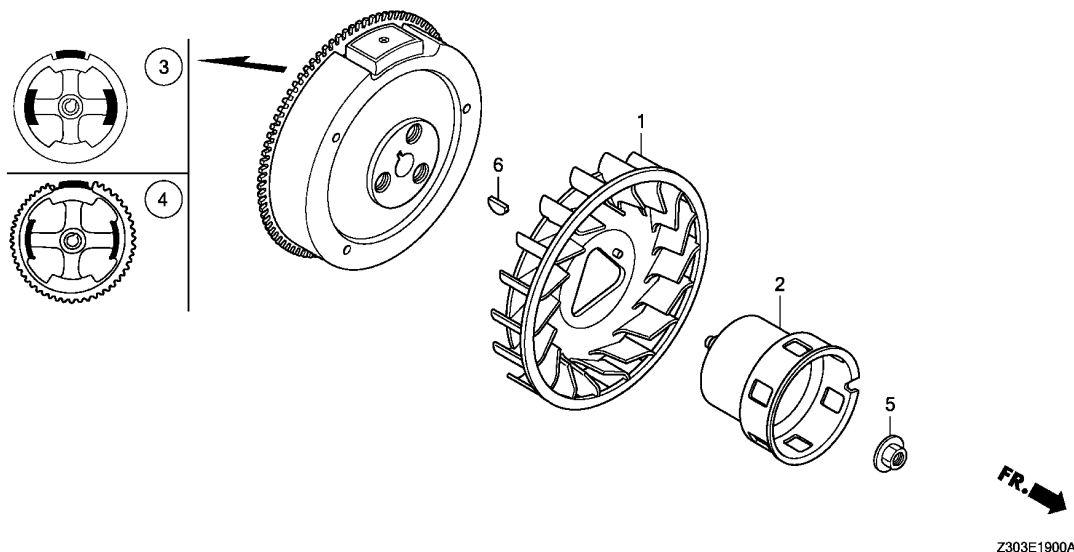


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G7	FAN, ENGINE COOLING	0.5
	1141G7C	.With starter motor add	0.1
2	1121A9	PULLEY, RECOIL STARTER	0.5
	1121A9B	.With starter motor add	0.1
3		(4)	
	2161B5	FLYWHEEL	0.6
	2161B5C	.With starter motor add	0.1

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	19511-Z7E-700	FAN, COOLING	1	1	1	1	-		
	19511-ZK6-D70		-	-	-	-	1		
2	28451-Z7E-000	PULLEY, STARTER	1	1	1	1	-	0294456	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	28451-Z7E-700		1	1	1	1	-	0294457	----- KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	28451-Z7E-701		-	1	-	1	-	-----	----- REH
	28451-ZE3-W01		-	-	-	-	1		
3	31110-Z7E-811	FLYWHEEL COMP.(LAMP)	1	1	-	-	-		
	31110-Z5T-810		-	-	-	-	1		
4	31110-Z7E-821	FLYWHEEL COMP.(SEL-LAMP)	-	-	1	1	-		
	31110-Z7E-612		-	-	-	1	-	-----	----- REH
5	90201-ZE3-V00	NUT, SPECIAL, 16MM	1	1	1	1	1		
6	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	1	1	1	1	1		

E-20

IGNITION COIL(1)

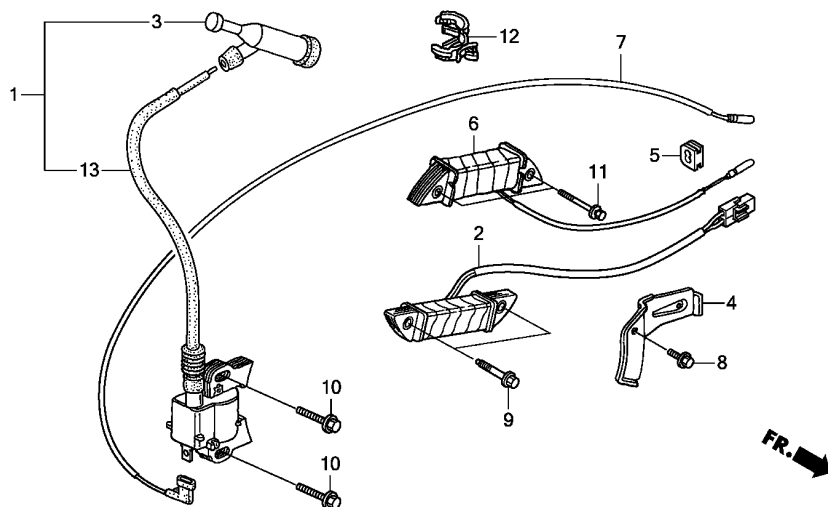


Z303E2000A

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	(13) COIL, IGNITION(ONE)	0.4
2	6141A9	(6) COIL, POWER	0.7
	6141A9A	.With starter motor add	0.1
7	6111B3	CORD, STOP SWITCH	0.5

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	30500-Z7E-003	COIL ASSY., IGNITION	1	1	-	-	-		
			-	-	1	1	-	-----	0284342 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
			-	-	-	1	-	-----	LBH,LD1H,LT1H,S1H,SK1H
2	30595-Z7E-003	COIL ASSY., POWER	1	1	1	1	-		
3	30700-Z1T-003	CAP ASSY., NOISE SUPPRESSOR	1	1	-	-	-		
			-	-	1	1	-	-----	0284342 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
	30700-Z1T-701		-	-	1	1	-	0284343	----- KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
	30700-Z1T-003		-	-	-	1	-	-----	LBH,LD1H,LT1H,S1H,SK1H
	30700-Z1T-701		-	-	-	1	-	-----	REH
4	31511-Z7E-000	CLAMPER, CORD	1	1	1	1	-		
5	31512-ZE2-000	GROMMET, CORD	1	1	1	1	-		
6	31650-Z7E-003	COIL ASSY., FUEL CUT	1	1	1	1	-		
7	36101-ZE3-800	CORD, STOP SWITCH(470MM)	1	1	-	-	-		
			-	-	1	1	-	-----	0284342 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
	32195-Z7E-711		-	-	1	1	-	0284343	----- KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
	36101-ZE3-800		-	-	-	1	-	-----	LBH,LD1H,LT1H,S1H,SK1H
	32195-Z7E-711		-	-	-	1	-	-----	REH
8	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	1	1	1	-		
9	90014-ZE6-000	BOLT, FLANGE, 6X35(CT200) ...	2	2	2	2	-	-----	----- KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	90017-883-000	BOLT, FLANGE, 6X32(CT200) ...	-	2	-	2	-	-----	REH
10	90015-883-000	BOLT, FLANGE, 6X28(CT200) ...	2	2	2	2	-		
11	90016-ZE8-000	BOLT, FLANGE, 6X45(CT200) ...	2	2	2	2	-	-----	----- KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	90012-888-000	BOLT, FLANGE, 6X40(CT200) ...	-	2	-	2	-	-----	REH
12	90684-Z7E-000	CLIP, HARNESS	-	1	-	-	-	-----	----- LD1H,LT1H,REH,S1H,SK1H
13	30500-Z7E-701	COIL ASSY., IGNITION	-	-	1	1	-	0284343	----- KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
			-	-	-	1	-	-----	REH

E-20-1

IGNITION COIL(2)

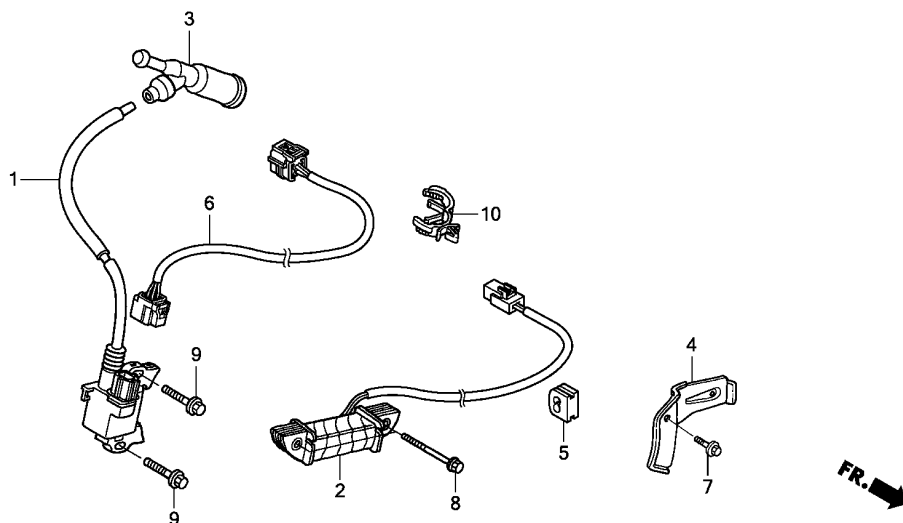


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION(ONE)	0.4
2	6141A9	COIL, POWER	0.7
	6141A9A	.With starter motor add	0.1
3	6141B8	TERMINAL, HIGH TENSION	0.1
6	6111C0	HARNESS, ENGINE WIRE	0.9

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	30500-Z5T-003	COIL ASSY., IGNITION	-	-	-	-	1		
2	30595-Z7E-003	COIL ASSY., POWER	-	-	-	-	1		
3	30700-Z1C-811	CAP ASSY., NOISE SUPPRESSOR (NGK Y-EZD)	-	-	-	-	1		
4	31511-ZE3-000	CLAMPER, CORD	-	-	-	-	1		
5	31512-ZE2-000	GROMMET, CORD	-	-	-	-	1		
6	32110-Z1C-E20	HARNESS ASSY., ENGINE WIRE ..	-	-	-	-	1		
7	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	-	-	-	-	1		
8	90014-ZE6-000	BOLT, FLANGE, 6X35(CT200) ...	-	-	-	-	2		
9	90015-883-000	BOLT, FLANGE, 6X28(CT200) ...	-	-	-	-	2		
10	90684-ZA0-601	CLIP, HARNESS	-	-	-	-	1		

2

E-21

STARTER MOTOR(1)

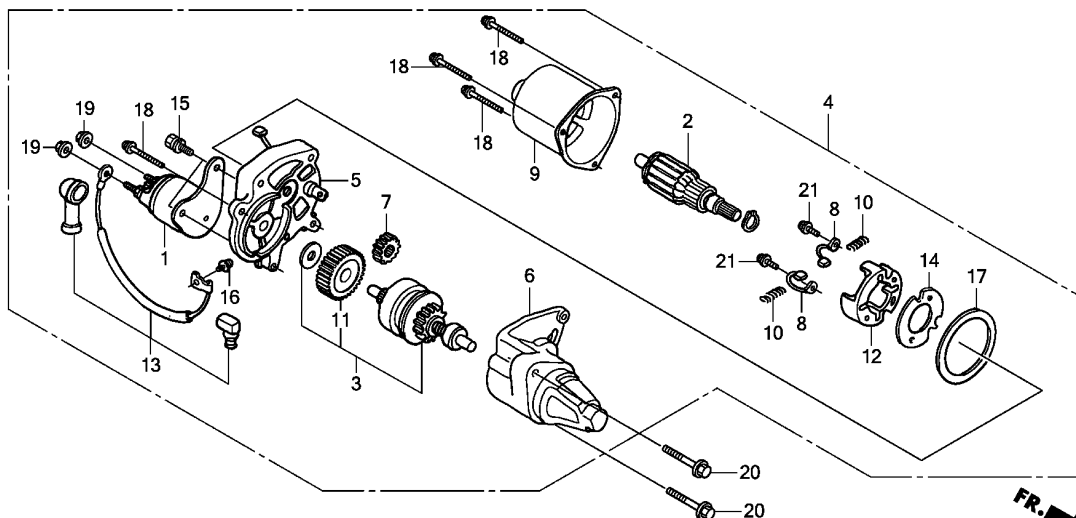


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6121E5	CONTACTOR, STARTER	0.6
2	6121A0	ARMATURE, STARTER	0.7
3	6121B0	CLUTCH, OVERRUNNING	0.6
4	6121D5	MOTOR, STARTER	0.5
5	6121C3	BRACKET, STARTER :CENTER	0.7
6	6121D2	BRACKET, STARTER :FRONT	0.5
7	6121E8	GEAR, STARTER DRIVE PINION ...	0.6
8	6121A9	BRUSH, STARTER	0.7
11	6121B5	GEAR, STARTER REDUCTION	0.6
12	6121B6	HOLDER, STARTER BRUSH	0.6
13	6121D0	WIRE, WATER COVER	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31204-ZA0-003	CONTACTOR ASSY.	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
2	31206-ZE3-003	ARMATURE COMP.	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
3	31207-ZE3-003	CLUTCH COMP., OVERRUNNING ...	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
4	31210-ZE3-023	MOTOR UNIT, STARTER	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
5	31211-ZE2-003	BRACKET, CENTER	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
6	31212-ZE3-003	BRACKET, FR.	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
7	31213-ZE2-003	GEAR, DRIVE PINION	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
8	31215-ZE2-003	BRUSH	-	-	2	2	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
9	31218-ZE3-003	YOKE COMP.	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
10	31219-ZE2-003	SPRING, BRUSH RETURN	-	-	4	4	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
11	31222-ZE3-791	GEAR, REDUCTION	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
12	31231-ZE2-003	HOLDER, BRUSH	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
13	31232-ZE3-003	WIRE, WATER COVER	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H

E-21


STARTER MOTOR(1)

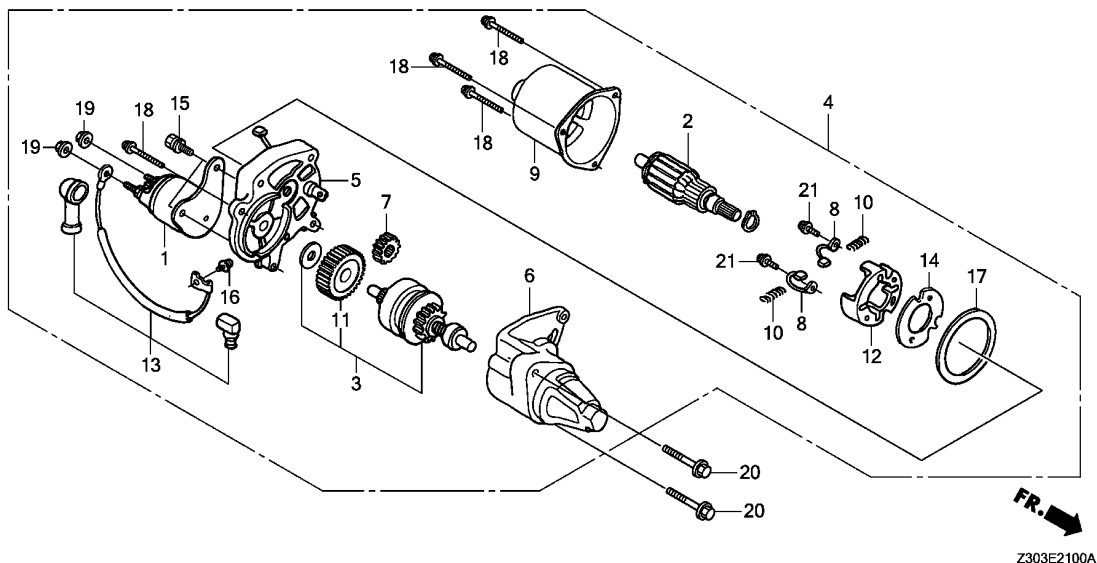

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
14	31233-ZE2-003	INSULATOR	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
15	90007-ZE2-003	BOLT-WASHER, 5X14	-	-	2	2	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
16	90110-ZE2-003	SCREW-WASHER, 4X6	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
17	91601-ZE2-003	PACKING	-	-	1	1	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
18	93892-05032-18	SCREW-WASHER, 5X32	-	-	4	4	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
19	94070-06080	NUT-WASHER, 6MM	-	-	2	2	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
20	95701-08035-08	BOLT, FLANGE, 8X35	-	-	2	2	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H
21	31219-ZE3-003	SCREW-WASHER, 4X14	-	-	2	2	-	0372946	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH LBH,LD1H,LT1H,S1H,SK1H

E-21-1

STARTER MOTOR(2)

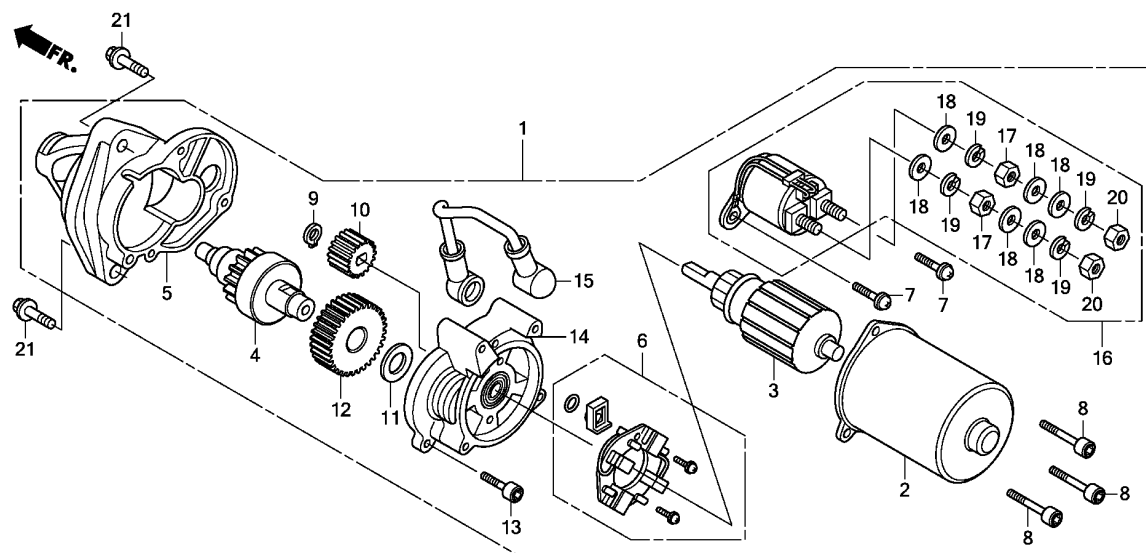


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6121D5	MOTOR, STARTER	0.5
3	6121A0	ARMATURE, STARTER	0.7
4	6121B0	CLUTCH, OVERRUNNING	0.6
5	6121D2	BRACKET, STARTER :FRONT	0.5
6	6121H4	BOARD, STARTER BRUSH	0.7
10	6121E8	GEAR, STARTER DRIVE PINION ...	0.6
12	6121B5	GEAR, STARTER REDUCTION	0.6
14	6121C3	BRACKET, STARTER :CENTER	0.7
15	6121D0	WIRE, WATER COVER	0.6
16	6121C9	SWITCH, STARTER MAGNETIC	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31200-Z7E-701	MOTOR ASSY., STARTER	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
2	31211-Z7E-701	HOUSING ASSY.	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
3	31212-Z7E-701	ARMATURE ASSY.	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
4	31213-Z7E-701	GEAR ASSY., DRIVE	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
5	31214-Z7E-701	CONE ASSY., NOSE	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
6	31215-Z7E-701	BOARD ASSY., BRUSH	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
7	31217-Z7E-701	SCREW A	-	-	2	2	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
8	31218-Z7E-701	SCREW B	-	-	3	3	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
9	31222-Z7E-701	RING, RETAINER	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
10	31223-Z7E-701	GEAR A	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
11	31224-Z7E-701	WASHER	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
12	31225-Z7E-701	GEAR B	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH
13	31226-Z7E-701	SCREW C	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH REH

E-21-1

STARTER MOTOR(2)

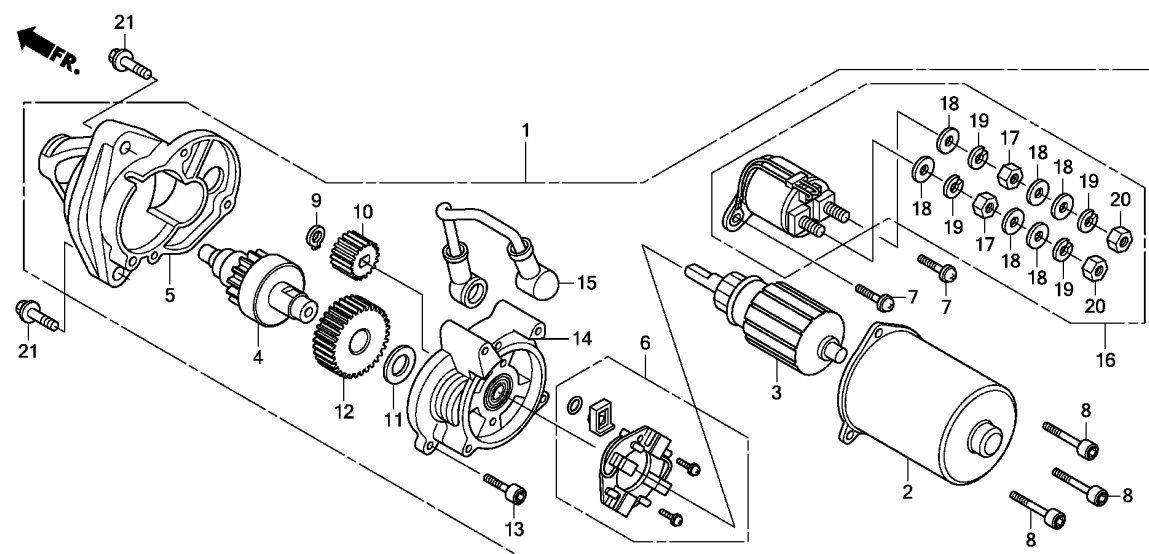


Z303E2101

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
14	31230-Z7E-701	BRACKET ASSY.	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
15	32410-Z7E-701	CABLE ASSY., STARTER	-	-	1	1	-	0372947	REH
16	35850-Z7E-701	SWITCH ASSY., STARTER MAGNETIC	-	-	1	1	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
17	35851-Z7E-701	NUT, HEX., 6MM	-	-	2	2	-	0372947	REH
18	35852-Z7E-701	WASHER	-	-	6	6	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
19	35853-Z7E-701	WASHER, SPRING, 6MM	-	-	4	4	-	0372947	REH
20	35854-Z7E-701	NUT, HEX., 6MM	-	-	2	2	-	0372947	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
21	95701-08035-08	BOLT, FLANGE, 8X35	-	-	2	2	-	0372947	REH

E-22

CONTROL

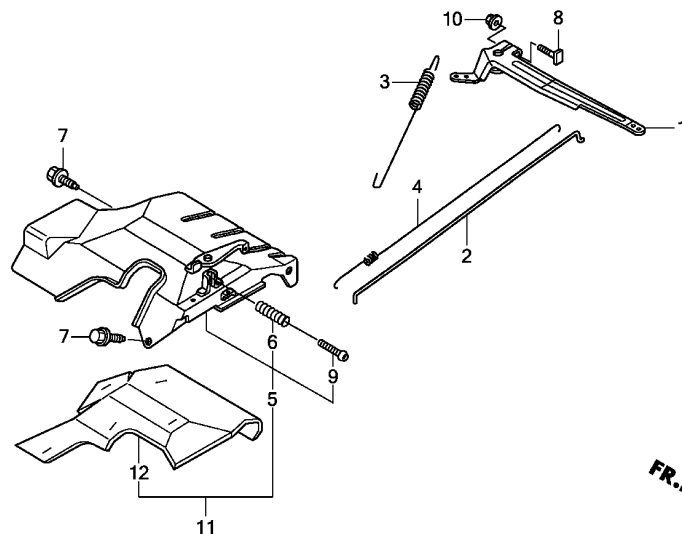


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1161A0	ARM, GOVERNOR	0.7
2	1161B1	ROD, GOVERNOR	0.7
3	1161C5	SPRING, GOVERNOR	0.7
4	1161C2	SPRING, THROTTLE RETURN	0.7
5		(11)	
	1161A5	CONTROL, THROTTLE/GOVERNOR ...	1.0
	1161D1	CONTROL, THROTTLE/GOVERNOR(A)	0.9
		.NOTE: CL model	

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	16551-ZE3-000	ARM, GOVERNOR	1	1	1	1	1		
2	16555-ZE3-000	ROD, GOVERNOR	1	1	1	1	1		
3	16561-ZK6-D70	SPRING, GOVERNOR	1	1	1	1	1		
4	16562-ZE3-000	SPRING, THROTTLE RETURN	1	1	1	1	1		
5	16570-ZK3-D70	CONTROL ASSY.	1	1	1	1	-		
6	16584-883-300	SPRING, CONTROL ADJUSTING ...	1	1	1	1	1		
7	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	2	2	2	2	2		
8	90015-ZE5-010	BOLT, GOVERNOR ARM	1	1	1	1	-		
	90015-Z5T-000		-	-	-	-	1		
9	93500-05035-0A	SCREW, PAN, 5X35	1	1	1	1	1		
10	94050-06000	NUT, FLANGE, 6MM	1	1	1	1	1		
11	16500-Z1C-E00	CONTROL ASSY.	-	-	-	-	1		
12	16588-Z1C-E00	INSULATOR, CONTROL BASE	-	-	-	-	1		

F-2

CONTROL PANEL(1)

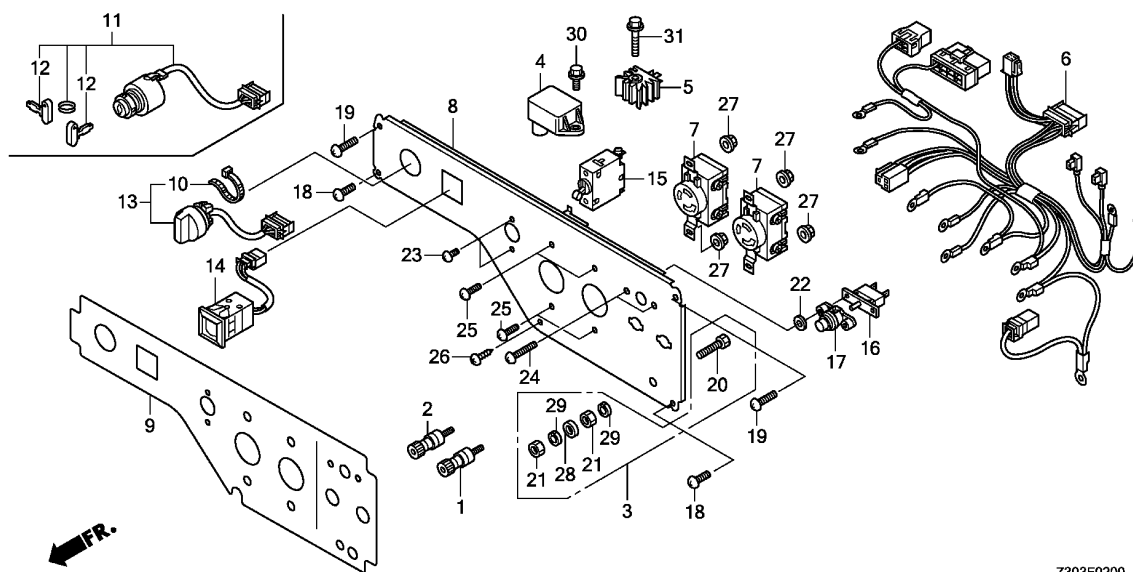


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221K6	TERMINAL, DIRECT CURRENT OUTPUT(+)	0.7
2	6221K7	TERMINAL, DIRECT CURRENT OUTPUT(-)	0.7
4	6221N6	DIODE, CONTROL PANEL DIRECT CURRENT	0.6
5	6131B7	RECTIFIER, REGULATOR	0.6
6	6111B9	HARNESS, CONTROL WIRE	0.9
7	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
8	6221N9	PANEL, GENERATOR CONTROL (11)	1.1
13	6151D9	SWITCH, ENGINE STOP	0.6
14	8121B4	METER, VOLT	0.6
15	6131C4	BREAKER, CIRCUIT	0.7
16	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31408-880-000	TERMINAL, D.C. OUTPUT(+)	----	1	----	1	----	-----	KH,REH,RH,S1H,SH
2	31409-880-000	TERMINAL, D.C. OUTPUT(-)	----	1	----	1	----	-----	KH,REH,RH,S1H,SH
3	31428-Z22-A60	TERMINAL SET, EARTH	----	1	----	1	----	-----	KH,REH,RH,S1H,SH
4	31720-Z18-003	DIODE COMP.	----	1	----	1	----	-----	KH,REH,RH,S1H,SH
5	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	----	----	----	1	----	-----	KH,REH,RH,S1H,SH
6	32150-Z30-D60	HARNESS ASSY., CONTROL WIRE (CX-R)	----	1	----	----	----	-----	KH,REH,RH
	32150-Z30-C70	HARNESS ASSY., CONTROL WIRE (CX-S)	----	1	----	----	----	-----	S1H,SH
	32150-Z30-B60	HARNESS ASSY., CONTROL WIRE (CXS-R)	----	----	----	1	----	-----	KH,REH,RH
	32150-Z30-A70	HARNESS ASSY., CONTROL WIRE (CXS-S)	----	----	----	1	----	-----	S1H,SH
7	32330-Z15-R60	RECEPTACLE(20A/250V)	----	2	----	2	----	-----	KH,REH,RH,S1H,SH
8	32345-Z30-D60ZA	PANEL COMP., CONTROL(CX-R) *NH105*...MAT BLACK (#15-#20)	----	1	----	----	----	-----	KH,REH,RH,S1H,SH
	32345-Z30-B60ZA	PANEL COMP., CONTROL(CXS-R) *NH105*...MAT BLACK (#15-#20)	----	----	----	1	----	-----	KH,REH,RH,S1H,SH
9	32366-Z30-D60	MARK, PANEL(CX-R)	----	1	----	----	----	-----	KH,REH,RH,S1H,SH
	32366-Z30-B60	MARK, PANEL(CXS-R)	----	----	----	1	----	-----	KH,REH,RH,S1H,SH
10	32902-892-003	BAND	----	1	----	----	----	-----	KH,RH,SH
11	35100-Z30-003	SWITCH ASSY., COMBINATION	----	----	----	1	----	-----	KH,REH,RH,S1H,SH
12	35111-880-013	KEY COMP.	----	----	----	2	----	-----	KH,REH,RH,S1H,SH
13	35120-Z30-003	SWITCH ASSY., ENGINE STOP	----	1	----	----	----	-----	KH,REH,RH,S1H,SH
14	37450-Z30-B61	METER ASSY., VOLT	----	1	----	1	----	-----	KH,REH,RH,S1H,SH
15	38220-Z30-B61	BREAKER, CIRCUIT(25A)	----	1	----	1	----	-----	KH,REH,RH
	38220-Z30-A71	BREAKER, CIRCUIT(30A)	----	1	----	1	----	-----	S1H,SH

F-2

CONTROL PANEL(1)

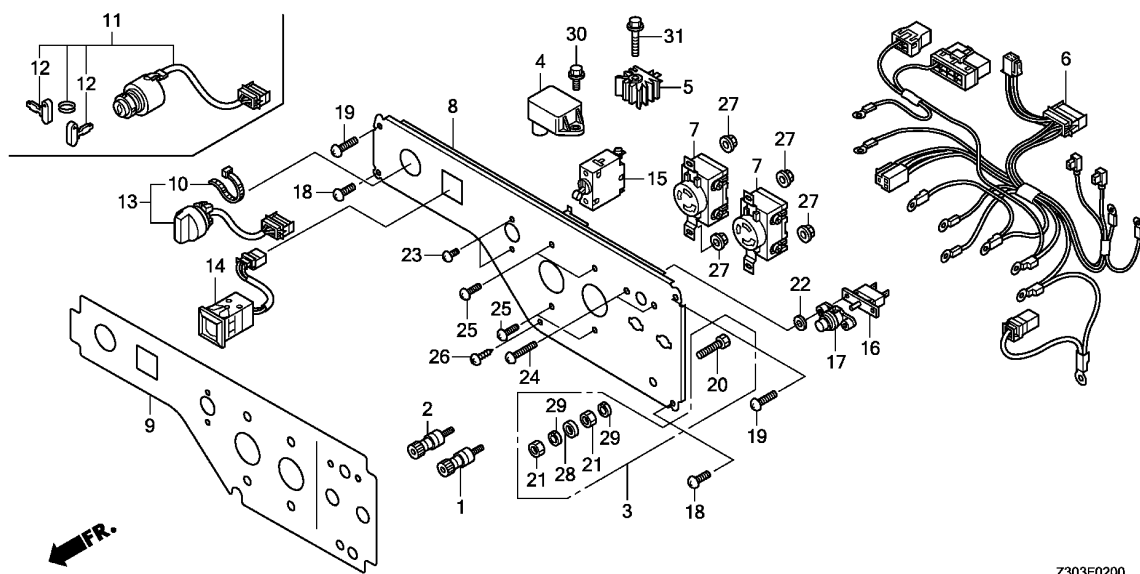


Z303F0200

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
16	38240-898-000	PROTECTOR, CIRCUIT(D.C.)	-	1	-	1	-	-----	KH,REH,RH,S1H,SH
17	38250-ZA8-701	LENS ASSY., PROTECTOR	-	1	-	1	-	-----	KH,REH,RH,S1H,SH
18	90101-Z15-000	SCREW, TRUSS, 6X18	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
19	90101-Z30-000	SCREW, TRUSS, 6X30	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
20	90111-Z22-A60	BOLT, HEX., 6X22	-	1	-	1	-	-----	KH,REH,RH,S1H,SH
21	90112-Z22-000	NUT, HEX., 6MM	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
22	90401-ZR4-F30	WASHER, 4MM	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
23	93500-03005-1A	SCREW, PAN, 3X5	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
24	93500-03016-0A	SCREW, PAN, 3X16	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
25	93500-04010-1A	SCREW, PAN, 4X10	-	4	-	4	-	-----	KH,REH,RH,S1H,SH
26	93913-15280	SCREW, TAPPING, 5X12(P0)	-	1	-	1	-	-----	KH,REH,RH,S1H,SH
27	94050-04000	NUT, FLANGE, 4MM	-	4	-	4	-	-----	KH,REH,RH,S1H,SH
28	94101-06000	WASHER, PLAIN, 6MM	-	1	-	1	-	-----	KH,REH,RH,S1H,SH
29	94111-06000	WASHER, SPRING, 6MM	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
30	96001-06012-00	BOLT, FLANGE, 6X12	-	1	-	1	-	-----	KH,REH,RH,S1H,SH
31	96001-06030-00	BOLT, FLANGE, 6X30	-	-	-	1	-	-----	KH,REH,RH,S1H,SH

F-2-1

CONTROL PANEL(2)

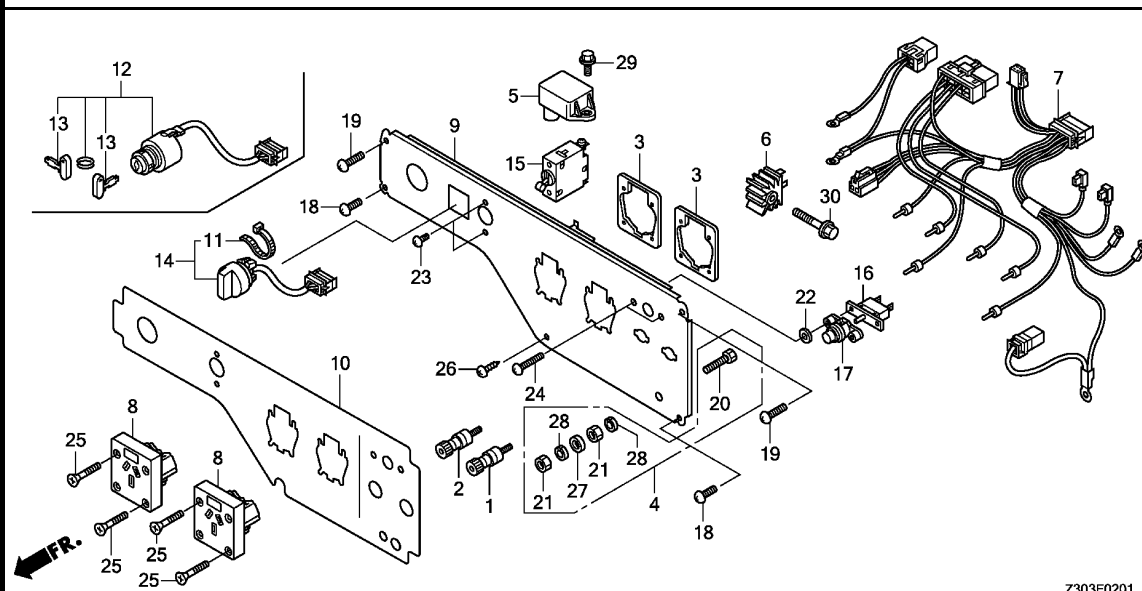


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221K6	TERMINAL, DIRECT CURRENT OUTPUT(+)	0.7
2	6221K7	TERMINAL, DIRECT CURRENT OUTPUT(-)	0.7
5	6221N6	DIODE, CONTROL PANEL DIRECT CURRENT	0.6
6	6131B7	RECTIFIER, REGULATOR	0.6
7	6111B9	HARNESS, CONTROL WIRE	0.9
8	6221J4	SOCKET, CONTROL PANEL	0.7
	6221J5	SOCKET, CONTROL PANEL :ALL	0.8
9	6221N9	PANEL, GENERATOR CONTROL (12)	1.1
14	6151D9	SWITCH, ENGINE STOP	0.6
15	6131C4	BREAKER, CIRCUIT	0.7
16	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31408-880-000	TERMINAL, D.C. OUTPUT(+)	1	-	1	-	-	UH	
2	31409-880-000	TERMINAL, D.C. OUTPUT(-)	1	-	1	-	-	UH	
3	31426-Z18-000	PLATE SET, CONSENT	2	-	2	-	-	UH	
4	31428-Z22-A60	TERMINAL SET, EARTH	1	-	1	-	-	UH	
5	31720-Z18-003	DIODE COMP.	1	-	1	-	-	UH	
6	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	-	-	1	-	-	UH	
7	32150-Z30-C80	HARNESS ASSY., CONTROL WIRE (CX-U)	1	-	-	-	-		
	32150-Z30-A80	HARNESS ASSY., CONTROL WIRE (CXS-U)	-	-	1	-	-	UH	
8	32332-Z07-C81	SOCKET(15A/250V)	2	-	2	-	-	UH	
9	32345-Z30-C80ZA	PANEL COMP., CONTROL(CX-U) *NH105*...MAT BLACK (#15-#20)	1	-	-	-	-		
	32345-Z30-A80ZA	PANEL COMP., CONTROL(CXS-U) *NH105*...MAT BLACK (#15-#20)	-	-	1	-	-	UH	
10	32366-Z30-C80	MARK, PANEL(CX-U)	1	-	-	-	-		
	32366-Z30-A80	MARK, PANEL(CXS-U)	-	-	1	-	-	UH	
11	32902-892-003	BAND	1	-	-	-	-		
12	35100-Z30-003	SWITCH ASSY., COMBINATION	-	-	1	-	-	UH	
13	35111-880-013	KEY COMP.	-	-	2	-	-	UH	
14	35120-Z30-003	SWITCH ASSY., ENGINE STOP	1	-	-	-	-		
15	38220-ZR8-F61	BREAKER, CIRCUIT(23A)	1	-	1	-	-	UH	
16	38240-898-000	PROTECTOR, CIRCUIT(D.C.)	1	-	1	-	-	UH	
17	38250-ZA8-701	LENS ASSY., PROTECTOR	1	-	1	-	-	UH	
18	90101-Z15-000	SCREW, TRUSS, 6X18	2	-	2	-	-	UH	
19	90101-Z30-000	SCREW, TRUSS, 6X30	2	-	2	-	-	UH	

F-2-1

CONTROL PANEL(2)

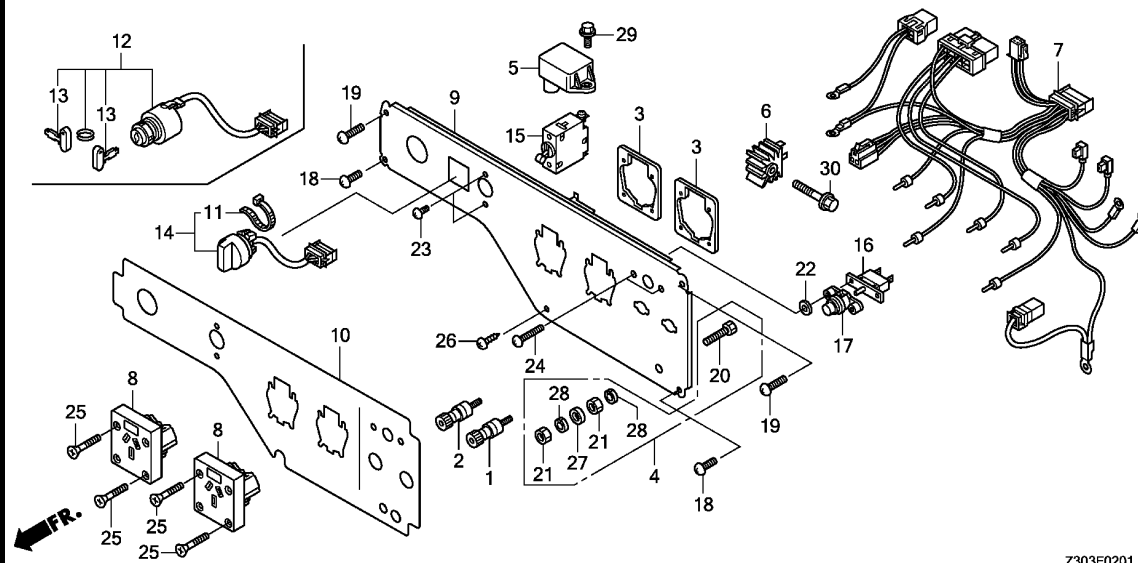


Z303F0201

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
20	90111-Z22-A60	BOLT, HEX., 6X22	1	-	1	-	-	-----	UH
21	90112-Z22-000	NUT, HEX., 6MM	2	-	2	-	-	-----	UH
22	90401-ZR4-F30	WASHER, 4MM	2	-	2	-	-	-----	UH
23	93500-03005-1A	SCREW, PAN, 3X5	2	-	2	-	-	-----	UH
24	93500-03016-0A	SCREW, PAN, 3X16	2	-	2	-	-	-----	UH
25	93600-04020-1G	SCREW, FLAT, 4X20	8	-	8	-	-	-----	UH
26	93913-15280	SCREW, TAPPING, 5X12(P0)	1	-	1	-	-	-----	UH
27	94101-06000	WASHER, PLAIN, 6MM	1	-	1	-	-	-----	UH
28	94111-06000	WASHER, SPRING, 6MM	2	-	2	-	-	-----	UH
29	96001-06012-00	BOLT, FLANGE, 6X12	1	-	1	-	-	-----	UH
30	96001-06030-00	BOLT, FLANGE, 6X30	-	-	1	-	-	-----	UH

F-2-2

CONTROL PANEL(3)

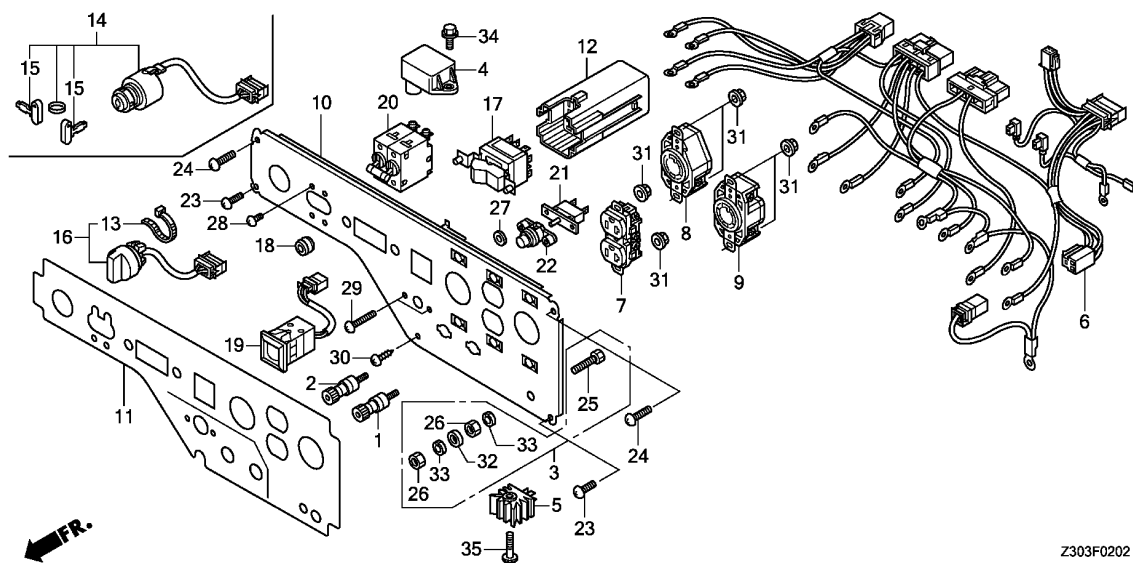


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221K6	TERMINAL, DIRECT CURRENT OUTPUT(+)	0.7
2	6221K7	TERMINAL, DIRECT CURRENT OUTPUT(-)	0.7
4	6221N6	DIODE, CONTROL PANEL DIRECT CURRENT	0.6
5	6131B7	RECTIFIER, REGULATOR	0.6
6	6111F9	HARNESS, CONTROL WIRE(A)	1.0
7	6221K5	RECEPTACLE/CONSENT, CONTROL PANEL(A)	0.8
10	6221J3	RECEPTACLE/CONSENT, CONTROL PANEL(A) :ALL	0.9
16	6221T2	PANEL, GENERATOR CONTROL(A) ..	1.2
17	6151D9	SWITCH, ENGINE STOP	0.6
19	6151F1	SWITCH, VOLT CHANGE	0.7
20	8121B4	METER, VOLT	0.6
21	6131C4	BREAKER, CIRCUIT	0.7
21	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code		
			EG 5500	EG 6500	EG 5500	EG 6500	EG 5500				
			CX	CX	CXS	CXS	CL				
1	31408-880-000	TERMINAL, D.C. OUTPUT(+)	----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
2	31409-880-000	TERMINAL, D.C. OUTPUT(-)	----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
3	31428-Z22-A60	TERMINAL SET, EARTH	-----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
4	31720-Z18-003	DIODE COMP.	-----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
5	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	----	-	-	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
6	32150-Z30-D40	HARNESS ASSY., CONTROL WIRE (CX-LD)	----	-	1	-	-	-	-----	-----	LD1H,LDH,LT1H,LTH
	32150-Z30-V10	HARNESS ASSY., CONTROL WIRE (CXS-LB)	----	-	-	-	1	-	-----	-----	LBH
	32150-Z30-B40	HARNESS ASSY., CONTROL WIRE (CXS-LD)	----	-	-	-	1	-	-----	-----	LD1H,LDH,LT1H,LTH
7	32330-Z18-B21	RECEPTACLE(20A-125V)	-----	-	1	-	1	-	-----	-----	LD1H,LDH,LT1H,LTH
8	32332-Z22-E31	RECEPTACLE(30A-125V)	-----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
9	32334-Z22-A31	RECEPTACLE(30A-125/250V)	-----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
10	32345-Z30-D40ZA	PANEL COMP., CONTROL(CX-LD) *NH105*...MAT BLACK (#15-#20)	----	-	1	-	-	-	-----	-----	LD1H,LDH,LT1H,LTH
	32345-Z30-B40ZA	PANEL COMP., CONTROL(CXS-LD) *NH105*...MAT BLACK (#15-#20)	----	-	-	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
11	32366-Z30-D40	MARK, PANEL(CX-LD)	-----	-	1	-	-	-	-----	-----	LD1H,LDH
	32366-Z30-D10	MARK, PANEL(CX-LT)	-----	-	1	-	-	-	-----	-----	LT1H,LTH
	32366-Z30-V10	MARK, PANEL(CXS-LB)	-----	-	-	-	1	-	-----	-----	LBH
	32366-Z30-B40	MARK, PANEL(CXS-LD)	-----	-	-	-	1	-	-----	-----	LD1H,LDH
	32366-Z30-B10	MARK, PANEL(CXS-LT)	-----	-	-	-	1	-	-----	-----	LT1H,LTH
12	32395-Z30-S31	COUPLER(12P)	-----	-	1	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
13	32902-892-003	BAND	-----	-	1	-	-	-	-----	-----	LDH,LTH
14	35100-Z30-003	SWITCH ASSY., COMBINATION	---	-	-	-	1	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH
15	35111-880-013	KEY COMP.	-----	-	-	-	2	-	-----	-----	LBH,LD1H,LDH,LT1H,LTH

F-2-2

CONTROL PANEL(3)

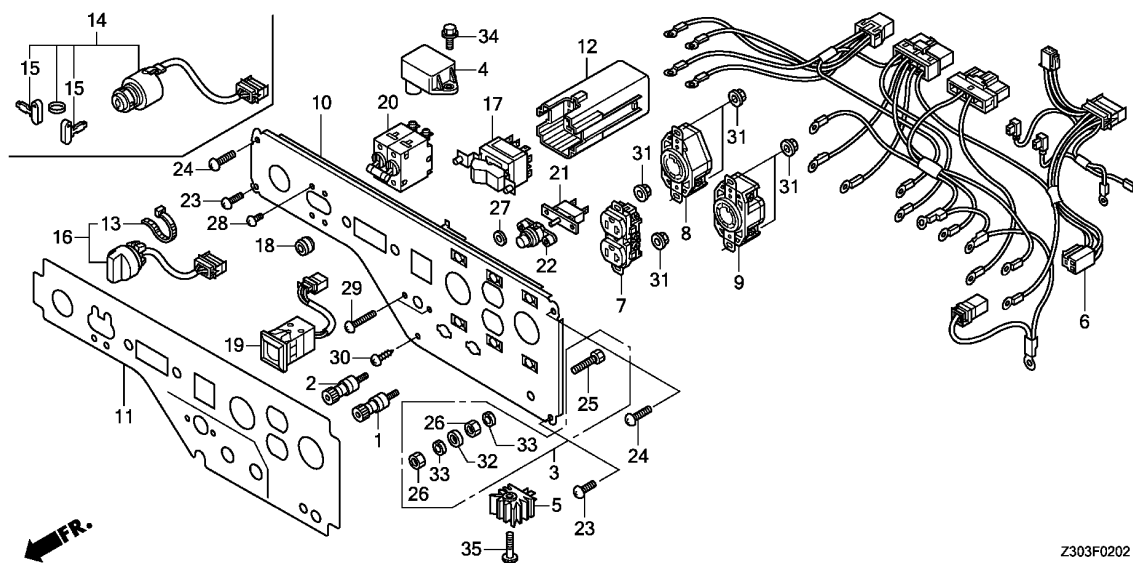


Z303F0202

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
16	35120-Z30-003	SWITCH ASSY., ENGINE STOP ...	-	1	-	-	-	-----	LD1H,LDH,LT1H,LTH
17	35320-Z30-B41	SWITCH ASSY., VOLT CHANGE ...	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
18	35322-Z30-000	MOUNT, VOLT CHANGE SWITCH ...	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
19	37450-Z30-B41	METER ASSY., VOLT	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
20	38220-Z30-B41	BREAKER, CIRCUIT(27A)	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
21	38240-898-000	PROTECTOR, CIRCUIT(D.C.)	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
22	38250-ZA8-701	LENS ASSY., PROTECTOR	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
23	90101-Z15-000	SCREW, TRUSS, 6X18	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
24	90101-Z30-000	SCREW, TRUSS, 6X30	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
25	90111-Z22-A60	BOLT, HEX., 6X22	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
26	90112-Z22-000	NUT, HEX., 6MM	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
27	90401-ZR4-F30	WASHER, 4MM	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
28	93500-03005-1A	SCREW, PAN, 3X5	-	4	-	4	-	-----	LBH,LD1H,LDH,LT1H,LTH
29	93500-03016-0A	SCREW, PAN, 3X16	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
30	93913-15280	SCREW, TAPPING, 5X12(P0)	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
31	94050-04000	NUT, FLANGE, 4MM	-	6	-	6	-	-----	LD1H,LDH,LT1H,LTH
32	94101-06000	WASHER, PLAIN, 6MM	-	1	-	1	-	-----	LBH
33	94111-06000	WASHER, SPRING, 6MM	-	2	-	2	-	-----	LBH,LD1H,LDH,LT1H,LTH
34	96001-06012-00	BOLT, FLANGE, 6X12	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
35	96001-06030-00	BOLT, FLANGE, 6X30	-	-	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH

F-2-3

CONTROL PANEL(4)

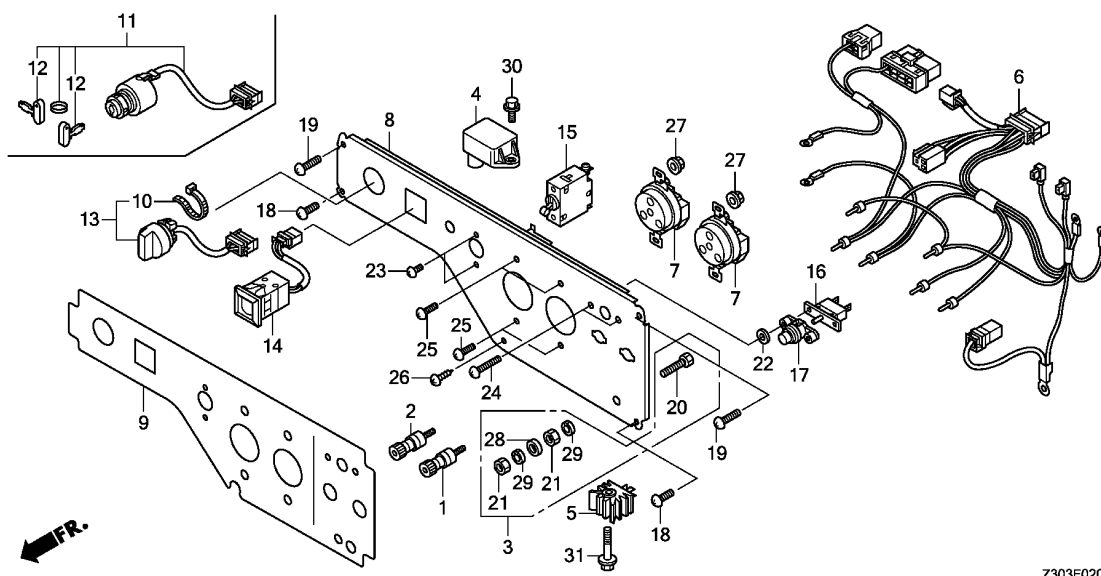


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221K6	TERMINAL, DIRECT CURRENT OUTPUT(+)	0.7
2	6221K7	TERMINAL, DIRECT CURRENT OUTPUT(-)	0.7
4	6221N6	DIODE, CONTROL PANEL DIRECT CURRENT	0.6
5	6131B7	RECTIFIER, REGULATOR	0.6
6	6111B9	HARNESS, CONTROL WIRE	0.9
7	6221J4	SOCKET, CONTROL PANEL	0.7
	6221J5	SOCKET, CONTROL PANEL :ALL	0.8
8	6221N9	PANEL, GENERATOR CONTROL (11)	1.1
13	6151D9	SWITCH, ENGINE STOP	0.6
14	8121B4	METER, VOLT	0.6
15	6131C4	BREAKER, CIRCUIT	0.7
16	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31408-880-000	TERMINAL, D.C. OUTPUT(+)	----	1	----	1	----	----	MH
2	31409-880-000	TERMINAL, D.C. OUTPUT(-)	----	1	----	1	----	----	MH
3	31428-Z22-A60	TERMINAL SET, EARTH	----	1	----	1	----	----	MH
4	31720-Z18-003	DIODE COMP.	----	1	----	1	----	----	MH
5	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	----	----	----	1	----	----	MH
6	32150-Z30-D20	HARNESS ASSY., CONTROL WIRE (CX-M)	----	1	----	----	----	----	MH
	32150-Z30-B20	HARNESS ASSY., CONTROL WIRE (CXS-M)	----	----	----	1	----	----	MH
7	32331-ZA8-720	SOCKET(16A/250V)	----	2	----	2	----	----	MH
8	32345-Z30-D20ZA	PANEL COMP., CONTROL(CX-M) *NH105*...MAT BLACK (#15-#20)	----	1	----	----	----	----	MH
	32345-Z30-B20ZA	PANEL COMP., CONTROL(CXS-M) *NH105*...MAT BLACK (#15-#20)	----	----	----	1	----	----	MH
9	32366-Z30-D20	MARK, PANEL(CX-M)	----	1	----	----	----	----	MH
	32366-Z30-B20	MARK, PANEL(CXS-M)	----	----	----	1	----	----	MH
10	32902-892-003	BAND	----	1	----	----	----	----	MH
11	35100-Z30-003	SWITCH ASSY., COMBINATION	----	----	----	1	----	----	MH
12	35111-880-013	KEY COMP.	----	----	----	2	----	----	MH
13	35120-Z30-003	SWITCH ASSY., ENGINE STOP	----	1	----	----	----	----	MH
14	37450-Z30-B61	METER ASSY., VOLT	----	1	----	1	----	----	MH
15	38220-Z30-B61	BREAKER, CIRCUIT(25A)	----	1	----	1	----	----	MH
16	38240-898-000	PROTECTOR, CIRCUIT(D.C.)	----	1	----	1	----	----	MH
17	38250-ZA8-701	LENS ASSY., PROTECTOR	----	1	----	1	----	----	MH
18	90101-Z15-000	SCREW, TRUSS, 6X18	----	2	----	2	----	----	MH
19	90101-Z30-000	SCREW, TRUSS, 6X30	----	2	----	2	----	----	MH

F-2-3

CONTROL PANEL(4)

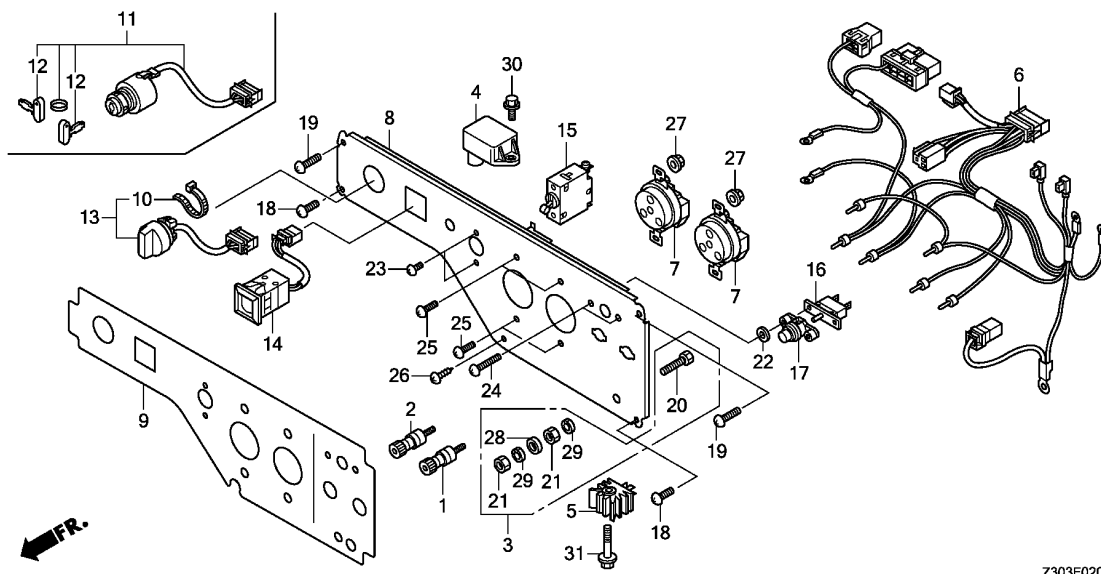


Z303F0203

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
20	90111-Z22-A60	BOLT, HEX., 6X22	-	1	-	1	-	-----	MH
21	90112-Z22-000	NUT, HEX., 6MM	-	2	-	2	-	-----	MH
22	90401-ZR4-F30	WASHER, 4MM	-	2	-	2	-	-----	MH
23	93500-03005-1A	SCREW, PAN, 3X5	-	2	-	2	-	-----	MH
24	93500-03016-0A	SCREW, PAN, 3X16	-	2	-	2	-	-----	MH
25	93500-04010-1A	SCREW, PAN, 4X10	-	4	-	4	-	-----	MH
26	93913-15280	SCREW, TAPPING, 5X12(P0)	-	1	-	1	-	-----	MH
27	94050-04000	NUT, FLANGE, 4MM	-	4	-	4	-	-----	MH
28	94101-06000	WASHER, PLAIN, 6MM	-	1	-	1	-	-----	MH
29	94111-06000	WASHER, SPRING, 6MM	-	2	-	2	-	-----	MH
30	96001-06012-00	BOLT, FLANGE, 6X12	-	1	-	1	-	-----	MH
31	96001-06030-00	BOLT, FLANGE, 6X30	-	-	-	1	-	-----	MH

F-2-4

CONTROL PANEL(5)

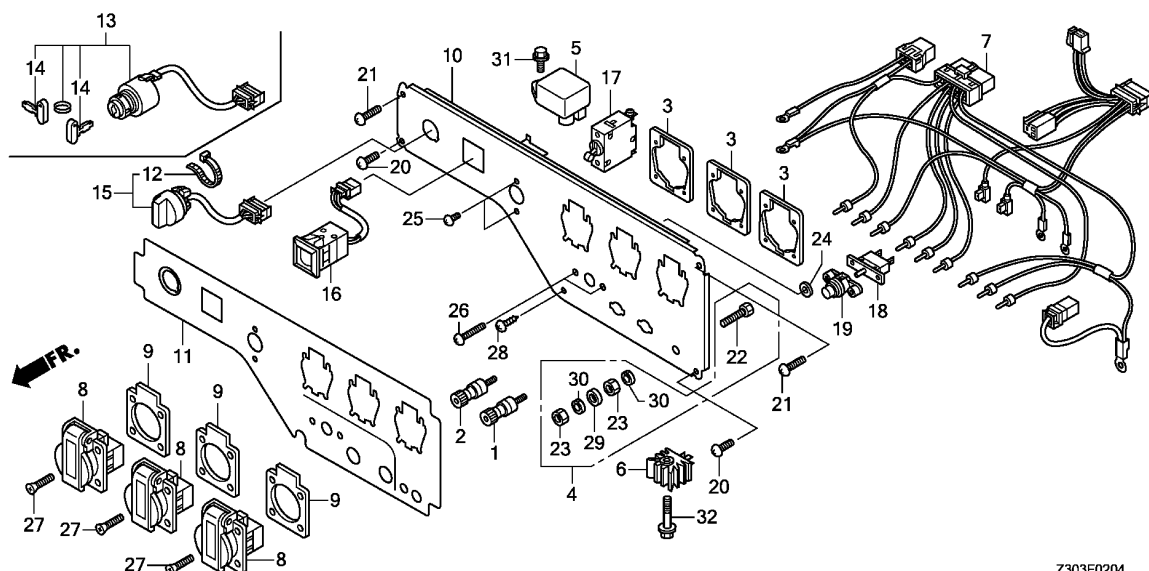


Z303F0204

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221K6	TERMINAL, DIRECT CURRENT OUTPUT(+)	0.7
2	6221K7	TERMINAL, DIRECT CURRENT OUTPUT(-)	0.7
5	6221N6	DIODE, CONTROL PANEL DIRECT CURRENT	0.6
6	6131B7	RECTIFIER, REGULATOR	0.6
7	6111B9	HARNESS, CONTROL WIRE	0.9
8	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
10	6221N9	PANEL, GENERATOR CONTROL (13)	1.1
15	6151D9	SWITCH, ENGINE STOP	0.6
16	8121B4	METER, VOLT	0.6
17	6131C4	BREAKER, CIRCUIT	0.7
18	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31408-880-000	TERMINAL, D.C. OUTPUT(+)	-	1	-	1	-	-----	SK1H,SKH
2	31409-880-000	TERMINAL, D.C. OUTPUT(-)	-	1	-	1	-	-----	SK1H,SKH
3	31426-Z18-000	PLATE SET, CONSENT	-	3	-	3	-	-----	SK1H,SKH
4	31428-Z22-A60	TERMINAL SET, EARTH	-	1	-	1	-	-----	SK1H,SKH
5	31720-Z18-003	DIODE COMP.	-	1	-	1	-	-----	SK1H,SKH
6	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	-	-	-	1	-	-----	SK1H,SKH
7	32150-Z30-S10	HARNESS ASSY., CONTROL WIRE (CX-SK)	-	1	-	-	-	-----	SK1H,SKH
	32150-Z30-R10	HARNESS ASSY., CONTROL WIRE (CXS-SK)	-	-	-	1	-	-----	SK1H,SKH
8	32331-ZT3-C60	RECEPTACLE(16A/250V)	-	3	-	3	-	-----	SK1H,SKH
9	32335-875-610	PACKING, RECEPTACLE	-	3	-	3	-	-----	SK1H,SKH
10	32345-Z30-S10ZA	PANEL COMP., CONTROL(CX-SK) *NH105*...MAT BLACK (#15-#20)	-	1	-	-	-	-----	SK1H,SKH
	32345-Z30-R10ZA	PANEL COMP., CONTROL(CXS-SK) *NH105*...MAT BLACK (#15-#20)	-	-	-	1	-	-----	SK1H,SKH
11	32366-Z30-S10	MARK, PANEL(CX-SK)	-	1	-	-	-	-----	SK1H,SKH
	32366-Z30-R10	MARK, PANEL(CXS-SK)	-	-	-	1	-	-----	SK1H,SKH
12	32902-892-003	BAND	-	1	-	-	-	-----	SKH
13	35100-Z30-003	SWITCH ASSY., COMBINATION ...	-	-	-	1	-	-----	SK1H,SKH
14	35111-880-013	KEY COMP.	-	-	-	2	-	-----	SK1H,SKH
15	35120-Z30-003	SWITCH ASSY., ENGINE STOP ...	-	1	-	-	-	-----	SK1H,SKH
16	37450-Z30-B61	METER ASSY., VOLT	-	1	-	1	-	-----	SK1H,SKH
17	38220-Z30-A71	BREAKER, CIRCUIT(30A)	-	1	-	1	-	-----	SK1H,SKH
18	38240-898-000	PROTECTOR, CIRCUIT(D.C.)	-	1	-	1	-	-----	SK1H,SKH
19	38250-ZA8-701	LENS ASSY., PROTECTOR	-	1	-	1	-	-----	SK1H,SKH

F-2-4

CONTROL PANEL(5)

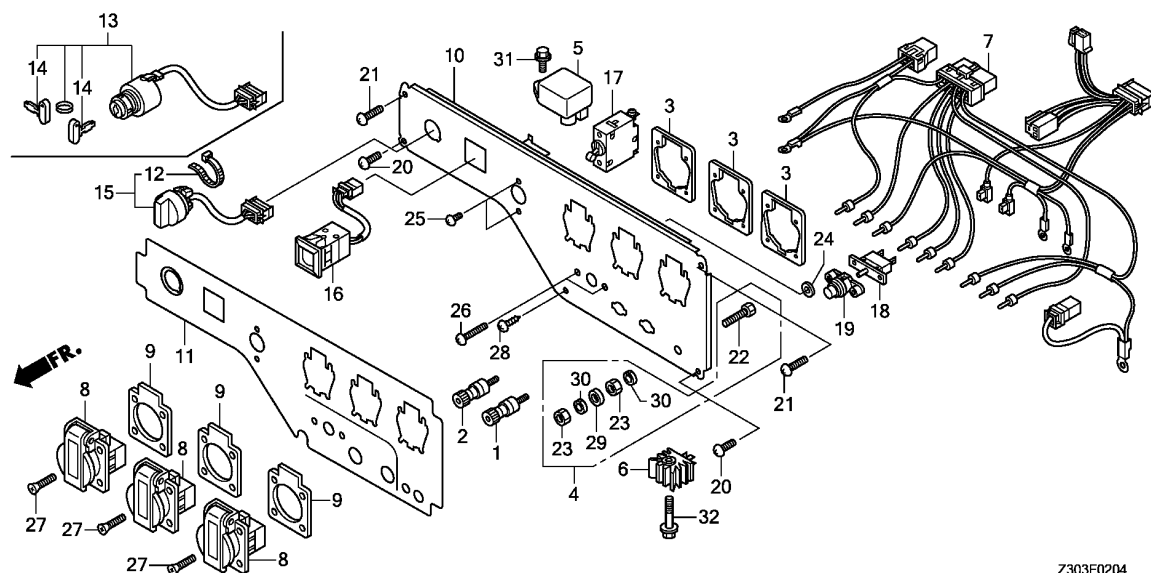


Z303F0204

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
20	90101-Z15-000	SCREW, TRUSS, 6X18	-	2	-	2	-	-----	SK1H,SKH
21	90101-Z30-000	SCREW, TRUSS, 6X30	-	2	-	2	-	-----	SK1H,SKH
22	90111-Z22-A60	BOLT, HEX., 6X22	-	1	-	1	-	-----	SK1H,SKH
23	90112-Z22-000	NUT, HEX., 6MM	-	2	-	2	-	-----	SK1H,SKH
24	90401-ZR4-F30	WASHER, 4MM	-	2	-	2	-	-----	SK1H,SKH
25	93500-03005-1A	SCREW, PAN, 3X5	-	2	-	2	-	-----	SK1H,SKH
26	93500-03016-0A	SCREW, PAN, 3X16	-	2	-	2	-	-----	SK1H,SKH
27	93600-04016-1G	SCREW, FLAT, 4X16	-	12	-	12	-	-----	SK1H,SKH
28	93913-15280	SCREW, TAPPING, 5X12(P0)	-	1	-	1	-	-----	SK1H,SKH
29	94101-06000	WASHER, PLAIN, 6MM	-	1	-	1	-	-----	SK1H,SKH
30	94111-06000	WASHER, SPRING, 6MM	-	2	-	2	-	-----	SK1H,SKH
31	96001-06012-00	BOLT, FLANGE, 6X12	-	1	-	1	-	-----	SK1H,SKH
32	96001-06030-00	BOLT, FLANGE, 6X30	-	-	-	1	-	-----	SK1H,SKH

F-2-5

CONTROL PANEL(6)

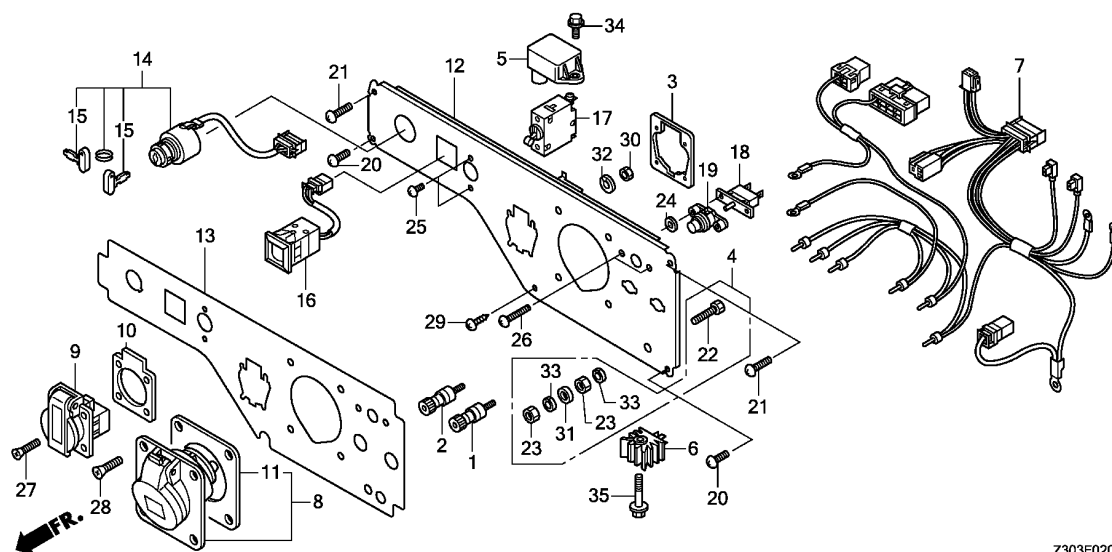


Z303F0205

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6221K6	TERMINAL, DIRECT CURRENT OUTPUT(+)	0.7
2	6221K7	TERMINAL, DIRECT CURRENT OUTPUT(-)	0.7
5	6221N6	DIODE, CONTROL PANEL DIRECT CURRENT	0.6
6	6131B7	RECTIFIER, REGULATOR	0.6
7	6111B9	HARNESS, CONTROL WIRE	0.9
8	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
12	6221N9	PANEL, GENERATOR CONTROL	1.1
14	6151E1	SWITCH, COMBINATION	0.6
16	8121B4	METER, VOLT	0.6
17	6131C4	BREAKER, CIRCUIT	0.7
18	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31408-880-000	TERMINAL, D.C. OUTPUT(+)	-	-	1	-	-	RGH	
2	31409-880-000	TERMINAL, D.C. OUTPUT(-)	-	-	1	-	-	RGH	
3	31426-Z18-000	PLATE SET, CONSENT	-	-	1	-	-	RGH	
4	31428-Z22-A60	TERMINAL SET, EARTH	-	-	1	-	-	RGH	
5	31720-Z18-003	DIODE COMP.	-	-	1	-	-	RGH	
6	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	-	-	1	-	-	RGH	
7	32150-Z30-R70	HARNESS ASSY., CONTROL WIRE (CXS-RG)	-	-	1	-	-	RGH	
8	32330-Z22-A90	RECEPTACLE(32A/250V)(KEDU) ..	-	-	1	-	-	RGH	
9	32331-ZT3-C60	RECEPTACLE(16A/250V)	-	-	1	-	-	RGH	
10	32335-875-610	PACKING, RECEPTACLE	-	-	1	-	-	RGH	
11	32335-Z22-F90	PACKING	-	-	1	-	-	RGH	
12	32345-Z30-R70ZA	PANEL COMP., CONTROL(CXS-RG) *NH105*...MAT BLACK (#15-#20)	-	-	1	-	-	RGH	
13	32366-Z30-R70	MARK, PANEL(CXS-RG)	-	-	1	-	-	RGH	
14	35100-Z30-003	SWITCH ASSY., COMBINATION ...	-	-	1	-	-	RGH	
15	35111-880-013	KEY COMP.	-	-	2	-	-	RGH	
16	37450-Z30-R71	METER ASSY., VOLT	-	-	1	-	-	RGH	
17	38220-Z30-R61	BREAKER, CIRCUIT(24A)	-	-	1	-	-	RGH	
18	38240-898-000	PROTECTOR, CIRCUIT(D.C.)	-	-	1	-	-	RGH	
19	38250-ZA8-701	LENS ASSY., PROTECTOR	-	-	1	-	-	RGH	
20	90101-Z15-000	SCREW, TRUSS, 6X18	-	-	2	-	-	RGH	
21	90101-Z30-000	SCREW, TRUSS, 6X30	-	-	2	-	-	RGH	
22	90111-Z22-A60	BOLT, HEX., 6X22	-	-	1	-	-	RGH	
23	90112-Z22-000	NUT, HEX., 6MM	-	-	2	-	-	RGH	

F-2-5

CONTROL PANEL(6)

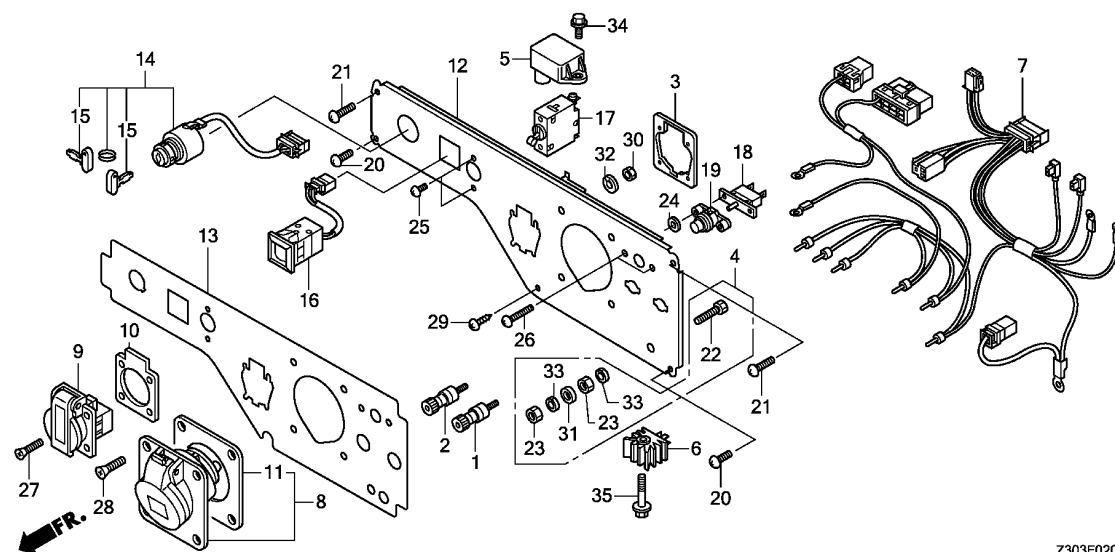


Z303F0205

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
24	90401-ZR4-F30	WASHER, 4MM	-	-	2	-	-	-----	RGH
25	93500-03005-1A	SCREW, PAN, 3X5	-	-	2	-	-	-----	RGH
26	93500-03016-0A	SCREW, PAN, 3X16	-	-	2	-	-	-----	RGH
27	93600-04016-1G	SCREW, FLAT, 4X16	-	-	4	-	-	-----	RGH
28	93600-05016-0G	SCREW, FLAT, 5X16	-	-	4	-	-	-----	RGH
29	93913-15280	SCREW, TAPPING, 5X12(P0)	-	-	1	-	-	-----	RGH
30	94001-05000	NUT, HEX., 5MM	-	-	4	-	-	-----	RGH
31	94101-06000	WASHER, PLAIN, 6MM	-	-	1	-	-	-----	RGH
32	94111-05800	WASHER, SPRING, 5MM	-	-	4	-	-	-----	RGH
33	94111-06000	WASHER, SPRING, 6MM	-	-	2	-	-	-----	RGH
34	96001-06012-00	BOLT, FLANGE, 6X12	-	-	1	-	-	-----	RGH
35	96001-06030-00	BOLT, FLANGE, 6X30	-	-	1	-	-	-----	RGH

F-2-8

CONTROL PANEL(7)

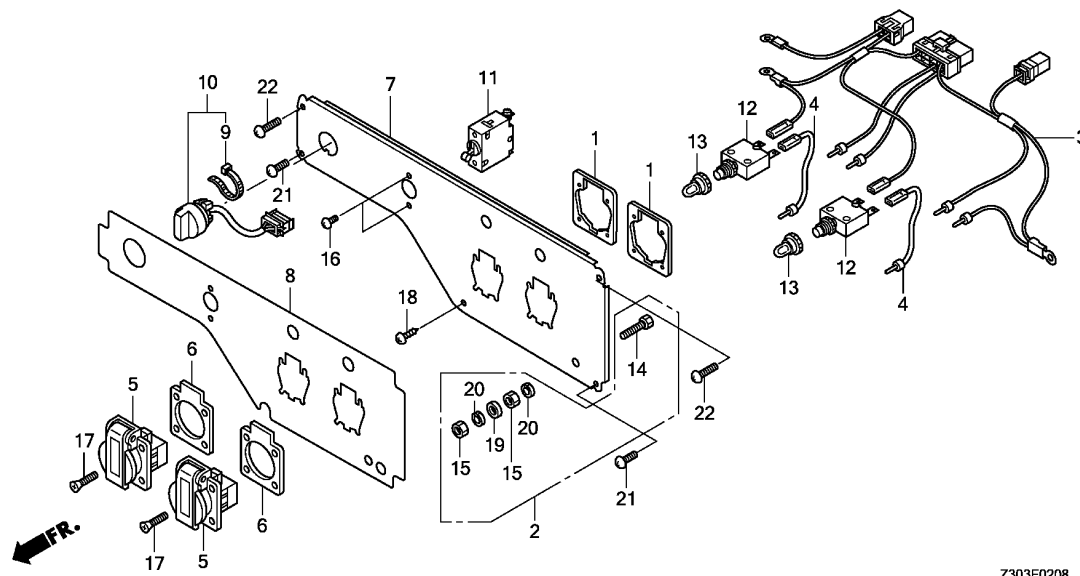


Z303F0208

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	6111B9	HARNESS, CONTROL WIRE	0.9
5	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
7	6221N9	PANEL, GENERATOR CONTROL	1.1
10	6151D9	SWITCH, ENGINE STOP	0.6
11	6131C4	BREAKER, CIRCUIT	0.7
12	6221D4	PROTECTOR, CIRCUIT	0.6
.NOTE: Same time for two units			

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31426-Z18-000	PLATE SET, CONSENT	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
2	31428-Z22-A60	TERMINAL SET, EARTH	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
3	32150-Z30-C50	HARNESS ASSY., CONTROL WIRE (CL-GW)	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
4	32221-Z28-R20	CORD, TERMINAL	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
5	32331-Z25-A60	RECEPTACLE(16A-250V)	-	-	-	-	2	-----	CLT,GT,GWT
	32331-Z25-640		-	-	-	-	2	-----	GWT1
6	32335-875-610	PACKING, RECEPTACLE	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
7	32345-Z30-C50ZA	PANEL COMP., CONTROL (CL-GW) *NH105*...MAT BLACK (#15-#20)	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
8	32366-Z30-C50	MARK, PANEL (CL-GW)	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
9	32902-892-003	BAND	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
10	35120-Z30-802	SWITCH ASSY., ENGINE STOP	-	-	-	-	1	-----	CLT,GWT1
	35120-Z30-801		-	-	-	-	1	-----	GT,GWT
11	38220-Z30-R61	BREAKER, CIRCUIT(24A)	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
12	38240-Z23-F90	PROTECTOR, CIRCUIT(16A)	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
13	38242-Z25-A62	COVER COMP., CIRCUIT PROTECTOR	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
14	90111-Z22-A60	BOLT, HEX., 6X22	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
15	90112-Z22-000	NUT, HEX., 6MM	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
16	93500-03005-1A	SCREW, PAN, 3X5	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
17	93600-04016-1G	SCREW, FLAT, 4X16	-	-	-	-	8	-----	CLT,GT,GWT,GWT1
18	93913-15280	SCREW, TAPPING, 5X12(P0)	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
19	94101-06000	WASHER, PLAIN, 6MM	-	-	-	-	1	-----	CLT,GT,GWT,GWT1
20	94111-06000	WASHER, SPRING, 6MM	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
21	90101-Z15-000	SCREW, TRUSS, 6X18	-	-	-	-	2	-----	CLT,GT,GWT,GWT1
22	90101-Z30-000	SCREW, TRUSS, 6X30	-	-	-	-	2	-----	CLT,GT,GWT,GWT1

F-2-9

CONTROL PANEL(8)

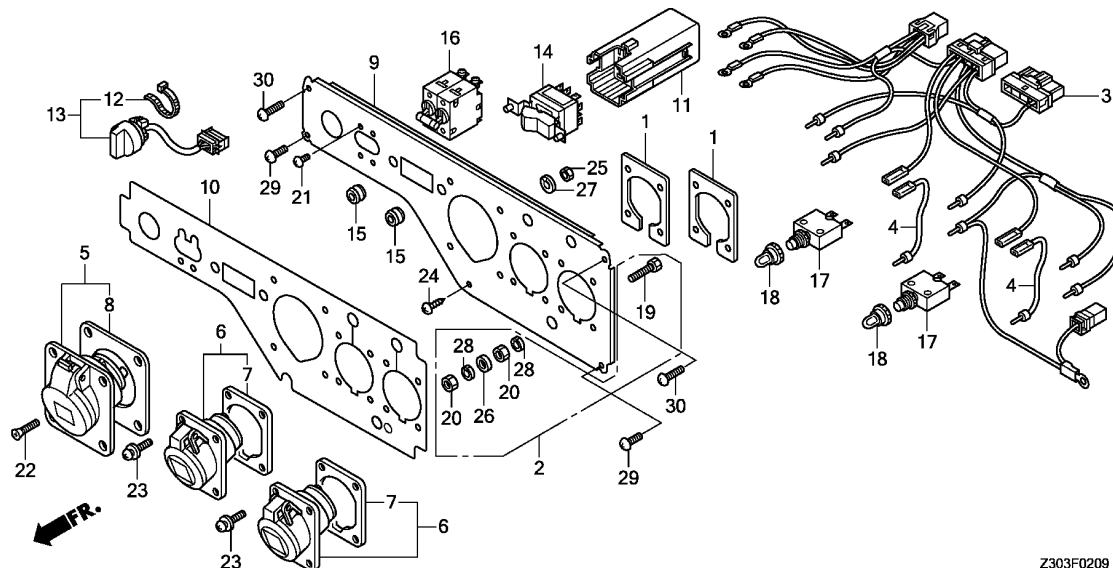


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	6111B9	HARNESS, CONTROL WIRE	0.9
5	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
9	6221N9	PANEL, GENERATOR CONTROL	1.1
13	6151D9	SWITCH, ENGINE STOP	0.6
14	6151F1	SWITCH, VOLT CHANGE	0.7
16	6131C4	BREAKER, CIRCUIT	0.7
17	6221D4	PROTECTOR, CIRCUIT	0.6
.NOTE: Same time for two units			

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31426-Z22-000	PLATE SET, CONSENT	-	-	-	-	2	-----	BT
2	31428-Z22-A60	TERMINAL SET, EARTH	-	-	-	-	1	-----	BT
3	32150-Z30-C90	HARNESS ASSY., CONTROL WIRE (CL-GW)	-	-	-	-	1	-----	BT
4	32221-Z28-R20	CORD, TERMINAL	-	-	-	-	2	-----	BT
5	32330-Z22-A90	RECEPTACLE(32A/250V)(KEDU) ..	-	-	-	-	1	-----	BT
6	32332-ZB3-G90	RECEPTACLE(16A/110V)(LEWDEN) ..	-	-	-	-	2	-----	BT
7	32335-898-690	PACKING, RECEPTACLE	-	-	-	-	2	-----	BT
8	32335-Z22-F90	PACKING	-	-	-	-	1	-----	BT
9	32345-Z30-C90ZA	PANEL COMP., CONTROL(CL-GW) *NH105*...MAT BLACK (#15-#20) ..	-	-	-	-	1	-----	BT
10	32366-Z30-C90	MARK, PANEL(CL-GW)	-	-	-	-	1	-----	BT
11	32395-Z30-S31	COUPLER(12P)	-	-	-	-	1	-----	BT
12	32902-892-003	BAND	-	-	-	-	1	-----	BT
13	35120-Z30-801	SWITCH ASSY., ENGINE STOP ..	-	-	-	-	1	-----	BT
14	35320-Z30-B41	SWITCH ASSY., VOLT CHANGE ..	-	-	-	-	1	-----	BT
15	35322-Z30-000	MOUNT, VOLT CHANGE SWITCH ..	-	-	-	-	2	-----	BT
16	38220-Z30-C91	BREAKER, CIRCUIT(24A)	-	-	-	-	1	-----	BT
17	38240-Z23-F90	PROTECTOR, CIRCUIT(16A)	-	-	-	-	2	-----	BT
18	38242-Z25-A62	COVER COMP., CIRCUIT PROTECTOR ..	-	-	-	-	2	-----	BT
19	90111-Z22-A60	BOLT, HEX., 6X22	-	-	-	-	1	-----	BT
20	90112-Z22-000	NUT, HEX., 6MM	-	-	-	-	2	-----	BT
21	93500-03005-1A	SCREW, PAN, 3X5	-	-	-	-	4	-----	BT
22	93600-05016-0G	SCREW, FLAT, 5X16	-	-	-	-	4	-----	BT
23	93893-05016-17	SCREW-WASHER, 5X16	-	-	-	-	8	-----	BT

F-2-9


CONTROL PANEL(8)

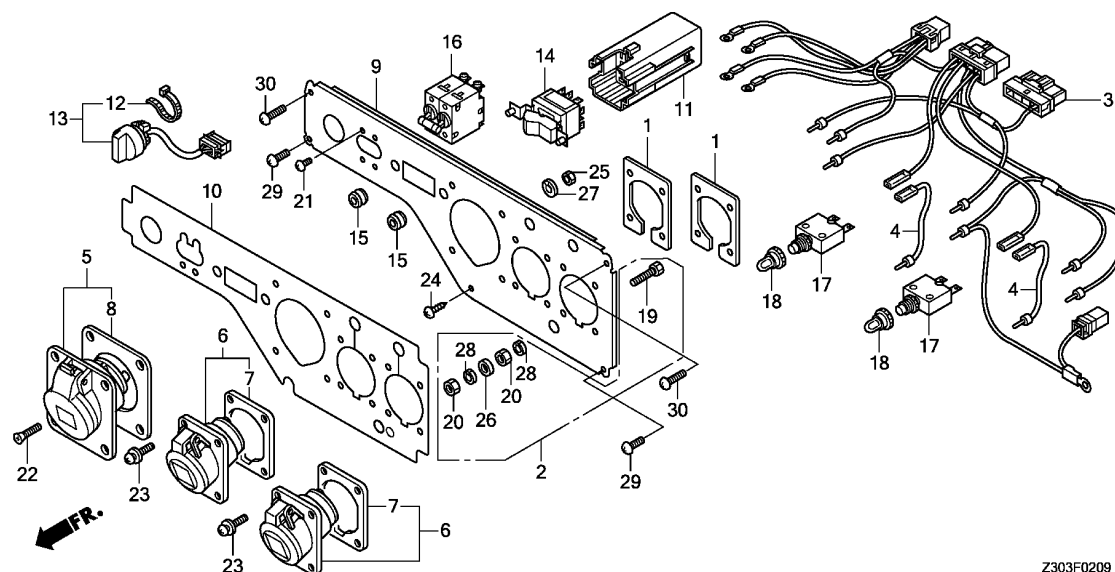

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
24	93913-15280	SCREW, TAPPING, 5X12(P0)	-	-	-	-	1	-----	BT
25	94001-05000	NUT, HEX., 5MM	-	-	-	-	4	-----	BT
26	94101-06000	WASHER, PLAIN, 6MM	-	-	-	-	1	-----	BT
27	94111-05800	WASHER, SPRING, 5MM	-	-	-	-	4	-----	BT
28	94111-06000	WASHER, SPRING, 6MM	-	-	-	-	2	-----	BT
29	90101-Z15-000	SCREW, TRUSS, 6X18	-	-	-	-	2	-----	BT
30	90101-Z30-000	SCREW, TRUSS, 6X30	-	-	-	-	2	-----	BT

F-2-10

CONTROL PANEL(9)

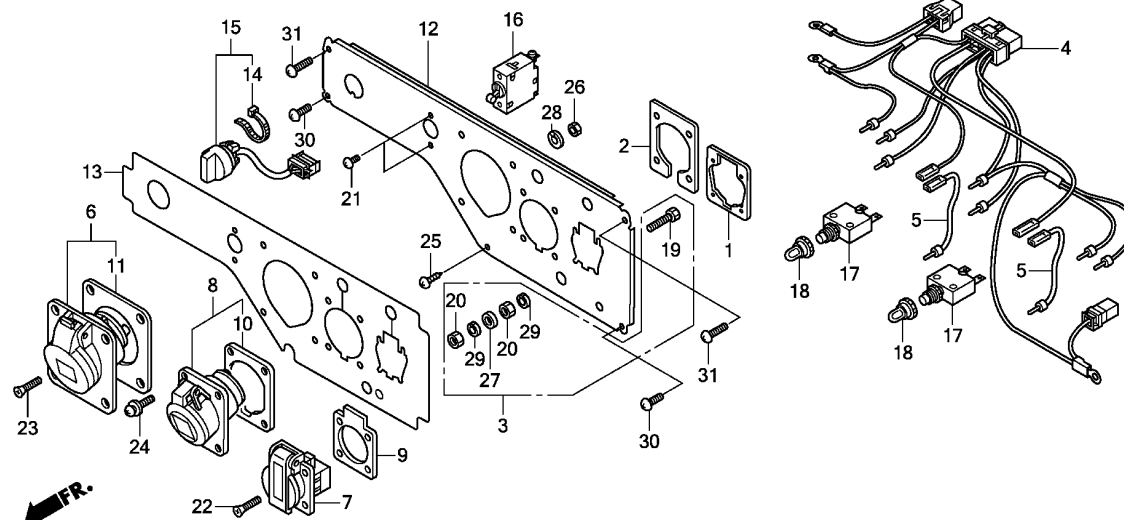


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
4	6111B9	HARNESS, CONTROL WIRE (7,8)	0.9
6	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
12	6221N9	PANEL, GENERATOR CONTROL	1.1
15	6151D9	SWITCH, ENGINE STOP	0.6
16	6131C4	BREAKER, CIRCUIT	0.7
17	6221D4	PROTECTOR, CIRCUIT	0.6
.NOTE: Same time for two units			

Z303F0210A

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31426-Z18-000	PLATE SET, CONSENT	-	-	-	-	1	-----	FT
2	31426-Z22-000	PLATE SET, CONSENT	-	-	-	-	1	-----	FT
3	31428-Z22-A60	TERMINAL SET, EARTH	-	-	-	-	1	-----	FT
4	32150-Z30-D50	HARNESS ASSY., CONTROL WIRE (CL-F)	-	-	-	-	1	-----	FT
5	32221-Z28-R20	CORD, TERMINAL	-	-	-	-	2	-----	FT
6	32330-Z22-A90	RECEPTACLE(32A/250V)(KEDU)	-	-	-	-	1	-----	FT
7	32331-Z25-B50	RECEPTACLE(10/16A-250V)	-	-	-	-	1	-----	FT
8	32331-ZB3-G90	RECEPTACLE(16A/240V)	-	-	-	-	1	-----	FT
9	32335-875-610	PACKING, RECEPTACLE	-	-	-	-	1	-----	FT
10	32335-898-690	PACKING, RECEPTACLE	-	-	-	-	1	-----	FT
11	32335-Z22-F90	PACKING	-	-	-	-	1	-----	FT
12	32345-Z30-D50ZA	PANEL COMP., CONTROL(CL-F) *NH105*...MAT BLACK (#15-#20)	-	-	-	-	1	-----	FT
13	32366-Z30-D50	MARK, PANEL(CL-F)	-	-	-	-	1	-----	FT
14	32902-892-003	BAND	-	-	-	-	1	-----	FT
15	35120-Z30-801	SWITCH ASSY., ENGINE STOP	-	-	-	-	1	-----	FT
16	38220-Z30-R61	BREAKER, CIRCUIT(24A)	-	-	-	-	1	-----	FT
17	38240-Z23-F90	PROTECTOR, CIRCUIT(16A)	-	-	-	-	2	-----	FT
18	38242-Z25-A62	COVER COMP., CIRCUIT PROTECTOR	-	-	-	-	2	-----	FT
19	90111-Z22-A60	BOLT, HEX., 6X22	-	-	-	-	1	-----	FT
20	90112-Z22-000	NUT, HEX., 6MM	-	-	-	-	2	-----	FT
21	93500-03005-1A	SCREW, PAN, 3X5	-	-	-	-	2	-----	FT
22	93600-04016-1G	SCREW, FLAT, 4X16	-	-	-	-	4	-----	FT
23	93600-05016-0G	SCREW, FLAT, 5X16	-	-	-	-	4	-----	FT

F-2-10

CONTROL PANEL(9)

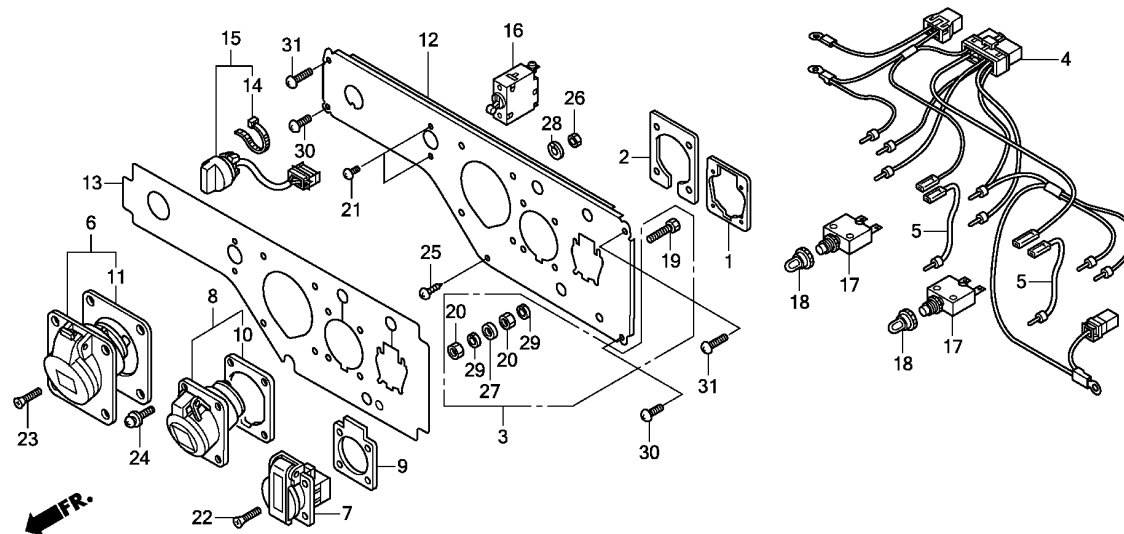


Z303F0210A

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
24	93893-05016-17	SCREW-WASHER, 5X16	-	-	-	-	4	-----	FT
25	93913-15280	SCREW, TAPPING, 5X12(P0)	-	-	-	-	1	-----	FT
26	94001-05000	NUT, HEX., 5MM	-	-	-	-	4	-----	FT
27	94101-06000	WASHER, PLAIN, 6MM	-	-	-	-	1	-----	FT
28	94111-05800	WASHER, SPRING, 5MM	-	-	-	-	4	-----	FT
29	94111-06000	WASHER, SPRING, 6MM	-	-	-	-	2	-----	FT
30	90101-Z15-000	SCREW, TRUSS, 6X18	-	-	-	-	2	-----	FT
31	90101-Z30-000	SCREW, TRUSS, 6X30	-	-	-	-	2	-----	FT

F-2-11

CONTROL PANEL(10)

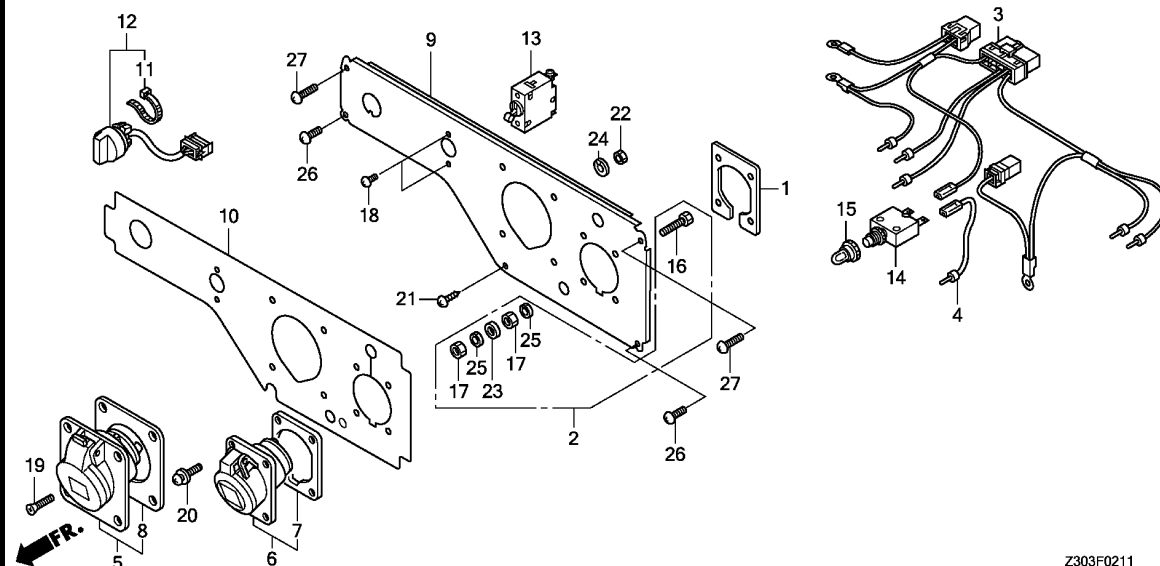


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	6111B9	HARNESS, CONTROL WIRE	0.9
5	6221D5	(6) RECEPTACLE/CONSENT, CONTROL PANEL	0.7
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8
9	6221N9	PANEL, GENERATOR CONTROL	1.1
12	6151D9	SWITCH, ENGINE STOP	0.6
13	6131C4	BREAKER, CIRCUIT	0.7
14	6221D4	PROTECTOR, CIRCUIT	0.6

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31426-Z22-000	PLATE SET, CONSENT	-	-	-	-	1	-----	----- ITT
2	31428-Z22-A60	TERMINAL SET, EARTH	-	-	-	-	1	-----	----- ITT
3	32150-Z30-S20	HARNESS ASSY., CONTROL WIRE (CL-IT)	-	-	-	-	1	-----	----- ITT
4	32221-Z28-R20	CORD, TERMINAL	-	-	-	-	1	-----	----- ITT
5	32330-Z22-A90	RECEPTACLE(32A/250V)(KEDU) ..	-	-	-	-	1	-----	----- ITT
6	32331-ZB3-G90	RECEPTACLE(16A/240V)	-	-	-	-	1	-----	----- ITT
7	32335-898-690	PACKING, RECEPTACLE	-	-	-	-	1	-----	----- ITT
8	32335-Z22-F90	PACKING	-	-	-	-	1	-----	----- ITT
9	32345-Z30-S20ZA	PANEL COMP., CONTROL(CL-IT) *NH105*...MAT BLACK (#15-#20)	-	-	-	-	1	-----	----- ITT
10	32366-Z30-S20	MARK, PANEL(CL-IT)	-	-	-	-	1	-----	----- ITT
11	32902-892-003	BAND	-	-	-	-	1	-----	----- ITT
12	35120-Z30-801	SWITCH ASSY., ENGINE STOP ...	-	-	-	-	1	-----	----- ITT
13	38220-Z30-R61	BREAKER, CIRCUIT(24A)	-	-	-	-	1	-----	----- ITT
14	38240-Z23-F90	PROTECTOR, CIRCUIT(16A)	-	-	-	-	1	-----	----- ITT
15	38242-Z25-A62	COVER COMP., CIRCUIT PROTECTOR	-	-	-	-	1	-----	----- ITT
16	90111-Z22-A60	BOLT, HEX., 6X22	-	-	-	-	1	-----	----- ITT
17	90112-Z22-000	NUT, HEX., 6MM	-	-	-	-	2	-----	----- ITT
18	93500-03005-1A	SCREW, PAN, 3X5	-	-	-	-	2	-----	----- ITT
19	93600-05016-0G	SCREW, FLAT, 5X16	-	-	-	-	4	-----	----- ITT
20	93893-05016-17	SCREW-WASHER, 5X16	-	-	-	-	4	-----	----- ITT
21	93913-15280	SCREW, TAPPING, 5X12(P0)	-	-	-	-	1	-----	----- ITT
22	94001-05000	NUT, HEX., 5MM	-	-	-	-	4	-----	----- ITT
23	94101-06000	WASHER, PLAIN, 6MM	-	-	-	-	1	-----	----- ITT

F-2-11


CONTROL PANEL(10)

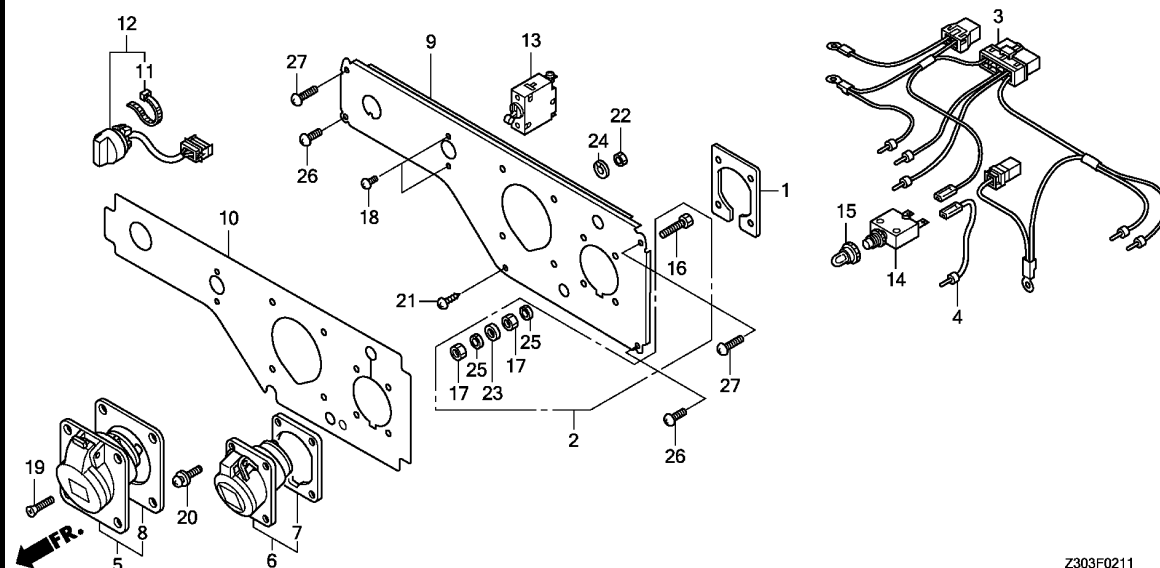

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
24	94111-05800	WASHER, SPRING, 5MM	-	-	-	-	4	-----	ITT
25	94111-06000	WASHER, SPRING, 6MM	-	-	-	-	2	-----	ITT
26	90101-Z15-000	SCREW, TRUSS, 6X18	-	-	-	-	2	-----	ITT
27	90101-Z30-000	SCREW, TRUSS, 6X30	-	-	-	-	2	-----	ITT

F-2-20

A.V.R. UNIT

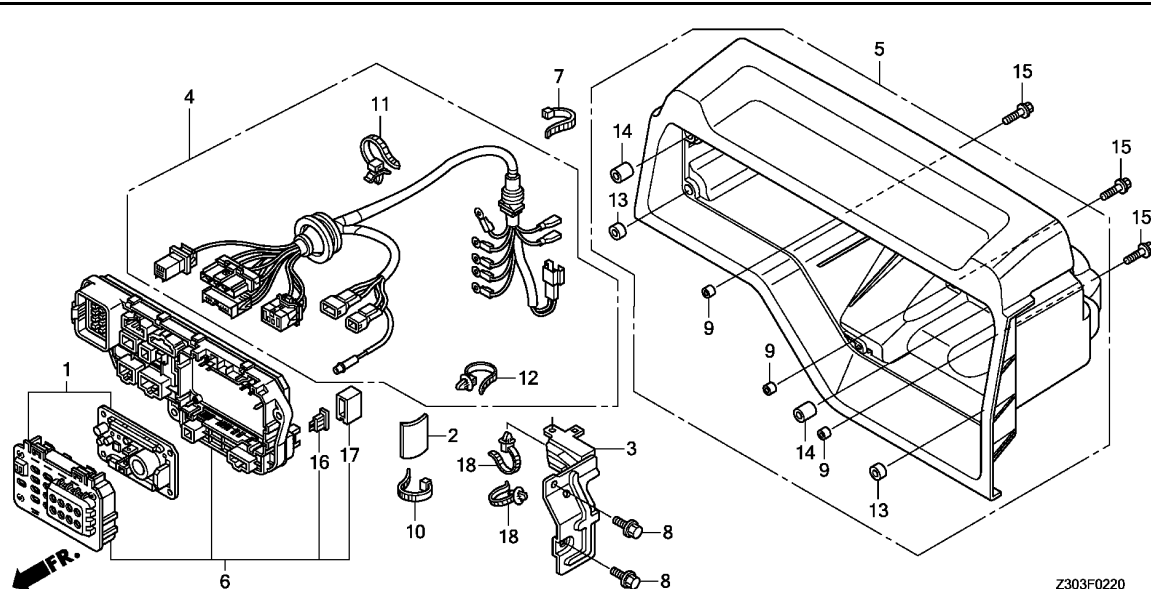

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6201F9	COVER, AUTOMATIC VOLTAGE REGULATOR	0.9
4	6201B8	HARNESS, GENERATOR WIRE	0.6
5	4131M5	CASE, CONTROL	0.6
6	8121D7	BOX, JUNCTION	0.9
16	8121A7	FUSE, BLADE	0.1

Z303F0220

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31720-Z30-D40	COVER ASSY., AUTOMATIC VOLTAGE REGULATOR	1	1	1	1	-	-----	LBH,LD1H,LDH,LT1H,LTH,UH
	31720-Z30-D60		-	1	-	1	-	-----	KH,MH,REH,RH,S1H,SH,SK1H,SKH
	31720-Z30-R70		-	-	1	-	-	-----	RGH
	31720-Z30-C50		-	-	-	-	1	-----	
2	32106-Z30-000	SHEET, HARNESS	-	-	1	1	-	-----	
3	32108-Z30-D60	BASE COMP., HARNESS CLIP	1	1	-	-	-	-----	
	32108-Z30-B60	BASE, HARNESS CLIP	-	-	1	1	-	-----	1031380 KH,MH,RGH,RH,UH
	32108-Z30-D60	BASE COMP., HARNESS CLIP	-	-	-	1	-	-----	1031381 KH,MH,RGH,RH,UH
	32108-Z30-B60	BASE, HARNESS CLIP	-	-	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH,S1H,SH,SK1H,SKH
	32108-Z30-S30		-	-	-	-	1	-----	REH
4	32158-Z30-D60	HARNESS ASSY., GENERATOR WIRE	1	1	-	-	-	-----	KH,MH,REH,RH,S1H,SH,SK1H,SKH,UH
	32158-Z30-D40		-	1	-	-	-	-----	LD1H,LDH,LT1H,LTH
	32158-Z30-B60		-	-	1	1	-	-----	KH,MH,REH,RGH,RH,S1H,SH,SK1H,SKH,UH
	32158-Z30-B40		-	-	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
	32158-Z30-S30		-	-	-	-	1	-----	BT
	32158-Z30-C50		-	-	-	-	1	-----	CLT,FT,GT,GWT,GWT1,ITT
5	32356-Z30-000ZA	CASE, CONTROL PANEL							
	NH314.....	CONDUCT GRAY	1	1	1	1	1		
6	32370-Z30-D61	BOX ASSY., JUNCTION	1	1	1	1	1	-----	CLT,FT,GT,GWT,GWT1,ITT,KH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	32370-Z30-S31		-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
	32370-Z30-D62		-	1	-	1	-	-----	REH
	32370-Z30-C91	BOX ASSY., JUNCTION(B)	-	-	-	-	1	-----	BT
7	32903-Z22-000	TIE, CABLE(C)	1	1	1	1	1		
8	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	2	2	2	2	2		
9	90312-GFM-970	COLLAR, BODY COVER	3	3	3	3	3		
10	90650-KV6-003	BAND, WIRE, 95MM	-	-	1	1	-		


A.V.R. UNIT



3

F-14

AIR CLEANER

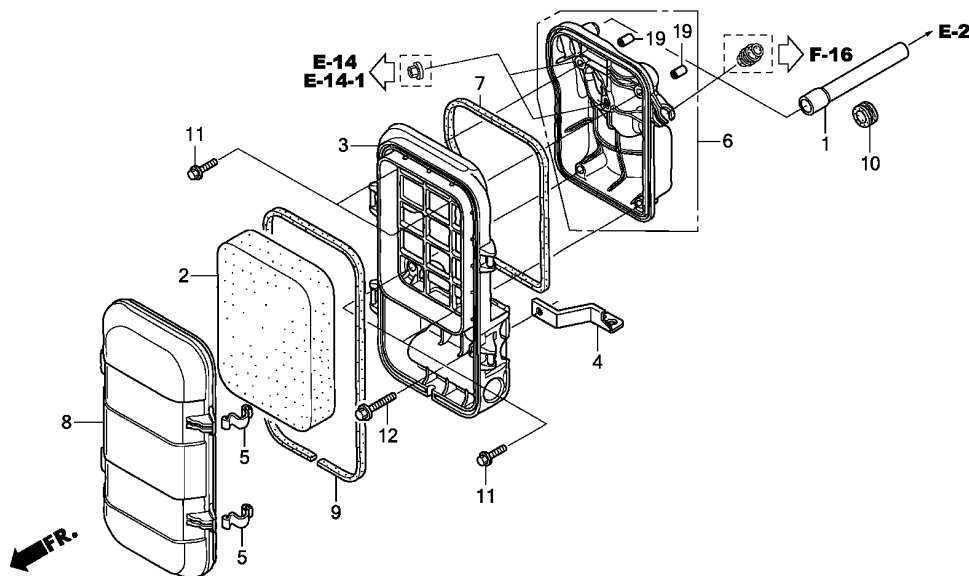


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K5	TUBE, BREATHER	0.2
2	3121B8	ELEMENT, AIR CLEANER	0.1
		.INCLUDES: Air cleaner element -inspection	
3	3121A5	CASE, AIR CLEANER	0.2
6	3121Q0	BASE, AIR CLEANER	0.2
7	3121E8	SEAL, AIR CLEANER CASE	0.2
9	3121E9	SEAL, AIR CLEANER COVER	0.1

Z303F1400B

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	15721-Z23-H60	TUBE, BREATHER	1	1	1	1	1		
2	17211-899-000	ELEMENT, AIR CLEANER	1	1	1	1	1		
3	17220-Z23-H60	CASE COMP., AIR CLEANER	1	1	1	1	-		
	17220-Z30-000		-	-	-	-	1		
4	17222-Z23-H60	STAY, AIR CLEANER	1	1	1	1	1		
5	17223-Z23-000	SPRING, AIR CLEANER CASE LID	2	2	2	2	2		
6	17223-Z23-H60	BASE COMP., AIR CLEANER	1	1	1	1	1	-----	BT,CLT,FT,GT,GWT,GWT1,ITT,KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH
	17223-Z23-H61		-	1	-	1	-	-----	REH
7	17229-Z23-H60	SEAL, AIR CLEANER CASE	1	1	1	1	1		
8	17231-Z23-H60	COVER, AIR CLEANER	1	1	1	1	1		
9	17233-Z23-H60	SEAL, AIR CLEANER COVER	1	1	1	1	1		
10	88911-MJ3-000	GROMMET, FENDER	1	1	1	1	-		
11	90005-ZM3-000	BOLT, FLANGE, 5X18	4	4	4	4	4		
12	95701-06032-08	BOLT, FLANGE, 6X32	1	1	1	1	1		
19	17238-ZG9-M00	COLLAR, AIR CLEANER	2	2	2	2	2		

F-15

MUFFLER(1)

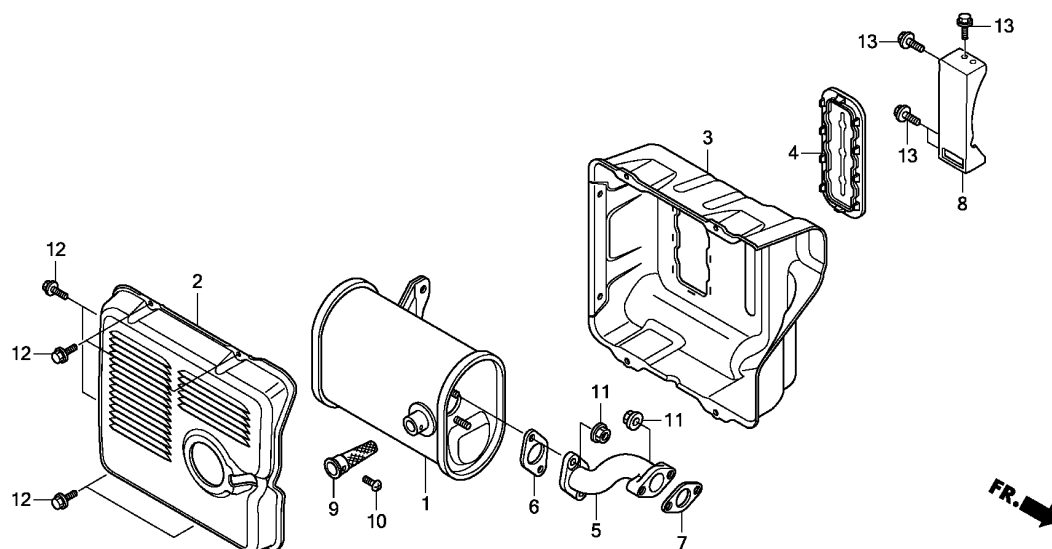


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.2
2	3131D9	PROTECTOR, EXHAUST MUFFLER :OUTER	0.1
3	3131D8	PROTECTOR, EXHAUST MUFFLER :INNER	0.3
4	3131G6	SEAL, MUFFLER PROTECTOR	0.3
5	3131C9	PIPE, EXHAUST	0.3
6	3131B5	GASKET, EXHAUST PIPE	0.2
7	3131H9	GASKET, EXHAUST PIPE(A)	0.3
9	3131A1	ARRESTER, SPARK	0.1
.INCLUDES: Spark arrester check			

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	18310-Z30-D61	MUFFLER COMP.	1	1	1	1	-	-----	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH
	18310-Z30-D62		-	1	-	1	-	-----	REH
2	18320-Z22-000ZA	PROTECTOR COMP., MUFFLER OUTER *NH105*...MAT BLACK (#15-#20)	1	1	1	1	-		
3	18326-Z30-D60ZA	PROTECTOR, MUFFLER INNER *NH105*...MAT BLACK (#15-#20)	1	1	1	1	-		
4	18329-Z22-000	SEAL, MUFFLER PROTECTOR	1	1	1	1	-		
5	18331-Z22-000	PIPE, EX.	1	1	1	1	-		
6	18333-ZB4-801	GASKET, EX. PIPE	1	1	1	1	-		
7	18333-ZE3-801	GASKET, EX. PIPE	1	1	1	1	-		
8	18338-Z30-D60	STAY COMP., MUFFLER	1	1	1	1	-		
9	18355-Z22-E30	ARRESTER, SPARK	1	-	1	-	-	-----	UH
10	90002-ZE2-U91	SCREW, TAPPING, 4X8	1	-	1	-	-	-----	UH
11	94050-08000	NUT, FLANGE, 8MM	4	4	4	4	-		
12	95701-06010-07	BOLT, FLANGE, 6X10	6	6	6	6	-		
13	95701-08016-00	BOLT, FLANGE, 8X16	4	4	4	4	-		

F-15-1

MUFFLER(2)

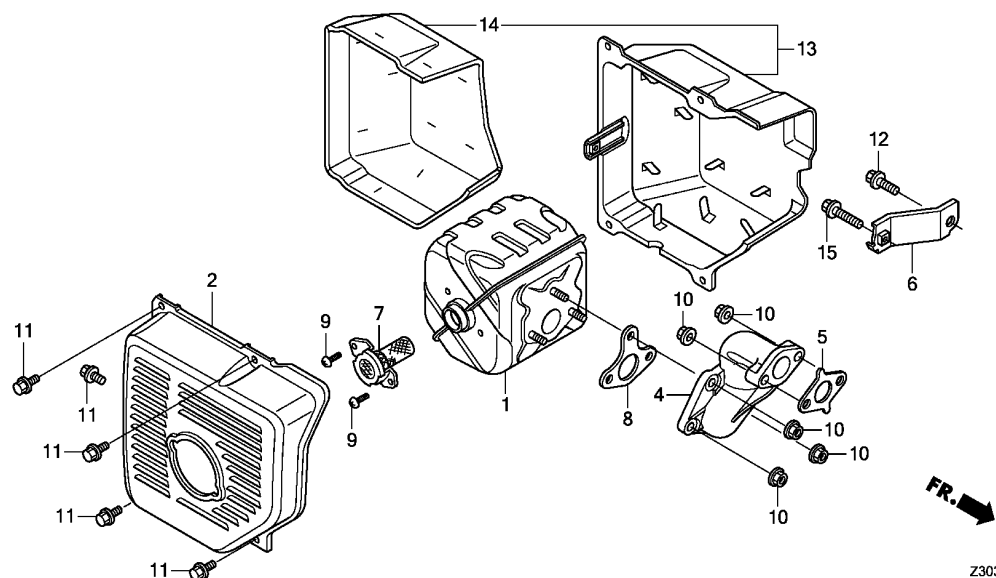


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.2
2	3131D9	PROTECTOR, EXHAUST MUFFLER :OUTER	0.1
4	3131C9	PIPE, EXHAUST	0.2
5	3131H9	GASKET, EXHAUST PIPE(A)	0.2
7	3131A1	ARRESTER, SPARK	0.1
		.INCLUDES: Spark arrester check	
8	3131B5	GASKET, EXHAUST PIPE	0.2
13	3131D8	PROTECTOR, EXHAUST MUFFLER :INNER	0.1

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	18310-Z1C-E20	MUFFLER COMP.	-	-	-	-	1		
2	18320-Z30-S30ZA	PROTECTOR COMP., MUFFLER OUTER *NH105*...MAT BLACK (#15-#20)	-	-	-	-	1		
4	18331-Z30-000	PIPE, EX.	-	-	-	-	1		
5	18333-ZF6-W01	GASKET, EX. PIPE	-	-	-	-	1		
6	18338-Z30-000	STAY, MUFFLER	-	-	-	-	1		
7	18350-Z5T-800	ARRESTER COMP., SPARK	-	-	-	-	1		
8	18381-ZE2-801	GASKET, MUFFLER (NIPPON LEAKLESS)	-	-	-	-	1		
9	90050-ZE1-000	SCREW, TAPPING, 5X8	-	-	-	-	2		
10	94050-08000	NUT, FLANGE, 8MM	-	-	-	-	5		
11	95701-06010-07	BOLT, FLANGE, 6X10	-	-	-	-	5		
12	95701-08016-00	BOLT, FLANGE, 8X16	-	-	-	-	1		
13	18324-Z30-C90ZA	PROTECTOR ASSY., MUFFLER INNER *NH105*...MAT BLACK (#15-#20)	-	-	-	-	1		
14	18376-Z30-C90	INSULATOR, MUFFLER PROTECTOR	-	-	-	-	1		
15	95701-08022-00	BOLT, FLANGE, 8X22	-	-	-	-	1		

F-16

FUEL TANK

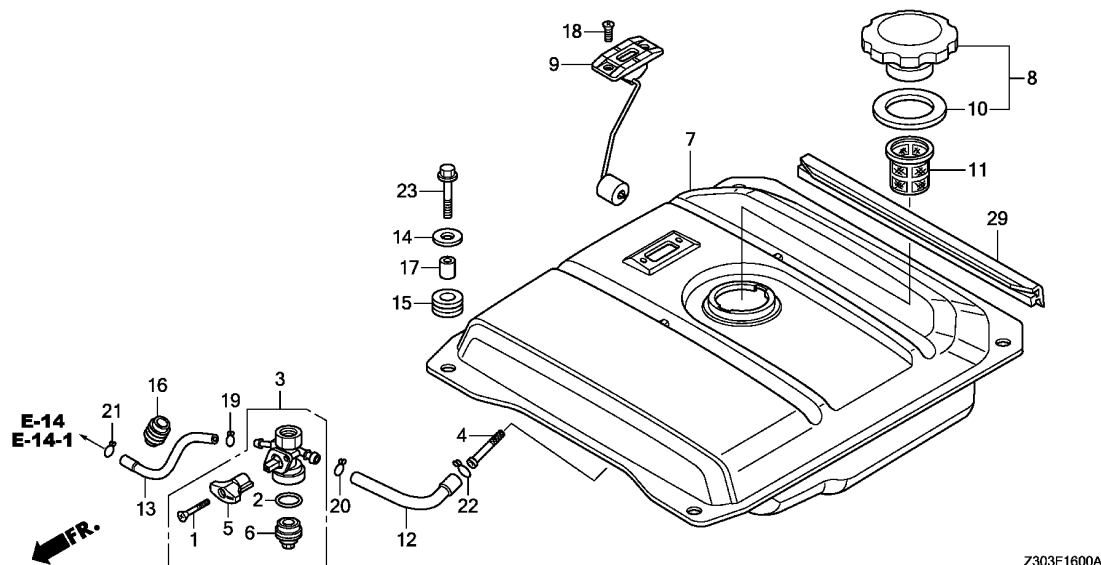


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	3101A3	COCK, FUEL	0.2
4	3101H8	STRAINER, FUEL	0.6
6	3101F4	CUP, FUEL STRAINER	0.1
7	3101H7	TANK, FUEL	0.8
8	3101M7	CAP, FUEL FILLER	0.1
9	6171A1	METER/GAUGE UNIT, FUEL	0.1
11	3101A6	FILTER, FUEL	0.1
12	3101F1	TUBE, FUEL TANK	0.6
13	3101F6	TUBE, FUEL	0.2

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	16080-Z30-003	SCREW, OVAL	1	1	1	1	1		
2	16173-001-004	PACKING, FUEL STRAINER CUP ..	1	1	1	1	1		
3	16950-Z30-003	COCK ASSY., FUEL	1	1	1	1	1		
4	16952-ZA0-000	STRAINER, FUEL	1	1	1	1	1		
5	16963-Z30-003	LEVER, COCK	1	1	1	1	1		
6	16967-GA6-671	CUP, FUEL STRAINER	1	1	1	1	1		
7	17510-Z30-000ZA	TANK COMP., FUEL	1	1	1	1	1		
8	17620-Z22-000	CAP COMP., FUEL FILLER	1	1	1	1	1		
9	17630-Z30-000	METER ASSY., FUEL	1	1	-	-	-	1002205	KH,LDH,LTH,MH,RH,SH,SKH,UH
	17630-Z30-010		1	1	-	-	-	1002206	KH,LDH,LTH,MH,RH,SH,SKH,UH
	17630-Z30-000		-	-	1	1	1	1003661	BT,CLT,FT,GT,GWT,GWT1,ITT,LBH,LD1H,LT1H,REH,S1H,SK1H
	17630-Z30-010		-	-	1	1	-	1003662	KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
10	17631-899-000	PACKING, FUEL FILLER CAP	1	1	1	1	1		
11	17670-ZT5-640	FILTER COMP., FUEL	1	1	1	1	1		
12	17701-Z30-D60	TUBE, FUEL TANK	1	1	1	1	1		
13	17702-Z30-D60	TUBE, FUEL	1	1	1	1	1		
14	90501-Z15-000	WASHER, 6MM	4	4	4	4	4		
15	90851-898-000	RUBBER, TANK CUSHION	4	4	4	4	4		
16	90854-ZB3-000	RUBBER, FUEL(9X15X20)	1	1	1	1	1		
17	91551-898-000	COLLAR, TANK CUSHION	4	4	4	4	4		
18	93600-05010-0A	SCREW, FLAT, 5X10	2	2	2	2	2		
19	95002-02080	CLIP, TUBE(B8)	1	1	1	1	1		
20	95002-02100	CLIP, TUBE(B10)	1	1	1	1	1		

F-16


FUEL TANK

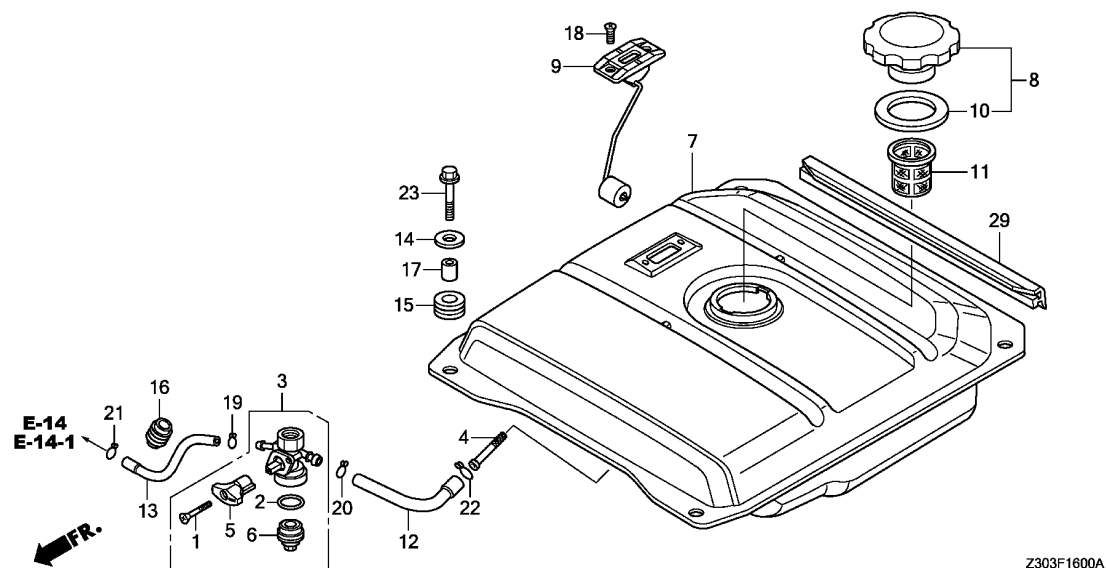

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
21	95002-50000	CLIP, TUBE(C9)	1	1	1	1	1		
22	95002-80000	CLIP, TUBE(C12)	1	1	1	1	1		
23	95701-06022-07	BOLT, FLANGE, 6X22	4	4	4	4	4		
29	17537-230-C90	SEAL, FUEL TANK	-	-	-	-	1		

F-25

FRAME

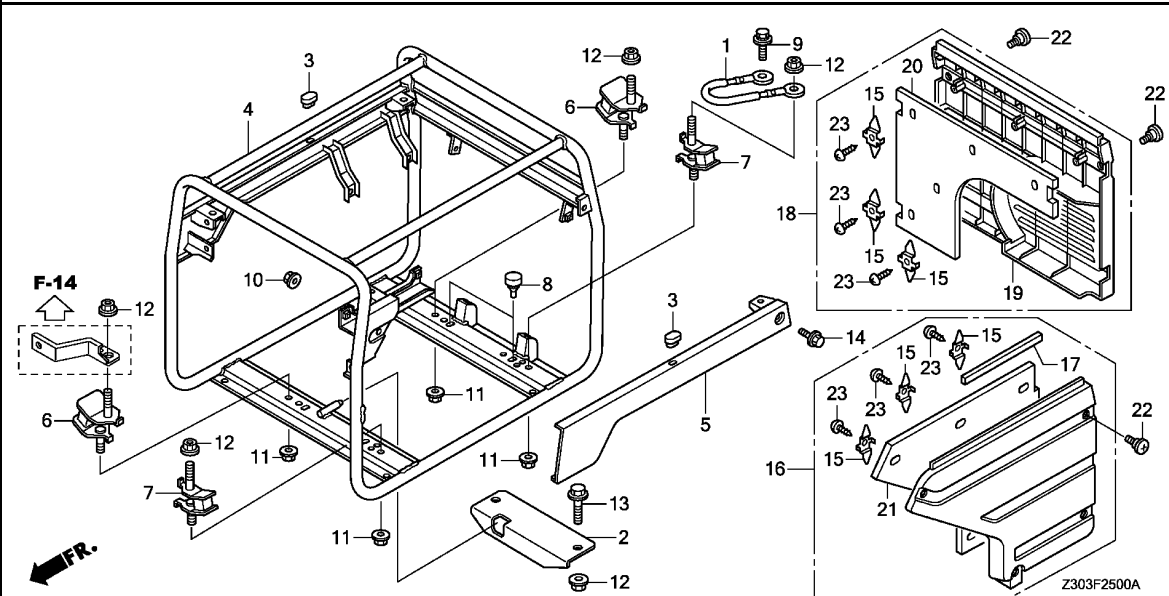


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
4	4101H6	FRAME, MAININCLUDES: Engine removal and installation	1.3
	4101H6A	.With starter motor add	0.1
5	4101J5	FRAME, SIDE :LEFT	0.1
6	4101V1	RUBBER, BOTTOM :RIGHT FRONT .. .INCLUDES: Engine removal and installation	1.2
	4101V4	RUBBER, BOTTOM :RIGHT REARINCLUDES: Engine removal and installation	1.2
	4101EE	RUBBER, BOTTOM :FOR 1 PRODUCT .INCLUDES: Engine removal and installation	1.3
7	4101V0	RUBBER, BOTTOM :LEFT FRONTINCLUDES: Engine removal and installation	1.2
	4101V3	RUBBER, BOTTOM :LEFT REARINCLUDES: Engine removal and installation	1.2
	4101EE	RUBBER, BOTTOM :FOR 1 PRODUCT .INCLUDES: Engine removal and installation	1.3
16	4141R0	PANEL, GENERATOR :LEFT	0.1
18	4141Q8	PANEL, GENERATOR :REAR	0.1

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	32610-ZD1-A40	CABLE COMP., SUB EARTH	1	-	1	-	-	----- UH	
	32610-899-000	CABLE, EARTH	-	-	-	-	1		
2	50138-Z18-000	BRACKET, STOPPER	1	1	1	1	1		
3	50153-ZR6-000	RUBBER, FUEL TANK MOUNTING ..	2	2	2	2	2		
4	50310-Z30-D60ZA	FRAME COMP.(CX)							
	NH105...MAT BLACK (#15-#20)		1	1	-	-	-		
	50310-Z30-B60ZA	FRAME COMP.(CXS)							
	NH105...MAT BLACK (#15-#20)		-	-	1	1	-		
	50310-Z30-C90ZA	FRAME COMP.(CL)							
	NH105...MAT BLACK (#15-#20)		-	-	-	-	1		
5	50315-Z30-000ZA	FRAME COMP., R. SIDE							
	NH105...MAT BLACK (#15-#20)		1	1	1	1	-		
	50315-Z30-C90ZA	*NH105*...MAT BLACK (#15-#20)	-	-	-	-	1		
6	68325-Z22-E30	RUBBER, BOTTOM	2	2	2	2	2		
7	68325-Z23-E30	RUBBER, BOTTOM	2	2	2	2	2		
8	68331-Z18-000	RUBBER, BUMP STOPPER	2	2	2	2	2		
9	90148-SE0-003	BOLT, EARTH, 6X16							
	(WASHER 12.5MM)(ZN)		1	-	1	-	1	----- BT,CLT,FT,GT,GWT,GWT1,ITT,UH	
10	94050-06000	NUT, FLANGE, 6MM	1	1	1	1	1		
11	94050-08000	NUT, FLANGE, 8MM	4	4	4	4	4		
12	94050-10000	NUT, FLANGE, 10MM	6	6	6	6	6		
13	95701-10040-00	BOLT, FLANGE, 10X40	2	2	2	2	2		
14	95701-06012-07	BOLT, FLANGE, 6X12	1	1	1	1	1		
15	19656-Z25-R50	CLIP, INSULATOR	-	-	-	-	12		
16	63250-Z30-C90ZA	PANEL ASSY., R. SIDE							
	NH314.....CONDUCT GRAY		-	-	-	-	1		

F-25


FRAME

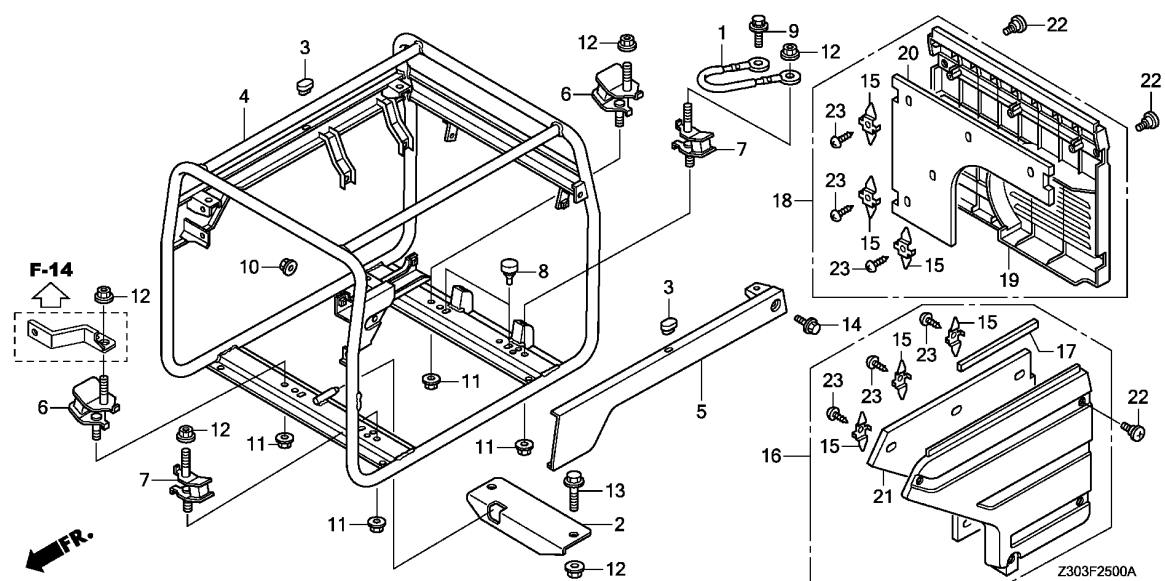

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
17	63253-Z30-C90	SEAL (10X6X200)	-	-	-	-	1		
18	63360-Z30-C90ZA	PANEL ASSY., RR. *NH314*.....CONDUCT GRAY	-	-	-	-	1		
19	63361-Z30-C90ZA	PANEL, RR. *NH314*.....CONDUCT GRAY	-	-	-	-	1		
20	64411-Z30-C90	INSULATOR, RR. PANEL	-	-	-	-	1		
21	64641-Z30-C90	INSULATOR, R. SIDE PANEL	-	-	-	-	1		
22	90123-MC7-000	SCREW, METER VISOR SETTING ..	-	-	-	-	8		
23	93913-25110	SCREW, TAPPING, 5X10(P0)	-	-	-	-	12		

F-25-10

BATTERY TRAY

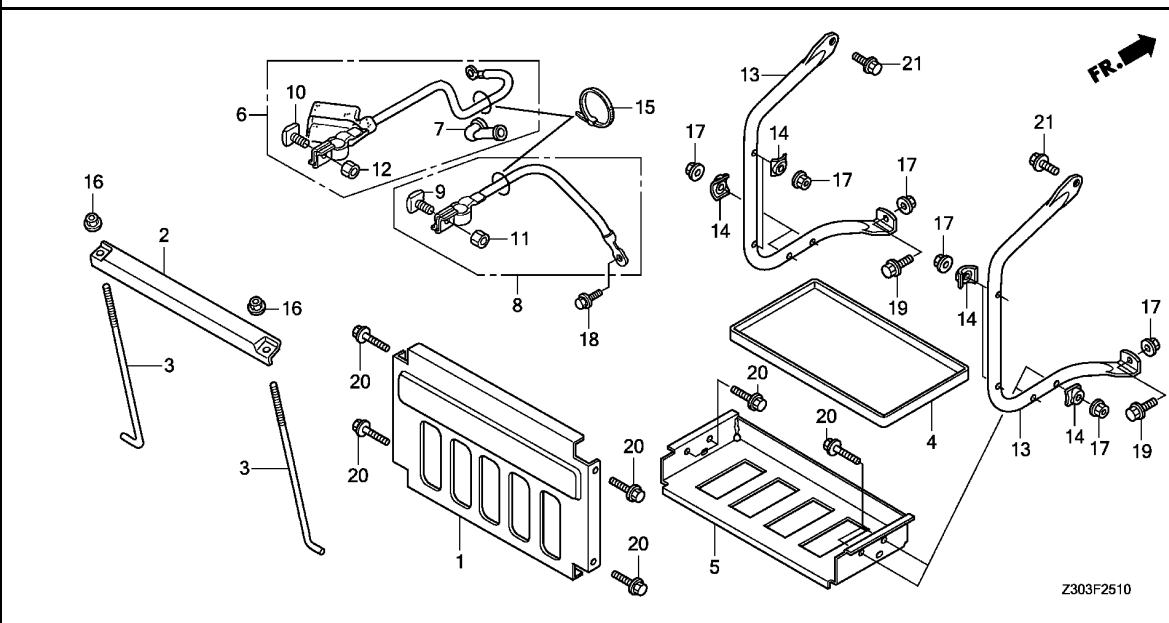


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
4	4101T4	TRAY, BATTERY	0.1
5	4101X8	BASE, BATTERY TRAY	0.1
6	610115	CABLE, BATTERY STARTER	0.1
8	6111A4	CABLE, EARTH	0.1
13	6101C0	GUARD, BATTERY :RIGHT	0.3
	6101C1	GUARD, BATTERY :LEFT	0.3

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31511-Z30-B60ZA	PLATE, BATTERY GUARD *NH105*...MAT BLACK (#15-#20)	-	-	1	1	-		
2	31512-Z18-W60	PLATE, BATTERY SETTING	-	-	1	1	-		
3	31514-ZR8-T70	BOLT, BATTERY SETTING	-	-	2	2	-		
4	31521-SD9-000	BOX ASSY., BATTERY	-	-	1	1	-		
5	31528-Z18-W60ZB	BASE, BATTERY TRAY *NH105*...MAT BLACK (#15-#20)	-	-	1	1	-		
6	32410-Z22-A31	CABLE ASSY., STARTING	-	-	1	1	-		
7	32411-Z18-W60	COVER, STARTING MOTOR TERMINAL	-	-	1	1	-		
8	32600-Z18-W60	CABLE ASSY., EARTH	-	-	1	1	-		
9	32601-SK7-900	BOLT, BATTERY TERMINAL	-	-	1	1	-		
10	32601-Z22-000	BOLT, BATTERY TERMINAL	-	-	1	1	-		
11	32602-SK7-900	NUT, BATTERY TERMINAL	-	-	1	1	-		
12	32602-Z22-000	NUT, BATTERY TERMINAL	-	-	1	1	-		
13	50365-Z18-W60ZB	GUARD, BATTERY *NH105*...MAT BLACK (#15-#20)	-	-	2	2	-		
14	90501-Z18-W60	WASHER, FRAME JOINT	-	-	8	8	-		
15	90650-KV6-003	BAND, WIRE, 95MM	-	-	2	2	-		
16	94050-06000	NUT, FLANGE, 6MM	-	-	2	2	-		
17	94050-06070	NUT, FLANGE, 6MM	-	-	10	10	-		
18	95701-06012-00	BOLT, FLANGE, 6X12	-	-	1	1	-		
19	95701-06012-07	BOLT, FLANGE, 6X12	-	-	2	2	-		
20	95701-06030-07	BOLT, FLANGE, 6X30	-	-	8	8	-		
21	95701-08012-07	BOLT, FLANGE, 8X12	-	-	2	2	-		

F-29

ROTOR/STATOR

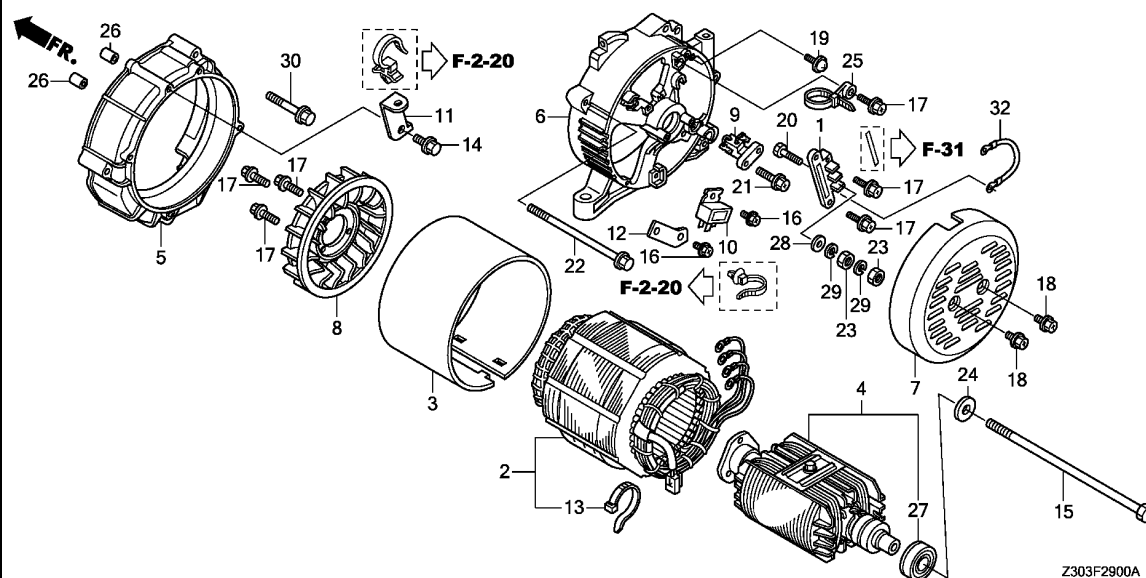

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6201B2	TERMINAL, VOLT CHANGE	0.3
2	6201B9	STATOR, GENERATOR	1.5
		.INCLUDES: Engine removal and installation	
4	6201A9	ROTOR, GENERATOR	1.6
		.INCLUDES: Engine removal and installation	
5	6201B5	HOUSING, GENERATOR :FRONT	1.5
		.INCLUDES: Engine removal and installation	
6	6201B6	HOUSING, GENERATOR :REAR	1.4
		.INCLUDES: Engine removal and installation	
7	6201C7	COVER, GENERATOR END	0.1
8	6201B7	FAN, GENERATOR COOLING	1.5
		.INCLUDES: Engine removal and installation	
9	6171B8	BRUSH, GENERATOR	0.2
10	6201A0	DIODE, DIRECT CURRENT	0.2
27	6201A7	BEARING, GENERATOR ROTOR	1.5
		.INCLUDES: Engine removal and installation	

Z303F2900A

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31118-Z22-000	TERMINAL, VOLT CHANGE	1	1	1	1	1		
2	31120-Z30-A80	STATOR ASSY.(EG-U)	1	-	1	-	-	UH	
	31120-Z30-B60	STATOR ASSY.(EG-R)	-	1	-	1	-	KH,MH,REH,RH	
	31120-Z30-B40	STATOR ASSY.(EG-LD)	-	1	-	1	-	LBH,LD1H,LDH,LT1H,LTH	
	31120-Z30-A70	STATOR ASSY.(EG-S)	-	1	-	1	-	S1H,SH,SK1H,SKH	
	31120-Z30-R70	STATOR ASSY.(EG-RG)	-	-	1	-	-	RGH	
	31120-Z30-C90	STATOR ASSY.(EG-B)	-	-	-	-	1	BT	
	31120-Z30-C50	STATOR ASSY.(EG-G)	-	-	-	-	1	CLT,FT,GT,GWT,GWT1,ITT	
3	31127-Z17-000ZB	COVER, STATOR							
	NH105...MAT BLACK (#15-#20)		1	1	1	1	1		
4	31130-Z30-000	ROTOR COMP.	1	1	1	1	1		
5	31161-Z30-000	HOUSING, FR.	1	1	1	1	1		
6	31171-Z22-000	HOUSING, RR.	1	1	1	1	1		
7	31186-Z22-000ZA	COVER, GENERATOR END							
	NH105...MAT BLACK (#15-#20)		1	1	1	1	-		
	31186-Z30-C90ZA	*NH105*...MAT BLACK (#15-#20)	-	-	-	-	1		
8	31190-Z30-000	FAN COMP., GENERATOR COOLING	1	1	1	1	1		
9	31295-Z30-000	BRUSH ASSY.	1	1	1	1	1		
10	31720-ZA8-013	DIODE COMP., D.C.	1	1	1	1	-	KH,LBH,LD1H,LDH,LT1H,LTH,MH,RGH,RH,S1H,SH,SK1H,SKH,UH	
	31720-ZA8-V00		-	1	-	1	-	REH	
11	32103-Z30-000	BRACKET, WIRE HARNESS CLIP ..	1	1	1	1	1		
12	32104-Z30-000	BRACKET, RR. HOUSING	1	1	1	1	-		
13	32903-ZC8-N01	TIE, CABLE(C)	1	1	1	1	1		
14	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	1	1	1	1	1		
15	90021-ZC2-000	BOLT, HEX., 10X250	1	1	1	1	1		
16	90031-875-000	SCREW, TAPPING, 5X12	2	2	2	2	-		


F-29

ROTOR/STATOR

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
17	90032-875-000	SCREW, TAPPING, 5X14	6	6	6	6	6		
18	90101-Z18-000	SCREW, TAPPING, 5X12	2	2	2	2	2		
19	90102-Z21-000	SCREW, PAN, 5X12	1	1	1	1	1		
20	90102-Z22-000	BOLT, HEX., 5X20	2	2	2	-	-	-----	KH,MH,REH,RGH,RH,S1H,SH,SK1H,SKH,UH
			-	4	-	-	-	-----	LD1H,LDH,LT1H,LTH
			-	-	-	4	4	-----	BT,LBH,LD1H,LDH,LT1H,LTH
			-	-	-	2	-	-----	KH,MH,REH,RH,S1H,SH,SK1H,SKH
			-	-	-	-	2	-----	CLT,FT,GT,GWT,GWT1,ITT
21	90131-Z30-000	SCREW, TAPPING, 5X18	1	1	1	1	1		
22	90157-ZR7-T62	BOLT, FLANGE, 6X160	4	4	4	4	4		
23	90301-Z22-000	NUT, HEX., 5MM	4	4	4	-	-	-----	KH,MH,REH,RGH,RH,S1H,SH,SK1H,SKH,UH
			-	8	-	-	-	-----	LD1H,LDH,LT1H,LTH
			-	-	-	8	8	-----	BT,LBH,LD1H,LDH,LT1H,LTH
			-	-	-	4	-	-----	KH,MH,REH,RH,S1H,SH,SK1H,SKH
			-	-	-	-	4	-----	CLT,FT,GT,GWT,GWT1,ITT
24	90504-ZA0-000	WASHER, 10.5MM	1	1	1	1	1		
25	90673-Z22-000	TIE, CABLE	1	1	1	1	1		
26	90701-Z7E-000	DOWEL PIN, 8X12	2	2	2	2	2		
27	91051-ZB4-003	BEARING ASSY., 6204	1	1	1	1	1		
28	94101-05800	WASHER, PLAIN, 5MM	2	2	2	-	-	-----	KH,MH,REH,RGH,RH,S1H,SH,SK1H,SKH,UH
			-	4	-	-	-	-----	LD1H,LDH,LT1H,LTH
			-	-	-	4	4	-----	BT,LBH,LD1H,LDH,LT1H,LTH
			-	-	-	2	-	-----	KH,MH,REH,RH,S1H,SH,SK1H,SKH
			-	-	-	-	2	-----	CLT,FT,GT,GWT,GWT1,ITT
29	94111-05800	WASHER, SPRING, 5MM	4	4	4	-	-	-----	KH,MH,REH,RGH,RH,S1H,SH,SK1H,SKH,UH
			-	8	-	-	-	-----	LD1H,LDH,LT1H,LTH
			-	-	-	8	8	-----	BT,LBH,LD1H,LDH,LT1H,LTH
			-	-	-	4	-	-----	KH,MH,REH,RH,S1H,SH,SK1H,SKH
			-	-	-	-	4	-----	CLT,FT,GT,GWT,GWT1,ITT
30	95701-08060-00	BOLT, FLANGE, 8X60	4	4	4	4	4		
32	31161-ZB4-691	CORD, EARTH	-	-	-	-	1	-----	BT

F-31

LABEL

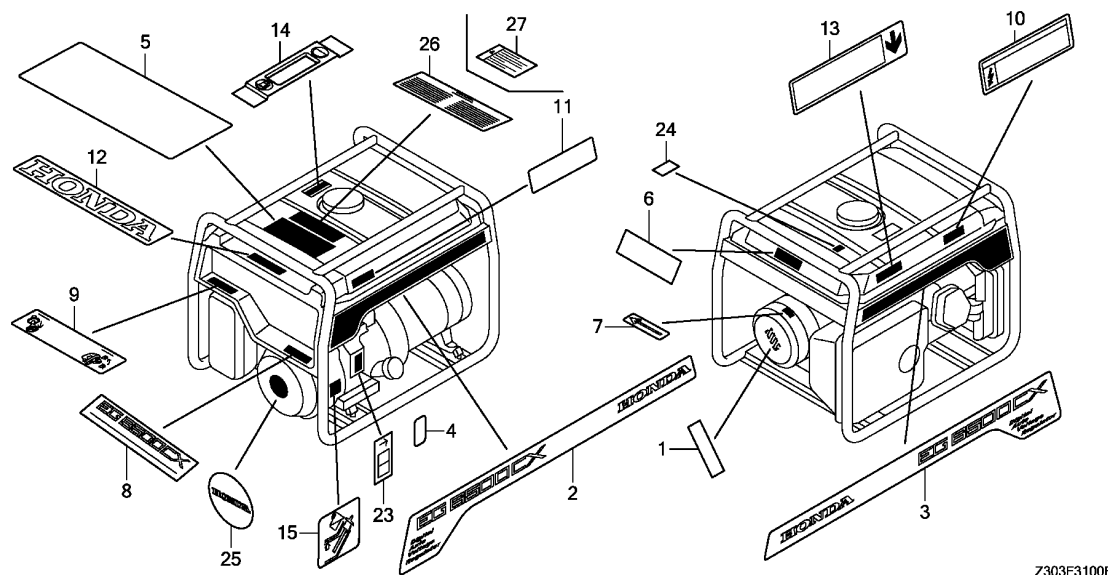

Z303F3100E

Ref. L.O.N. (Relative ref. Number) F.R.T.
No. Description

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	31119-Z18-000	MARK, VOLT	1	1	1	1	1	-----	CLT,FT,GT,GWT,GWT1,ITT,KH,MH,REH,RGH,RH,S1H,SH,SK1H,SKH,UH
	31119-Z18-D20		-	1	-	-	1	-----	BT,LBH,LD1H,LDH,LT1H,LTH
2	87101-Z30-C80	MARK, R. EMBLEM(EG5500CX) ...	1	-	-	-	-	-----	
	87101-Z30-D60	MARK, R. EMBLEM(EG6500CX) ...	-	1	-	-	-	-----	
	87101-Z30-A80	MARK, R. EMBLEM(EG5500CXS) ...	-	-	1	-	-	-----	
	87101-Z30-B60	MARK, R. EMBLEM(EG6500CXS) ..	-	-	-	1	-	-----	
	87101-Z30-C90	MARK, R. EMBLEM(EG5500CL) ...	-	-	-	-	1	-----	
3	87102-Z30-C80	MARK, L. EMBLEM(EG5500CX) ...	1	-	-	-	-	-----	
	87102-Z30-D60	MARK, L. EMBLEM(EG6500CX) ...	-	1	-	-	-	-----	
	87102-Z30-A80	MARK, L. EMBLEM(EG5500CXS) ..	-	-	1	-	-	-----	
	87102-Z30-B60	MARK, L. EMBLEM(EG6500CXS) ..	-	-	-	1	-	-----	
	87102-Z30-C90	MARK, L. EMBLEM(EG5500CL) ...	-	-	-	-	1	-----	
4	87117-ZW5-000	MARK, FUSE(10A)	-	-	1	1	-	-----	
5	87150-Z11-A30	MARK, CAUTION(E)	1	-	1	-	-	-----	UH
	87150-Z11-A70	MARK, CAUTION	-	1	-	1	-	-----	KH,LD1H,LDH,MH,REH,RH,S1H,SH
	87150-Z15-W20	MARK, CAUTION(TAIWAN)	-	1	-	1	-	-----	LT1H,LTH
	87150-Z11-R10	MARK, CAUTION	-	1	-	1	-	-----	SK1H,SKH
	87150-Z26-S70	MARK, CAUTION(RG)	-	-	1	-	-	-----	RGH
	87150-Z25-A61	MARK, CAUTION	-	-	-	1	1	-----	BT,CLT,FT,GT,GWT,GWT1,ITT,LBH
6	87152-Z30-C80	MARK, SPEC(CX-U)	1	-	-	-	-	-----	
	87152-Z30-D81	MARK, SPEC(CX-K)	-	1	-	-	-	-----	KH
	87152-Z30-D40	MARK, SPEC(CX-LD)	-	1	-	-	-	-----	LD1H,LDH
	87152-Z30-D10	MARK, SPEC(CX-LT)	-	1	-	-	-	-----	LT1H,LTH
	87152-Z30-D60	MARK, SPEC(CX-R)	-	1	-	-	-	-----	MH,RH
	87152-Z30-V90	MARK, SPEC(CX-RE)	-	1	-	-	-	-----	REH
	87152-Z30-C70	MARK, SPEC(CX-S)	-	1	-	-	-	-----	S1H,SH
	87152-Z30-S10	MARK, SPEC(CX-SK)	-	1	-	-	-	-----	SK1H,SKH
	87152-Z30-R71	MARK, SPEC(CXS-RG)	-	-	1	-	-	-----	RGH


F-31

LABEL

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
(6)	87152-Z30-A80	MARK, SPEC(CXS-U)	-	-	1	-	-	-----	UH
	87152-Z30-B81	MARK, SPEC(CXS-K)	-	-	-	1	-	-----	KH
	87152-Z30-V10	MARK, SPEC(CXS-LB)	-	-	-	1	-	-----	LBH
	87152-Z30-B40	MARK, SPEC(CXS-LD)	-	-	-	1	-	-----	LD1H,LDH
	87152-Z30-B10	MARK, SPEC(CXS-LT)	-	-	-	1	-	-----	LT1H,LTH
	87152-Z30-B60	MARK, SPEC(CXS-R)	-	-	-	1	-	-----	MH,RH
	87152-Z30-W90	MARK, SPEC(CXS-RE)	-	-	-	1	-	-----	REH
	87152-Z30-A70	MARK, SPEC(CXS-S)	-	-	-	1	-	-----	S1H,SH
	87152-Z30-R10	MARK, SPEC(CXS-SK)	-	-	-	1	-	-----	SK1H,SKH
7	87178-Z30-D80	MARK, DIRECTION	-	1	-	1	-	-----	KH
8	87301-Z30-C80	MARK, FR. EMBLEM(EG5500CX) ..	1	-	-	-	-	-----	
	87301-Z30-D60	MARK, FR. EMBLEM(EG6500CX) ..	-	1	-	-	-	-----	
	87301-Z30-A80	MARK, FR. EMBLEM(EG5500CXS) ..	-	-	1	-	-	-----	
	87301-Z30-B60	MARK, FR. EMBLEM(EG6500CXS) ..	-	-	-	1	-	-----	
	87301-Z30-C90	MARK, FR. EMBLEM(EG5500CL) ..	-	-	-	-	1	-----	
9	87403-Z30-D60	MARK, OPERATION	1	1	1	1	-	-----	KH,LD1H,LDH,MH,REH,RH,S1H,SH,UH
	87403-Z30-D10	MARK, OPERATION(LT)	-	1	-	1	-	-----	LT1H,LTH
	87403-Z30-S10	MARK, OPERATION(SK)	-	1	-	1	-	-----	SK1H,SKH
	87403-Z30-R70	MARK, OPERATION(RG)	-	-	1	1	-	-----	LBH,RGH
	87403-Z30-C90	MARK, OPERATION(B)	-	-	-	-	1	-----	
10	87511-Z30-S10	MARK, CAUTION VOLTAGE	-	1	-	1	-	-----	SK1H,SKH
11	87530-ZR4-H60	LABEL, OIL ALERT	1	1	1	1	-	-----	KH,LD1H,LDH,MH,REH,RH,S1H,SH,UH
	87530-Z15-W20	LABEL, OIL ALERT(LT)	-	1	-	1	-	-----	LT1H,LTH
	87530-Z30-S10	LABEL, OIL ALERT	-	1	-	1	-	-----	SK1H,SKH
	87530-Z15-W70	LABEL, OIL ALERT(RG)	-	-	1	-	-	-----	RGH
	87530-Z15-T10	LABEL, OIL ALERT	-	-	-	1	-	-----	LBH
12	87531-Z30-000	MARK, HONDA	1	1	1	1	1	-----	
13	87539-Z30-C80	MARK, EX. CAUTION	1	-	1	-	-	-----	UH
	87539-Z30-D60		-	1	-	1	-	-----	KH,LD1H,LDH,MH,REH,RH,S1H,SH
	87539-Z30-D10		-	1	-	1	-	-----	LT1H,LTH
	87539-Z30-S10		-	1	-	1	-	-----	SK1H,SKH
	87539-Z30-R70		-	-	1	1	-	-----	LBH,RGH
	87539-Z22-A60		-	-	-	-	1	-----	
14	87565-ZR6-T60	PLATE, FUEL INDICATION	1	1	-	-	-	-----	1002205 KH,LDH,LTH,MH,RH,SH,SKH,UH
	87565-Z22-620	MARK, FUEL INDICATION	1	1	-	-	-	-----	1002206 KH,LDH,LTH,MH,RH,SH,SKH,UH
			-	1	-	1	1	-----	BT,CLT,FT,GT,GWT,GWT1,ITT,LBH,LD1H,LT1H,REH,S1H,SK1H
	87565-ZR6-T60	PLATE, FUEL INDICATION	-	-	1	1	-	-----	1003661 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
	87565-Z22-620	MARK, FUEL INDICATION	-	-	1	1	-	-----	1003662 KH,LDH,LTH,MH,RGH,RH,SH,SKH,UH
15	87594-ZR4-V60	MARK, OIL CHECK	1	1	1	1	1	-----	
23	87540-Z22-H60	MARK, HOT CAUTION	-	-	-	-	1	-----	
24	87709-Z07-S50	MARK, RECYCLE	-	-	-	-	1	-----	GWT,GWT1
25	87531-Z15-000	MARK, HONDA	-	1	-	1	1	-----	CLT,GWT1,LBH,LD1H,LT1H,REH,S1H,SK1H
26	87114-ZS9-R90	LABEL, WARNING	-	-	-	-	1	-----	CLT
27	87516-Z28-S70	LABEL, OPERATOR WARNING(RG) ..	-	-	1	-	-	-----	RGH

F-32

TOOL

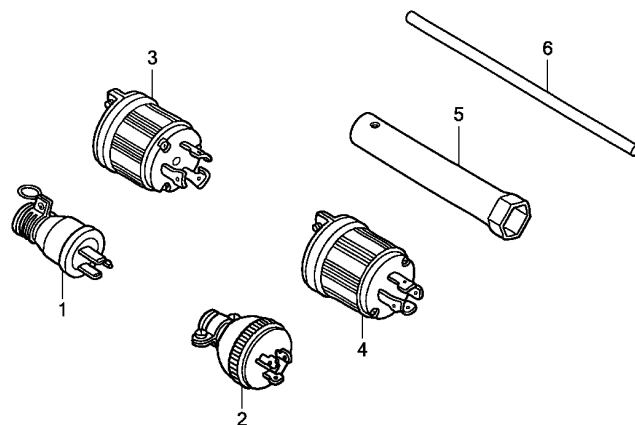

Z303F3200B

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.


NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	32310-836-000	PLUG ASSY., CONSENT(15A/125V)	-	2	-	2	-	-----	LD1H,LDH,LT1H,LTH
2	32310-Z15-R60	PLUG ASSY., CONSENT(20A-250V)	-	2	-	2	-	-----	KH,REH,RH,S1H,SH
3	32311-ZP0-K30	PLUG ASSY.(30A/125V)	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
4	32310-ZP0-K30	PLUG ASSY.(30A-125/250V)	-	1	-	1	-	-----	LBH,LD1H,LDH,LT1H,LTH
5	89216-ZR6-T60	WRENCH, PLUG	1	1	1	1	1		
6	99005-01000	BAR A, HANDLE	1	1	1	1	1		

3

FOP-1

WHEEL KIT(4-WHEELS)

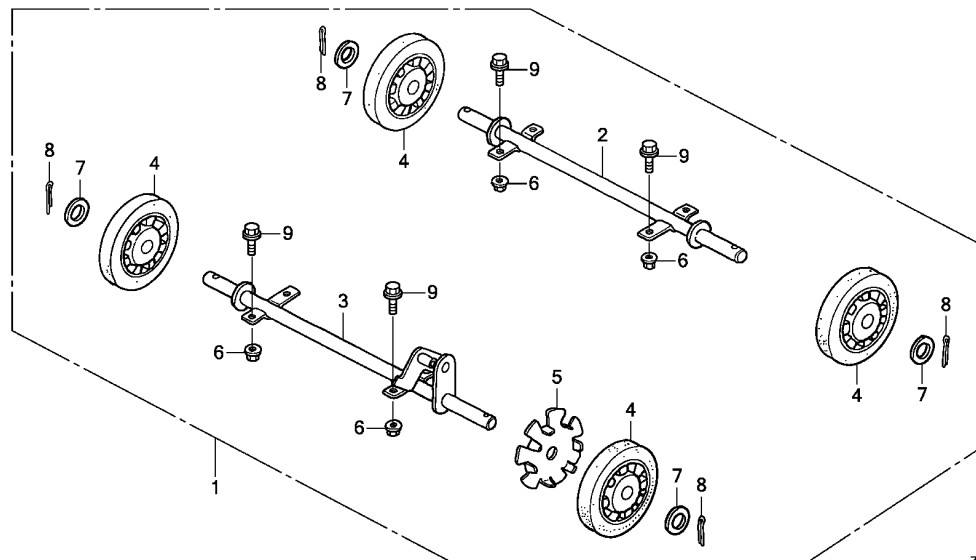


Z303Y0100

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	2091E4	(3) SHAFT, WHEEL	0.2
4	7101B7	WHEEL	0.1

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	06710-Z22-A30	WHEEL KIT(4-WHEELS)	(1)	(1)	(1)	(1)	(1)		
2	42310-Z22-A30	SHAFT COMP., R. WHEEL	(1)	(1)	(1)	(1)	(1)		
3	42320-Z22-A30	SHAFT COMP., L. WHEEL	(1)	(1)	(1)	(1)	(1)		
4	42710-ZB4-000	WHEEL COMP.	(4)	(4)	(4)	(4)	(4)		
5	42753-880-810	PLATE, LOCK	(1)	(1)	(1)	(1)	(1)		
6	94050-08070	NUT, FLANGE, 8MM	(8)	(8)	(8)	(8)	(8)		
7	94102-20000	WASHER, PLAIN, 20MM	(4)	(4)	(4)	(4)	(4)		
8	94201-40280	PIN, SPLIT, 4.0X28	(4)	(4)	(4)	(4)	(4)		
9	95701-08016-07	BOLT, FLANGE, 8X16	(8)	(8)	(8)	(8)	(8)		

FOP-2

WHEEL KIT

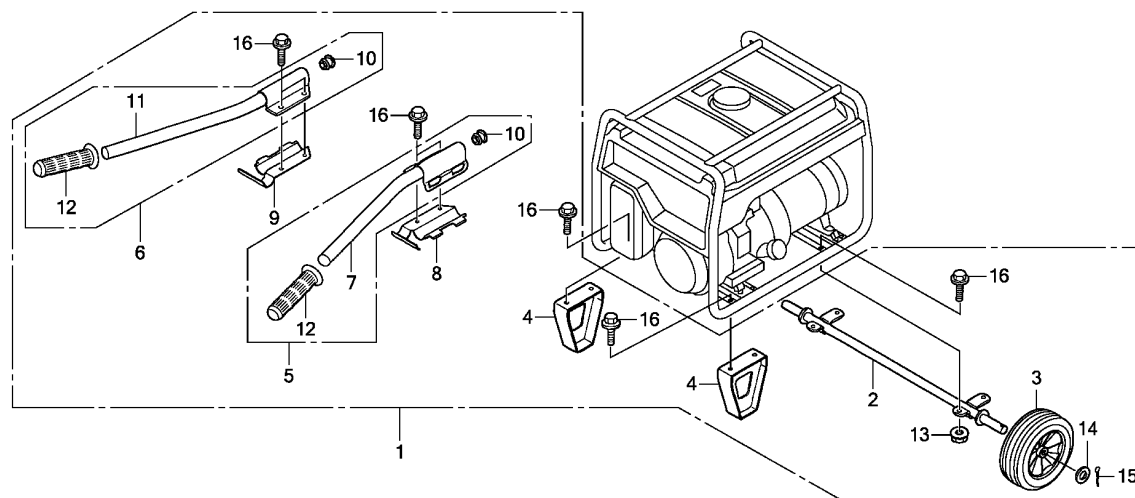

Z303Y0200


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	2091E4	SHAFT, WHEEL	0.2
3	7101B7	WHEEL	0.1
4	4101R4	STAND	0.1
.NOTE: Same time for two units			
5	8101N2	HANDLE :RIGHT	0.1
6	8101N1	HANDLE :LEFT	0.1

3

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	06710-Z22-A40ZA	WHEEL KIT(2-WHEELS) *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
2	42310-Z22-E30ZA	SHAFT COMP., WHEEL *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
3	42710-Z22-621	WHEEL COMP., 254X63.5	-	-	-	-	(2)		
4	51511-Z22-E30ZA	STAND COMP. *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(2)		
5	53100-Z22-000ZA	HANDLE ASSY., R. UPPER *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
6	53105-Z22-000ZA	HANDLE ASSY., L. UPPER *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
7	53110-Z22-000ZA	HANDLE COMP., R. UPPER *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
8	53112-Z22-000ZA	BRACKET, R. LOWER HANDLE *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
9	53113-Z22-000ZA	BRACKET, L. LOWER HANDLE *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
10	53115-Z22-000	CAP, LOWER HANDLE	-	-	-	-	(2)		
11	53120-Z22-000ZA	HANDLE COMP., L. UPPER *NH105*...MAT BLACK (#15-#20)	-	-	-	-	(1)		
12	53165-Z22-000	GRIP, HANDLE	-	-	-	-	(2)		
13	94050-08070	NUT, FLANGE, 8MM	-	-	-	-	(4)		
14	94102-20000	WASHER, PLAIN, 20MM	-	-	-	-	(2)		
15	94201-40280	PIN, SPLIT, 4.0X28	-	-	-	-	(2)		
16	95701-08016-07	BOLT, FLANGE, 8X16	-	-	-	-	(12)		

FOP-3

CONSENT KIT

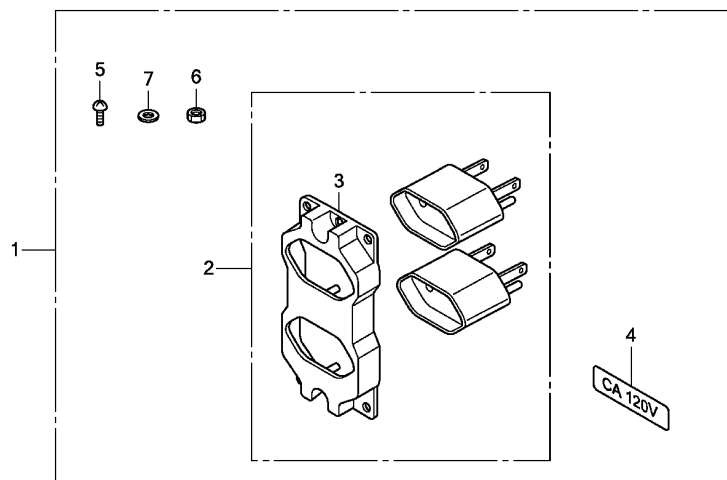

Z303Y0300

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
			EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
1	06323-Z30-E40	CONSENT KIT	-	-	-	(1)	-	-----	LD1H
2	32331-Z07-F30	ADAPTER, RECEPTACLE	-	-	-	(1)	-	-----	LD1H
3	32332-Z07-F30	CASE, ADAPTER	-	-	-	(1)	-	-----	LD1H
4	32337-Z30-E40	MARK, A.C.	-	-	-	(1)	-	-----	LD1H
5	93500-04010-0G	SCREW, PAN, 4X10	-	-	-	(4)	-	-----	LD1H
6	94001-04000-0S	NUT, HEX., 4MM	-	-	-	(4)	-	-----	LD1H
7	94101-04800	WASHER, PLAIN, 4MM	-	-	-	(2)	-	-----	LD1H

3

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
06000			13200-ZE3-315	32	4	16100-Z7E-E61	41	8	16967-GA6-671	77	6	28000			31000		
06280-Z7E-305	37	17	13310-Z7E-700	30	1	16100-Z7E-E71	41	8				28400-Z1C-E21ZA	38	1	31110-Z5T-810	45	3
06323-Z30-E40	89	1	13310-ZK6-D41	30	1	16124-ZE0-005	41	9	17000			28400-Z1C-E22ZA	38	1	31110-Z7E-612	45	4
06710-Z22-A30	87	1	13351-Z7E-000	30	2		44	9				28400-Z7E-E61ZA	37	1	31110-Z7E-811	45	3
06710-Z22-A40ZA	88	1	13351-ZE3-010	30	2	16141-Z0S-003	44	24				28400-Z7E-E71ZB	37	14	31110-Z7E-821	45	4
						16148-141-881	41	10				28400-Z7E-E72ZB	39	1	31118-Z22-000	82	1
			14000			16166-Z1C-E21	44	10				28410-Z7E-003ZA	37	2	31119-Z18-000	84	1
11000						16166-ZF6-005	41	11				28410-Z7E-701ZB	37	2	31119-Z18-D20	84	1
11300-Z1C-E20	29	1	14100-Z5T-820	33	2	16172-ZE3-W10	41	12					39	2	31120-Z30-A70	82	2
11300-Z7E-E60	29	1	14100-Z5T-920	34	19		44	11				28410-ZE3-W01ZB	38	2	31120-Z30-A80	82	2
11381-Z5T-000	29	2	14100-ZF6-W01	33	2	16173-001-004	77	2				28420-Z7E-003	37	3	31120-Z30-B40	82	2
11381-Z7E-701	29	2	14410-Z7E-000	33	3	16176-Z2G-D51	41	13				28420-Z7E-702	39	3	31120-Z30-B60	82	2
11381-ZE3-801	29	2	14410-ZK6-880	33	3		44	12				28421-ZE3-W01	38	3	31120-Z30-C50	82	2
			14431-ZE2-010	33	4	16200-Z7E-E61	41	14				28422-Z7E-701	37	15	31120-Z30-C90	82	2
			14441-Z7E-000	33	5	16211-Z5T-000	44	13					39	4	31120-Z30-R70	82	2
12000			14441-ZE2-000	33	5	16211-Z7E-700	41	15				28422-ZE2-W01	38	4	31127-Z17-000ZB	82	3
12000-Z5T-407	27	1	14451-Z7E-000	33	6	16212-Z5T-000	44	14				28422-ZH8-801	37	4	31130-Z30-000	82	4
12000-Z7E-406	27	1	14451-ZE1-013	33	6	16212-Z7E-701	41	18				28431-Z2E-003	39	5	31161-Z30-000	82	5
12000-Z7E-407	27	1	14568-ZE1-000	33	7	16220-ZA0-702	41	16				28431-ZH8-801	37	5	31161-ZB4-691	83	32
12200-ZF6-406	25	1	14711-Z5T-000	33	8		44	15				28433-Z2E-003	37	6	31171-Z22-000	82	6
12204-ZE2-306	25	2	14711-Z7E-000	33	8	16221-Z5T-000	44	16				28433-Z7E-702	39	6	31186-Z22-000ZA	82	7
12205-ZE2-305	25	3	14721-Z5T-000	33	9	16221-ZF6-800	41	17				28441-Z2E-003	37	7	31186-Z30-C90ZA	82	7
12209-Z7E-003	33	1	14721-Z7E-800	33	9	16223-ZE3-W00	42	18					39	7	31190-Z30-000	82	8
12209-ZE8-003	33	1	14751-Z1C-000	33	10	16260-Z7E-E60	42	19				28441-ZE2-W01	38	5	31200-Z7E-701	50	1
12210-Z5T-406	25	1	14751-Z7E-000	33	10	16261-Z7E-E60	42	20				28442-Z7E-003	37	8	31204-ZA0-003	48	1
12216-ZE2-300	25	4	14771-Z8S-000	33	11	16262-ZE2-711	42	21					39	8	31206-ZE3-003	48	2
12251-Z5T-003	25	5				16263-Z7B-000	42	22	18000			28442-ZE2-W01	38	6	31207-ZE3-003	48	3
12251-ZF6-W01	25	5	14771-ZE2-000	33	11	16264-ZE2-701	42	23	18310-Z1C-E20	76	1	28443-Z1T-701	37	16	31210-ZE3-023	48	4
12310-ZE2-020	25	6	14773-ZE2-000	33	12	16265-Z7E-000	42	24	18310-Z30-D61	75	1		39	9	31211-Z7E-701	50	2
12391-ZE2-020	25	7	14775-ZE2-010	33	13	16268-ZE2-721	42	25	18310-Z30-D62	75	1	28443-ZE2-W01	38	7	31211-ZE2-003	48	5
			14781-Z7E-000	33	14	16269-ZA0-800	42	26	18320-Z22-000ZA	75	2	28443-ZH8-801	37	9	31212-Z7E-701	50	3
			14791-Z7E-000	33	15		44	17	18320-Z30-S30ZA	76	2	28444-ZE2-W01	38	8	31212-ZE3-003	48	6
			14791-ZK6-880	34	15	16400-ZE2-704	42	27	18324-Z30-C90ZA	76	13	28445-Z7E-000	45	2	31213-Z7E-701	50	4
13000						16500-Z1C-E00	52	11	18326-Z30-D60ZA	75	3	28451-Z7E-700	45	2	31213-ZE2-003	48	7
13010-Z5R-004	31	1	15000			16510-Z7E-000	29	4				28451-Z7E-701	45	2	31214-Z7E-701	50	5
13010-Z5T-003	31	1				16510-ZE3-000	29	4	18331-Z22-000	75	5	28451-ZE3-W01	45	2	31215-Z7E-701	50	6
13010-Z7E-701	31	1	15620-Z7E-800	29	3	16511-ZE8-000	29	5	18331-Z30-000	76	4	28461-Z2E-003	37	10	31215-ZE2-003	48	8
13011-Z5R-004	31	1	15620-ZE2-700	29	3	16512-Z7E-000	29	6	18333-ZB4-801	75	6		39	10	31217-Z7E-701	50	7
13011-Z5T-003	31	1	15721-Z23-H60	74	1	16512-ZE3-000	29	6	18333-ZE3-801	75	7	28461-Z5T-003	38	9	31218-Z7E-701	50	8
13011-Z7E-701	31	1				16513-ZE2-000	29	7	18333-ZF6-W01	76	5	28462-Z1C-801	38	10	31218-ZE3-003	48	9
13012-Z5R-004	31	1	16000			16531-Z0A-000	29	8	18338-Z30-000	76	6	28462-Z7E-E61	37	11	31219-ZE2-003	48	10
13012-Z5T-003	31	1				16541-Z7E-000	27	2	18338-Z30-D60	75	8	28462-Z7E-E71	37	11	31219-ZE3-003	49	21
13012-Z7E-701	31	1	16010-ZE3-701	41	1	16541-ZE3-010	27	2	18350-Z5T-800	75	9		39	11	31222-Z7E-701	50	9
13013-Z5R-004	31	1	16010-ZF5-900	44	1	16551-ZE3-000	52	1	18355-Z22-E30	75	9	28463-Z5T-003	38	11	31222-ZE3-791	48	11
13013-Z5T-003	31	1	16011-ZA0-931	41	2	16555-ZE3-000	52	2	18376-Z30-C90	76	14	28463-Z5T-013	38	11	31223-Z7E-701	50	10
13013-Z7E-701	31	1				16561-ZK6-D70	52	3	18381-ZE2-801	76	8				31224-Z7E-701	50	11
13101-Z5T-800	31	2	16013-Z1C-003	41	3	16562-ZE3-000	52	4							31225-Z7E-701	50	12
13101-Z7E-800	31	2				16570-ZK3-D70	52	5	19000			30000			31226-Z7E-701	50	13
13102-Z5T-800	31	2	16015-Z7B-D11	41	4	16584-883-300	52	6	19511-Z7E-700	45	1	30500-Z5T-003	47	1	31230-Z7E-701	51	14
13102-Z7E-800	31	2	16015-ZE8-005	44	4	16588-Z1C-E00	52	12	19511-ZK6-D70	45	1	30500-Z7E-003	46	1	31231-ZE2-003	48	12
13103-Z5T-800	31	2	16016-ZF6-D40	41	5	16611-Z7E-E60	42	28	19610-Z1C-E20ZA	40	1	30500-Z7E-701	46	13	31232-ZE3-003	48	13
13103-Z7E-800	31	2				16613-893-000	42	29	19610-Z7E-E60ZA	40	1	30595-Z7E-003	46	2	31233-ZE2-003	49	14
13104-Z5T-800	31	2	16016-ZH8-W01	44	51	16615-893-000	42	30	19631-Z5T-000	40	2		47	2	31295-Z30-000	82	9
13104-Z7E-800	31	2	16024-124-760	41	6	16620-Z1C-000	44	18	19631-ZE3-W00	40	2	30700-Z1C-811	47	3	31408-880-000	53	1
13111-Z5T-000	32	3	16024-ZE1-811	44	6	16882-Z7E-E60	42	31	19656-Z25-R50	79	15	30700-Z1T-003	46	3		59	1
13111-Z7E-000	31	3	16028-ZA0-931	41	7	16950-Z30-003	77	3				30700-Z1T-701	46	3		57	1
13200-Z1C-000	32	4	16028-ZE0-005	44	7	16952-ZA0-000	77	4								59	1
13200-Z1C-305	32	4	16080-Z30-003	77	1	16963-Z30-003	77	5								61	1
13200-Z7E-000	32	4	16100-Z1C-E22	44	8												

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
31408-880-000	63	1	32108-Z30-B60	72	3		65	6	32602-Z22-000	81	12	36135-ZF6-D41	42	32	50310-Z30-B60ZA	79	4
31409-880-000	53	2	32108-Z30-D60	72	3		68	9	32610-899-000	79	1				50315-Z30-000ZA	79	5
	55	2	32108-Z30-S30	72	3	32335-898-690	66	7	32610-ZD1-A40	79	1	37000			50315-Z30-C90ZA	79	5
	57	2	32110-Z1C-E20	47	6		68	10	32902-892-003	53	10				50365-Z18-W60ZB	81	13
	59	2	32150-Z30-A70	53	6		70	7		55	11	37450-Z30-B41	58	19			
	61	2	32150-Z30-A80	55	7	32335-Z22-F90	63	11		57	13	37450-Z30-B61	53	14	51000		
	63	2	32150-Z30-B20	59	6		66	8		59	10		59	14			
31426-Z18-000	55	3	32150-Z30-B40	57	6		68	11		61	12		61	16	51511-Z22-E30ZA	88	4
	61	3	32150-Z30-B60	53	6		70	8		65	9	37450-Z30-R71	63	16			
	63	3	32150-Z30-C50	65	3	32337-Z30-E40	89	4		66	12				53000		
	65	1	32150-Z30-C70	53	6	32345-Z30-A80ZA	55	9		68	14	38000					
	68	1	32150-Z30-C80	55	7	32345-Z30-B20ZA	59	8		70	11				53100-Z22-000ZA	88	5
31426-Z22-000	66	1	32150-Z30-C90	66	3	32345-Z30-B40ZA	57	10	32903-Z22-000	72	7	38220-Z30-A71	53	15	53105-Z22-000ZA	88	6
	68	2	32150-Z30-D20	59	6	32345-Z30-B60ZA	53	8	32903-ZC8-N01	82	13		61	17	53110-Z22-000ZA	88	7
	70	1	32150-Z30-D40	57	6	32345-Z30-C50ZA	65	7				38220-Z30-B41	58	20	53112-Z22-000ZA	88	8
31428-Z22-A60	53	3	32150-Z30-D50	68	4	32345-Z30-C80ZA	55	9	34000			38220-Z30-B61	53	15	53113-Z22-000ZA	88	9
	55	4	32150-Z30-D60	53	6	32345-Z30-C90ZA	66	9					59	15	53115-Z22-000	88	10
	57	3	32150-Z30-R10	61	7	32345-Z30-D20ZA	59	8	34150-ZH7-013	27	3	38220-Z30-C91	66	16	53120-Z22-000ZA	88	11
	59	3	32150-Z30-R70	63	7	32345-Z30-D40ZA	57	10	34150-ZH7-023	27	3	38220-Z30-R61	63	17	53149-964-003	42	33
	61	4	32150-Z30-S10	61	7	32345-Z30-D50ZA	68	12					65	11	53165-Z22-000	88	12
	63	4	32150-Z30-S20	70	3	32345-Z30-D60ZA	53	8	35000				68	16			
	65	2	32150-Z30-V10	57	6	32345-Z30-R10ZA	61	10					70	13	63000		
	66	2	32158-Z30-B40	72	4	32345-Z30-R70ZA	63	12	35100-Z30-003	53	11	38220-ZR8-F61	55	15			
	68	3	32158-Z30-B60	72	4	32345-Z30-S10ZA	61	10		55	12	38240-898-000	54	16	63250-Z30-C90ZA	79	16
	70	2	32158-Z30-C50	72	4	32345-Z30-S20ZA	70	9		57	14		55	16	63253-Z30-C90	80	17
31511-Z30-B60ZA	81	1	32158-Z30-D40	72	4	32356-Z30-000ZA	72	5		59	11		58	21	63360-Z30-C90ZA	80	18
31511-Z7E-000	46	4	32158-Z30-D60	72	4	32366-Z30-A80	55	10		61	13		59	16	63361-Z30-C90ZA	80	19
31511-ZE3-000	47	4	32158-Z30-S30	72	4	32366-Z30-B10	57	11		63	14		61	18			
31512-Z18-W60	81	2	32195-Z7E-711	46	7	32366-Z30-B20	59	9	35111-880-013	53	12		63	18	64000		
31512-ZE2-000	46	5	32221-Z28-R20	65	4	32366-Z30-B40	57	11		55	13	38240-Z23-F90	65	12			
	47	5		66	4	32366-Z30-B60	53	9		57	15		66	17	64411-Z30-C90	80	20
31514-ZR8-T70	81	3		68	5	32366-Z30-C50	65	8		59	12		68	17	64641-Z30-C90	80	21
31521-SD9-000	81	4		70	4	32366-Z30-C80	55	10		61	14		70	14			
31528-Z18-W60ZB	81	5	32310-836-000	86	1	32366-Z30-C90	66	10		63	15	38242-Z25-A62	65	13	68000		
31650-Z7E-003	46	6	32310-Z15-R60	86	2	32366-Z30-D10	57	11	35120-Z30-003	53	13		66	18			
31720-Z18-003	53	4	32310-ZP0-K30	86	4	32366-Z30-D20	59	9		55	14		68	18	68325-Z22-E30	79	6
	55	5	32311-ZP0-K30	86	3	32366-Z30-D40	57	11		58	16		70	15	68325-Z23-E30	79	7
	57	4	32330-Z15-R60	53	7	32366-Z30-D50	68	13		59	13	38250-ZA8-701	54	17	68331-Z18-000	79	8
	59	4	32330-Z18-B21	57	7	32366-Z30-D60	53	9		61	15		55	17			
	61	5	32330-Z22-A90	63	8	32366-Z30-R10	61	11	35120-Z30-801	65	10		58	22	87000		
	63	5		66	5	32366-Z30-R70	63	13		66	13		59	17			
31720-Z30-C50	72	1		68	6	32366-Z30-S10	61	11		68	15		61	19	87101-Z30-A80	84	2
31720-Z30-D40	72	1		70	5	32366-Z30-S20	70	10		70	12		63	19	87101-Z30-B60	84	2
31720-Z30-D60	72	1	32331-Z07-F30	89	2	32366-Z30-V10	57	11	35120-Z30-802	65	10				87101-Z30-C80	84	2
31720-Z30-R70	72	1	32331-Z25-640	65	5	32370-Z30-C91	72	6	35320-Z30-B41	58	17	42000			87101-Z30-C90	84	2
31720-ZA8-013	82	10	32331-Z25-A60	65	5	32370-Z30-D61	72	6		66	14				87101-Z30-D60	84	2
31720-ZA8-V00	82	10	32331-Z25-B50	68	7	32370-Z30-D62	72	6	35322-Z30-000	58	18	42310-Z22-A30	87	2	87102-Z30-A80	84	3
31750-735-013	53	5	32331-ZA8-720	59	7	32370-Z30-S31	72	6		66	15	42310-Z22-E30ZA	88	2	87102-Z30-B60	84	3
	55	6	32331-ZB3-G90	68	8	32371-Z30-D61	73	17	35480-Z7E-003	27	4	42320-Z22-A30	87	3	87102-Z30-C80	84	3
	57	5		70	6	32371-Z30-D62	73	17	35480-ZF6-003	27	4	42710-Z22-621	88	3	87102-Z30-C90	84	3
	59	5	32331-ZT3-C60	61	8	32395-Z30-S31	57	12	35850-Z7E-701	51	16	42710-ZB4-000	87	4	87102-Z30-D60	84	3
	61	6		63	9		66	11	35851-Z7E-701	51	17	42753-880-810	87	5	87114-ZS9-R90	85	26
	63	6	32332-Z07-C81	55	8	32410-Z22-A31	81	6	35852-Z7E-701	51	18				87117-ZW5-000	84	4
			32332-Z07-F30	89	3	32410-Z7E-701	51	15	35853-Z7E-701	51	19	50000			87150-Z11-A30	84	5
32000			32332-Z22-E31	57	8	32411-Z18-W60	81	7	35854-Z7E-701	51	20				87150-Z11-A70	84	5
			32332-ZB3-G90	66	6	32600-Z18-W60	81	8				50138-Z18-000	79	2	87150-Z11-R10	84	5
32103-Z30-000	82	11	32334-Z22-A31	57	9	32601-SK7-900	81	9	36000			50153-ZR6-000	79	3	87150-Z15-W20	84	5
32104-Z30-000	82	12	32335-875-610	61	9	32601-Z22-000	81	10				50310-Z30-B60ZA	79	4	87150-Z25-A61	84	5
32106-Z30-000	72	2		63	10	32602-SK7-900	81	11	36101-ZE3-800	46	7	50310-Z30-C90ZA	79	4	87150-Z26-S70	84	5

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	
87152-Z30-A70	85	6	90000			90102-Z21-000	83	19	90684-Z7E-000	46	12	93600-04016-1G	62	27			65	19
87152-Z30-A80	85	6				90102-Z22-000	83	20	90684-ZA0-601	47	10		64	27			67	26
87152-Z30-B10	85	6	90001-Z7E-000	32	5	90110-ZE2-003	49	16	90701-HC4-000	29	10		65	17			69	27
87152-Z30-B40	85	6	90001-ZE8-000	32	5	90111-Z22-A60	54	20	90701-Z7E-000	29	10		68	22			70	23
87152-Z30-B60	85	6	90002-ZE2-U91	75	10		56	20		83	26	93600-04020-1G	56	25	94101-06800		29	13
87152-Z30-B81	85	6	90003-ZH8-801	37	12		58	25	90741-ZE2-000	45	6	93600-05010-0A	77	18	94102-20000		87	7
87152-Z30-C70	84	6		39	12		60	20	90851-898-000	77	15	93600-05016-0G	64	28			88	14
87152-Z30-C80	84	6	90004-ZE2-W01	38	12		62	22	90854-ZB3-000	77	16		66	22	94103-05000		43	46
87152-Z30-D10	84	6	90005-ZM3-000	74	11		63	22					68	23	94109-12000		27	12
87152-Z30-D40	84	6	90007-ZE2-003	49	15		65	14	91000				70	19	94111-05800		64	32
87152-Z30-D60	84	6	90008-Z1T-000	37	13		66	19				93892-05012-18	43	44			67	27
87152-Z30-D81	84	6		39	13		68	19	91001-Z7E-003	29	16	93892-05032-18	49	18			69	28
87152-Z30-R10	85	6	90008-ZE2-003	38	13		70	16	91001-ZF6-013	30	3	93893-05016-17	66	23			71	24
87152-Z30-R71	84	6	90012-888-000	46	11	90112-Z22-000	54	21	91002-Z7E-003	30	3		69	24			83	29
87152-Z30-S10	84	6	90012-ZE0-D10	34	16		56	21	91051-ZB4-003	83	27		70	20	94111-06000		54	29
87152-Z30-V10	85	6	90013-883-000	27	5		58	26	91201-Z1C-003	27	8	93913-15280	54	26			56	28
87152-Z30-V90	84	6		40	3		60	21		29	11		56	26			58	33
87152-Z30-W90	85	6		46	8		62	23	91201-Z7E-003	27	8		58	30			60	29
87178-Z30-D80	85	7		47	7		63	23		29	11		60	26			62	30
87301-Z30-A80	85	8		52	7		65	15	91203-952-771	27	9		62	28			64	33
87301-Z30-B60	85	8		72	8		66	20	91203-Z7E-003	27	9		64	29			65	20
87301-Z30-C80	85	8		82	14		68	20	91301-805-000	29	12		65	18			67	28
87301-Z30-C90	85	8	90014-Z5T-000	25	8		70	17	91353-671-004	27	10		67	24			69	29
87301-Z30-D60	85	8	90014-ZE2-000	25	8	90123-MC7-000	80	22	91353-Z7E-003	27	10		69	25			71	25
87403-Z30-C90	85	9	90014-ZE6-000	46	9	90131-883-000	27	6	91541-S0A-003	43	42		70	21	94201-40280		87	8
87403-Z30-D10	85	9		47	8	90131-Z30-000	83	21		73	12	93913-25110	80	23			88	15
87403-Z30-D60	85	9	90015-883-000	46	10	90148-SE0-003	79	9			18				94251-10000		27	13
87403-Z30-R70	85	9		47	9	90157-ZR7-T62	83	22	91551-898-000	77	17	94000			94301-12200		25	12
87403-Z30-S10	85	9	90015-Z5T-000	52	8	90201-ZE3-V00	45	5	91551-Z15-000	73	13				94305-20122		44	21
87511-Z30-S10	85	10	90015-ZE5-D10	52	8	90206-ZE1-000	34	17	91551-Z30-000	73	14	94001-04000-0S	89	6				
87516-Z28-S70	85	27	90016-ZE8-000	46	11	90301-Z22-000	83	23	91601-ZE2-003	49	17	94001-05000	64	30	95000			
87530-Z15-T10	85	11	90017-883-000	46	9	90312-GFM-970	72	9					67	25				
87530-Z15-W20	85	11	90021-ZC2-000	82	15	90401-ZR4-F30	54	22	92000				69	26	95002-02070		43	47
87530-Z15-W70	85	11	90031-875-000	82	16		56	22					70	22	95002-02080		77	19
87530-Z30-S10	85	11	90032-875-000	83	17		58	27	92900-08032-0E	25	11	94050-04000	54	27	95002-02100		77	20
87530-ZR4-H60	85	11	90042-Z7E-D00	25	9		60	22					58	31	95002-50000		78	21
87531-Z15-000	85	25	90042-ZK6-D70	25	9		62	24	93000				60	27	95002-80000		78	22
87531-Z30-000	85	12	90050-ZE1-000	76	9		64	24				94050-06000	43	45	95005-35075-10		43	48
87539-Z22-A60	85	13	90101-Z15-000	54	18	90413-ZK6-880	34	18	93500-03005-1A	54	23		44	20	95701-06010-07		75	12
87539-Z30-C80	85	13		55	18	90431-ZE2-700	42	34		56	23		52	10			76	11
87539-Z30-D10	85	13		58	23	90432-ZE2-700	42	35		58	28		79	10	95701-06012-00		27	14
87539-Z30-D60	85	13		59	18	90433-ZE2-700	42	36		60	23		81	16			81	18
87539-Z30-R70	85	13		62	20	90434-ZE2-700	42	37		62	25	94050-06070	81	17	95701-06012-07		79	14
87539-Z30-S10	85	13		63	20	90441-ZE2-010	25	10		64	25	94050-08000	75	11			81	19
87540-Z22-H60	85	23		65	21	90446-KE1-000	27	7		65	16		76	10	95701-06020-00		73	15
87565-Z22-620	85	14		67	29	90446-Z7E-000	27	7		66	21		79	11	95701-06022-07		78	23
87565-ZR6-T60	85	14		69	30	90501-Z15-000	77	14		68	21	94050-08070	87	6	95701-06030-07		81	20
87594-ZR4-V60	85	15		71	26	90501-Z18-W60	81	14		70	18		88	13	95701-06032-08		74	12
87709-Z07-S50	85	24	90101-Z18-000	83	18	90504-ZA0-000	83	24	93500-03016-0A	54	24	94050-10000	27	11	95701-08012-07		81	21
			90101-Z30-000	54	19	90601-Z7E-000	42	38		56	24		79	12	95701-08016-00		75	13
88000				55	19	90601-ZE3-000	32	6		58	29	94070-06080	49	19			76	12
				58	24	90602-Z7E-000	42	39		60	24	94101-04800	89	7	95701-08016-07		87	9
88911-MJ3-000	74	10		59	19	90602-ZE1-000	29	9		62	26	94101-05800	83	28			88	16
				62	21	90603-Z7E-000	42	40		64	26	94101-06000	54	28	95701-08022-00		76	15
89000				63	21	90650-KV6-003	72	10	93500-04010-0G	89	5		56	27	95701-08035-08		49	20
				65	22		81	15	93500-04010-1A	54	25		58	32			51	21
89216-ZR6-T60	86	5		67	30	90650-SD9-003	42	41		60	25		60	28	95701-08040-00		29	14
				69	31	90672-Z22-003	73	11	93500-05012-0A	43	43		62	29	95701-08060-00		83	30
				71	27	90673-Z22-000	83	25	93500-05035-0A	52	9		64	31	95701-10040-00		79	13

PART NO. INDEX

Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.	Part Number	Page	Ref.
95701-10080-00	25	13															
96000																	
96001-06012-00	54	30															
	56	29															
	58	34															
	60	30															
	62	31															
	64	34															
96001-06020-00	73	15															
96001-06030-00	54	31															
	56	30															
	58	35															
	60	31															
	62	32															
	64	35															
96100-62020-00	27	15															
	29	15															
96100-62070-00	29	16															
98000																	
98079-55846	25	14															
98079-55876	25	14															
98200-31000	73	16															
99000																	
99005-01000	86	6															
99101-ZH8-0980	43	49															
	44	22															
99101-ZH8-1000	43	49															
99101-ZH8-1020	43	49															
	44	22															
99101-ZH8-1050	44	22															
99204-ZA0-0400	44	23															
99204-ZA0-0450	43	50															

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[A]								
ADAPTER, RECEPTACLE	89	2		54	30	BRACKET, CENTER	48	5
ALERT UNIT, OIL	27	3		56	29	BRACKET, FR.	48	6
ARMATURE ASSY.	50	3		58	34	BRACKET, L. LOWER HANDLE	88	9
ARMATURE COMP.	48	2		60	30	BRACKET, RR. HOUSING	82	12
ARM, GOVERNOR	52	1		62	31	BRACKET, R. LOWER HANDLE	88	8
ARM, VALVE ROCKER	33	4		64	34	BRACKET, STOPPER	79	2
ARRESTER COMP., SPARK	76	7		72	8	BRACKET, WIRE HARNESS CLIP	82	11
ARRESTER, SPARK	75	9		79	14	BREAKER, CIRCUIT	53	15
				81	18		55	15
					19		58	20
				82	14		59	15
[B]				83	22		61	17
BAND	53	10	BOLT, FLANGE, 6X160	73	15		63	17
	55	11	BOLT, FLANGE, 6X20	78	23		65	11
	57	13	BOLT, FLANGE, 6X22	46	10		66	16
	59	10	BOLT, FLANGE, 6X28	47	9		68	16
	61	12		54	31		70	13
	65	9	BOLT, FLANGE, 6X30	56	30	BRUSH	48	8
	66	12		58	35	BRUSH ASSY.	82	9
	68	14		60	31	BUSH, ARM PIVOT	42	33
	70	11		62	32			
BAND, WIRE, 95MM	72	10		64	35	[C]		
	81	15		81	20			
BARREL ASSY., CYLINDER	27	1	BOLT, FLANGE, 6X32	46	9	CABLE ASSY., EARTH	81	8
BAR A, HANDLE	86	6		74	12	CABLE ASSY., STARTER	51	15
BASE COMP., AIR CLEANER	74	6	BOLT, FLANGE, 6X35	46	9	CABLE ASSY., STARTING	81	6
BASE COMP., CHOKE	44	18		47	8	CABLE COMP., SUB EARTH	79	1
BASE COMP., HARNESS CLIP	72	3	BOLT, FLANGE, 6X40	46	11	CABLE, EARTH	79	1
BASE, BATTERY TRAY	81	5	BOLT, FLANGE, 6X45	46	11	CABLE, STRAP	73	11
BASE, HARNESS CLIP	72	3	BOLT, FLANGE, 8X12	81	21	CAMSHAFT ASSY.	33	2
BEARING ASSY., 6204	83	27	BOLT, FLANGE, 8X16	75	13	CAMSHAFT COMP.	34	19
BEARING, BALL RADIAL, 6207SH2	30	3		76	12	CAP ASSY., NOISE SUPPRESSOR ...	46	3
BEARING, RADIAL BALL, 6202 ...	27	15		87	9		47	3
	29	15	BOLT, FLANGE, 8X22	88	16	CAP COMP., FUEL FILLER	77	8
BEARING, RADIAL BALL, 6207SH	29	16	BOLT, FLANGE, 8X35	76	15	CAP, CHOKE DUST	41	10
BOARD ASSY., BRUSH	30	3		49	20	CAP, LOWER HANDLE	88	10
BOLT-WASHER, 5X14	50	6		51	21	CAP, OIL FILLER	29	3
BOLT, BATTERY SETTING	49	15	BOLT, FLANGE, 8X40	29	14	CARBURETOR ASSY.	41	8
BOLT, BATTERY TERMINAL	81	9	BOLT, FLANGE, 8X60	83	30		44	8
		10	BOLT, GOVERNOR ARM	52	8	CASE COMP., AIR CLEANER	74	3
BOLT, CONNECTING ROD	32	5	BOLT, HEAD COVER	25	8	CASE COMP., RECOIL STARTER ...	37	2
BOLT, DRAIN PLUG, 12X15	27	6	BOLT, HEX., 10X250	82	15		38	2
BOLT, EARTH, 6X16	79	9	BOLT, HEX., 5X20	83	20		39	2
BOLT, FLANGE, 10X40	79	13	BOLT, HEX., 6X22	54	20	CASE, ADAPTER	89	3
BOLT, FLANGE, 10X80	25	13		56	20	CASE, CONTROL PANEL	72	5
BOLT, FLANGE, 5X18	74	11		58	25	CHAMBER SET, FLOAT	41	4
BOLT, FLANGE, 6X10	37	13		60	20		44	4
	38	13		62	22	CLAMPER, CORD	46	4
	39	13		63	22		47	4
	75	12		65	14	CLIP, GOVERNOR HOLDER	29	9
	76	11		66	19	CLIP, HARNESS	46	12
BOLT, FLANGE, 6X12	27	5		68	19		47	10
		14		70	16	CLIP, HARNESS BAND	43	42
	40	3	BOLT, PIVOT, 8MM	34	16		73	12
	46	8	BOLT, STUD, 8X115	25	9			18
	47	7	BOLT, STUD, 8X32	25	11	CLIP, INSULATOR	79	15
	52	7	BOX ASSY., BATTERY	81	4	CLIP, PISTON PIN, 20MM	32	6
			BOX ASSY., JUNCTION	72	6	CLIP, TUBE	43	47
			BRACKET ASSY.	51	14		77	19

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
		20		61	5	[H]		
	78	21		63	5			
CLIP, VALVE GUIDE	25	22	DIODE COMP., D.C.	82	10	HANDLE ASSY., L. UPPER	88	6
CLIP, WIRE HARNESS	42	41	DOWEL PIN, 12X20	25	12	HANDLE ASSY., R. UPPER	88	5
CLUTCH COMP., OVERRUNNING	48	3	DOWEL PIN, 8X12	29	10	HANDLE COMP., L. UPPER	88	11
COCK ASSY., FUEL	77	3		83	26	HANDLE COMP., R. UPPER	88	7
COIL ASSY., FUEL CUT	46	6	[E]			HARNES ASSY., CONTROL WIRE...	53	6
COIL ASSY., IGNITION	46	1					55	7
		13	ELEMENT, AIR CLEANER	74	2		57	6
	47	1	E-RING, 2MM	42	38		59	6
COIL ASSY., POWER	46	2	E-RING, 4MM	42	39		61	7
	47	2	E-RING, 7MM	42	40		63	7
COLLAR, AIR CLEANER	74	19					65	3
COLLAR, BODY COVER	72	9	[F]				66	3
COLLAR, CONTROL CASE	73	13					68	4
		14	FAN COMP., GENERATOR COOLING ..	82	8		70	3
COLLAR, LEVER	42	37	FAN, COOLING	45	1	HARNES ASSY., ENGINE WIRE....	47	6
COLLAR, SETTING	41	12	FILTER COMP., FUEL	77	11	HARNES ASSY., GENERATOR WIRE..	72	4
	44	11	FLOAT SET	41	3	HEAD COMP., CYLINDER.....	25	1
COLLAR, TANK CUSHION	77	17		44	3	HOLDER, BRUSH.....	48	12
CONE ASSY., NOSE	50	5	FLYWHEEL COMP.	45	3	HOLDER, GOVERNOR WEIGHT.....	29	6
CONSENT KIT	89	1				HOUSING ASSY.....	50	2
CONTACTOR ASSY.	48	1	FRAME COMP.	79	4	HOUSING, FR.....	82	5
CONTROL ASSY.	52	5	FRAME COMP., R. SIDE	79	5	HOUSING, RR.....	82	6
		11	FUSE, BLADE	73	16			
CORD, EARTH	83	32				[I]		
CORD, STOP SWITCH	46	7	[G]					
CORD, TERMINAL	65	4				INSULATOR.....	49	14
	66	4	GASKET SET	41	1	INSULATOR, CARBURETOR.....	41	15
	68	5		44	1		44	13
	70	4	GASKET, CYLINDER HEAD	25	5	INSULATOR, CONTROL BASE.....	52	12
COUPLER	57	12	GASKET, EX. PIPE	75	6	INSULATOR, MUFFLER PROTECTOR..	76	14
	66	11				INSULATOR, RR. PANEL.....	80	20
COVER ASSY., AUTOMATIC VOLTAGE				76	5	INSULATOR, R. SIDE PANEL.....	80	21
REGULATOR	72	1	GASKET, MUFFLER	76	8			
COVER ASSY., CRANKCASE	29	1	GEAR A	50	10	[J]		
COVER COMP., CIRCUIT PROTECTOR	65	13	GEAR ASSY., DRIVE	50	4			
	66	18	GEAR B	50	12	JET SET, PILOT, #40.....	44	23
	68	18	GEAR, DRIVE PINION	48	7	JET SET, PILOT, #45.....	43	50
	70	15	GEAR, REDUCTION	48	11	JET, MAIN, #100.....	43	49
COVER COMP., FAN	40	1	GOVERNOR ASSY.	29	4	JET, MAIN, #102.....	43	49
COVER COMP., HEAD	25	6	GRIP, HANDLE	88	12		44	22
COVER, AIR CLEANER	74	8	GRIP, REINFORCEMENT	38	11	JET, MAIN, #105.....	44	22
COVER, FUSE	73	17	GRIP, STARTER	37	10	JET, MAIN, #98.....	43	49
COVER, GENERATOR END	82	7		38	9		44	22
COVER, STARTING MOTOR TERMINAL	81	7		39	10	JOINT, ROD	42	22
COVER, STATOR	82	3	GROMMET, CHOKE ROD	42	29			
CRANKSHAFT COMP.	30	1	GROMMET, CORD	46	5	[K]		
CUP, FUEL STRAINER	77	6		47	5			
			GROMMET, FENDER	74	10	KEY COMP.	53	12
[D]			GUARD, BATTERY	81	13		55	13
DIAPHRAGM ASSY.	42	27	GUIDE, CHOKE ROD	42	30	KEY COMP.	57	15
DIODE COMP.	53	4	GUIDE, EX. VALVE	25	3		59	12
	55	5	GUIDE, IN. VALVE	25	2		61	14
	57	4	GUIDE, PUSH ROD	33	15		63	15
	59	4		34	15	KEY, SPECIAL WOODRUFF, 25X18..	45	6
			GUIDE, RATCHET	37	6			
				39	6			

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
[L]			[N]			PACKING, AIR CLEANER.....		
LABEL, OIL ALERT	85	11	NOZZLE, MAIN	41	11		42	26
LABEL, OPERATOR WARNING	85	27		44	10	PACKING, CARBURETOR	44	17
LABEL, WARNING	85	26	NUT-WASHER, 6MM	49	19		41	17
LENS ASSY., PROTECTOR	54	17	NUT, BATTERY TERMINAL	81	11	PACKING, CARBURETOR INSULATOR	44	16
	55	17			12	PACKING, CASE COVER	29	2
	58	22	NUT, FLANGE, 10MM	27	11	PACKING, CRANKCASE COVER	29	2
	59	17		79	12	PACKING, FUEL FILLER CAP	77	10
	61	19	NUT, FLANGE, 4MM	54	27	PACKING, FUEL STRAINER CUP	77	2
	63	19		58	31	PACKING, HEAD COVER	25	7
LEVER, CHOKE	42	21		60	27	PACKING, INSULATOR	41	18
LEVER, COCK	77	5	NUT, FLANGE, 6MM	43	45		42	18
LIFTER, VALVE	33	5		44	20	PACKING, RECEPTACLE	61	9
				52	10		63	10
[M]				52	10		65	6
MARK, A.C.	89	4		79	10		66	7
MARK, CAUTION	84	5		81	16		68	9
MARK, CAUTION VOLTAGE	85	10	NUT, FLANGE, 8MM	75	11		10	10
MARK, DIRECTION	85	7		76	10	PANEL ASSY., RR.	70	7
MARK, EX. CAUTION	85	13		79	11	PANEL ASSY., R. SIDE	80	18
MARK, FR. EMBLEM	85	8		87	6	PANEL COMP., CONTROL	79	16
MARK, FUEL INDICATION	85	14	NUT, HEX., 4MM	88	13		53	8
MARK, FUSE	84	4	NUT, HEX., 5MM	89	6		55	9
MARK, HONDA	85	12		64	30		57	10
		25		67	25		59	8
MARK, HOT CAUTION	85	23		69	26		61	10
MARK, L. EMBLEM	84	3		70	22		63	12
MARK, OIL CHECK	85	15		83	23		65	7
MARK, OPERATION	85	9	NUT, HEX., 6MM	51	17		66	9
MARK, PANEL	53	9			20		68	12
	55	10		54	21	PANEL, RR.	70	9
	57	11		56	21	PANEL, RR.	80	19
	59	9		58	26	PIN, GOVERNOR WEIGHT	29	7
	61	11		60	21	PIN, LOCK, 10MM	27	13
	63	13		62	23	PIN, PISTON	31	3
	65	8		63	23		32	3
	66	10		65	15	PIN, SPLIT, 4.0X28	87	8
	68	13		66	20		88	15
	70	10		68	20	PIN, SPRING, 2X12	44	21
MARK, RECYCLE	85	24		70	17	PIPE, EX.	75	5
MARK, R. EMBLEM	84	2	NUT, PIVOT ADJUSTING	34	17		76	4
MARK, SPEC	84	6	NUT, SPECIAL, 16MM	45	5	PISTON	31	2
	85	6				PIVOT, ROCKER ARM	33	6
MARK, VOLT	84	1	[O]			PLATE SET, CONSENT	55	3
METER ASSY., FUEL	77	9					61	3
METER ASSY., VOLT	53	14	OIL SEAL, 35X52X8	27	8		63	3
	58	19		29	11		65	1
	59	14	OIL SEAL, 8X14X5	27	9		66	1
	61	16	O-RING, 14MM	27	10		68	1
	63	16	O-RING, 26X2.7	29	12			2
MOTOR ASSY., STARTER	50	1					70	1
MOTOR UNIT, STARTER	48	4	[P]			PLATE, BATTERY GUARD	81	1
MOUNT, VOLT CHANGE SWITCH	58	18				PLATE, BATTERY SETTING	81	2
	66	15	PACKING	49	17	PLATE, FRICTION	37	5
MUFFLER COMP.	75	1		63	11		39	5
	76	1		66	8	PLATE, FUEL INDICATION	85	14
				68	11	PLATE, LOCK	87	5
				70	8	PLUG ASSY.	86	3
								4

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
PLUG ASSY., CONSENT	86	1	ROD, GOVERNOR	52	2		64	25
		2	ROD, PUSH	33	3		65	16
PLUG, SPARK	25	14	ROPE, RECOIL STARTER	37	11		66	21
PROTECTOR ASSY., MUFFLER INNER	76	13		38	10		68	21
PROTECTOR COMP., MUFFLER OUTER	75	2		39	11		70	18
	76	2	ROTATOR, VALVE	33	14	SCREW, PAN, 4X10	54	25
PROTECTOR, CIRCUIT	54	16	ROTOR COMP.	82	4		60	25
	55	16	RUBBER, BOTTOM	79	6		89	5
	58	21		7		SCREW, PAN, 5X12	43	43
	59	16	RUBBER, BUMP STOPPER	79	8		83	19
	61	18	RUBBER, FUEL	77	16	SCREW, PAN, 5X35	52	9
	63	18	RUBBER, FUEL TANK MOUNTING	79	3	SCREW, SETTING	37	12
	65	12	RUBBER, TANK CUSHION	77	15		39	12
	66	17				SCREW, TAPPING, 4X8	75	10
	68	17	[S]			SCREW, TAPPING, 5X10	80	23
	70	14	SCREEN, FUEL STRAINER	41	13	SCREW, TAPPING, 5X12	54	26
PROTECTOR, MUFFLER INNER	75	3		44	12		56	26
PULLEY, RECOIL STARTER	38	3		49	21		58	30
PULLEY, STARTER	45	2	SCREW-WASHER, 4X14	49	16		60	26
			SCREW-WASHER, 4X6	43	44		62	28
[R]			SCREW-WASHER, 5X12	66	23		64	29
RATCHET, STARTER	37	4	SCREW-WASHER, 5X16	69	24		65	18
		15		70	20		67	24
	38	4	SCREW-WASHER, 5X32	49	18		69	25
	39	4	SCREW A	50	7		70	21
RECEPTACLE	53	7	SCREW B	50	8		82	16
	57	7	SCREW C	50	13		83	18
		8	SCREW SET	41	5	SCREW, TAPPING, 5X14	83	17
		9		43	7	SCREW, TAPPING, 5X18	83	21
	61	8		44	5	SCREW, TAPPING, 5X8	76	9
	63	8		44	5	SCREW, THROTTLE STOP	41	9
		9		7			44	9
	65	5	SCREW SET, DRAIN	41	6	SCREW, TRUSS, 6X18	54	18
	66	5		44	6		55	18
		6	SCREW, CENTER	38	12		58	23
	68	6	SCREW, FLAT, 4X16	62	27		59	18
		7		64	27		62	20
		8		65	17		63	20
	70	5		68	22		65	21
		6	SCREW, FLAT, 4X20	56	25		67	29
RECTIFIER COMP., REGULATOR ...	53	5	SCREW, FLAT, 5X10	77	18		69	30
	55	6	SCREW, FLAT, 5X16	64	28	SCREW, TRUSS, 6X30	71	26
	57	5		66	22		54	19
	59	5		68	23		55	19
	61	6		70	19		58	24
	63	6	SCREW, METER VISOR SETTING	80	22		59	19
REEL, RECOIL STARTER	37	3	SCREW, OVAL	77	1		62	21
	39	3	SCREW, PAN, 3X16	54	24		63	21
RETAINER, EX. VALVE SPRING ...	33	12		56	24		65	22
RETAINER, IN. VALVE SPRING ...	33	11		58	29		67	30
		12		60	24		69	31
RETAINER, SPRING	38	8	SCREW, PAN, 3X16	62	26		71	27
RING SET, PISTON	31	1		64	26	SEAL	80	17
RING, RETAINER	50	9	SCREW, PAN, 3X5	54	23	SEAL, AIR CLEANER CASE	74	7
ROD ASSY., CONNECTING	32	4		56	23	SEAL, AIR CLEANER COVER	74	9
ROD COMP., PUSH	33	3		58	28	SEAL, CHOKE LEVER	42	35
ROD, CHOKE	42	23		60	23	SEAL, FUEL TANK	78	29
ROD, CHOKE CONTROL	42	28		62	25	SEAL, MUFFLER PROTECTOR	75	4
						SEAL, VALVE STEM	33	1

PART NAME INDEX

Part name	Page	Ref.	Part name	Page	Ref.	Part name	Page	Ref.
SEAT, VALVE SPRING	33	13	SWITCH ASSY., OIL LEVEL	27	4	WASHER, 6MM	62	24
SHAFT COMP., L. WHEEL	87	3	SWITCH ASSY., STARTER MAGNETIC	51	16	WASHER, 8.2X17X0.8	64	24
SHAFT COMP., R. WHEEL	87	2	SWITCH ASSY., VOLT CHANGE	58	17	WASHER, CHOKE LEVER	77	14
SHAFT COMP., WHEEL	88	2		66	14	WASHER, DRAIN PLUG, 12MM	27	7
SHAFT, GOVERNOR ARM	27	2	[T]			WASHER, FRAME JOINT	42	34
SHEET, HARNESS	72	2	TANK COMP., FUEL	77	7	WASHER, PLAIN	27	12
SHROUD	40	2	TERMINAL SET, EARTH	53	3	WASHER, PLAIN, 20MM	81	14
SLIDER, GOVERNOR	29	8		55	4	WASHER, PLAIN, 4MM	44	24
SOCKET	55	8		57	3	WASHER, PLAIN, 5MM	87	7
SPACER COMP., CARBURETOR	59	7		59	3	WASHER, PLAIN, 6MM	88	14
	44	15		61	4		89	7
SPRING, AIR CLEANER CASE LID .	74	5		63	4		43	46
SPRING, BRUSH RETURN	48	10		65	2		83	28
SPRING, CONTROL ADJUSTING	52	6		66	2		29	13
SPRING, FRICTION	37	7		68	3		54	28
	38	5		70	2		56	27
	39	7		70	2		58	32
SPRING, GOVERNOR	52	3	TERMINAL, D.C. OUTPUT	53	1		60	28
SPRING, MANUAL CHOKE	42	25		55	1		62	29
SPRING, RATCHET	38	7		57	1		64	31
SPRING, RECOIL STARTER	37	8		59	2		65	19
	39	8		61	1		67	26
SPRING, RETURN	37	9		63	1		69	27
	39	16		63	1		70	23
	39	9		63	1	WASHER, SPRING, 5MM	64	32
SPRING, STARTER RETURN	38	6		63	1		67	27
SPRING, THROTTLE RETURN	52	4		63	1		69	28
SPRING, VALVE	33	10		63	1		71	24
SPRING, WEIGHT RETURN	33	7		63	1		83	29
STAND COMP.	88	4	TERMINAL, VOLT CHANGE	82	1	WASHER, SPRING, 6MM	51	19
STARTER ASSY., RECOIL	37	1	TIE, CABLE	72	7		54	29
	38	14		82	13		56	28
	39	1		83	25		58	33
STARTER SET, RECOIL	37	17	TUBE, 3.5X75	43	48		60	29
STATOR ASSY.	82	2	TUBE, BREATHER	74	1		62	30
STAY ASSY., MANUAL CHOKE	42	19	TUBE, DIAPHRAGM	42	31		64	33
STAY COMP., DIAPHRAGM	42	20	TUBE, FUEL	77	13		65	20
STAY COMP., MUFFLER	75	8	TUBE, FUEL TANK	77	12		67	28
STAY, AIR CLEANER	74	4					69	29
STAY, MUFFLER	76	6	[V]				71	25
STOPPER, CHOKE ROD	42	24	VALVE ASSY., SOLENOID	41	14	WASHER, THRUST, 16.1MM	34	18
STRAINER, FUEL	77	4	VALVE SET, FLOAT	41	2	WASHER, THRUST, 2.7X8	42	36
SWITCH ASSY., COMBINATION	53	11		44	2	WEIGHT, BALANCER	30	2
	55	12	VALVE, DASHPOT CHECK	42	32	WEIGHT, GOVERNOR	29	5
	57	14	VALVE, EX.	33	9	WHEEL COMP.	87	4
	59	11	VALVE, IN.	33	8	WHEEL COMP., 254X63.5	88	3
	61	13				WHEEL KIT	87	1
	63	14					88	1
SWITCH ASSY., ENGINE STOP	53	13	[W]			WIRE, WATER COVER	48	13
	55	14	WASHER	50	11	WRENCH, PLUG	86	5
SWITCH ASSY., ENGINE STOP	58	16		51	18			
	59	13		51	18	[Y]		
	61	15	WASHER COMP., HEAD COVER	25	10	YOKE COMP.	48	9
	65	10	WASHER, 10.5MM	83	24			
	66	13	WASHER, 4MM	54	22			
	68	15		56	22			
	70	12		58	27			
				60	22			

1

FOREWORD INDEX

2

ENGINE GROUP

3

FRAME GROUP

4

PART NUMBER INDEX

5

PART NAME INDEX



April 13, 2015



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	001

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
F-31	6	E	87152-Z30-B81	*PART NO. DELETION							
		E	87152-Z30-D81	*PART NO. DELETION							

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO.CORRECTION L:APPLICATION SERIAL NO.CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	002

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
E-3	3	L	34150-ZH7-013	ALERT UNIT, OIL.....	1	1	1	1	-	----- 0303719	KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H SKH, UH
		T	34150-ZH7-023		1	1	1	1	-	0303720 -----	KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H SKH, UH
					-	1	-	1	-	-----	REH
E-6	16	T	91001-Z7E-003	BEARING, RADIAL BALL, 6207....	1	1	1	-	-	0449985 -----	KH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH UH
					-	1	-	1	-	-----	REH
					-	-	-	1	-	0449985 -----	KH, LBH, LD1H, LT1H, MH, RH, S1H, SK1H
E-7	3	T	91002-Z7E-003	BEARING, BALL RADIAL, 6207SH2.	1	1	1	-	-	0460960 -----	KH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H, SKH UH
					-	1	-	1	-	-----	REH
					-	-	-	1	-	0460960 -----	KH, LBH, LD1H, LT1H, MH, RH, S1H, SK1H
E-8	4	T	13200-Z7E-000	ROD ASSY., CONNECTING..... (IDENT MARK Z)	1	1	1	1	-	0373907 -----	KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H SKH, UH
				(IDENT MARK Z)	-	1	-	1	-	-----	REH

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

PARTS CATALOGUE NEWS

BOOKNo. : 13Z30B04

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
	5	T	90001-Z7E-000	BOLT, CONNECTING ROD..... (FOR 13200-Z7E-000)	2	2	2	2	-	0373907 -----	KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H SKH, UH
				(FOR 13200-Z7E-000)	-	2	-	2	-	-----	REH

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

December 24, 2015



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	003

EG6500CXS-RAH type sales information

NOTE: This Parts Catalogue News explains only the parts of the different model that are produced to conform to addition of the EG6500CXS-RAH type.

As for the parts not listed on this Parts Catalogue News, use the parts of the EG6500CXS-RH type.

BOOKNo. : 13Z30B04

•Models, parts catalogue codes and applicable serial numbers

Model	Type		Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
				Model	Type			
EG6500CXS	RH	Base type	RH	GX390H1	ED2	GCAFH-0000001~	EBDC-1000001~	BE89V A BE95H A
	RAH	Additional type	RAH					BE95H A

•Features of each type


		Base type	Additional type
Specifications	Model	EG6500CXS	
	Type	RH	RAH
Rated output	5.0kVA	●	●
	5.5kVA		
	3.68/5.0kVA		
Consent plug	15A / 125V		
	16A / 250V (VDE standard in Germany and Austria)		
	20A / 250V	●	
Spark arrester			
Starter motor		●	●

PARTS CATALOGUE NEWS

BOOKNo. : 13Z30B04

Block No.	Ref. No.	Part No.	Description	Reqd. QTY					Base Part No.	Parts catalogue code
				EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
E-2	9	90042-Z7E-D00	BOLT, STUD, 8X115.....	-	-	-	2	-		RAH
E-8	1		RING SET, PISTON(STD.) (FUJIAN DONGYA MACHINERY)	-	-	-	0	-	13010-Z7E-701	RAH
			RING SET, PISTON(0.25) (FUJIAN DONGYA MACHINERY)	-	-	-	(0)	-	13011-Z7E-701	RAH
			RING SET, PISTON(0.50) (FUJIAN DONGYA MACHINERY)	-	-	-	(0)	-	13012-Z7E-701	RAH
			RING SET, PISTON(0.75) (FUJIAN DONGYA MACHINERY)	-	-	-	(0)	-	13013-Z7E-701	RAH
E-14	26	17228-Z5T-000	PACKING, AIR CLEANER.....	-	-	-	1	-	16269-ZA0-800	RAH
E-19	2	28451-Z7E-701	PULLEY, STARTER.....	-	-	-	1	-	28451-Z7E-700	RAH
	4	31110-Z7E-612	FLYWHEEL COMP. (SEL-LAMP).....	-	-	-	1	-		RAH
E-20	1	30500-Z7E-003	COIL ASSY., IGNITION.....	-	-	-	1	-		RAH
	3	30700-Z1T-003	CAP ASSY., NOISE SUPPRESSOR...	-	-	-	1	-		RAH
	7	36101-ZE3-800	CORD, STOP SWITCH(470MM).....	-	-	-	1	-		RAH
	9	90017-883-000	BOLT, FLANGE, 6X32 (CT200).....	-	-	-	2	-	90014-ZE6-000	RAH
	11	90012-888-000	BOLT, FLANGE, 6X40 (CT200).....	-	-	-	2	-	90016-ZE8-000	RAH

BOOKNo. : 13Z30B04

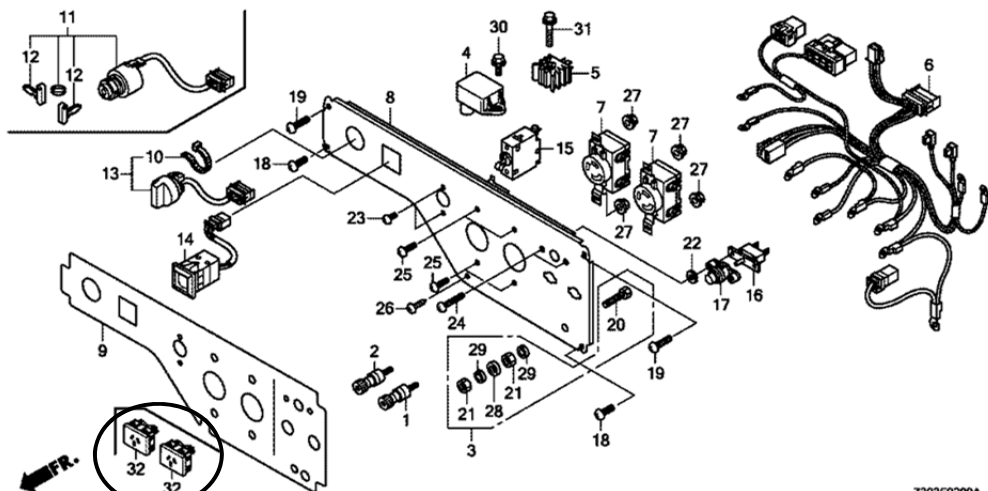
Block No.	Ref. No.	Part No.	Description	Reqd. QTY					Base Part No.	Parts catalogue code																
				EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL																		
F-2 CONTROL PANEL (1)																										
<table><tr><th>Ref. No.</th><th>LON</th><th>(Relative ref. Number) Description</th><th>FRT</th></tr><tr><td>7</td><td></td><td>(32)</td><td></td></tr><tr><td>6221D5</td><td></td><td>RECEPTACLE/CONSENT, CONTROL PANEL</td><td>0.7</td></tr><tr><td>6221E5</td><td></td><td>RECEPTACLE/CONSENT, CONTROL PANEL :ALL</td><td>0.8</td></tr></table>				Ref. No.	LON	(Relative ref. Number) Description	FRT	7		(32)		6221D5		RECEPTACLE/CONSENT, CONTROL PANEL	0.7	6221E5		RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8							
Ref. No.	LON	(Relative ref. Number) Description	FRT																							
7		(32)																								
6221D5		RECEPTACLE/CONSENT, CONTROL PANEL	0.7																							
6221E5		RECEPTACLE/CONSENT, CONTROL PANEL :ALL	0.8																							
Z303F0200A																										
F-2	6	32150-Z30-V00	HARNESS ASSY., CONTROL WIRE (CXS-RA)	-	-	-	1	-	32150-Z30-B60	RAH																
	7		RECEPTACLE (20A/250V)	-	-	-	0	-	32330-Z15-R60	RAH																
	8	32345-Z30-V00ZA	PANEL COMP., CONTROL (CXS-RA) *NH105*... MAT BLACK (#15-#20)	-	-	-	1	-	32345-Z30-B60ZA	RAH																
	9	32366-Z30-V00	MARK, PANEL (CXS-RA)	-	-	-	1	-	32366-Z30-B60	RAH																
	25		SCREW, PAN, 4X10.	-	-	-	0	-	93500-04010-1A	RAH																
	27		NUT, FLANGE, 4MM.	-	-	-	0	-	94050-04000	RAH																
	32	32330-Z37-S60	RECEPTACLE (20A-250V)	-	-	-	2	-		RAH																
F-2-20	6	32370-Z30-D62	BOX ASSY., JUNCTION.	-	-	-	1	-	32370-Z30-D61	RAH																
	15	95701-06020-00	BOLT, FLANGE, 6X20.	-	-	-	3	-	96001-06020-00	RAH																
	17	32371-Z30-D62	COVER, FUSE.	-	-	-	1	-	32371-Z30-D61	RAH																
F-14	6	17223-Z23-H61	BASE COMP., AIR CLEANER.	-	-	-	1	-	17223-Z23-H60	RAH																

PARTS CATALOGUE NEWS

BOOKNo. : 13Z30B04

Block No.	Ref. No.	Part No.	Description	Reqd. QTY					Base Part No.	Parts catalogue code
				EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
F-15	1	18310-Z30-D62	MUFFLER COMP.....	-	-	-	1	-	18310-Z30-D61	RAH
F-16	7	17510-Z30-010ZA	TANK COMP., FUEL *R280*..... POWER RED	-	-	-	1	-	17510-Z30-000ZA	RAH
	9	17630-Z30-020	METER ASSY., FUEL.....	-	-	-	1	-	17630-Z30-010	RAH
F-29	10	31720-ZA8-V00	DIODE COMP., D.C.....	-	-	-	1	-	31720-ZA8-013	RAH

F-31 LABEL

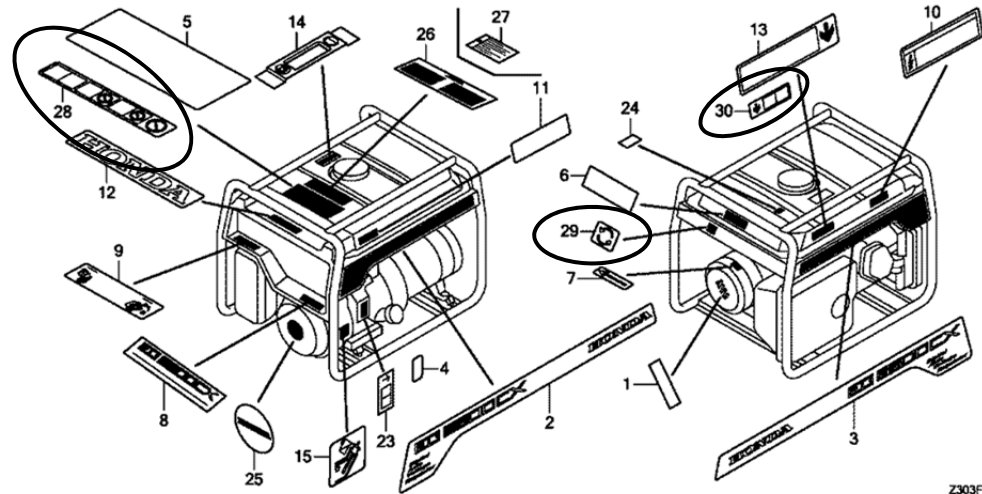

Z303F3100G

F-31	5		MARK, CAUTION.....	-	-	-	0	-	87150-Z11-A70	RAH
	6		MARK, SPEC (CXS-R).....	-	-	-	0	-	87152-Z30-B60	RAH
	9	87403-Z30-R70	MARK, OPERATION (RG).....	-	-	-	1	-	87403-Z30-D60	RAH
	11		LABEL, OIL ALERT.....	-	-	-	0	-	87530-ZR4-H60	RAH
	13		MARK, EX. CAUTION.....	-	-	-	0	-	87539-Z30-D60	RAH
	25	87531-Z15-000	MARK, HONDA.....	-	-	-	1	-		RAH
	28	87150-Z36-D60	MARK A, CAUTION.....	-	-	-	1	-		RAH

PARTS CATALOGUE NEWS

BOOKNo. : 13Z30B04

Block No.	Ref. No.	Part No.	Description	Reqd. QTY					Base Part No.	Parts catalogue code
				EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
	29	87178-Z36-D80	MARK, DIRECTION.....	-	-	-	1	-		RAH
	30	87540-Z26-S70	MARK, HOT CAUTION.....	-	-	-	1	-		RAH
F-32	2		PLUG ASSY., CONSENT (20A-250V).	-	-	-	0	-	32310-Z15-R60	RAH

January 11, 2016



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	004

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
E-8	2	A	13101-Z1C-900	PISTON (STD.).....	-	-	-	-	1	1458490	-----
			13101-Z5T-800		-	-	-	-	1	-----	1458489
	4		13200-Z1C-000	ROD ASSY., CONNECTING (STD.)...	1	1	1	1	-		
					-	-	-	-	1	-----	1458489
		A	13200-Z1C-900		-	-	-	-	1	1458490	-----

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

August 22, 2016



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	005

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
F-2-10	15	E	35120-Z30-801	*PART NO. DELETION							
		D	35120-Z30-802	SWITCH ASSY., ENGINE STOP.....	-	-	-	-	1	-----	FT

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

December 01, 2016



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	006

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
E-20-1	3	E	30700-Z1C-811	* PART NO. DELETION							
		D	30700-Z1C-813	CAP ASSY., NOISE SUPPRESSOR (NGK Y-EZD)	-	-	-	-	1		
F-2-8	10	E	35120-Z30-801	*PART NO. DELETION							
		T	35120-Z30-802	SWITCH ASSY., ENGINE STOP.....	-	-	-	-	1	-----	CLT, GT, GWT, GWT1
F-2-9	13	E	35120-Z30-801	*PART NO. DELETION							
		D	35120-Z30-802	SWITCH ASSY., ENGINE STOP.....	-	-	-	-	1	-----	BT
F-2-11	12	E	35120-Z30-801	*PART NO. DELETION							
		D	35120-Z30-802	SWITCH ASSY., ENGINE STOP.....	-	-	-	-	1	-----	ITT

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z30B04
PARTS CATALOGUE NEWS	EG5500CX EG6500CX EG5500CXS EG6500CXS EG5500CL
NEWS NO.	007

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY					Serial No.	Parts catalogue code
					EG 5500 CX	EG 6500 CX	EG 5500 CXS	EG 6500 CXS	EG 5500 CL		
E-19	2	E	28451-Z7E-700	*PARTS NO. DELETION							
		T	28451-Z7E-701	PULLEY, STARTER.....	1	1	1	1	-	0294457	KH, LBH, LD1H, LDH, LT1H, LTH, MH, RGH, RH, S1H, SH, SK1H SKH, UH
					-	1	-	1	-	-----	RAH, REH
F-14	6	T	17223-Z23-H60	BASE COMP., AIR CLEANER.....	-	1	-	1	-	-----	LDH, LTH, SH, SKH
		T	17223-Z23-H61		1	1	1	1	1	-----	BT, CLT, FT, GT, GWT, GWT1, ITT, KH, LBH, LD1H, LT1H, MH RAH, REH, RGH, RH, S1H, SK1H, UH
F-15	1	T	18310-Z30-D61	MUFFLER COMP.....	-	1	-	1	-	-----	LDH, LTH, SH, SKH
		T	18310-Z30-D62		1	1	1	1	-	-----	KH, LBH, LD1H, LT1H, MH, RAH, REH, RGH, RH, S1H, SK1H, UH
F-16	9	E	17630-Z30-000	*PARTS NO. DELETION							
		T	17630-Z30-010	METER ASSY., FUEL.....	-	1	-	1	-	-----	LDH, LTH, SH, SKH
		T	17630-Z30-020		1	1	1	1	1	-----	BT, CLT, FT, GT, GWT, GWT1, ITT, KH, LBH, LD1H, LT1H, MH RAH, REH, RGH, RH, S1H, SK1H, UH

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE