

GENERATOR

EM10000
EM10000K1
ET12000
ET12000K1

PARTS CATALOGUE

4



EM10000

FOREWORD INDEX

1

ENGINE GROUP

2

FRAME GROUP

3

PART NUMBER INDEX

4

PART NAME INDEX

5

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of July 01, 2012.**
- See the parts catalogue news for any revision that is made after July 01, 2012.
- **Always specify the part number when ordering a part.**
 - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
 - Note that the illustrations (part drawings) can differ from the actual parts in shape. They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**


Initial version issue date October 01, 2006
Honda Motor Co., Ltd.

CONTENTS

	Page	Address No.
● Instruction for use of parts catalogue	1	B 1
● How to refer to the part information	2	B 2
● Part catalogue structure	3	B 3
● When the parts were revised	4	B 4
● Abbreviations used in the parts catalogue	4	B 4
● How to check the part block and serial numbers	5	B 5
● Models, parts catalogue codes and applicable serial numbers	6	B 6
● Features of each type	8	B 8
● Fuel hose, general purpose hoses and vinyl hose	10	B10
● FLAT RATE SERVICE TIME	11	B11
● Illustrated index	17	C 1
● ENGINE GROUP	22	D 1
● FRAME GROUP	66	G 1
● PART NO. INDEX	93	I 1
● PART NAME INDEX	97	J 1

How to refer to the part information

A Reference with "Illustrated index"

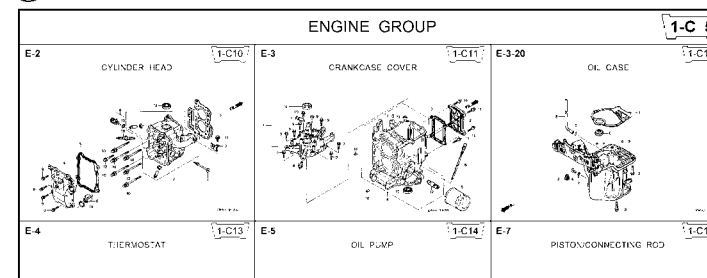

B Reference with "Part number index"

Part Number	Address	Page	Ref.	Part Number	Address	Page
06000				15212-ZW9-000	1-C14	3C
06316-ZW9-000	1-G9	88	1	15220-ZW9-003	1-C14	3C
11000				15332-ZW9-000	1-E8	55
11300-ZW9-405	1-C11	27	1	15332-ZW9-A30	1-E11	58
11300-ZW9-406	1-C11	27	1	15400-PFB-004	1-C11	27
11340-ZW9-000	1-C11	27	2	15422-ZW9-000	1-C14	3C
11342-ZW9-000	1-C11	27	3	15473-881-000	1-C14	3C
11381-ZW9-003	1-C12	28	1	15474-ZW9-000	1-C14	3C
12000				15611-921-000	1-C10	26
12000-ZW9-405ZA	1-C11	27	4	15655-ZW9-000	1-C11	27
12155-ZV4-A00	1-C13	29	1	16000		
12166-ZW9-000	1-C10	26	1	16010-ZV4-005	1-D4	36
12209-GB4-681	1-C16	32	1	16011-ZV4-005	1-D4	36
12210-ZW9-405ZA	1-C10	26	2	16013-ZW9-003	1-D4	36
12216-ZE2-300	1-E8	55	1	16016-ZW9-003	1-D4	36
	1-E11	58	1	16016-ZW9-721	1-D4	36
				16023-ZW9-003	1-D4	36
				16024-ZV4-650	1-D4	36
				16028-ZV4-650	1-D4	36

C Reference with "Part name index"

Partname	Address	Page	Ref.
[A]			
ABSORBER, FUEL	1-E15	62	5
ARMATURE COMP.	1-D11	43	7
ARM COMP., LINK JOINT	1-G6	85	18
ARM COMP., SHIFT LINK	1-G6	85	14
ARM COMP., TILT	1-F15	79	20
ARM, FUEL PUMP ROCKER	1-C16	32	4
ARM, REVERSE LOCK	1-F15	79	18
ARM, SHIFT LINK	1-F11	74	7
ARM, STOPPER	1-D1	33	12
ARM, THROTTLE REMOTE	1-F11	74	6
ARM, VALVE ROCKER	1-C16	32	3
[B]			
BAG, TOOL, 160MM	1-G5	84	10
BAND	1-G6	86	37
BAND B1, WIRE	1-F6	69	1
BAND, CORD	1-F3	67	18
BAND, TUBE CLIP, 11MM	1-E15	63	20
BAND, TUBE CLIP, 12.5MM	1-E15	63	19

Address No. 1-C10

Block No. E-2

Ref No.

Service item F.R.T.

O-RING, 26X2.7	0.1
PLUG, SPARK	0.2
O-RING, 9.5X1.5	0.2
SENSOR ASSY., WATER TEMPERATURE	0.3
COVER COMP., HEAD	1.8
GASKET, CYLINDER HEAD	2.4
OIL SEAL, 20X32X6	3.1
HEAD COMP., CYLINDER	3.1

Ref. No.	Part No.	Description	Reqd. QTY						Serial No.	Parts catalogue code
			9901	9901	9901	1001	1001	1001		
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1		
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1	SC,SG	
	16617-ZW9-010		1	1	1	1	1	1	1001801 LHC,LHD	
			1	1	1	1	1	1	1001801 LHC,LHD	
8	35673-ZW5-003	SENSOR ASSY., WATER TEMPERATURE	1	1	1	1	1	1		
9	90003-ZW9-000	BOLT, FLANGE, 6X22	4	4	4	4	4	4		
10	90007-ZW9-003	BOLT, FLANGE, 8X83	6	6	6	6	6	6		
11	90011-ZW9-000	BOLT, FLANGE, 6X14 (CT200)	1	1	1	1	1	1		
12	90020-ZW9-000	BOLT, FLANGE, 8X40	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7	1	1	1	1	1	1		
15	91307-PK2-005	O-RING, 9.5X1.5 (HONDA KIKAKI)	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16FER9)	2	2	2	2	2	2		

2000.09.20 E

Page No.

When the parts were revised



Be sure to check the serial number!!



Ref. No.	Part No.	Description	Reqd. QTY						Serial No.
			BF 99D1	BFP 99D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER							
		NH8.....DARK GRAY	1	1	1	1	1	1	
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1	
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1	
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1	
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1	
7	16617-ZW9-000	HOLDER, CABLE (###)	1	1	1	1	1	1	
	16617-ZW9-010		1	1	1	1	1	1	

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.






- The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).

Abbreviations used in the parts catalogue

- The following abbreviations are used in the parts name column.

A Ampere	FR.Front
A.C. Alternating current	IN.Inlet
ASSY. Assembly	L (100L) .Link (100 Links)
AT. Automatic transmission	L.Left
C.D.I. Capacitive discharge ignition	MMMillimeter
COMP. ... Complete	MT.Manual Transmission
D.C. Direct current	P.T.O.Power take off
EX. Exhaust	R.Right
G.F.C.I ... Ground fault circuit interruptor	RR.Rear
HEX. Hexagonal	STD.Standard
H.S.T. Hydrostatic transmission	T (22T) ...Tooth (22 Teeth)
	VVolt
	WWatt

How to check the part block and serial numbers

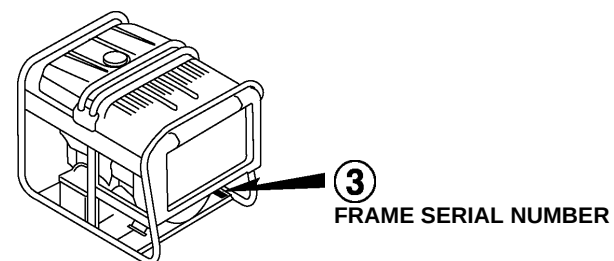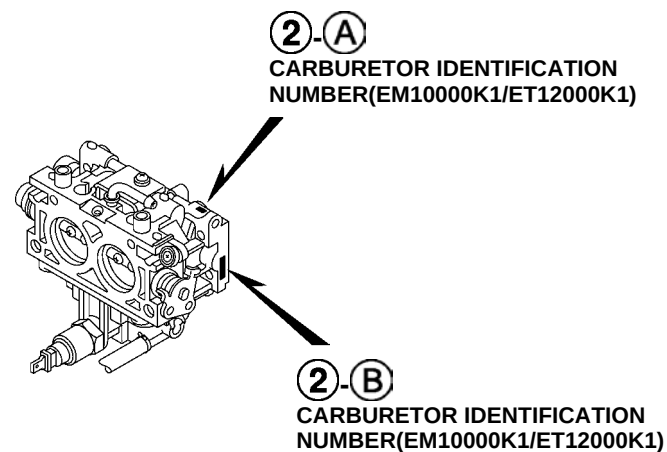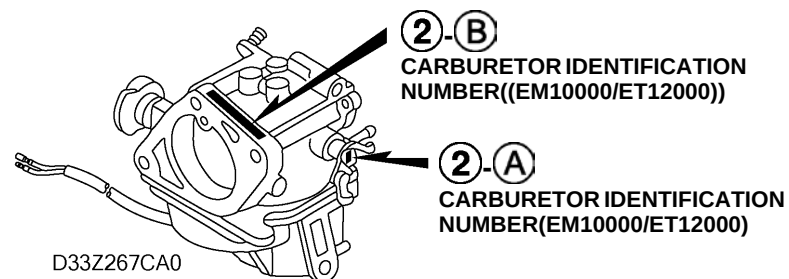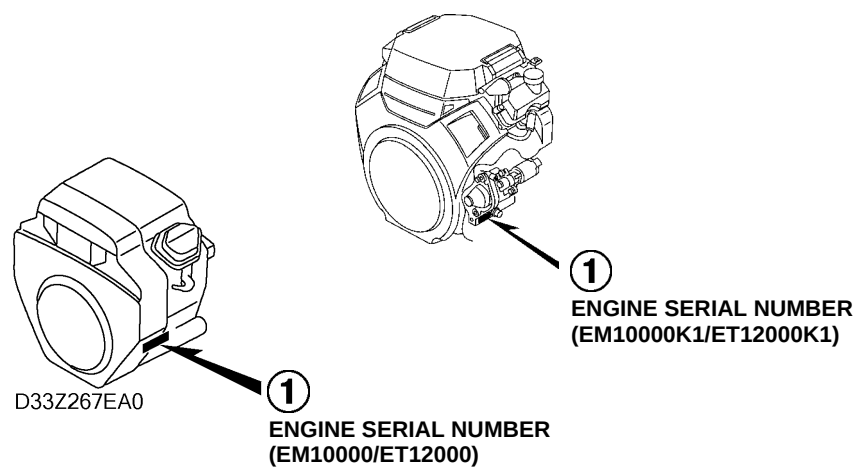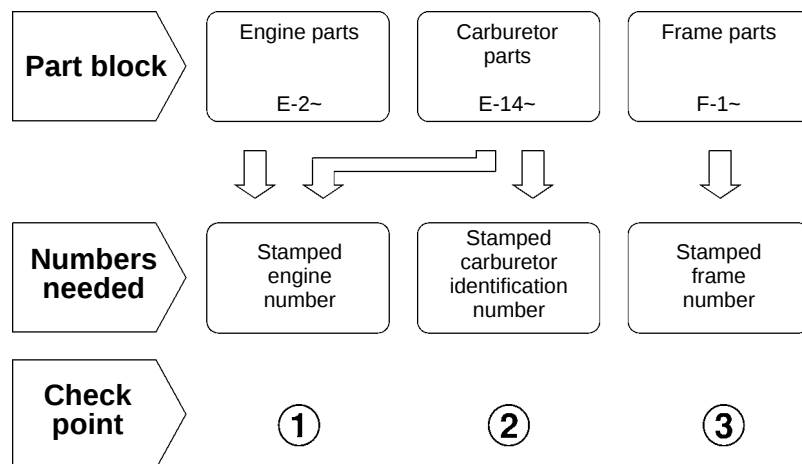

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
EM10000	R	R	GX620K1	EY3	GCAD-2160001~	EATJ-1000001~	BG22L D
	RG	RG					
	RH	RH				EAYC-1000001~	
	K	K				EATJ-1000001~	
EM10000K1	KH	KH	GX630H	EY1	GCAJH-1000001~	EBTC-1000001~	BK07Q A
	LDH	LDH		EY2			BK07A C
	MH	MH		EY1			BK07Q A
	RGH	RGH					
	RRH	RRH		EY2			BK07A C
	SH	SH					
	SKH	SKH		EY1			BK07Q A
	UH	UH					

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
ET12000	R	R	GX620K1	EY3	GCAD-2160001~	EAUJ-1000001~	BG22L D
	RG	RG					
	RH	RH				EBAC-1000001~	
ET12000K1	RGH	RGH	GX630H	EY1	GCAJH-1000001~	EBUC-1000001~	BK07Q A
	RRH	RRH					

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

BG 22L D KC ナ
 (A) (B)

Features of each type

- See the following table for the features of each type. (Items in brackets are optional)

Specifications		Model	EM10000				EM10000K1							
		Type	R	RG	RH	K	KH	LDH	MH	RGH	RRH	SH	SKH	UH
Consent	15A/250V													●
	16A/250V								●				●	
	20A/125V							●						
	20A/250V	●	●	●	●	●				●	●	●		
	30A/125V							●						
	30A/250V	●	●	●	●	●				●	●	●		
	60A/250V	●	●	●	●	●		●	●	●	●	●	●	●
	30A-125/250V							●						
	32A-240/415V													
	50A-125/250V							●						
Circuit breaker	16A													
	17A													
	36A													●
	38A		●				●			●				
	39A			●										
	40A	●			●			●		●				
	41A							●						
	45A											●	●	

Specifications		Model	ET12000			ET12000K1	
		Type	R	RG	RH	RGH	RRH
Consent	15A/250V						
	16A/250V						
	20A/125V						
	20A/250V		●	●	●	●	●
	30A/125V						
	30A/250V						
	60A/250V						
	30A-125/250V						
	32A-240/415V					●	●
	50A-125/250V						
Circuit breaker	16A			●	●	●	
	17A		●				●
	36A						
	38A						
	39A						
	40A						
	41A						
	45A						

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
(For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:

Refers to the bulk part.

Marking code (fuel hose and general purpose hose)

Change code (Vinyl hose)

Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

- Fuel hose
 - 2: Red outside braid (3 mm inside dia. only)
 - 5: Black inside braid
 - 3: Red (3 mm inside dia. only)
 - 4: Ash gray with red stripe (3 mm inside dia. only)
 - 6: Black

- General hose
 - 1: Ash gray
 - 2: Ash gray
 - 3: Black
 - 5: Black

- Vinyl hose
 - 1: Clear
 - 2: Black
 - 3: Light red
 - 6: Light red
 - 7: Pale black

Lengths:

001: 1 m (standard)
003: 3 m
008: 8 m

} Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm
35: 3.5 mm
45: 4.5 mm

50: 5.0 mm
55: 5.3 mm, 5.5 mm
65: 6.5 mm

70: 7.0 mm
75: 7.3 mm, 7.5 mm
80: 8.0 mm

11: 11 mm
91: 12 (outside dia. 15) mm
92: 12 (outside dia. 16) mm

12: 12 (outside dia. 17) mm
14: 14 mm
17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm
03: ID. 3.0, OD. 6.0 mm
05: ID. 3.5, OD. 6.5 mm
07: ID. 4.0, OD. 7.0 mm
08: ID. 4.5, OD. 6.5 mm
09: ID. 4.5, OD. 8.0 mm

12: ID. 5.0, OD. 7.0 mm
10: ID. 5.0, OD. 8.0 mm
11: ID. 5.0, OD. 9.0 mm
14: ID. 6.0, OD. 9.0 mm
17: ID. 7.0, OD. 9.0 mm
19: ID. 7.0, OD. 11.0 mm

21: ID. 8.0, OD. 9.0 mm
23: ID. 8.0, OD. 12.0 mm
25: ID. 9.0, OD. 11.0 mm
27: ID. 9.0, OD. 13.0 mm
33: ID. 10.0, OD. 14.0 mm
36: ID. 11.0, OD. 13.0 mm

37: ID. 11.0, OD. 15.0 mm
38: ID. 12.0, OD. 13.0 mm
39: ID. 12.0, OD. 14.0 mm
40: ID. 12.0, OD. 16.0 mm
43: ID. 13.0, OD. 15.0 mm
45: ID. 14.0, OD. 18.0 mm

50: ID. 16.0, OD. 19.0 mm
55: ID. 17.5, OD. 20.5 mm
60: ID. 22.0, OD. 27.0 mm

Hose type:

- 1: Fuel hose
- 3: Vinyl hose
- 5: General hose


⊙ **CAUTION:** It is **DANGEROUS** to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

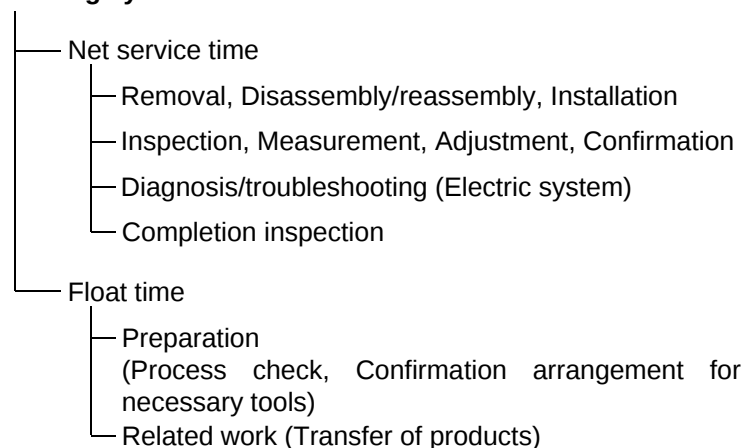

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
Example: (0.1) → 6 minutes, (0.2) → 12 minutes
[Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
- Locations with little aging deterioration or breakage during normal use.
- Service work that can be finished by one touch.
- Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
- Products and parts whose location for installation differs according to its status of use and application.

* When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water drainig, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
① ②	1111L1	(1, 3, 4, 7) VALVE, INTAKE 4.1	②
③	1111L1A	• NOTE: OHV type • Includes: Engine removal and installation One head (intake all) add 1.4	⑦ ⑤

- ① Reference No. of the illustration of part that shows location of the replacement work.
- ② FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.
- ③ LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.


- ④ Indicating the intake valve replacement and FRT4.1.
- ⑤ Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

- ⑥ Indicating work condition or application condition of the service item.
- ⑦ Indicating work contents that are included in the service item.
- ⑧ Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
 (intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.



Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111L1	VALVE, INTAKE	4.1
	.	.	.
	.	.	.

+

Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION			

• LON code system

1	11	1	L1	A
a	b	c	d	e

- a) Category code..... Engine
- b) Location/function code Engine upper
- c) Operation code..... Replace
- d) Operation sequence number (Unit code can be shown with alphabet)
..... Intake valve
(No regular rule of code)
- e) Additional code One head (intake all)
(No regular rule of code)

1	11	1	L1	A
a		c		

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurement
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts

(1) Removal/Installation, (2) Adjustment,
(3) Inspection/Measurement, (4) Overhaul, (5) Other work

E: Engine, T: Transmission, D: Drive system,
B: Body and related parts

(1) Removal/Installation

Set with the parts configuration in the status of being removed from the product.

	LON	DESCRIPTION	FRT
E	1001A2	ENGINE-REMOVAL/INSTALLATION	1.9
	1001B3	ENGINE-REMOVAL/INSTALLATION(A) NOTE: K1 type	2.1
	1111N0	CYLINDER HEAD ASSEMBLY-REMOVAL/INSTALLATION	1.7
		LEFT	
		RIGHT	
	1111N2	BOTH	2.5
	1111BP	CYLINDER HEAD ASSEMBLY-REMOVAL/INSTALLATION(A) NOTE: K1 type	2.5
		LEFT	
		RIGHT	
	1111BR	BOTH	3.2
B	3101H1	FUEL TANK-REMOVAL/INSTALLATION	0.2
	3101U9	FUEL TANK-REMOVAL/INSTALLATION(A) NOTE: K1 type	0.3
	6221B3	CONTROL PANEL ASSEMBLY-REMOVAL/INSTALLATION	0.6
	6221T7	CONTROL PANEL ASSEMBLY-REMOVAL/INSTALLATION(A) NOTE: K1 type	0.8

(2) Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	VALVE CLEARANCE-ADJUSTMENT NOTE: For 1 product	0.7
	1113A8	VALVE CLEARANCE-ADJUSTMENT(A) NOTE: For 1 product NOTE: K1 type	0.5
	1163A0	CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT	0.4
	1163A5	CONTROL, THROTTLE/GOVERNOR-ADJUSTMENT(A) NOTE: K1 type	0.4
	3113A2	CARBURETOR IDLE-ADJUSTMENT	0.2
	3113B2	CARBURETOR IDLE-ADJUSTMENT(A) NOTE: K1 type	0.2

(3) Inspection, Measurement, Cleaning

	LON	DESCRIPTION	FRT
E	1105A0	ENGINE OIL-INSPECTION	0.1
	1115A0	CYLINDER COMPRESSION-TEST NOTE: All cylinders	0.4
	1135A0	ENGINE OIL PRESSURE-TEST	0.3
	3120A0	AIR CLEANER-CLEANING INCLUDES: Air cleaner-inspection	0.2
	3130A0	SPARK ARRESTER-CLEANING INCLUDES: Spark arrester-inspection	0.2
	6140A0	SPARK PLUG-ADJUSTMENT/CLEANING INCLUDES: Spark plug check NOTE: For 1 product	0.2

(4) Overhaul

Work condition: The required Measurements, inspections, adjustments, and cleaning/washing of each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	CARBURETOR-OVERHAUL INCLUDES: All necessary adjustment	0.8
	3112A3	CARBURETOR-OVERHAUL(A) INCLUDES: All necessary adjustment NOTE: K1 type	1.7

(5) Other work

	LON	DESCRIPTION	FRT
E	1101E1	ENGINE OIL-CHANGE INCLUDES: Engine oil-inspection	0.2


ENGINE GROUP

C 1

E-2

D 1


CYLINDER HEAD(1)

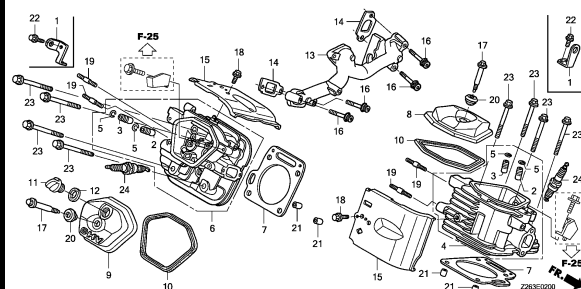

E-2-1

D 3


CYLINDER HEAD(2)

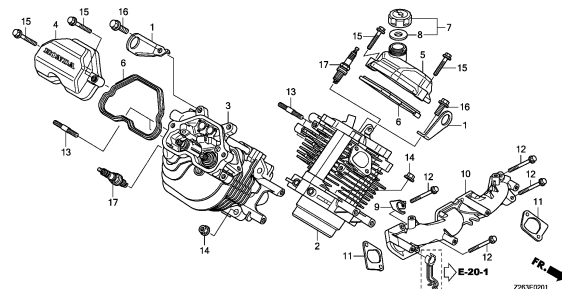

E-3

D 5


CYLINDER BARREL(1)

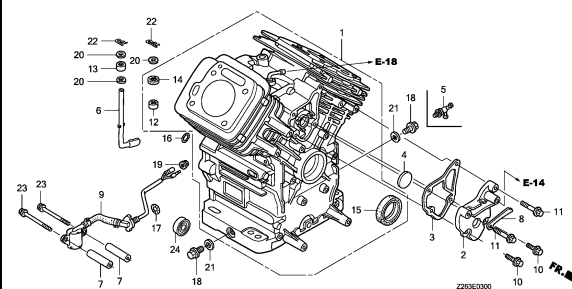

E-3-1

D 7


CYLINDER BARREL(2)

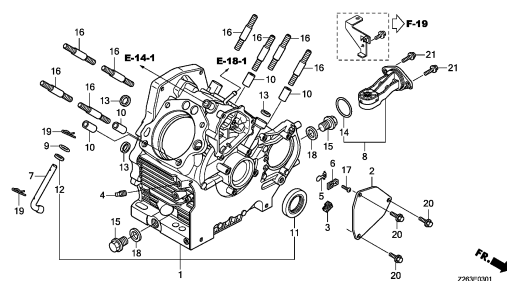

E-6

D 8


CRANKCASE COVER(1)

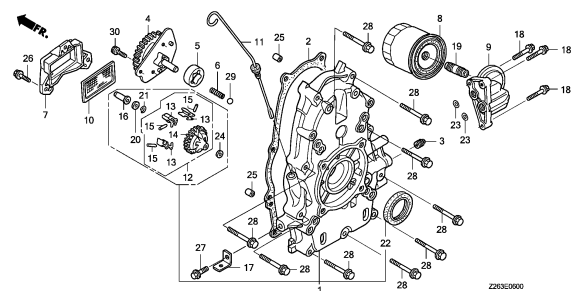

E-6-1

D10


CRANKCASE COVER(2)

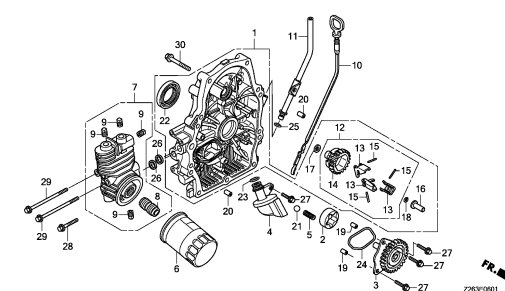

E-7

D12


CRANKSHAFT

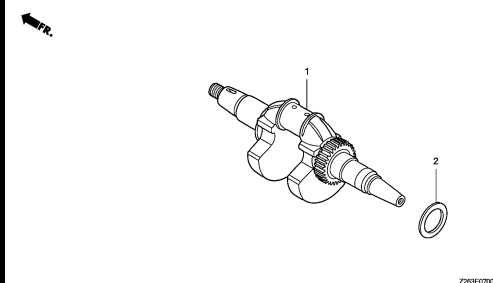

E-8

D13


PISTON(1)

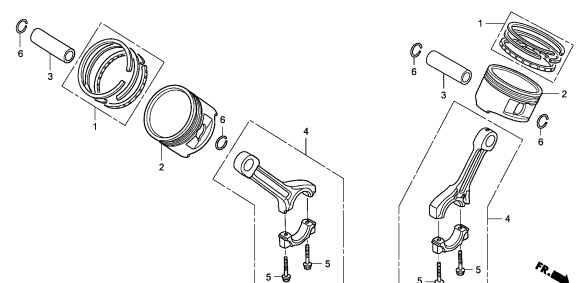

E-8-1

D14

PISTON(2)

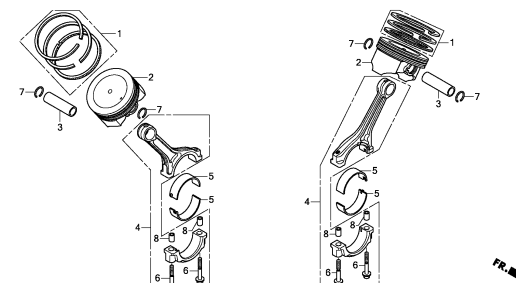

2


ENGINE GROUP

C 2

E-9

D15


CAMSHAFT(1)

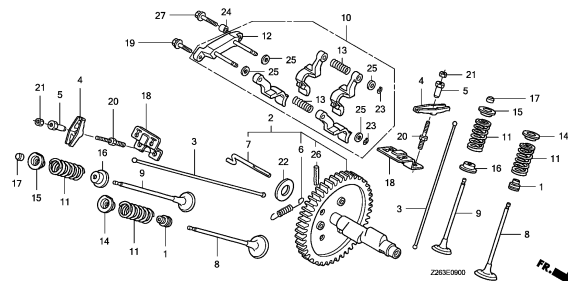

E-9-1

E 4


CAMSHAFT(2)

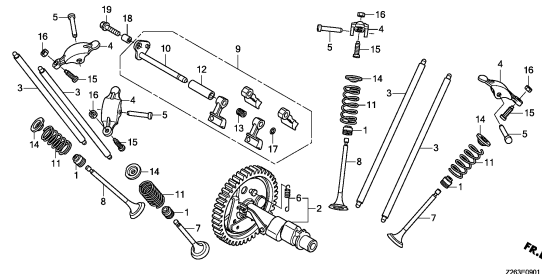

E-12

E11


FAN COVER(1)

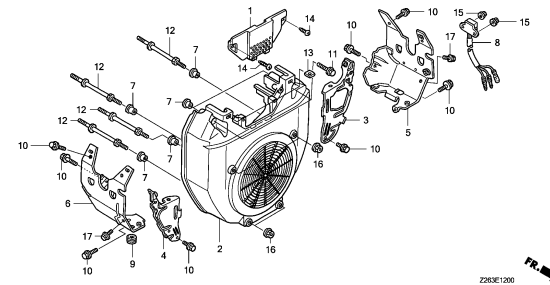

E-12-1

E12


FAN COVER(2)

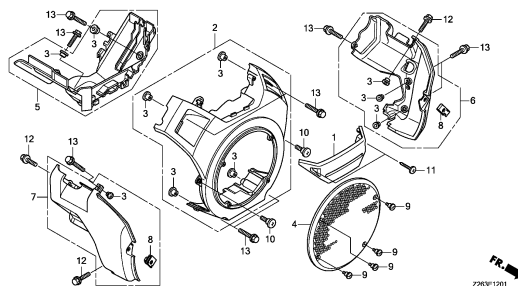

E-14

E13


CARBURETOR(1)

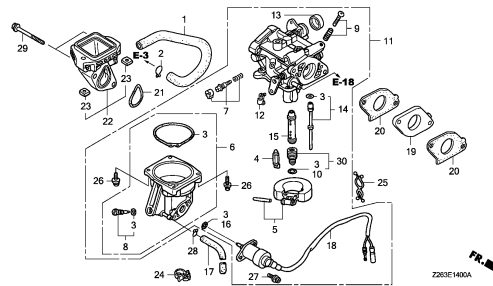

E-14-1

E15


CARBURETOR(2)

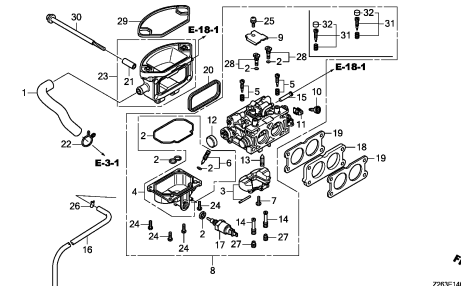

E-15

F 1


AIR CLEANER(1)

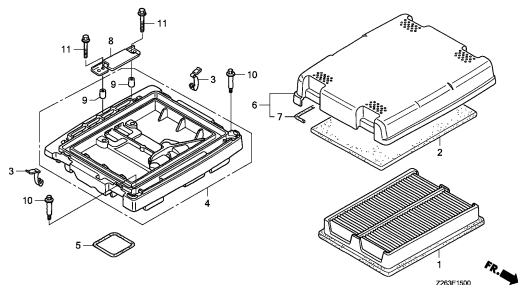

E-15-1

F 2


AIR CLEANER(2)

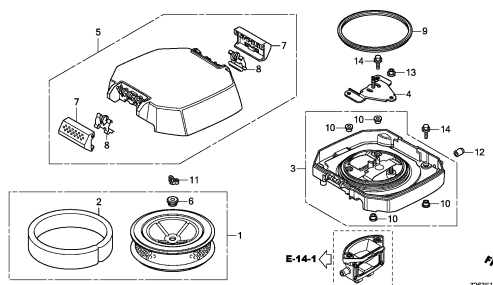

E-18

F 3

FUEL PUMP(1)

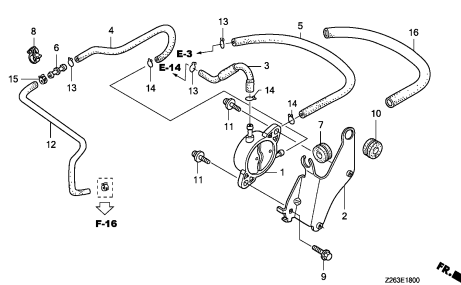


ENGINE GROUP

C 3

E-18-1

FUEL PUMP(2)

F 4

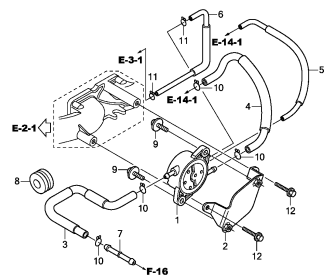


Z263E1801

E-19

FLYWHEEL(1)

F 5

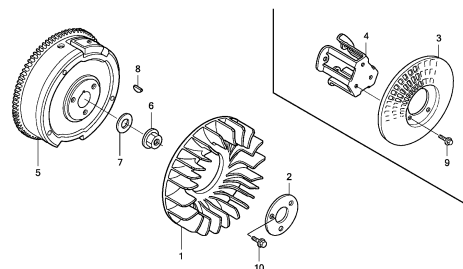


Z263E1900

E-19-1

FLYWHEEL(2)

F 6

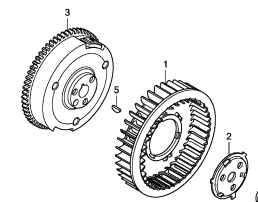


Z263E1901

E-20

IGNITION COIL(1)

F 7

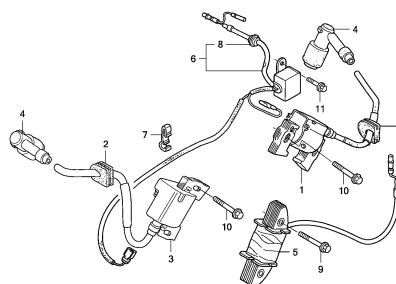


Z263E2000

E-20-1

IGNITION COIL(2)

F 8

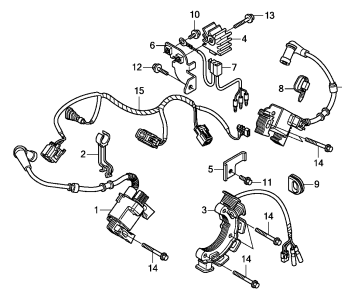


Z263E2001

E-21

STARTER MOTOR(1)

F 9

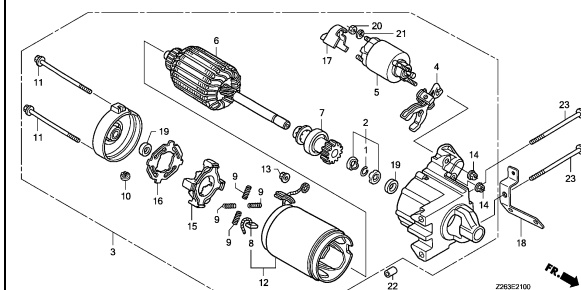


Z263E2100

E-21-1

STARTER MOTOR(2)

F10

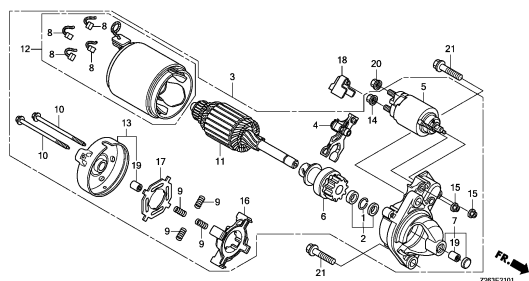


Z263E2101

E-22

CONTROL(1)

F11

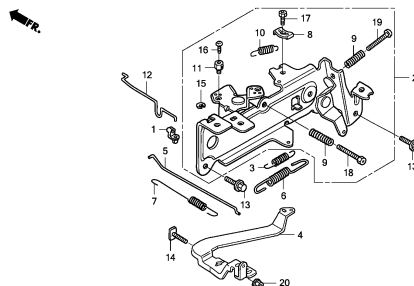


Z263E2200

E-22-1

CONTROL(2)

F12

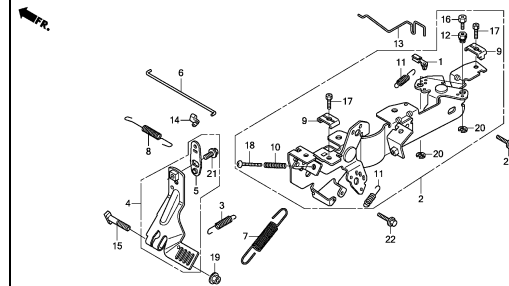

Z263E2201

2


FRAME GROUP

C 4

F-1

G 1

CONTROL BOX(EM10000)

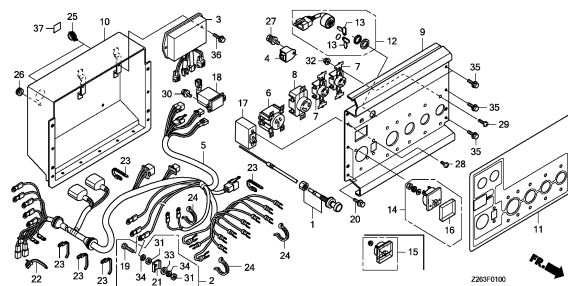


Z263F0100

F-1-1

G 3

CONTROL BOX(ET12000)

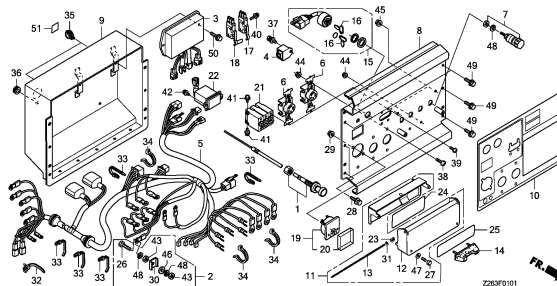


Z263F0101

F-1-2

G 5

CONTROL BOX(EM10000K1)

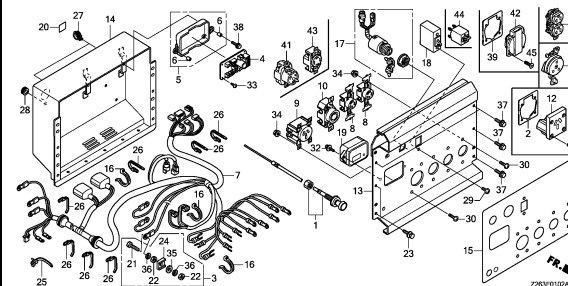


Z263F0102A

F-1-3

G 7

CONTROL BOX(ET12000K1)

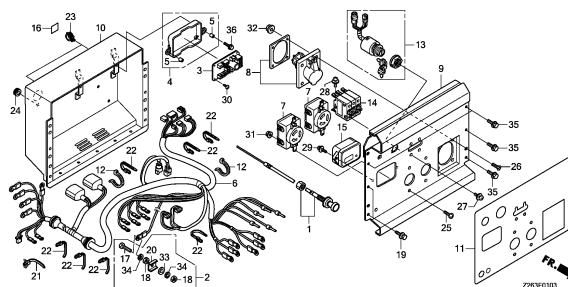


Z263F0103

F-15

G 9

MUFFLER

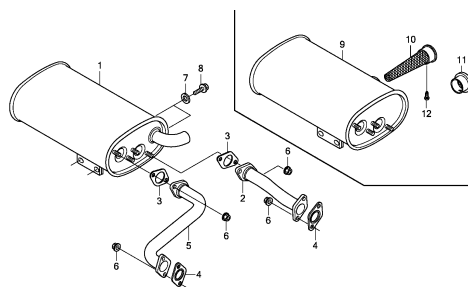


Z263F1000A

F-16

G10

FUEL TANK

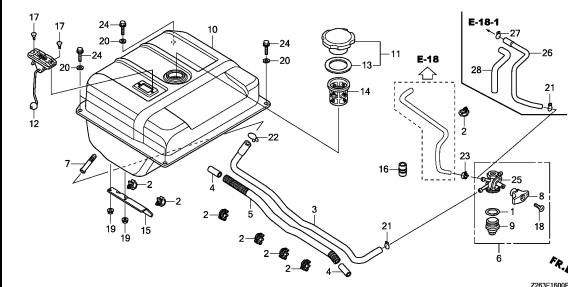


Z263F1000B

F-18

G12

BATTERY

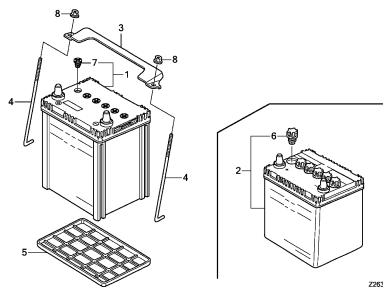


Z263F1800A

F-19

G13

WIRE HARNESS

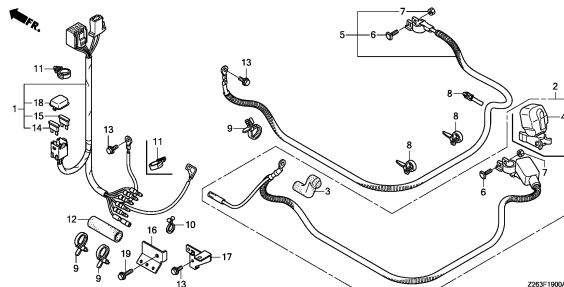


Z263F1900A

F-22

G15

MAINTENANCE COVER

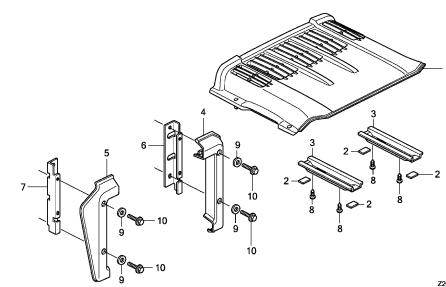

Z263F2200


FRAME GROUP

C 5

F-24

G16


HANGER

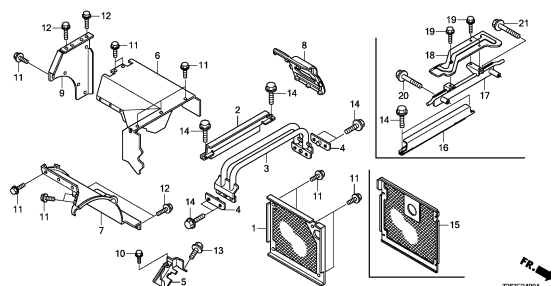

F-25

H 1


FRAME PIPE

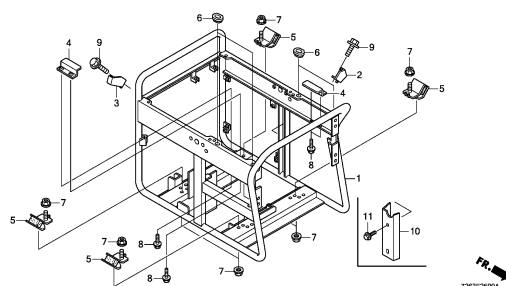

F-29

H 4


GENERATOR

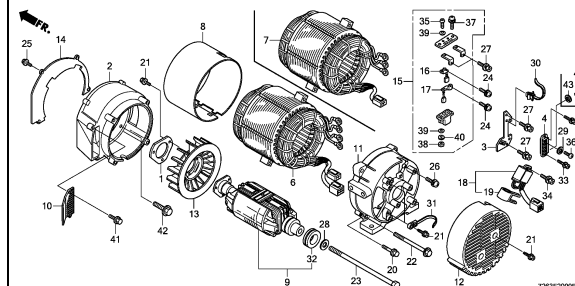

F-31

H 7


LABEL

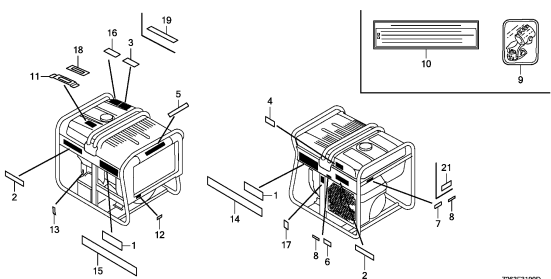

F-32

H 9


TOOL/CONSENT PLUG

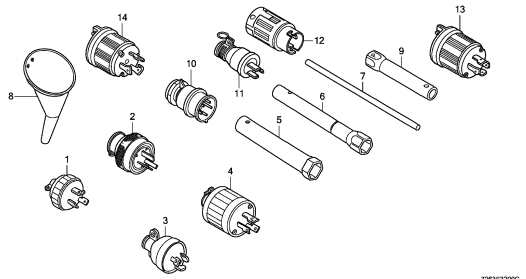

FOP-1

H10


WHEEL KIT

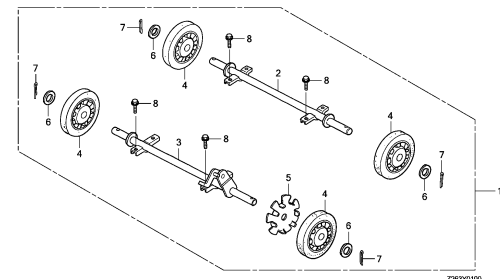

FOP-2

H11

HOOK KIT

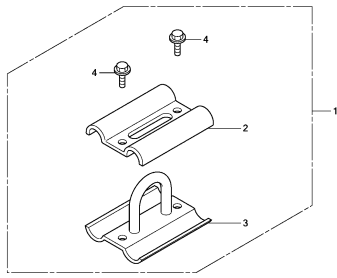


3

E-2

CYLINDER HEAD(1)

D 1

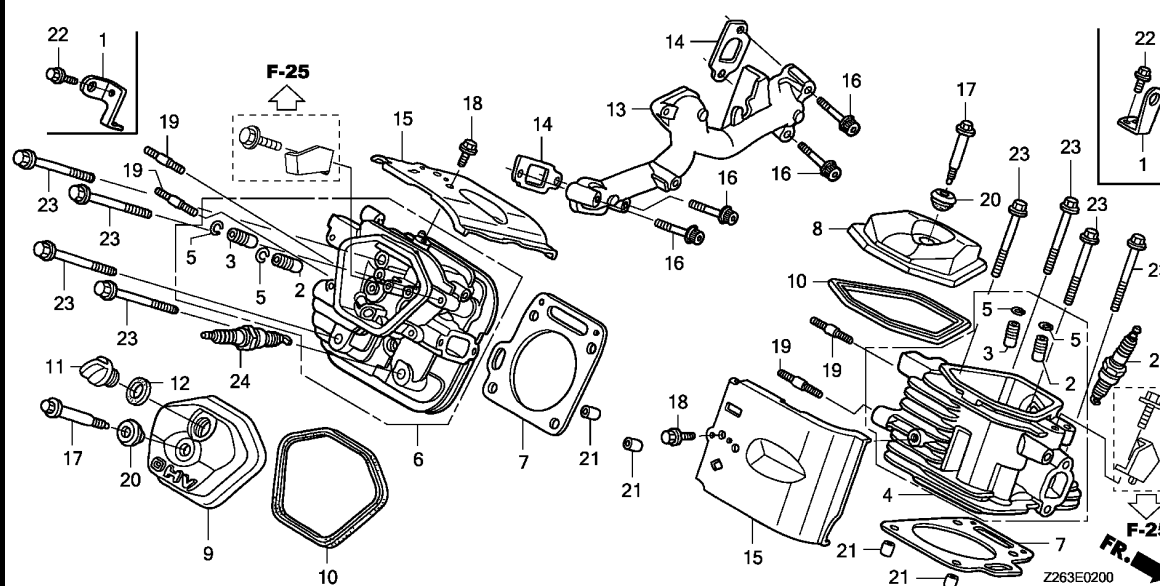


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111E9	GUIDE, INTAKE VALVEINCLUDES: Valve clearance adjustment	2.2
	1111E9B	.Replace one head(intake and exhaust all) add	0.3
3	1111E8	GUIDE, EXHAUST VALVEINCLUDES: Valve clearance adjustment	2.2
	1111E8B	.Replace one head(intake and exhaust all) add	0.3
4	1111F2	HEAD, CYLINDER :LEFT BANKINCLUDES: Valve clearance adjustment and reface	2.1
	1111L4	HEAD, CYLINDER :BOTH BANKSINCLUDES: Valve clearance adjustment and reface	2.9
6	1111F3	HEAD, CYLINDER :RIGHT BANKINCLUDES: Valve clearance adjustment and reface	2.1
	1111L4	HEAD, CYLINDER :BOTH BANKSINCLUDES: Valve clearance adjustment and reface	2.9
7	1111M4	GASKET, CYLINDER HEAD :LEFT ..	1.7
	1111M5	GASKET, CYLINDER HEAD :RIGHT ..	1.7
	1111M6	GASKET, CYLINDER HEAD :BOTH ..	2.5

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	11911-ZJ1-840	HANGER, ENGINE	2	2	-	
2	12204-ZE2-306	GUIDE, IN. VALVE(O.S.)	2	2	-	
3	12205-ZJ1-405	GUIDE, EX. VALVE(O.S.)	2	2	-	
4	12210-ZJ1-406	HEAD COMP., CYLINDER(#1)	1	1	-	
5	12216-ZE2-300	CLIP, VALVE GUIDE	4	4	-	
6	12220-ZJ1-405	HEAD COMP., CYLINDER(#2)	1	1	-	
7	12251-ZJ1-841	GASKET, CYLINDER HEAD	2	2	-	
8	12311-ZJ1-840	COVER, HEAD	1	1	-	
9	12314-ZJ1-840	COVER, HEAD FILLER	1	1	-	
10	12391-ZE2-020	PACKING, HEAD COVER	2	2	-	
11	15611-MB0-000	CAP, OIL FILLER	1	1	-	
12	15625-ZJ1-840	PACKING, OIL FILLER CAP	1	1	-	
13	17101-ZJ1-840	MANIFOLD, INTAKE	1	1	-	
14	17151-ZJ1-841	GASKET, INTAKE MANIFOLD	2	2	-	
15	19682-ZJ1-840	SHROUD, HEAD	2	2	-	
16	90011-ZJ1-841	BOLT, SOCKET, 8X45	4	4	-	
17	90014-ZE2-000	BOLT, HEAD COVER	2	2	-	
18	90014-952-000	BOLT, FLANGE, 6X14(CT200) ...	2	2	-	
19	90018-ZJ1-840	BOLT, STUD, 8X22	4	4	-	
20	90441-ZE2-010	WASHER COMP., HEAD COVER	2	2	-	
21	94301-12200	DOWEL PIN, 12X20	4	4	-	
22	95701-08020-00	BOLT, FLANGE, 8X20	2	2	-	
23	95701-10080-00	BOLT, FLANGE, 10X80	8	8	-	
24	98079-52876	PLUG, SPARK(BPR2ES)(NGK)	(2)	(2)	-	
	98079-5485V	PLUG, SPARK(J14CR-U)(DENSO) ..	(2)	(2)	-	

E-2

CYLINDER HEAD(1)

D 2

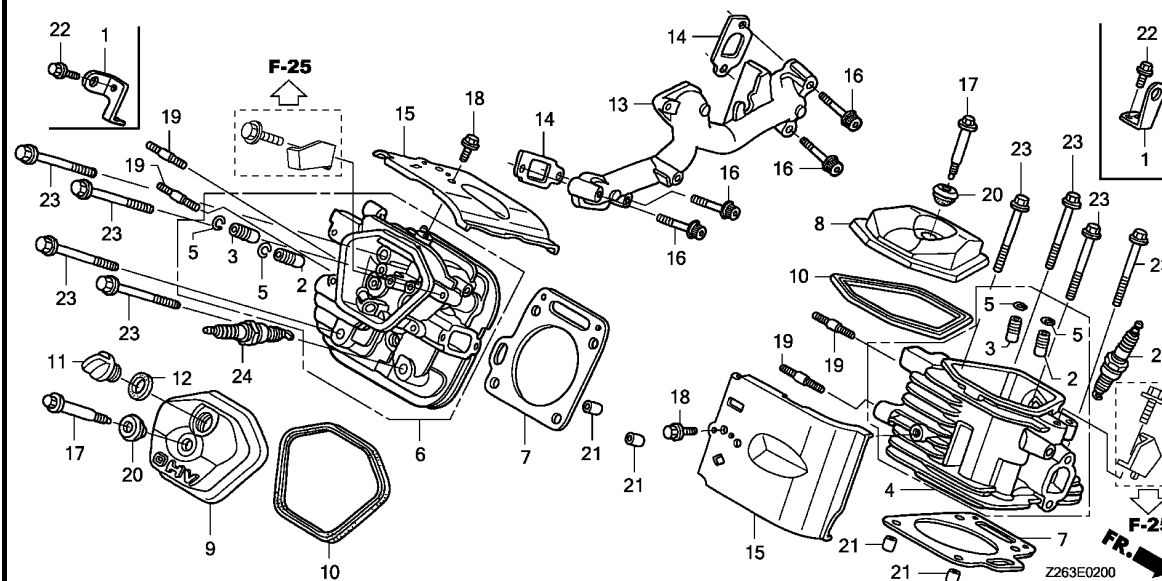

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
8		(10)	
1111D3		CYLINDER HEAD COVER AND/OR PACKING :LEFT	0.2
1111L5		CYLINDER HEAD COVER AND/OR PACKING :BOTH	0.3
9		(10)	
1111D4		CYLINDER HEAD COVER AND/OR PACKING :RIGHT	0.2
1111L5		CYLINDER HEAD COVER AND/OR PACKING :BOTH	0.3
13	3111C4	MANIFOLD, INTAKE	0.8
14	3111M6	PACKING, INTAKE MANIFOLD :LEFT .NOTE: Same time for two units	0.8
	3111M7	PACKING, INTAKE MANIFOLD :RIGHT	0.8
		.NOTE: Same time for two units	
15	4141J8	SHROUD, CYLINDER HEAD :LEFT ..	0.4
	4141J9	SHROUD, CYLINDER HEAD :RIGHT ..	0.4
24	6141E6	PLUG, SPARK :LEFT BANK	0.1
		.INCLUDES: Spark plug check	
	6141E7	PLUG, SPARK :RIGHT BANK	0.1
		.INCLUDES: Spark plug check	
	6141E8	PLUG, SPARK :BOTH BANKS	0.2
		.INCLUDES: All spark plug check	


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
24)	98079-5487V	PLUG, SPARK(ZGR4A)	(2)	(2)	-	
	98079-5585V	PLUG, SPARK(J16CR-U)(DENSO) ..	2	2	-	
	98079-5587V	PLUG, SPARK(ZGR5A)	2	2	-	

2

E-2-1

CYLINDER HEAD(2)

D 3

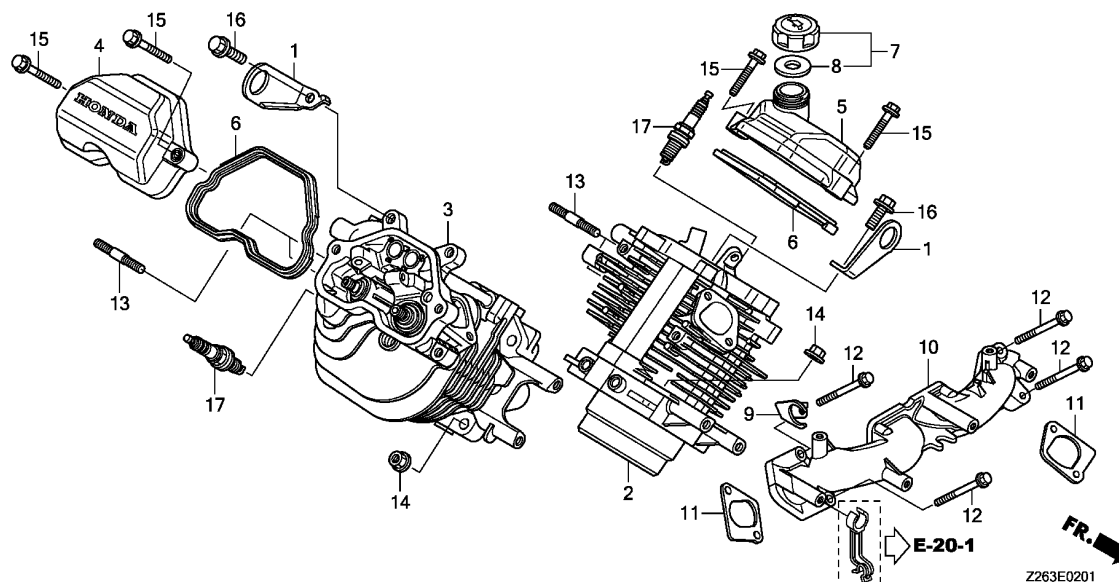


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1111F2	HEAD, CYLINDER :LEFT BANKINCLUDES: Valve clearance adjustment and reface	3.5
	1111L4	HEAD, CYLINDER :BOTH BANKSINCLUDES: Valve clearance adjustment and reface	5.0
3	1111F3	HEAD, CYLINDER :RIGHT BANKINCLUDES: Valve clearance adjustment and reface	3.5
	1111L4	HEAD, CYLINDER :BOTH BANKSINCLUDES: Valve clearance adjustment and reface	5.0
4	1111D4	CYLINDER HEAD COVER AND/OR PACKING :RIGHT	0.2
	1111L5	CYLINDER HEAD COVER AND/OR PACKING :BOTH	0.3
5	1111D3	CYLINDER HEAD COVER AND/OR PACKING :LEFT	0.2
	1111L5	CYLINDER HEAD COVER AND/OR PACKING :BOTH	0.3
10	3111C4	MANIFOLD, INTAKE	1.3
11	3111M6	PACKING, INTAKE MANIFOLD :LEFT	1.3
+.NOTE: Same time for two units			

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	11911-Z6L-000	HANGER, ENGINE	-	2	-	2
2	12110-Z6L-010	HEAD COMP., CYLINDER(#1)	-	1	-	1
3	12120-Z6L-010	HEAD COMP., CYLINDER(#2)	-	1	-	1
4	12311-Z6L-000	COVER, CYLINDER HEAD	-	1	-	1
5	12311-Z6L-800	COVER, CYLINDER HEAD	-	1	-	1
6	12312-Z6L-000	PACKING, HEAD COVER	-	2	-	2
7	15600-Z6L-000	CAP ASSY., OIL FILLER	-	1	-	1
8	15625-Z6L-000	PACKING, OIL FILLER CAP	-	1	-	1
9	16722-Z6L-010	STAY, FUEL TUBE GROMMET	-	1	-	1
10	17101-Z6L-010	MANIFOLD, INTAKE	-	1	-	1
11	17151-Z6L-010	PACKING, INTAKE MANIFOLD	-	2	-	2
12	90006-Z6L-000	BOLT, FLANGE, 8X55	-	4	-	4
13	92900-08022-0E	BOLT, STUD, 8X22	-	4	-	4
14	94050-10000	NUT, FLANGE, 10MM	-	8	-	8
15	95701-06030-00	BOLT, FLANGE, 6X30	-	4	-	4
16	95701-08016-00	BOLT, FLANGE, 8X16	-	2	-	2
17	98079-5587G	PLUG, SPARK(ZFR5F)	-	2	-	2

E-2-1

CYLINDER HEAD(2)

D 4

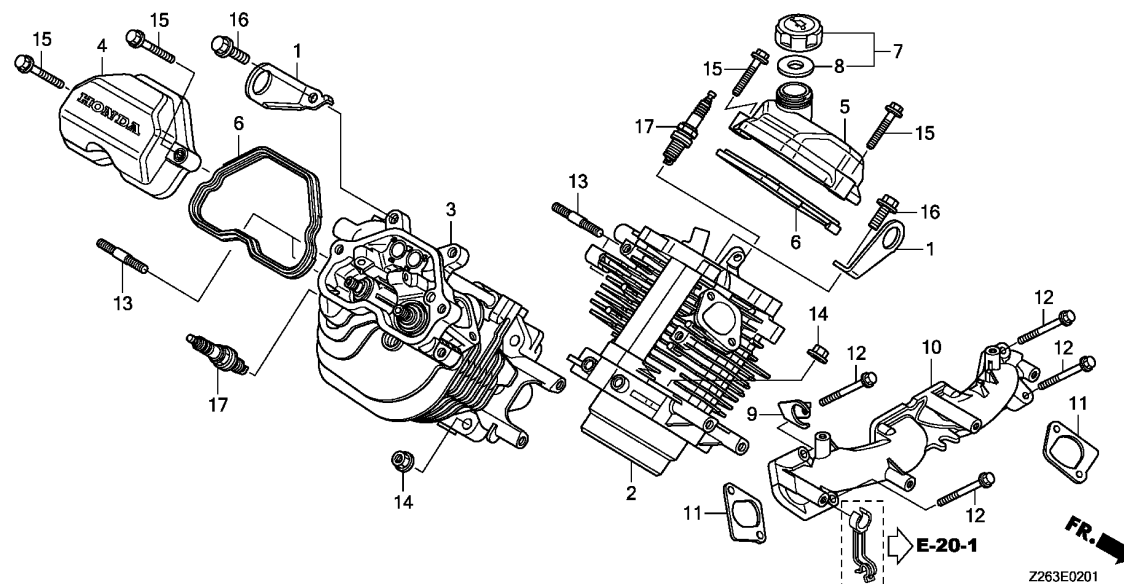


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+11	3111M7	PACKING, INTAKE MANIFOLD :RIGHT	1.3
		.NOTE: Same time for two units	
17	6141E6	PLUG, SPARK :LEFT BANK	0.1
		.INCLUDES: Spark plug check	
	6141E7	PLUG, SPARK :RIGHT BANK	0.1
		.INCLUDES: Spark plug check	
	6141E8	PLUG, SPARK :BOTH BANKS	0.2
		.INCLUDES: All spark plug check	

2

E-3


CYLINDER BARREL(1)

D 5

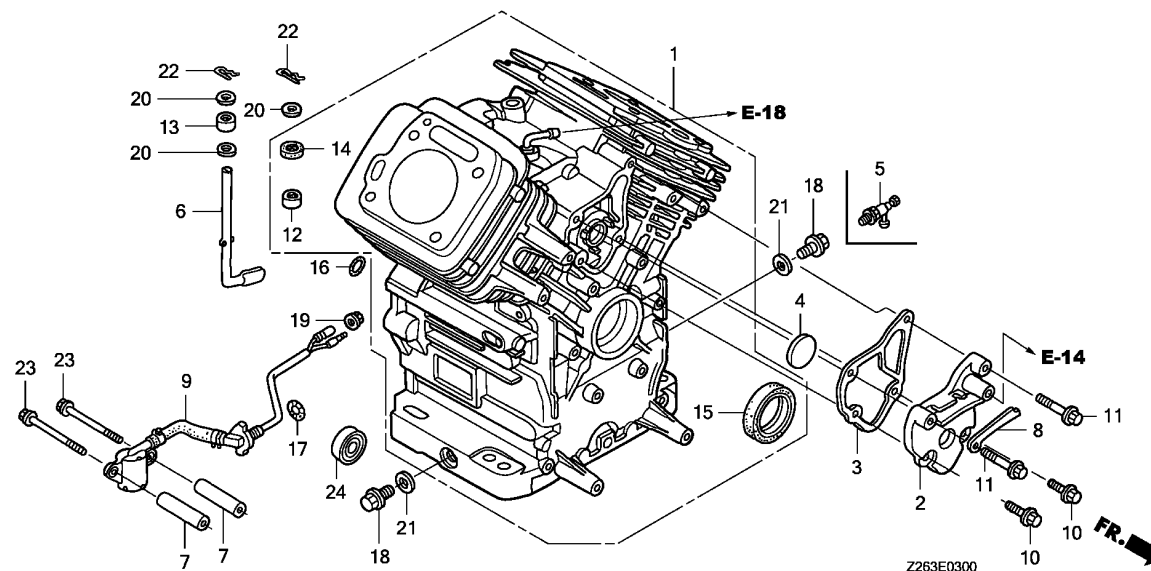

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101A0	BARREL, CYLINDERINCLUDES: Engine removal and installation	4.7
2	1111D1	BREATHER COVER AND/OR BREATHER PACKING	1.2
6	1161B4	SHAFT, GOVERNOR ARMINCLUDES: Engine removal and installation	3.6
9	6151E8	SWITCH, OIL LEVELINCLUDES: Engine removal and installation	3.7
12	1101A9	BEARING, GOVERNOR SHAFTINCLUDES: Engine removal and installation	3.7
14	1101C4	OIL SEAL, GOVERNOR ARM SHAFT .. .INCLUDES: Engine removal and installation	3.6
15	1101E4	OIL SEAL, CRANKSHAFT :FRONT .. .INCLUDES: Engine removal and installation	4.3
24	1111A9	BEARING, CAMSHAFTINCLUDES: Engine removal and installation	3.7

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	12000-ZJ1-406	BARREL ASSY., CYLINDER	1	1	-----	2184472 R,RG,RH
	12000-ZJ1-416		1	1	-----	2184473 -----
2	12356-ZJ1-000	COVER, BREATHER	1	1	-----	2214651
3	12358-ZJ1-000	PACKING, BREATHER COVER	1	1	-----	2214652 -----
	12358-ZJ1-003		1	1	-----	-----
4	12372-ZE2-300	VALVE, BREATHER	1	1	-----	-----
5	15558-ZJ1-003	VALVE, OIL SHUT-OFF	(1)	(1)	-----	-----
6	16541-ZJ1-840	SHAFT, GOVERNOR ARM	1	1	-----	-----
7	25523-VD6-010	COLLAR, FILTER SETTING	2	2	-----	-----
8	31511-ZJ1-000	CLAMPER, CORD	1	1	-----	-----
9	35480-ZJ1-841	SWITCH ASSY., OIL LEVEL	1	1	-----	2181170 R,RG,RH
	35480-ZJ1-842		1	1	-----	2181171 -----
10	90029-888-000	BOLT, FLANGE, 6X16(CT200) ...	2	2	-----	-----
11	90031-ZE1-000	BOLT, FLANGE, 6X32(CT200) ...	2	2	-----	-----
12	91001-ZJ1-841	BEARING, NEEDLE, 8X12.7X11.1	1	1	-----	-----
13	91002-ZJ1-841	BEARING, NEEDLE, 8X12X10 ...	1	1	-----	-----
14	91201-ZE9-003	OIL SEAL, 8X14X5	1	1	-----	-----
15	91201-ZJ1-841	OIL SEAL, 38X58X9	1	1	-----	-----
16	91302-MB6-830	O-RING, 13X3.0	1	1	-----	-----
17	91353-671-004	O-RING, 14MM(NOK)	1	1	-----	-----
18	92800-14000	BOLT, DRAIN PLUG, 14MM	2	2	-----	-----
19	94050-10000	NUT, FLANGE, 10MM	1	1	-----	-----
20	94102-08800	WASHER, PLAIN, 8MM	3	3	-----	-----
21	94109-14000	WASHER, DRAIN PLUG, 14MM	2	2	-----	-----
22	94251-08000	PIN, LOCK, 8MM	2	2	-----	-----

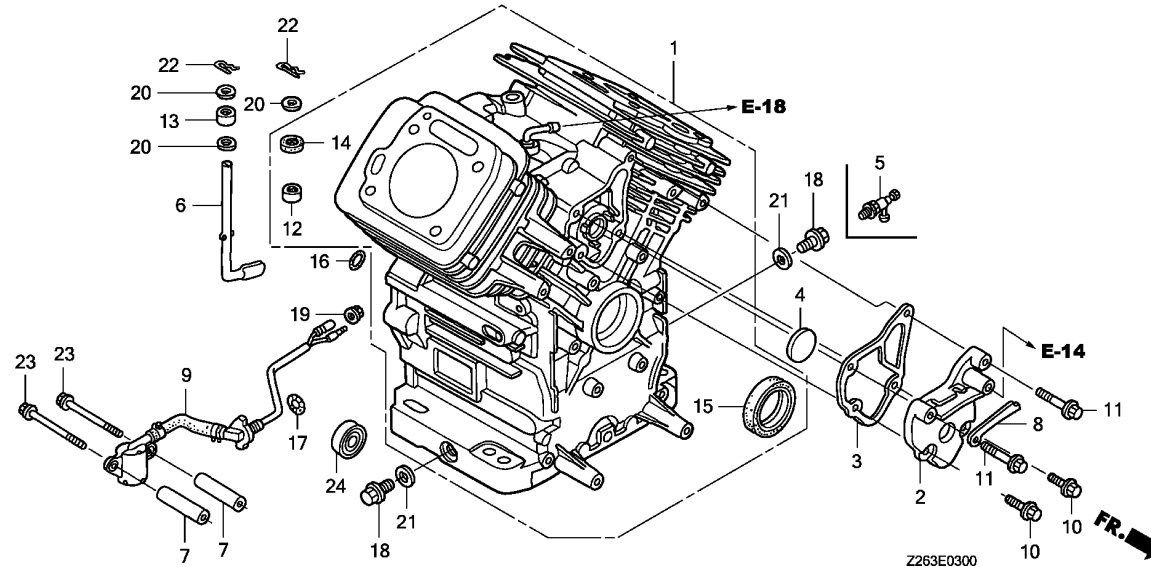


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
23	95701-06075-09	BOLT, FLANGE, 6X75	2	2		
24	96140-60030-10	BEARING, RADIAL BALL, 6003 ..	1	1		

E-3-1

CYLINDER BARREL(2)

D 7

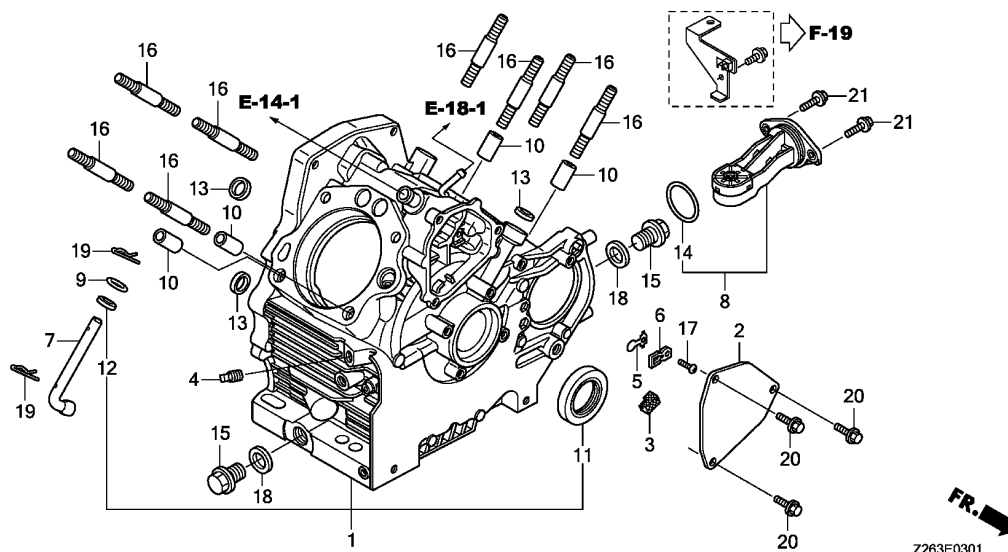


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101B7	CRANKCASEINCLUDES: Engine removal and installation	6.1
3	1111E5	FILTER, BREATHER (6)	1.5
5	1171A8	VALVE, OIL OUTLET (14)	1.5
7	1161E2	SHAFT, GOVERNOR ARM(A)INCLUDES: Engine removal and installation	5.1
8	6151E8	SWITCH, OIL LEVEL (14)	0.4
11	1101E4	OIL SEAL, CRANKSHAFT :FRONT .. .INCLUDES: Engine removal and installation	5.1
12	1101C4	OIL SEAL, GOVERNOR ARM SHAFT .. .INCLUDES: Engine removal and installation	5.1

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	11100-Z6L-840	CRANKCASE ASSY.	-	1	1	----- KH,MH,RGH,RRH,UH
	11100-Z6L-801		-	1	1	----- LDH,SH,SKH
2	12356-Z6L-000	COVER, BREATHER	-	1	1	
3	12367-Z6L-000	FILTER, BREATHER	-	1	1	
4	15424-Z6L-000	BOLT, SEALING	-	1	1	
5	15571-ZM7-003	VALVE, OIL OUTLET	-	1	1	
6	15572-Z6L-000	PLATE, STOPPER	-	1	1	
7	16541-Z6L-010	SHAFT, GOVERNOR ARM	-	1	1	
8	35480-Z6L-003	SWITCH ASSY., OIL LEVEL	-	1	1	
9	90404-Z6L-000	WASHER, PLAIN(10MM)	-	1	1	
10	90709-Z6L-000	DOWEL PIN, 12X20	-	4	4	
11	91201-Z6L-003	OIL SEAL, 38X58X9	-	1	1	
12	91203-Z6L-003	OIL SEAL, 10X16X5	-	1	1	
13	91308-Z6L-003	PACKING, OIL PASS	-	3	3	
14	91309-Z6L-000	O-RING, 37.9X2.4	-	1	1	
15	92800-20000	BOLT, DRAIN PLUG, 20MM	-	2	2	
16	92900-10040-0B	BOLT, STUD, 10X40	-	8	8	
17	93500-03008-0A	SCREW, PAN, 3X8	-	1	1	
18	94109-20000	WASHER, DRAIN PLUG, 20MM	-	2	2	
19	94251-10000	PIN, LOCK, 10MM	-	2	2	
20	95701-06014-00	BOLT, FLANGE, 6X14	-	3	3	
21	95701-06016-00	BOLT, FLANGE, 6X16	-	2	2	

E-6

CRANKCASE COVER(1)

D 8

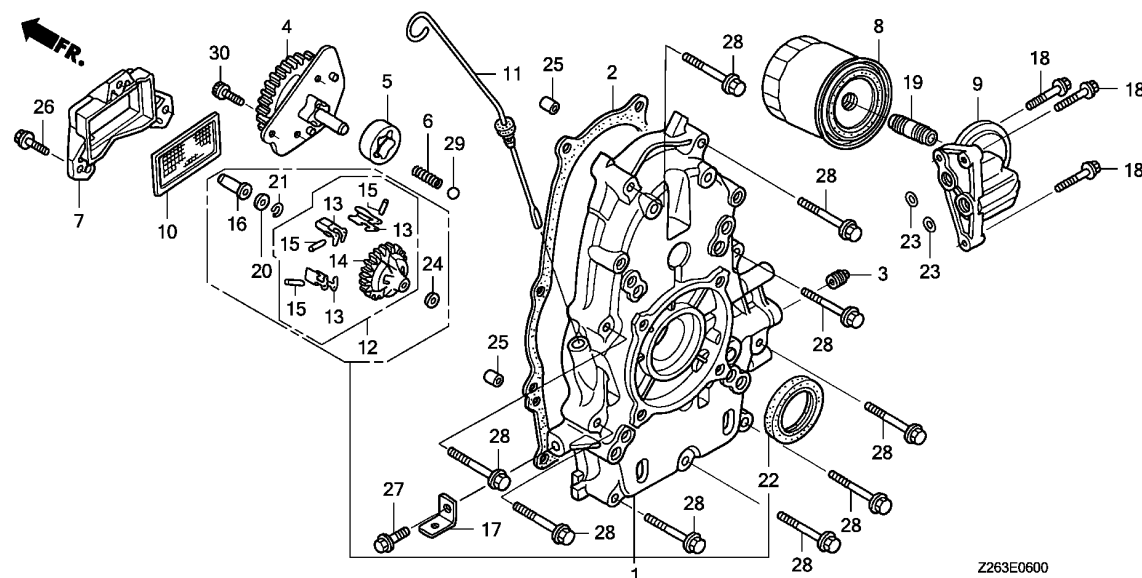

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F1	COVER, CRANKCASEINCLUDES: Engine removal and installation	3.4
2	1101E9	PACKING, CRANKCASE COVERINCLUDES: Engine removal and installation	2.7
4	1131A2	COVER, OIL PUMPINCLUDES: Engine removal and installation	2.8
5	1131B3	ROTOR, OIL PUMP OUTERINCLUDES: Engine removal and installation	2.8
7	1101B5	COVER, OIL FILTERINCLUDES: Engine removal and installation	2.8
8	110175	CARTRIDGE, OIL FILTER (23)	0.2
9	1101A2	BASE, OIL FILTER (23)	0.3
10	1101D2	SCREEN, OIL FILTERINCLUDES: Engine removal and installation	2.8
12	1161C4	GOVERNOR ASSEMBLYINCLUDES: Engine removal and installation	2.9


Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1		ET 12000 K1			
1	11300-ZJ1-853	COVER ASSY., CRANKCASE	1	-	1	-		
2	11381-ZJ1-840	GASKET, CASE COVER	1	-	1	-		
3	12105-ZA0-701	BOLT, SEALING	1	-	1	-		
4	15120-ZJ1-010	COVER ASSY., OIL PUMP (THREE BOLTS)	1	-	1	-		
5	15124-ZJ1-003	ROTOR, OIL PUMP OUTER	1	-	1	-		
6	15232-ZJ1-000	SPRING, RELIEF VALVE	1	-	1	-		
7	15348-ZJ1-840	COVER, OIL FILTER	1	-	1	-		
8	15400-ZJ1-004	CARTRIDGE, OIL FILTER (TOYO ROKI)	1	-	1	-		
9	15411-ZJ1-840	BASE, OIL FILTER	1	-	1	-		
10	15427-ZJ1-000	SCREEN, OIL FILTER	1	-	1	-		
11	15655-ZJ1-861	GAUGE COMP., OIL LEVEL	1	-	1	-		
12	16510-ZJ1-840	GOVERNOR ASSY.	1	-	1	-		
13	16511-ZJ1-840	WEIGHT, GOVERNOR	3	-	3	-		
14	16512-ZJ1-840	HOLDER, GOVERNOR WEIGHT	1	-	1	-		
15	16513-ZE2-000	PIN, GOVERNOR WEIGHT	3	-	3	-		
16	16531-Z0A-000	SLIDER, GOVERNOR	1	-	1	-		
17	32104-ZJ1-D20	BRACKET, WIRE HARNESS CLIP(B)	1	-	1	-		
18	90015-883-000	BOLT, FLANGE, 6X28(CT200) ...	3	-	3	-		
19	90018-PN3-000	HOLDER, OIL FILTER	1	-	1	-		
20	90473-147-000	WASHER, 6X16	1	-	1	-		
21	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	-	1	-		
22	91202-ZJ1-841	OIL SEAL, 38X58X9	1	-	1	-		
23	91302-ZE9-003	O-RING, 11.8X2.4	2	-	2	-		

2

E-6

CRANKCASE COVER(1)

D 9

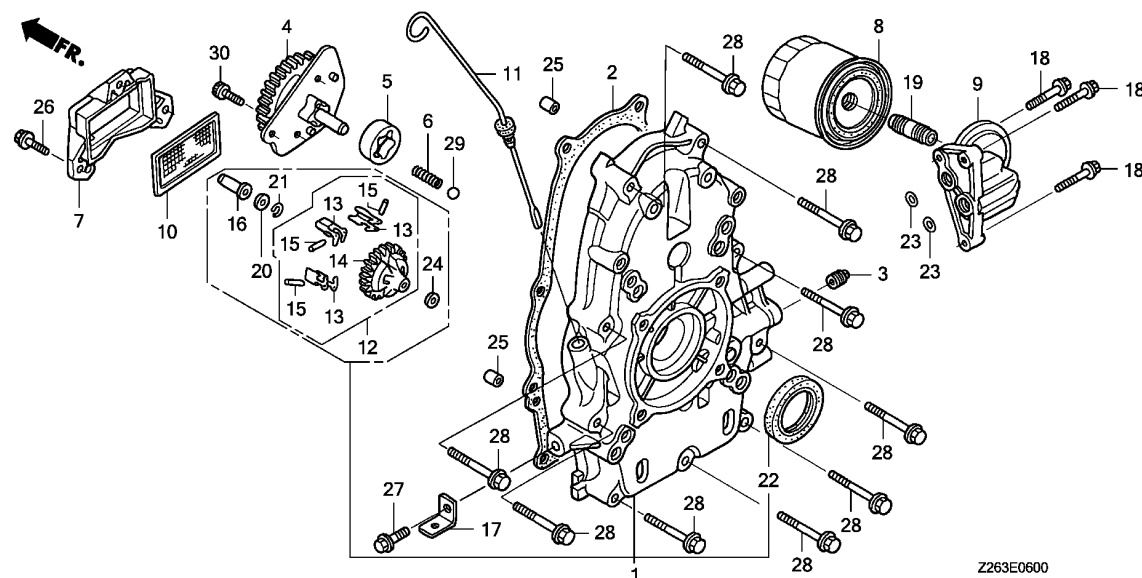

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
14	1161A7	(13) HOLDER, GOVERNOR WEIGHTINCLUDES: Engine removal and installation	3.0
16	1161B6	SLIDER, GOVERNORINCLUDES: Engine removal and installation	2.9
22	1101E5	OIL SEAL, CRANKSHAFT :REARINCLUDES: Engine removal and installation	2.8


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
24	94101-06800	WASHER, PLAIN, 6MM	1	1	-	
25	94301-08140	DOWEL PIN, 8X14	2	2	-	
26	95701-06020-00	BOLT, FLANGE, 6X20	3	3	-	
27	95701-08016-00	BOLT, FLANGE, 8X16	1	1	-	
28	95701-08050-00	BOLT, FLANGE, 8X50	9	9	-	
29	96211-12000	BALL, STEEL, #12(3/8)	1	1	-	
30	96600-06016-00	BOLT, SOCKET, 6X16	3	3	-	

Z263E0600

E-6-1

CRANKCASE COVER(2)


D10

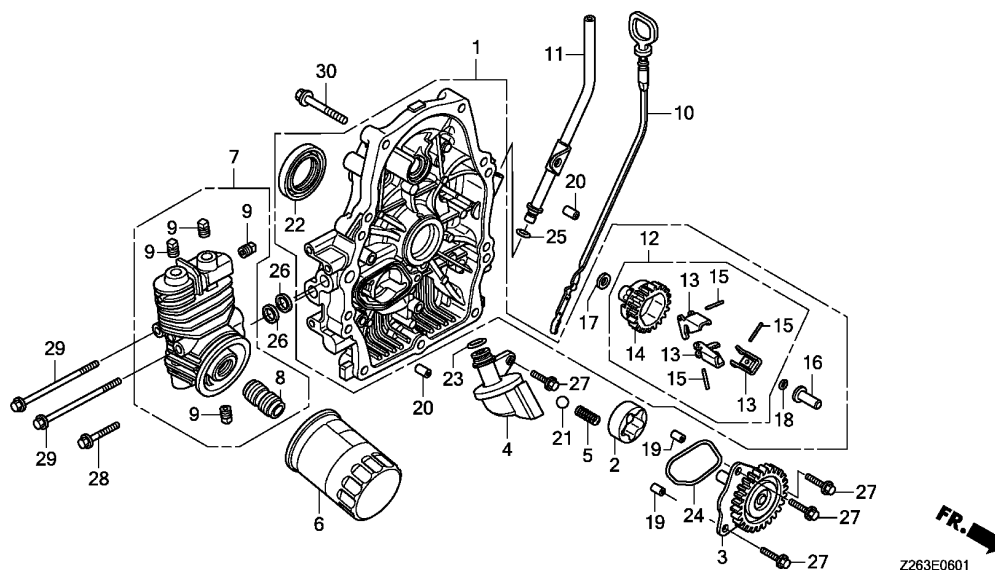

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101G0	COVER, CRANKCASE(A)	2.3
2		(5,21)	
1131B3		ROTOR, OIL PUMP OUTER	2.1
3		(24)	
1131A4		GEAR, OIL PUMP	2.1
4	1131B5	STRAINER, OIL	2.1
6	110175	CARTRIDGE, OIL FILTER	0.1
7	1101A2	BASE, OIL FILTER	0.3
12	1161E9	GOVERNOR ASSEMBLY(A)	2.1
14		(13,15)	
1161C6		HOLDER, GOVERNOR WEIGHT(A) ...	2.2
16	1161C7	SLIDER, GOVERNOR(A)	2.1
22	1101S5	OIL SEAL, CRANKSHAFT(A) :REAR	2.1

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	11300-Z6L-010	COVER ASSY., CRANKCASE	-	1	-	1
2	15133-Z6L-000	ROTOR, OIL PUMP OUTER	-	1	-	1
3	15140-Z6L-010	GEAR COMP., OIL PUMP	-	1	-	1
4	15220-Z6L-000	STRAINER COMP., OIL	-	1	-	1
5	15232-Z6L-000	SPRING, RELIEF VALVE	-	1	-	1
6	15400-RTA-004	CARTRIDGE, OIL FILTER (TOYO ROKI)	-	1	-	1
7	15410-Z6L-000	BASE COMP., OIL FILTER	-	1	-	1
8	15423-Z6L-000	HOLDER, OIL FILTER	-	1	-	1
9	15424-Z6L-000	BOLT, SEALING	-	4	-	4
10	15655-Z6L-000	GAUGE COMP., OIL LEVEL	-	1	-	1
11	15665-Z6L-000	PIPE COMP., OIL LEVEL	-	1	-	1
12	16510-Z6L-010	GOVERNOR ASSY.	-	1	-	1
13	16511-Z6L-310	WEIGHT, GOVERNOR	-	3	-	3
14	16512-Z6L-310	HOLDER, GOVERNOR WEIGHT	-	1	-	1
15	16513-Z6L-000	PIN, GOVERNOR WEIGHT	-	3	-	3
16	16531-Z6L-000	SLIDER, GOVERNOR	-	1	-	1
17	90403-Z6L-000	WASHER, 6X16	-	1	-	1
18	90602-ZE1-000	CLIP, GOVERNOR HOLDER	-	1	-	1
19	90707-Z6L-000	DOWEL PIN, 8X10	-	2	-	2
20	90708-Z6L-000	DOWEL PIN, 8X14	-	2	-	2
21	90902-Z6L-000	BALL, STEEL, #15(15/32)	-	1	-	1
22	91202-Z6L-003	OIL SEAL, 38X58X9	-	1	-	1
23	91301-Z6L-003	O-RING, 14.8X2.4	-	1	-	1
24	91302-Z6L-003	O-RING, OIL PUMP	-	1	-	1

2

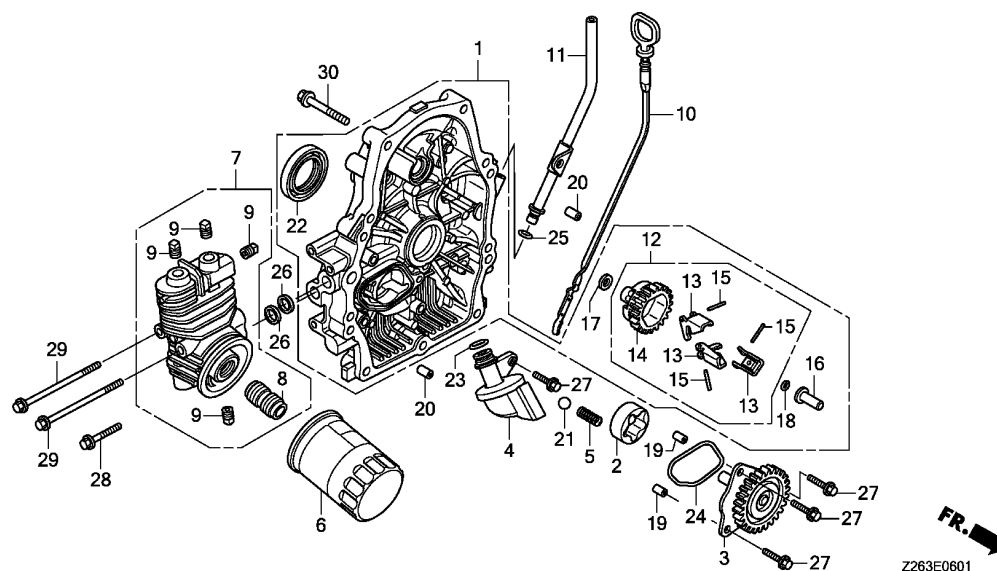


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
25	91308-PH9-000	O-RING, 8.8X1.9	- 1	- 1		
26	91308-Z6L-003	PACKING, OIL PASS	- 2	- 2		
27	95701-06020-00	BOLT, FLANGE, 6X20	- 4	- 4		
28	95701-06028-00	BOLT, FLANGE, 6X28	- 1	- 1		
29	95701-06090-00	BOLT, FLANGE, 6X90	- 2	- 2		
30	95701-08045-00	BOLT, FLANGE, 8X45	- 9	- 9		

E-7

CRANKSHAFT

D12

FR.

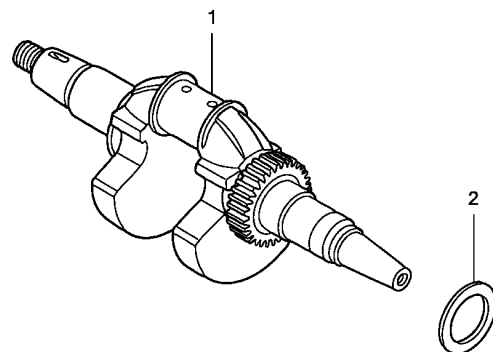


Z263E0700

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101F0	CRANKSHAFTINCLUDES: Engine removal and installation	4.2
	1101U9	CRANKSHAFT(A)INCLUDES: Engine removal and installation .NOTE: K1 type	5.3

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1		ET 12000 K1			
1	13310-ZJ1-890	CRANKSHAFT COMP.(L=160) (M10X1.25)	1	-	1	-		
	13310-Z6L-650	CRANKSHAFT COMP.	-	1	-	1		
2	90401-ZJ1-000	WASHER, CRANKSHAFT THRUST (38.5X54.0X1.0)	1	-	1	-		
	90402-Z6L-000	WASHER, CRANKSHAFT THRUST ...	-	1	-	1		

2

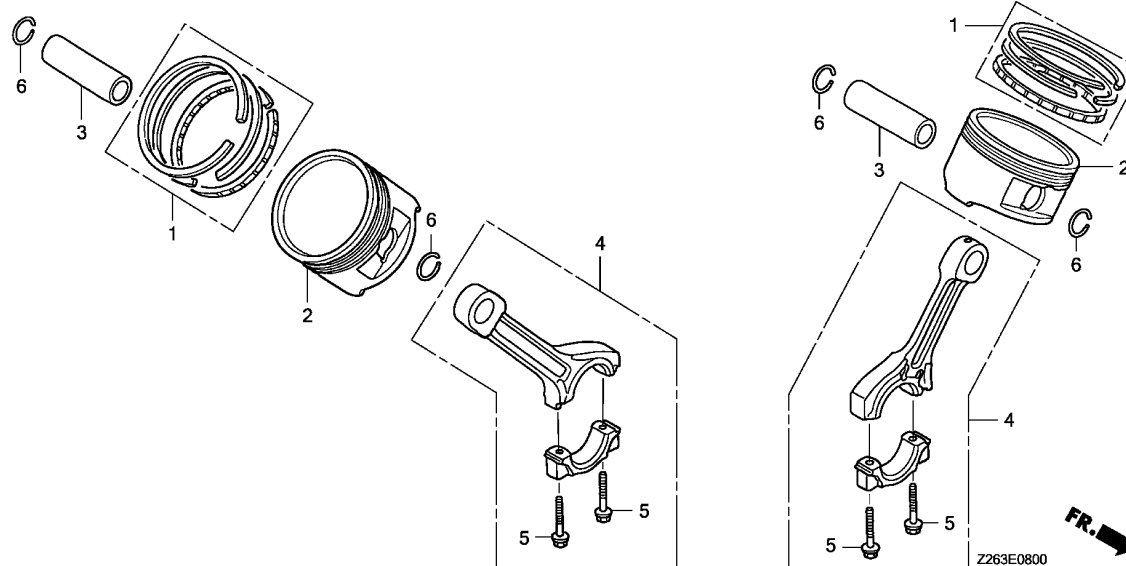



Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1,3,4)	
1111R2		PISTON AND/OR RING SET AND/OR BEARING AND/OR ROD (1 CYLINDER) :LEFT BANKINCLUDES: Engine removal and installation	3.8
1111R3		PISTON AND/OR RING SET AND/OR BEARING AND/OR ROD (1 CYLINDER) :RIGHT BANKINCLUDES: Engine removal and installation	3.8
1111R4		PISTON AND/OR RING SET AND/OR BEARING AND/OR ROD (ALL CYLINDERS) :BOTH BANKS . .INCLUDES: Engine removal and installation	4.1

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	13010-ZJ1-841	RING SET, PISTON(STD.) (NIPPON)	2	2	-----	2184603 R,RG,RH
	13011-ZJ1-841	RING SET, PISTON(0.25) (NIPPON)	(2)	(2)	-----	2184603 R,RG,RH
	13012-ZJ1-841	RING SET, PISTON(0.50) (NIPPON)	(2)	(2)	-----	2184603 R,RG,RH
	13013-ZJ1-841	RING SET, PISTON(0.75) (NIPPON)	(2)	(2)	-----	2184603 R,RG,RH
	13010-Z5H-004	RING SET, PISTON(STD.) (TEIKOKU)	2	2	-----	2184604 -----
	13011-Z5H-004	RING SET, PISTON(0.25) (TEIKOKU)	(2)	(2)	-----	2184604 -----
	13012-Z5H-004	RING SET, PISTON(0.50) (TEIKOKU)	(2)	(2)	-----	2184604 -----
	13013-Z5H-004	RING SET, PISTON(0.75) (TEIKOKU)	(2)	(2)	-----	2184604 -----
2	13101-ZJ1-840	PISTON(STD.)	2	2	-----	2184603 R,RG,RH
	13102-ZJ1-840	PISTON(0.25)	(2)	(2)	-----	2184603 R,RG,RH
	13103-ZJ1-840	PISTON(0.50)	(2)	(2)	-----	2184603 R,RG,RH
	13104-ZJ1-840	PISTON(0.75)	(2)	(2)	-----	2184603 R,RG,RH
	13101-ZJ1-841	PISTON(STD.)	2	2	-----	2184604 -----
	13102-ZJ1-841	PISTON(0.25)	(2)	(2)	-----	2184604 -----
	13103-ZJ1-841	PISTON(0.50)	(2)	(2)	-----	2184604 -----
	13104-ZJ1-841	PISTON(0.75)	(2)	(2)	-----	2184604 -----
3	13111-ZJ1-840	PIN, PISTON	2	2	-----	
4	13200-ZJ1-841	ROD ASSY., CONNECTING	2	2	-----	
5	90001-ZN1-000	BOLT, CONNECTING ROD, 6X37	4	4	-----	
6	90551-ZE1-000	CLIP, PISTON PIN, 18MM	4	4	-----	

E-8-1

PISTON(2)

D14

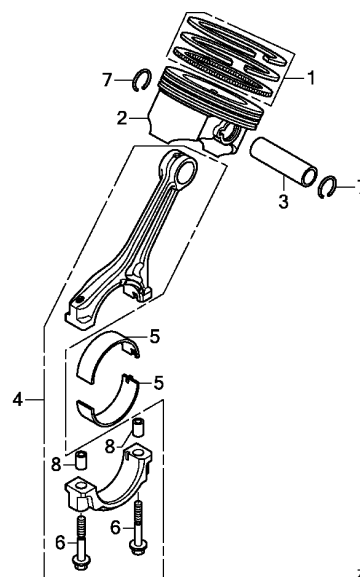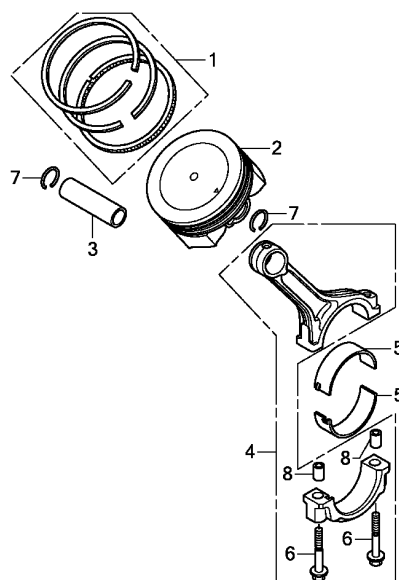

Z263E0801



Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2		(1,3)	
1111AP		PISTON AND/OR PISTON RING :LEFT BANK	3.3
1111AQ		PISTON AND/OR PISTON RING :RIGHT BANK	3.3
1111AR		PISTON AND/OR PISTON RING :BOTH BANKS	4.0
4 1101T3		ROD, CONNECTING :LEFT BANKINCLUDES: Engine removal and installation .NOTE: K1 type	4.3
1101T4		ROD, CONNECTING :RIGHT BANK .. .INCLUDES: Engine removal and installation .NOTE: K1 type	4.3
1101T5		ROD, CONNECTING :BOTH BANKS .. .INCLUDES: Engine removal and installation .NOTE: K1 type	4.8
5 1101J8		BEARING, CONNECTING RODINCLUDES: Engine removal and installation	4.3
1101V1		BEARING, CONNECTING ROD :ALL .. .INCLUDES: Engine removal and installation	4.8


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	13010-Z6L-003	RING SET, PISTON(STD.) (TEIKOKU)	-	2	-	2
2	13101-Z6L-010	PISTON	-	2	-	2
3	13111-Z6L-000	PIN, PISTON	-	2	-	2
4	13210-Z6L-000	ROD ASSY., CONNECTING	-	2	-	2
5	13211-Z6L-003	BEARING A, CONNECTING ROD ...	-	4	-	4
6	90001-Z6L-000	BOLT, CONNECTING ROD, 7X38 ..	-	4	-	4
7	90551-ZE1-000	CLIP, PISTON PIN, 18MM	-	4	-	4
8	90705-Z6L-000	DOWEL PIN, 9X10	-	4	-	4

2

E-9


CAMSHAFT(1)

D15

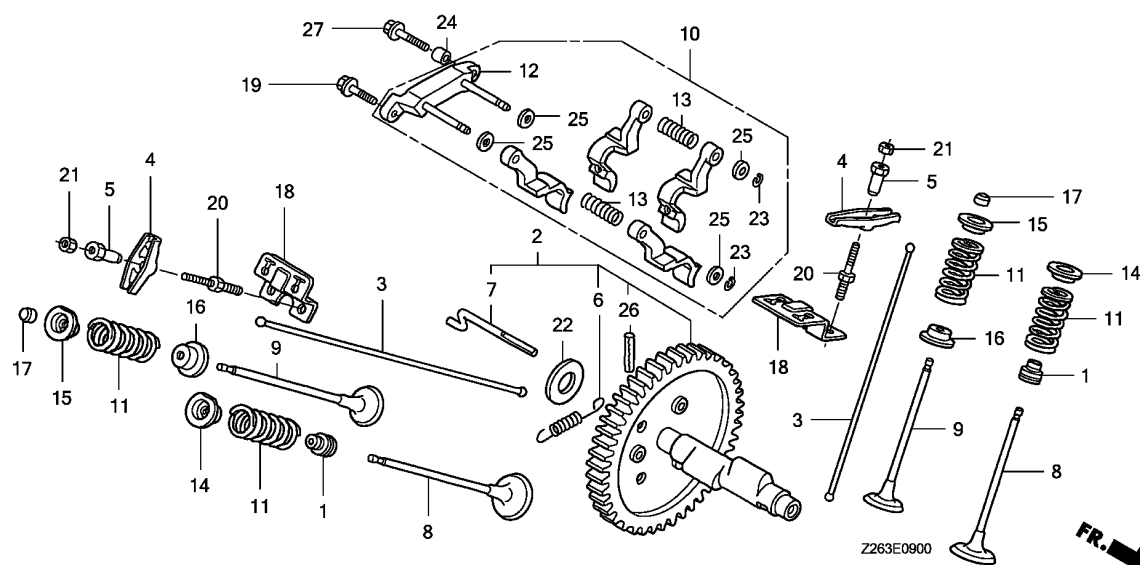


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111U9	SEAL, INTAKE VALVE STEM(ONE) :LEFT BANK	2.0
		.INCLUDES: Valve clearance adjustment	
	1111V0	SEAL, INTAKE VALVE STEM(ONE) :RIGHT BANK	2.0
		.INCLUDES: Valve clearance adjustment	
2	1111C2	CAMSHAFT	3.5
		.INCLUDES: Engine removal and installation	
		.INCLUDES: Valve clearance adjustment	
3	1111X5	ROD, PUSH(ONE) :LEFT BANK INTAKE	0.8
		.INCLUDES: Valve clearance adjustment	
	1111X5B	.Replace one head(intake and exhaust all) add	0.1
	1111X6	ROD, PUSH(ONE) :RIGHT BANK INTAKE	0.8
		.INCLUDES: Valve clearance adjustment	
	1111X6B	.Replace one head(intake and exhaust all) add	0.1
+			

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	12209-ZE8-003	SEAL, VALVE STEM	2	2	-	
2	14100-ZJ1-842	CAMSHAFT ASSY.	1	1	-	
3	14410-ZJ1-840	ROD, PUSH	4	4	-	
4	14431-ZE2-010	ARM, VALVE ROCKER	4	4	-	
5	14451-ZE1-013	PIVOT, ROCKER ARM	4	4	-	
6	14568-ZJ1-841	SPRING, WEIGHT RETURN	1	1	-	
7	14576-ZJ1-840	PIN, DECOMPER	1	1	-	
8	14711-ZE3-000	VALVE, IN.	2	2	-	
9	14721-ZE3-000	VALVE, EX.	2	2	-	
10	14730-ZJ1-841	LIFTER ASSY., VALVE	1	1	-	----- 2184115 R,RG,RH
	14730-ZJ1-842		1	1	-	2184116 -----
11	14751-ZE2-003	SPRING, VALVE	4	4	-	
12	14760-ZJ1-840	SHAFT COMP., VALVE LIFTER ...	1	1	-	
13	14764-ZJ1-840	SPRING, VALVE LIFTER	2	2	-	
14	14771-ZE2-000	RETAINER, IN. VALVE SPRING ..	2	2	-	
15	14773-ZE2-000	RETAINER, EX. VALVE SPRING ..	2	2	-	
16	14775-ZE2-010	SEAT, VALVE SPRING	2	2	-	
17	14781-ZE2-000	ROTATOR, VALVE	2	2	-	
18	14791-ZE2-010	GUIDE, PUSH ROD	2	2	-	
19	90005-896-000	BOLT, FLANGE, 5X16	1	1	-	
20	90012-ZE0-010	BOLT, PIVOT, 8MM	4	4	-	
21	90206-ZE1-000	NUT, PIVOT ADJUSTING	4	4	-	
22	90446-357-000	WASHER, THRUST, 17.2MM	1	1	-	
23	90602-ZE1-000	CLIP, GOVERNOR HOLDER	2	2	-	
24	90702-GB6-910	DOWEL PIN, 8X12	1	1	-	

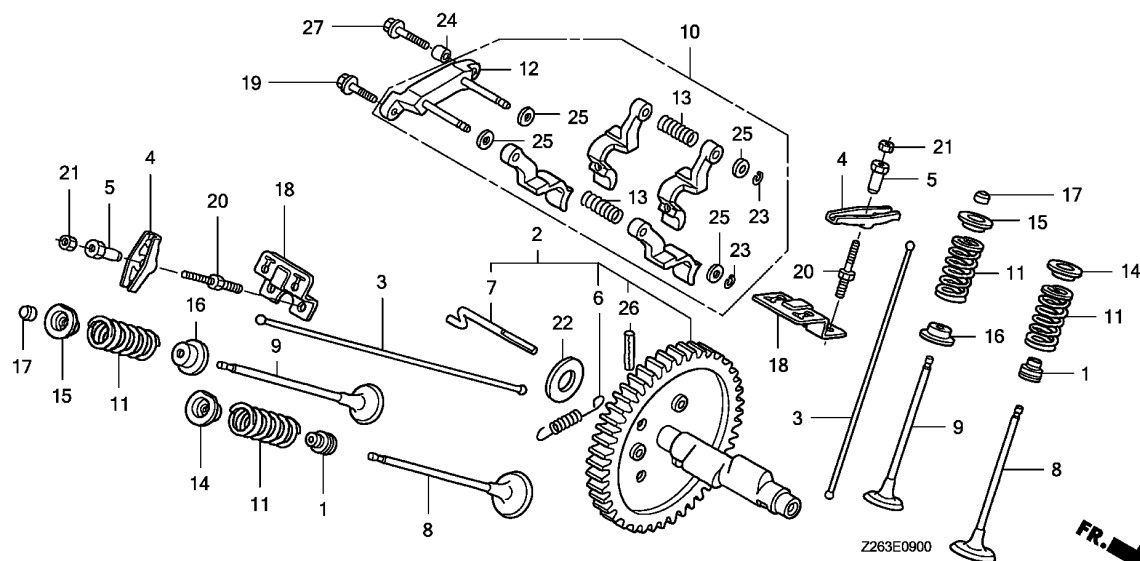


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 3	1111X7	ROD, PUSH(ONE) :LEFT BANK EXHAUSTINCLUDES: Valve clearance adjustment	0.8
	1111X7B	.Replace one head(intake and exhaust all) add	0.1
	1111X8	ROD, PUSH(ONE) :RIGHT BANK EXHAUSTINCLUDES: Valve clearance adjustment	0.8
	1111X8B	.Replace one head(intake and exhaust all) add	0.1
4	1111T1	ARM, ROCKER :LEFT BANK INTAKE .INCLUDES: Valve clearance adjustment	0.7
	1111T1A	.Replace left bank exhaust rocker arm add	0.1
	1111U3	ARM, ROCKER :LEFT BANK EXHAUST .INCLUDES: Valve clearance adjustment	0.7
	1111U3A	.Replace left bank intake rocker arm add	0.1
	1111T2	ARM, ROCKER :RIGHT BANK INTAKE .INCLUDES: Valve clearance adjustment	0.7
+			

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1	-	ET 12000 K1	-		
25	94101-06800	WASHER, PLAIN, 6MM	4	-	4	-		
26	94305-60282	PIN, SPRING, 6X28	1	-	1	-		
27	95701-06025-00	BOLT, FLANGE, 6X25	1	-	1	-		

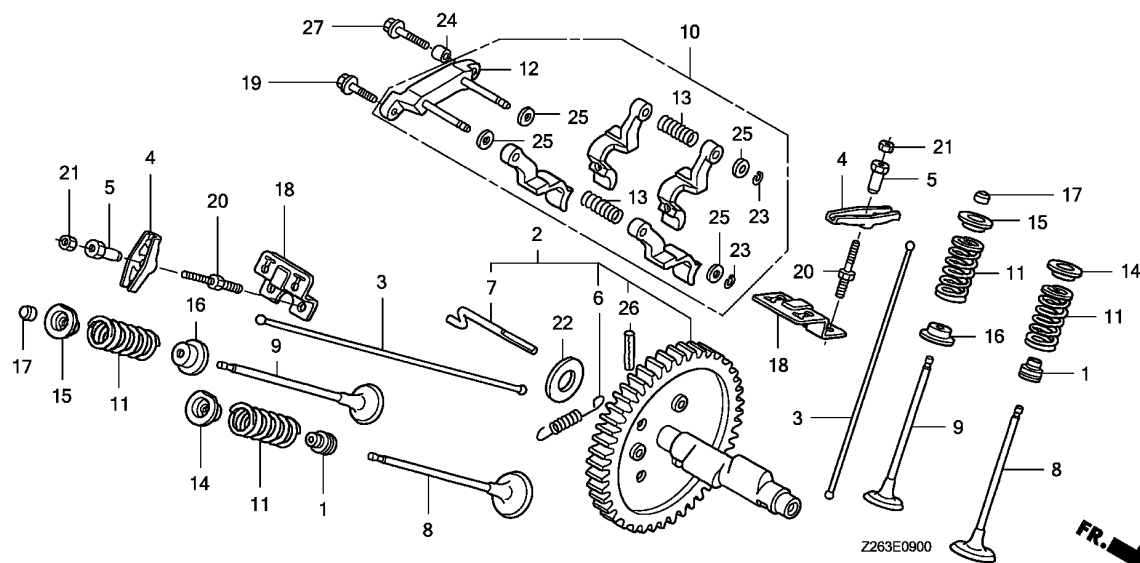

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 4	1111T2A	.Replace right bank exhaust rocker arm add	0.1
	1111U4	ARM, ROCKER :RIGHT BANK EXHAUST	0.7
		.INCLUDES: Valve clearance adjustment	
	1111U4A	.Replace right bank intake rocker arm add	0.1
8	1111L1	VALVE, INTAKE	2.1
		.INCLUDES: Valve clearance adjustment and reface	
	1111L1B	.Replace one head(intake and exhaust all) add	0.1
9	1111L0	VALVE, EXHAUST	2.1
		.INCLUDES: Valve clearance adjustment and reface	
	1111L0B	.Replace one head(intake and exhaust all) add	0.1
10	1111F7	LIFTER, VALVE	3.5
		.INCLUDES: Valve clearance adjustment	
		.INCLUDES: Engine removal and installation	
11	1111V9	SPRING, VALVE(ONE) :INTAKE LEFT BANK	2.0
+			

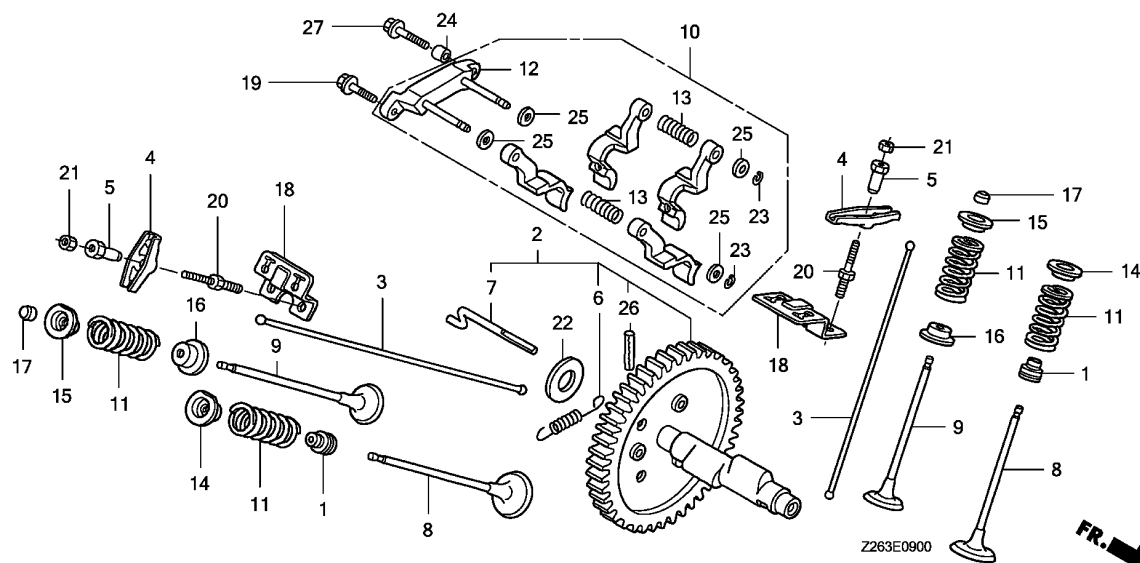


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+11		.INCLUDES: Valve clearance adjustment	
1111V9A		.Replace one head(intake and exhaust all) add	0.1
1111W0		SPRING, VALVE(ONE) :INTAKE RIGHT BANK	2.0
		.INCLUDES: Valve clearance adjustment	
1111W0A		.Replace one head(intake and exhaust all) add	0.1
1111W1		SPRING, VALVE(ONE) :EXHAUST LEFT BANK	2.0
		.INCLUDES: Valve clearance adjustment	
1111W1A		.Replace one head(intake and exhaust all) add	0.1
1111W2		SPRING, VALVE(ONE) :EXHAUST RIGHT BANK	2.0
		.INCLUDES: Valve clearance adjustment	
1111W2A		.Replace one head(intake and exhaust all) add	0.1
12	1111P2	SHAFT, VALVE LIFTER	3.5
+		.INCLUDES: Engine removal and installation	

E-9

CAMSHAFT(1)

E 3

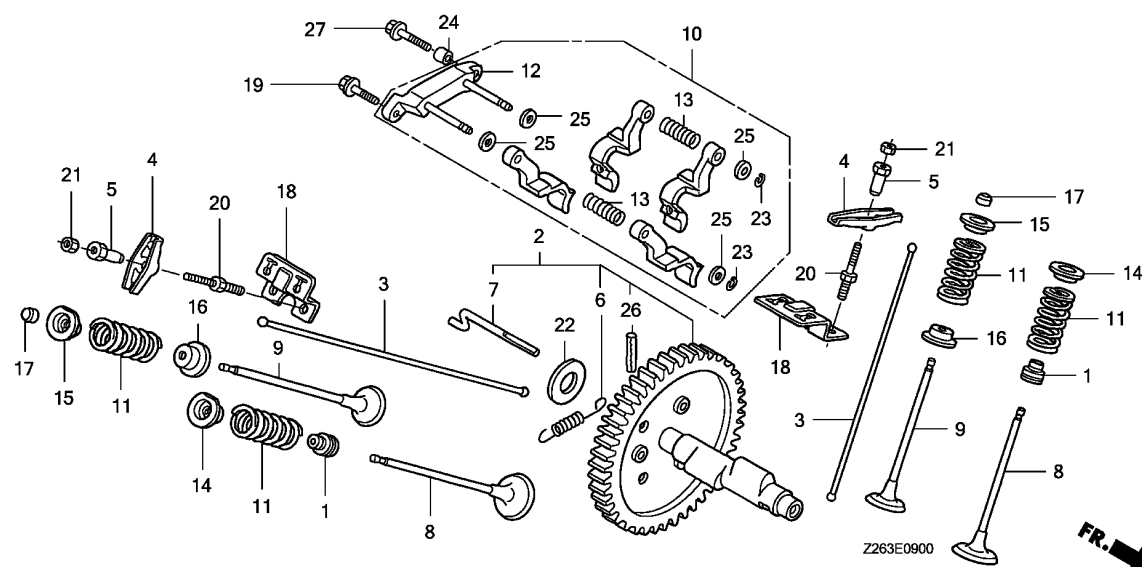


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+12		.INCLUDES: Valve clearance adjustment	

2

E-9-1

CAMSHAFT(2)

E 4

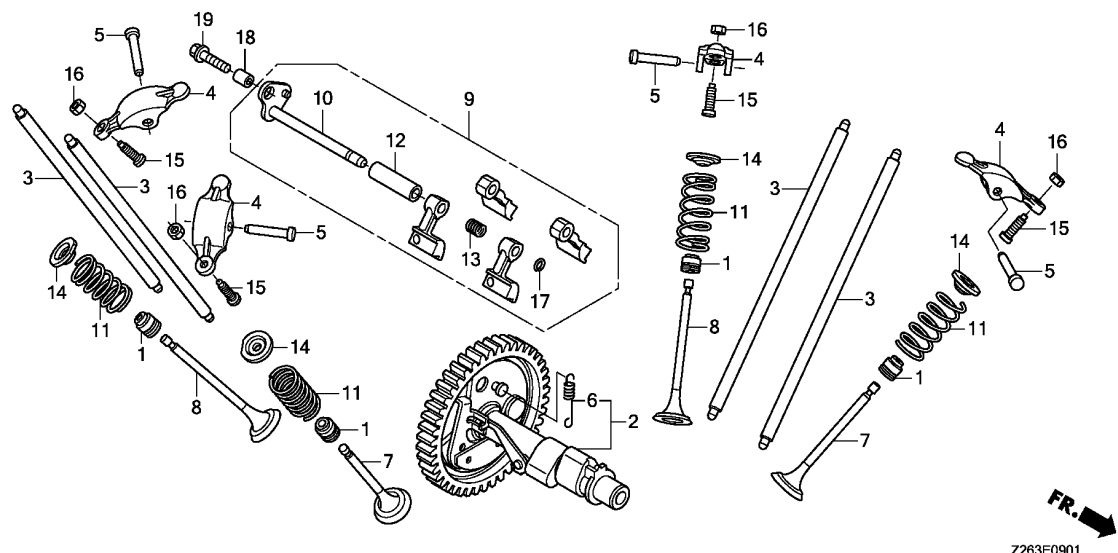

Z263E0901

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111U9	SEAL, INTAKE VALVE STEM(ONE) :LEFT BANKINCLUDES: Valve clearance adjustment	3.0
	1111U9B	.Replace one head(intake and exhaust all) add	0.1
	1111U9C	.Replace both heads (intake and exhaust all) add	1.1
	1111V0	SEAL, INTAKE VALVE STEM(ONE) :RIGHT BANKINCLUDES: Valve clearance adjustment	3.0
	1111V0B	.Replace one head(intake and exhaust all) add	0.1
	1111V0C	.Replace both heads (intake and exhaust all) add	1.1
	1111V1	SEAL, EXHAUST VALVE STEM(ONE) :LEFT BANKINCLUDES: Valve clearance adjustment	3.0
	1111V1B	.Replace one head(intake and exhaust all) add	0.1
	1111V1C	.Replace both heads (intake and exhaust all) add	1.1


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	12208-Z6L-003	SEAL, VALVE STEM	-	4	-	4
2	14100-Z6L-000	CAMSHAFT ASSY.	-	1	-	1
3	14410-Z6L-000	ROD COMP., PUSH	-	4	-	4
4	14431-Z6L-000	ARM, VALVE ROCKER	-	4	-	4
5	14461-Z6L-000	SHAFT, ROCKER ARM	-	4	-	4
6	14568-Z6L-000	SPRING, WEIGHT RETURN	-	1	-	1
7	14711-Z6L-000	VALVE, IN.	-	2	-	2
8	14721-Z6L-000	VALVE, EX.	-	2	-	2
9	14730-Z6L-000	LIFTER ASSY., VALVE	-	1	-	1
10	14735-Z6L-000	SHAFT COMP., VALVE LIFTER ...	-	1	-	1
11	14751-Z6L-000	SPRING, VALVE	-	4	-	4
12	14763-Z6L-000	COLLAR, VALVE LIFTER	-	1	-	1
13	14764-Z6L-000	SPRING, VALVE LIFTER	-	1	-	1
14	14771-ZE1-000	RETAINER, IN. VALVE SPRING ..	-	4	-	4
15	90012-Z6L-000	SCREW, TAPPET ADJUSTING	-	4	-	4
16	90206-Z6L-000	NUT, TAPPET ADJUSTING	-	4	-	4
17	90602-ZE1-000	CLIP, GOVERNOR HOLDER	-	1	-	1
18	90707-Z6L-000	DOWEL PIN, 8X10	-	1	-	1
19	95701-06022-00	BOLT, FLANGE, 6X22	-	1	-	1

2

E-9-1

CAMSHAFT(2)

E 5

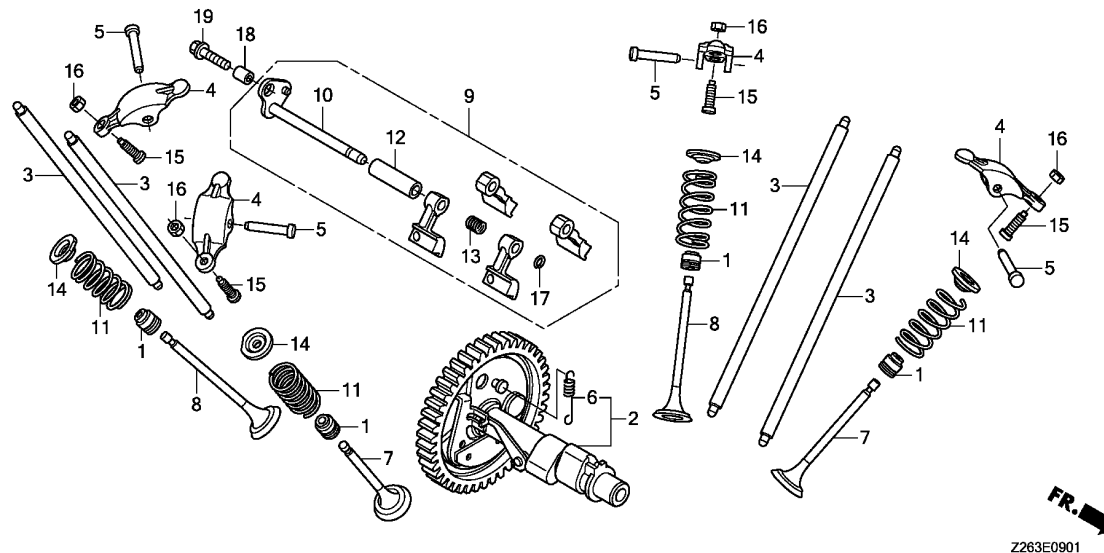


Z263E0901

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 1	1111V2	SEAL, EXHAUST VALVE STEM(ONE) :RIGHT BANKINCLUDES: Valve clearance adjustment	3.0
	1111V2B	.Replace one head(intake and exhaust all) add	0.1
	1111V2C	.Replace both heads (intake and exhaust all) add	1.1
2	1111C2	CAMSHAFTINCLUDES: Engine removal and installation .INCLUDES: Valve clearance adjustment	2.9
3	1111X5	ROD, PUSH(ONE) :LEFT BANK INTAKEINCLUDES: Valve clearance adjustment	0.3
	1111X5B	.Replace one head(intake and exhaust all) add	0.1
	1111X5C	.Replace both heads (intake and exhaust all) add	0.3
	1111X6	ROD, PUSH(ONE) :RIGHT BANK INTAKEINCLUDES: Valve clearance adjustment	0.3
+			

E-9-1

CAMSHAFT(2)

E 6

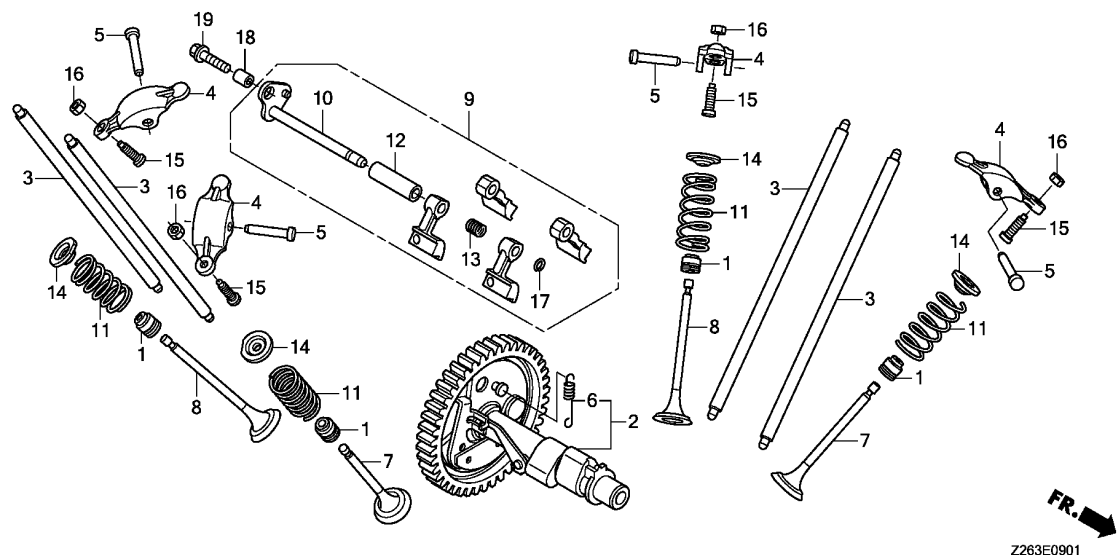


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 3	1111X6B	.Replace one head(intake and exhaust all) add	0.1
	1111X6C	.Replace both heads (intake and exhaust all) add	0.3
	1111X7	ROD, PUSH(ONE) :LEFT BANK EXHAUST	0.3
		.INCLUDES: Valve clearance adjustment	
	1111X7B	.Replace one head(intake and exhaust all) add	0.1
	1111X7C	.Replace both heads (intake and exhaust all) add	0.3
	1111X8	ROD, PUSH(ONE) :RIGHT BANK EXHAUST	0.3
		.INCLUDES: Valve clearance adjustment	
	1111X8B	.Replace one head(intake and exhaust all) add	0.1
	1111X8C	.Replace both heads (intake and exhaust all) add	0.3
4	1111T1	ARM, ROCKER :LEFT BANK INTAKE .INCLUDES: Valve clearance adjustment	0.3
+	1111T1A	.Replace left bank exhaust rocker arm add	0.1

2

E-9-1

CAMSHAFT(2)

E 7

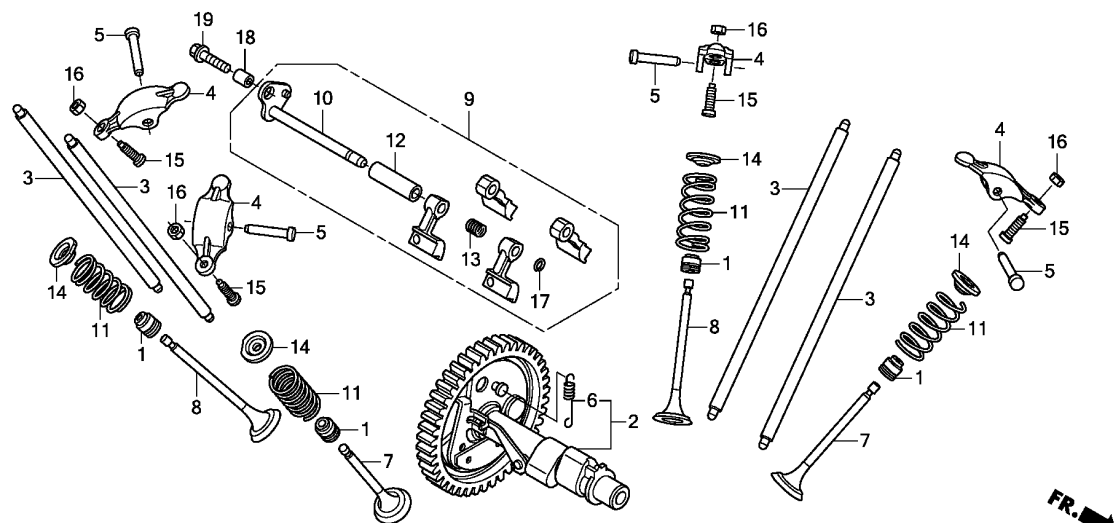


Z263E0901

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 4	1111T1B	.Replace both heads (intake and exhaust all) add	0.3
	1111U3	ARM, ROCKER :LEFT BANK EXHAUST .INCLUDES: Valve clearance adjustment	0.3
	1111U3A	.Replace left bank intake rocker arm add	0.1
	1111U3B	.Replace both heads (intake and exhaust all) add	0.3
	1111T2	ARM, ROCKER :RIGHT BANK INTAKE .INCLUDES: Valve clearance adjustment	0.3
	1111T2A	.Replace right bank exhaust rocker arm add	0.1
	1111T2B	.Replace both heads (intake and exhaust all) add	0.3
	1111U4	ARM, ROCKER :RIGHT BANK EXHAUST	0.3
	1111U4A	.Replace right bank intake rocker arm add	0.1
	1111U4B	.Replace both heads (intake and exhaust all) add	0.3
+ 7	1111T9	VALVE, INTAKE(ONE) :LEFT BANK	3.2

E-9-1

CAMSHAFT(2)

E 8

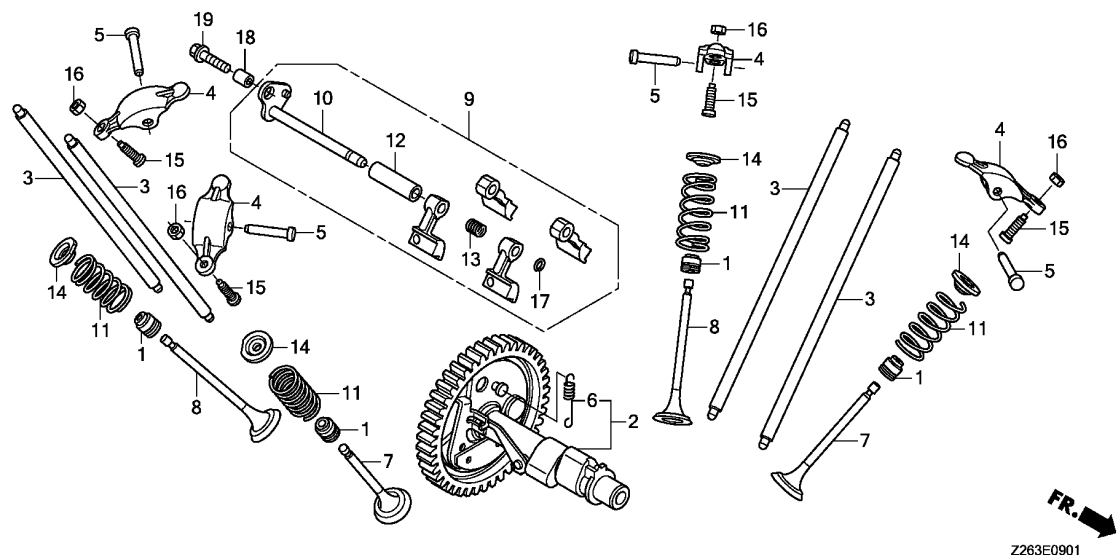


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 7		.INCLUDES: Valve clearance adjustment and reface	
1111T9B		.Replace one head(intake and exhaust all) add	0.2
1111T9C		.Replace both heads (intake and exhaust all) add	1.2
1111U1		VALVE, INTAKE(ONE) :RIGHT BANK .INCLUDES: Valve clearance adjustment and reface	3.2
1111U1B		.Replace one head(intake and exhaust all) add	0.2
1111U1C		.Replace both heads (intake and exhaust all) add	1.2
8 1111U0		VALVE, EXHAUST(ONE) :LEFT BANK .INCLUDES: Valve clearance adjustment and reface	3.2
1111U0B		.Replace one head(intake and exhaust all) add	0.2
1111U0C		.Replace both heads (intake and exhaust all) add	1.2
1111U2		VALVE, EXHAUST(ONE) :RIGHT BANK	3.2
+		.INCLUDES: Valve clearance adjustment and reface	

2

E-9-1

CAMSHAFT(2)

E 9

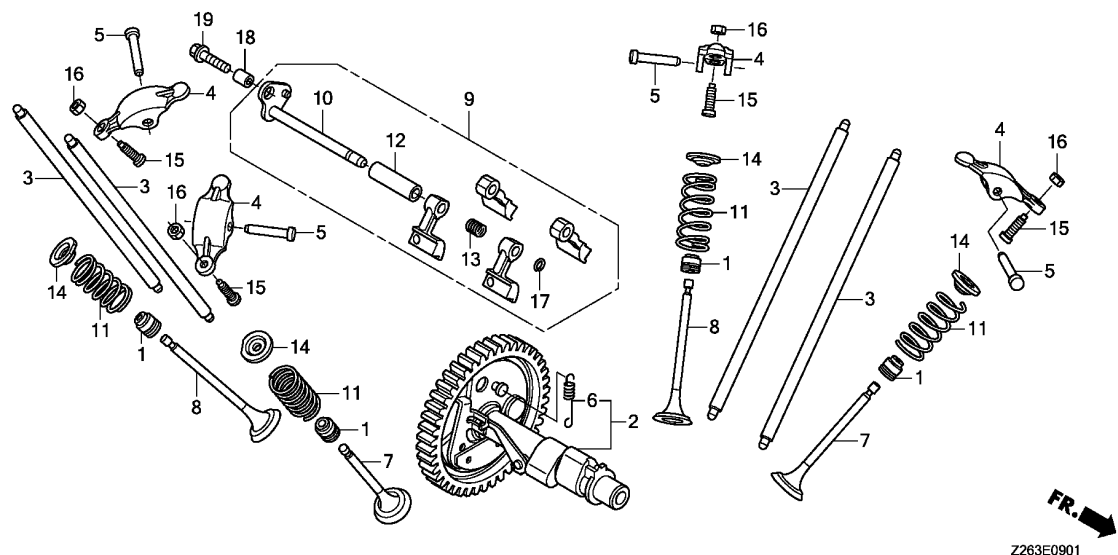


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 8	1111U2B	.Replace one head(intake and exhaust all) add	0.2
	1111U2C	.Replace both heads (intake and exhaust all) add	1.2
9	1111F7	LIFTER, VALVEINCLUDES: Valve clearance adjustment .INCLUDES: Engine removal and installation	2.9
10	1111P2	SHAFT, VALVE LIFTERINCLUDES: Engine removal and installation .INCLUDES: Valve clearance adjustment	3.0
11	1111V9	SPRING, VALVE(ONE) :INTAKE LEFT BANKINCLUDES: Valve clearance adjustment	3.0
	1111V9A	.Replace one head(intake and exhaust all) add	0.1
	1111V9B	.Replace both heads (intake and exhaust all) add	1.1
+	1111W0	SPRING, VALVE(ONE) :INTAKE RIGHT BANK	3.0

E-9-1


CAMSHAFT(2)

E10

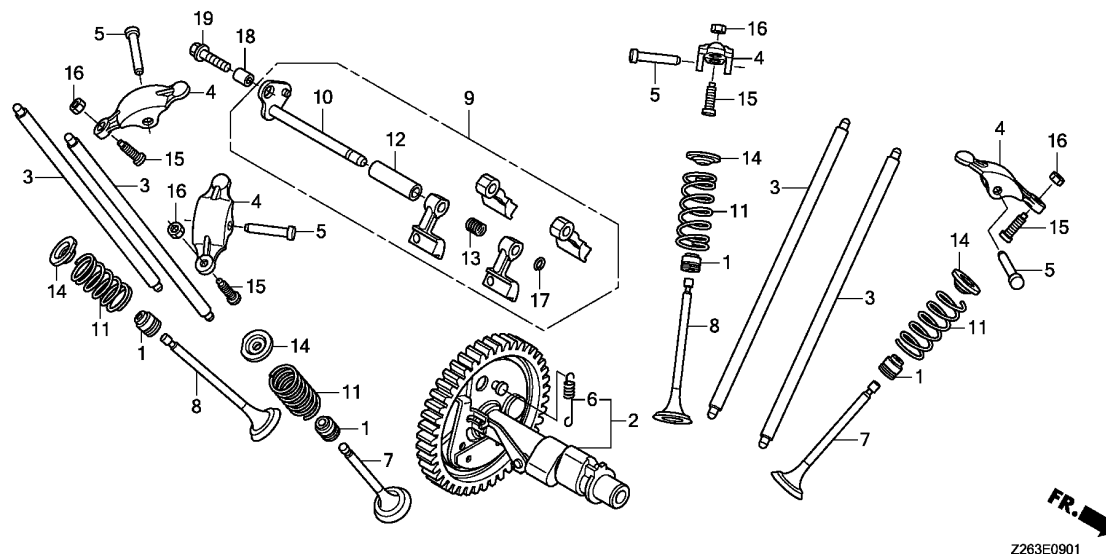

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+11		.INCLUDES: Valve clearance adjustment	
1111W0A		.Replace one head(intake and exhaust all) add	0.1
1111W0B		.Replace both heads (intake and exhaust all) add	1.1
1111W1		SPRING, VALVE(ONE) :EXHAUST LEFT BANK	3.0
		.INCLUDES: Valve clearance adjustment	
1111W1A		.Replace one head(intake and exhaust all) add	0.1
1111W1B		.Replace both heads (intake and exhaust all) add	1.1
1111W2		SPRING, VALVE(ONE) :EXHAUST RIGHT BANK	3.0
		.INCLUDES: Valve clearance adjustment	
1111W2A		.Replace one head(intake and exhaust all) add	0.1
1111W2B		.Replace both heads (intake and exhaust all) add	1.1

2

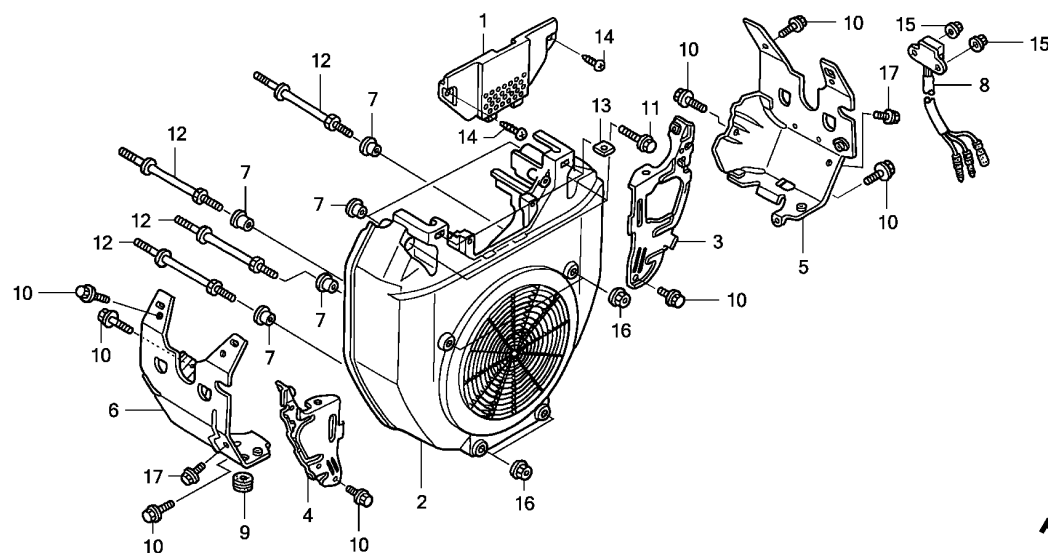

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101A4	COVER, FUEL PUMP	0.6
2	1141G8	COVER, ENGINE COOLING FAN	0.7
3	1121A5	PLATE, SIDE :LEFT	0.7
4	1121A6	PLATE, SIDE :RIGHT	0.7
5	4141D9	SHROUD, ENGINE :LEFT	0.8
6	4141E1	SHROUD, ENGINE :RIGHT	0.8
8	6151A0	ALERT UNIT, ENGINE OIL	0.2


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	16715-ZJ1-840	COVER, FUEL PUMP	1	-	1	-
2	19611-ZJ1-840ZA	COVER, FAN *NH1*.....BLACK	1	-	1	-
3	19612-ZJ1-841	PLATE, SIDE	1	-	1	-
4	19614-ZJ1-841	PLATE, SIDE	1	-	1	-
5	19631-ZJ1-850	SHROUD(OIL ALERT)	1	-	1	-
6	19632-ZJ1-841	SHROUD	1	-	1	-
7	33713-GC2-000	COLLAR B, TAILLIGHT	6	-	6	-
8	34150-ZJ1-842	ALERT UNIT, OIL	1	-	1	-
	34150-ZJ1-843		1	-	1	-
9	80101-310-000	RUBBER, RR. FENDER CUSHION ..	1	-	1	-
10	90013-883-000	BOLT, FLANGE, 6X12(CT200) ...	10	-	10	-
11	90018-ZE1-000	BOLT, FLANGE, 6X23(CT200) ...	2	-	2	-
12	90042-ZJ1-840	BOLT, STUD, 6X71	4	-	4	-
13	90313-ZJ1-840	NUT, SQUARE, 5MM	2	-	2	-
14	93913-25580	SCREW, TAPPING, 5X20	2	-	2	-
15	94050-05000	NUT, FLANGE, 5MM	2	-	2	-
16	94050-06000	NUT, FLANGE, 6MM	4	-	4	-
17	95701-06008-00	BOLT, FLANGE, 6X8	2	-	2	-

----- 2180477 R,RG,RH
2180478 -----

E-12-1

FAN COVER(2)

E12

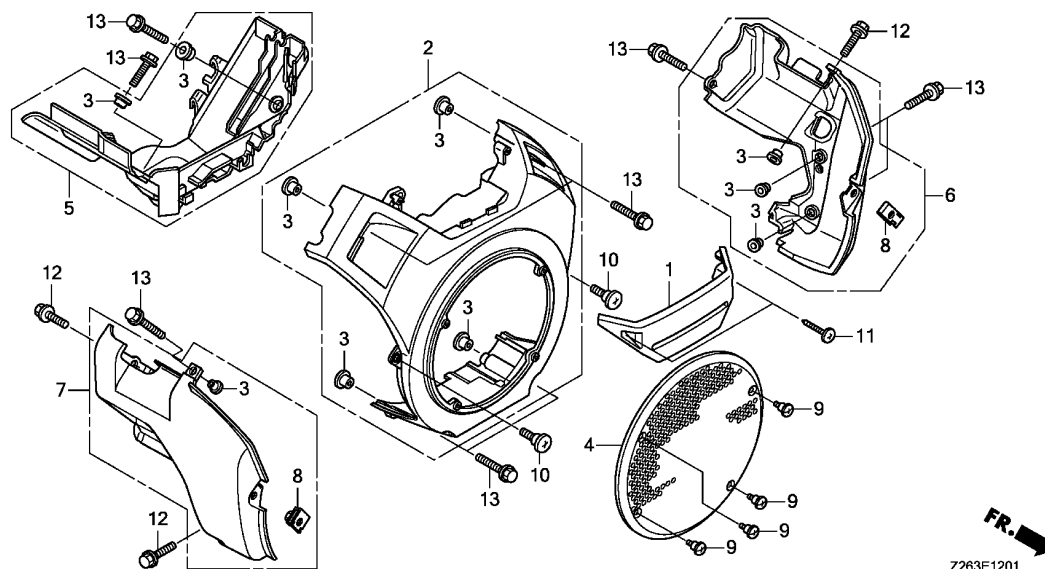


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101A4	COVER, FUEL PUMP	0.2
2	1141G9	COVER, ENGINE COOLING FAN(A) .	0.3
4	4141C9	PROTECTOR, FAN COVER	0.1
5	4141E2	SHROUD, ENGINE :UPPER	1.2
6	4141AE	SHROUD, ENGINE(A) :LEFT	0.5
7	4141AF	SHROUD, ENGINE(A) :RIGHT	0.7

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	16715-Z6L-000	COVER, FUEL PUMP	-	1	-	1
2	19610-Z6L-000ZB	COVER COMP., FAN *NH1*.....BLACK	-	1	-	1
3	19619-Z0A-300	COLLAR, FAN COVER	-	10	-	10
4	19621-Z6L-000	PROTECTOR, FAN COVER	-	1	-	1
5	19631-Z6L-000	SHROUD, UPPER	-	1	-	1
6	19641-Z6L-000	SHROUD, R. LOWER	-	1	-	1
7	19642-Z6L-000	SHROUD, L. LOWER	-	1	-	1
8	84601-HA7-670	NUT, FENDER SETTING	-	2	-	2
9	90005-Z6L-000	SCREW, SPECIAL, 4X10	-	4	-	4
	90005-ZCK-000		-	4	-	-
10	90380-GM9-740	SCREW, SPECIAL, 6X15	-	2	-	2
11	93913-25580	SCREW, TAPPING, 5X20	-	2	-	2
12	95701-06016-00	BOLT, FLANGE, 6X16	-	3	-	3
13	95701-06020-00	BOLT, FLANGE, 6X20	-	10	-	10

E-14


CARBURETOR(1)

E13

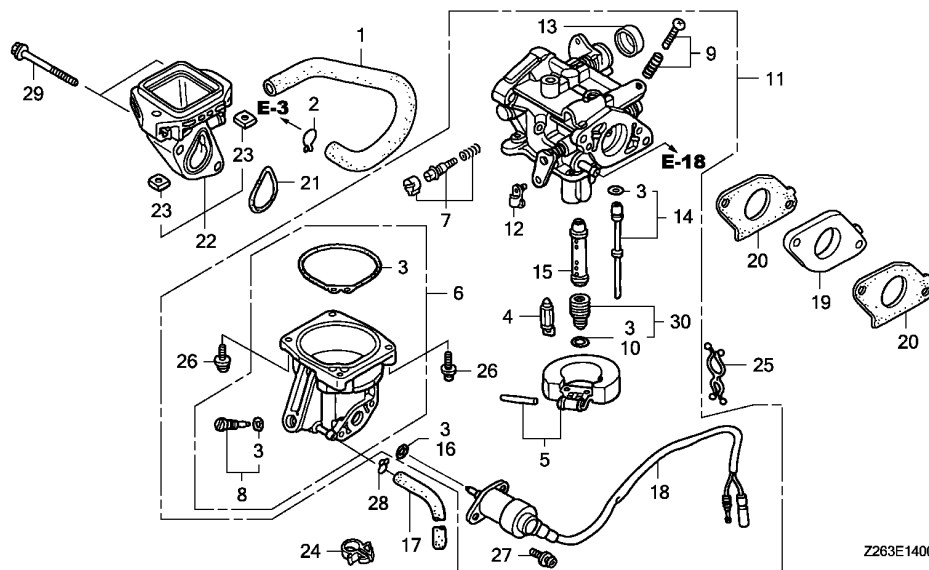

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K5	TUBE, BREATHER	0.7
3	3111B1	GASKET SET, CARBURETOR	0.8
4	3111J8	VALVE SET, CARBURETOR	0.7
6	3111A3	FLOAT CHAMBER SET AND/OR GASKET	0.7
7	3111D7	SCREW SET, PILOT	0.2
11	3111F3	CARBURETOR	0.6
18	6211C0	VALVE, CARBURETOR SOLENOID ...	0.5
19	3111C0	CARBURETOR INSULATOR AND/OR PACKING	0.4
20	3111C8	PACKING, CARBURETOR	0.4
21	3121D9	PACKING, AIR CLEANER	0.2
22	3121B4	ELBOW, AIR CLEANER	0.2
30	3111C3	JET, MAIN	0.7

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1			
1	12357-ZJ1-840	TUBE, BREATHER	1	1	-		
2	15772-551-000	CLIP, BREATHER TUBE	1	1	-		
3	16010-ZG8-000	GASKET SET	1	1	-		
4	16011-KCK-910	VALVE SET, FLOAT	1	1	-		
5	16013-ZV4-005	FLOAT SET	1	1	-		
6	16015-ZJ1-W01	CHAMBER SET, FLOAT	1	1	-		
7	16016-ZJ1-010	SCREW SET	1	1	-		
8	16024-124-760	SCREW SET, DRAIN	1	1	-		
9	16028-ZG8-000	SCREW SET	1	1	-		
10	16075-ZJ1-000	O-RING	1	1	-		
11	16100-ZJ1-W04	CARBURETOR ASSY. (BG22L D) ...	1	1	-		
12	16126-ZJ1-841	ARM, THROTTLE LINKAGE	1	1	-		
13	16148-141-881	CAP, CHOKE DUST	1	1	-		
14	16150-ZJ1-841	JET SET, #52	1	1	-		
15	16166-ZJ0-000	NOZZLE, MAIN	1	1	-		
16	16178-548-004	O-RING, 5.8X1.9	1	1	-		
17	16198-ZJ1-840	TUBE, DRAIN	1	1	-		
18	16200-ZJ1-852	VALVE ASSY., SOLENOID	1	1	-		
19	16211-ZJ0-830	INSULATOR, CARBURETOR	1	1	-		
20	16221-ZJ1-840	PACKING, CARBURETOR	2	2	-		
21	17228-ZG8-003	PACKING, AIR CLEANER	1	1	-		
22	17410-ZJ1-840	ELBOW COMP., AIR CLEANER ...	1	1	-		
23	90314-ZJ1-840	NUT, INSERT, 6MM	2	2	-		
24	90682-959-661	CLIP B, CABLE(9MM BLACK)	1	1	-		
25	91402-ZJ1-841	CLIP, PURSE LOCK	1	1	-		

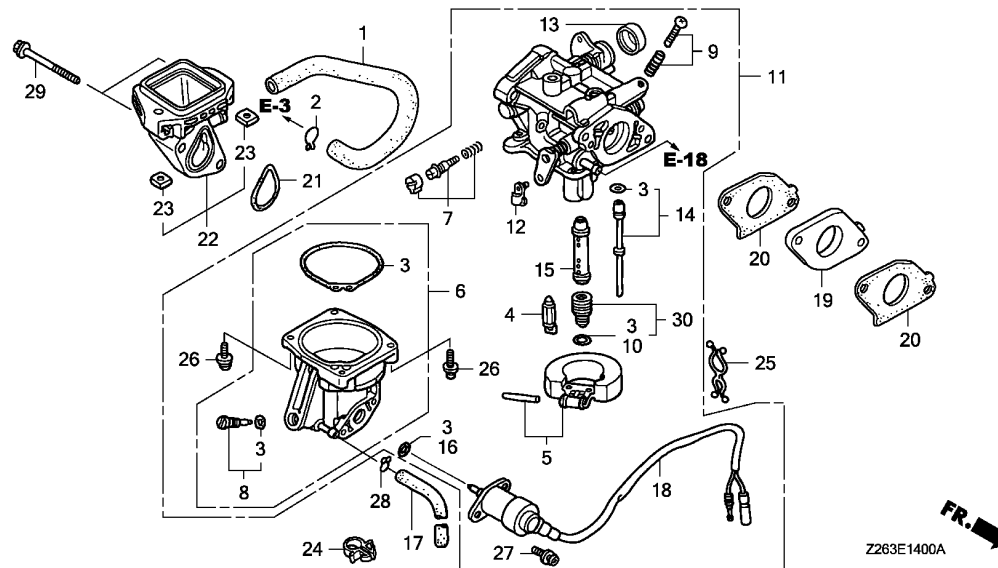


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
26	93892-04014-18	SCREW-WASHER, 4X14	4	-	4	-
27	93892-05012-18	SCREW-WASHER, 5X12	2	-	2	-
28	95002-02080	CLIP, TUBE(B8)	1	-	1	-
29	95801-06120-00	BOLT, FLANGE, 6X120	2	-	2	-
30	99201-ZG8-1000	JET SET, MAIN, #100	(1)	-	(1)	-
	99201-ZG8-1020	JET SET, MAIN, #102	(1)	-	(1)	-
	99201-ZG8-1050	JET SET, MAIN, #105	1	-	1	-

E-14-1


CARBURETOR(2)

E15

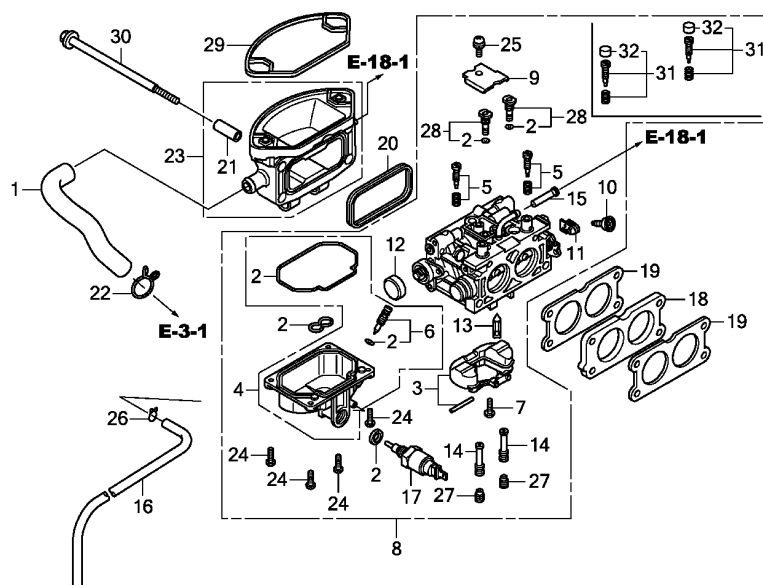


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111T5	TUBE, BREATHER(A)	1.2
2	3111B1	GASKET SET, CARBURETOR	1.5
4	3111M2	FLOAT CHAMBER SET AND/OR GASKET(A)	1.3
5	3111T7	SCREW SET, PILOT :LEFT	0.3
	3111T8	SCREW SET, PILOT :RIGHT	0.3
8	3111G7	CARBURETOR(A)	1.2
13	3111E1	FLOAT VALVE SET AND/OR FLOAT SET	1.4
15	3111T4	SCREEN, CARBURETOR FUEL STRAINER	0.2
17	6211F7	VALVE, CARBURETOR SOLENOID(A)	1.3
18	3111G2	CARBURETOR INSULATOR AND/OR PACKING(A)	1.2
19	3111G5	PACKING, CARBURETOR(A)	1.2
		.NOTE: Same time for two units	
20	3121H2	PACKING, AIR CLEANER(A)	1.2
23	3121R8	ELBOW, AIR CLEANER(A)	1.2
27	3111T5	JET, MAIN :LEFT	1.3
	3111T6	JET, MAIN :RIGHT	1.3
28	3111N2	JET SET, PILOT	0.2
29	3121E8	SEAL, AIR CLEANER CASE	0.2

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	15721-Z6L-000	TUBE, BREATHER	-	1	-	1
2	16010-Z6L-003	GASKET SET	-	1	-	1
3	16013-Z6L-003	FLOAT SET	-	1	-	1
4	16015-Z6L-003	CHAMBER SET, FLOAT	-	1	-	1
5	16016-Z6L-003	SCREW SET	-	2	-	2
					-----	----- KH,MH,RGH,RRH,UH
6	16024-124-760	SCREW SET, DRAIN	-	1	-	1
7	16081-Z6L-003	SCREW, FLOAT	-	1	-	1
8	16100-ZCL-D01	CARBURETOR ASSY.(BK07Q A)	-	1	-	1
	16100-Z9E-023	CARBURETOR ASSY.(BK07A C)	-	1	-	1
9	16113-Z6L-003	PLATE	-	1	-	1
10	16124-ZE0-005	SCREW, THROTTLE STOP	-	1	-	1
					-----	----- KH,MH,RGH,RRH,UH
					-----	----- LDH,SH,SKH
11	16126-Z6L-003	ARM, THROTTLE LINKAGE	-	1	-	1
12	16148-141-881	CAP, CHOKE DUST	-	1	-	1
13	16155-Z6L-003	VALVE COMP., FLOAT	-	1	-	1
14	16166-Z9E-003	NOZZLE, MAIN	-	2	-	2
15	16176-Z2G-D51	SCREEN, FUEL STRAINER	-	1	-	1
16	16198-ZJ1-840	TUBE, DRAIN	-	1	-	1
17	16200-Z6L-003	VALVE ASSY., SOLENOID	-	1	-	1
18	16211-Z6L-000	INSULATOR, CARBURETOR	-	1	-	1
19	16221-Z6L-000	PACKING, CARBURETOR	-	2	-	2
20	17228-Z6L-000	PACKING, AIR CLEANER	-	1	-	1
21	17238-ZE7-010	COLLAR, AIR CLEANER	-	4	-	4
22	17369-KB4-670	CLIP, BREATHER TUBE	-	1	-	1
23	17410-Z6L-000	ELBOW COMP., AIR CLEANER	-	1	-	1
24	93500-04012-1H	SCREW, PAN, 4X12	-	4	-	4

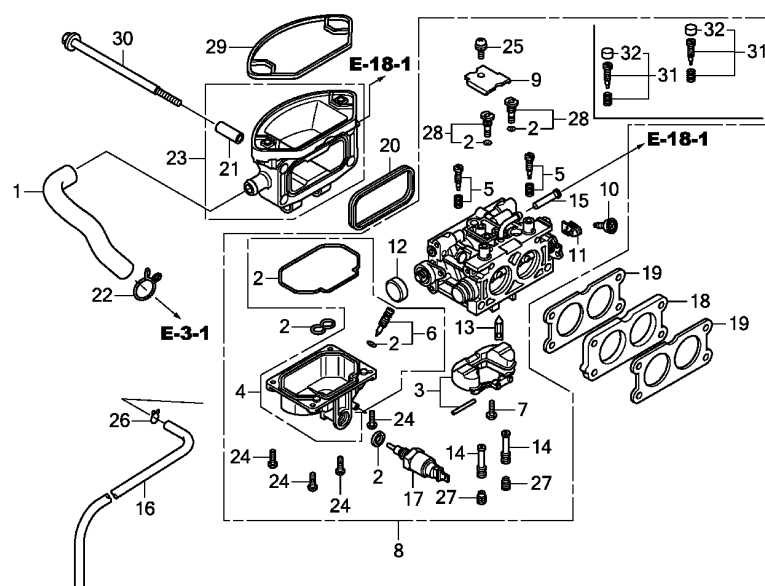

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
25	93892-05010-18	SCREW-WASHER, 5X10	- 1	- 1		
26	95002-02080	CLIP, TUBE(B8)	- 1	- 1		
27	99101-ZH8-0980	JET, MAIN, #98	- (2)	- (2)		
	99101-ZH8-1020	JET, MAIN, #102	- (2)	- (2)		
	99101-ZH8-1100	JET, MAIN, #110	- 2	- 2		
28	99204-ZE2-0400	JET SET, PILOT, #40	- 2	- 2		
29	17229-Z6L-000	SEAL, AIR CLEANER CASE	- 1	- 1		
30	90003-Z6L-000	BOLT, FLANGE, 6X106	- 4	- 4		
31	16016-Z6L-801	SCREW SET	- 2	-	----- LDH,SH,SKH	
32	16134-Z6L-801	CAP, ADJUSTING SCREW	- 2	-	----- LDH,SH,SKH	

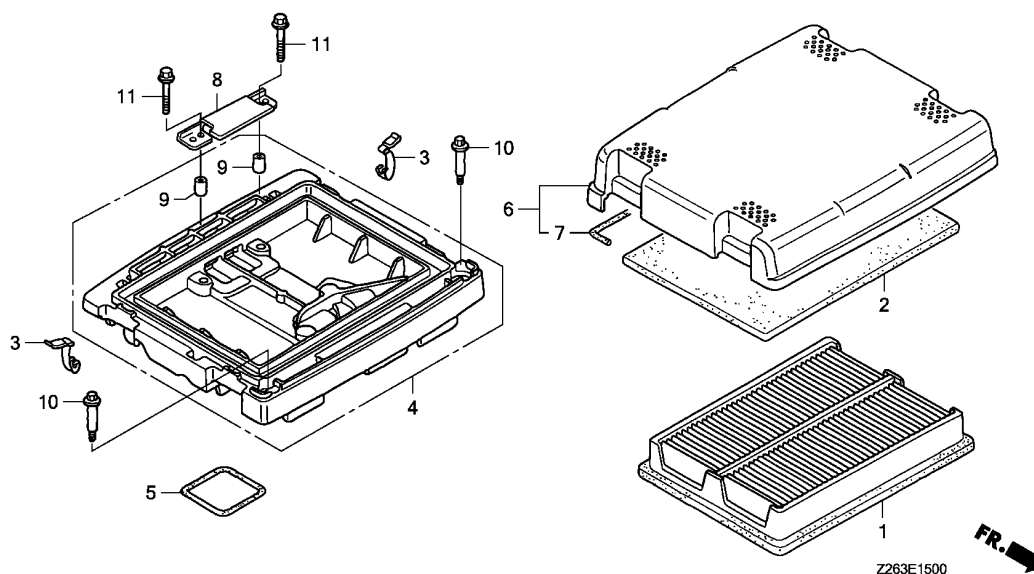


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121B8	ELEMENT, AIR CLEANERINCLUDES: Air cleaner element -inspection	0.1
2	3121C1	FILTER, OUTERINCLUDES: Outer filter-inspection	0.1
4	3121A5	CASE, AIR CLEANER 0.2	
5	3121E8	SEAL, AIR CLEANER CASE 0.2	
6	3121B1	COVER, AIR CLEANER 0.1	
8	3121K3	PLATE, AIR CLEANER SETTING ... 0.2	

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1			
1	17210-ZJ1-842	ELEMENT COMP., AIR CLEANER ..	1	-	1	-	
2	17218-ZJ1-840	FILTER, OUTER	1	-	1	-	
3	17219-ZJ1-840	CLIP, AIR CLEANER	4	-	4	-	
4	17220-ZJ1-840	CASE COMP., AIR CLEANER	1	-	1	-	
5	17229-ZJ1-840	SEAL, AIR CLEANER CASE	1	-	1	-	
6	17230-ZJ1-840	COVER ASSY., AIR CLEANER	1	-	1	-	2204240 R,RG,RH
	17230-ZJ1-841		1	-	1	-	2204241
7	17233-ZJ1-840	SEAL, AIR CLEANER COVER	1	-	1	-	
8	17234-ZJ1-840	PLATE, AIR CLEANER SETTING ..	1	-	1	-	
9	17238-ZJ4-830	COLLAR A, AIR CLEANER	2	-	2	-	
10	90003-ZJ1-840	BOLT, SPECIAL, 5MM	2	-	2	-	
11	95701-06028-00	BOLT, FLANGE, 6X28	2	-	2	-	

E-15-1

AIR CLEANER(2)

F 2

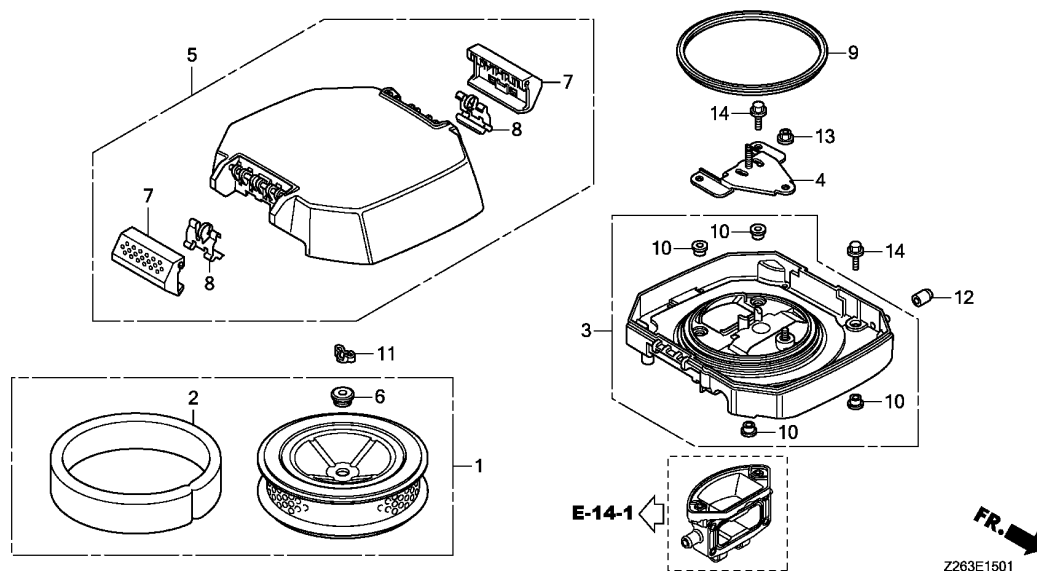

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3121B8	ELEMENT, AIR CLEANERINCLUDES: Air cleaner element -inspection	0.1
2	3121C1	FILTER, OUTERINCLUDES: Outer filter-inspection	0.1
3	3121A5	CASE, AIR CLEANERINCLUDES:	0.2
5	3121B1	COVER, AIR CLEANERINCLUDES:	0.1
9	3121R3	PACKING, AIR CLEANER CASE	0.1

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	17210-Z6L-010	ELEMENT COMP., AIR CLEANER ..	-	1	-	1
2	17218-Z6L-000	FILTER, OUTER	-	1	-	1
3	17220-Z6L-000	CASE COMP., AIR CLEANER	-	1	-	1
4	17223-Z6L-000	STAY COMP., AIR CLEANER	-	1	-	1
5	17230-Z6L-000	COVER COMP., AIR CLEANER	-	1	-	1
6	17232-Z2E-000	GROMMET, AIR CLEANER	-	1	-	1
7	17235-Z6L-300	KNOB, AIR CLEANER COVER	-	2	-	2
8	17236-Z6L-300	SPRING, AIR CLEANER CASE COVER	-	2	-	2
9	17417-Z6L-000	PACKING, AIR CLEANER CASE	-	1	-	1
10	19619-Z0A-300	COLLAR, FAN COVER	-	4	-	4
11	90325-044-000	NUT, TOOL BOX SETTING	-	1	-	1
12	90802-Z6L-000	CAP, SEALING	-	1	-	1
13	94050-06000	NUT, FLANGE, 6MM	-	1	-	1
14	95701-06018-00	BOLT, FLANGE, 6X18	-	4	-	4

2

F 3




Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM	ET		
			10000	12000		
			K1	K1		
1	16700-ZL8-013	PUMP ASSY., FUEL	1	- 1	-	
2	16711-ZJ1-840	STAY, FUEL PUMP	1	- 1	-	
3	16850-ZJ1-840	TUBE COMP., FUEL(A)	1	- 1	-	
4	16852-ZJ1-840	TUBE B, FUEL	1	- 1	-	
5	16882-ZJ1-840	TUBE, DIAPHRAGM	1	- 1	-	
6	16958-GJ6-000	JOINT, FUEL TUBE	1	- 1	-	
7	19111-MF5-000	GROMMET, RESERVE TANK	1	- 1	-	
8	30701-887-790	CLIP, HIGH TENSION CORD	1	- 1	-	
9	90014-952-000	BOLT, FLANGE, 6X14(CT200) ...	1	- 1	-	
10	91601-ZJ1-840	GROMMET, PUMP STAY	1	- 1	-	
11	93894-06016-00	SCREW-WASHER, 6X16	2	- 2	-	
12	95001-45410-50	HOSE, FUEL, 4.5X410 (95001-45001-50M)	1	- 1	-	
13	95002-02080	CLIP, TUBE(B8)	3	- 3	-	
14	95002-02100	CLIP, TUBE(B10)	3	- 3	-	
15	95002-40850-08	CLAMP, TUBE(D8.5)	1	- 1	-	
16	95003-25015-20	TUBE, VINYL, 9X11X150 (95003-25001-10M)	1	- 1	-	

E-18-1

FUEL PUMP(2)


F 4

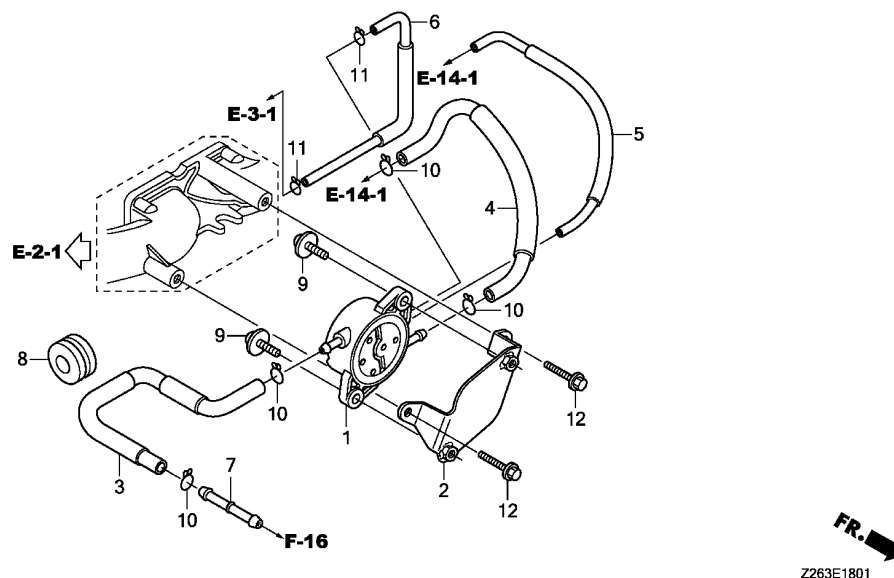

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101Y3	PUMP, FUEL(A)	0.5
3	3101Y6	TUBE A, FUEL(A)	0.4
4	3101Y5	TUBE B, FUEL(A)	0.4
5	3111Q5	TUBE, PURGE	0.4
6	3101Y4	TUBE, DIAPHRAGM(A)	0.4


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	16700-Z6L-003	PUMP ASSY., FUEL	-	1	-	1
2	16711-Z6L-000	STAY, FUEL PUMP	-	1	-	1
3	16850-ZCL-D00	TUBE COMP. A, FUEL	-	1	-	1
4	16860-ZCL-D00	TUBE COMP. B, FUEL	-	1	-	1
5	16870-Z6L-000	TUBE, PURGE	-	1	-	1
6	16882-Z6L-000	TUBE, DIAPHRAGM	-	1	-	1
7	17721-ZY3-000	JOINT, FUEL RETURN	-	1	-	1
8	80152-958-680	RUBBER, RR. FENDER	-	1	-	1
9	93894-06016-00	SCREW-WASHER, 6X16	-	2	-	2
10	95002-02100	CLIP, TUBE(B10)	-	4	-	4
11	95002-70000	CLIP, TUBE(C11)	-	2	-	2
12	95701-06014-00	BOLT, FLANGE, 6X14	-	2	-	2

2

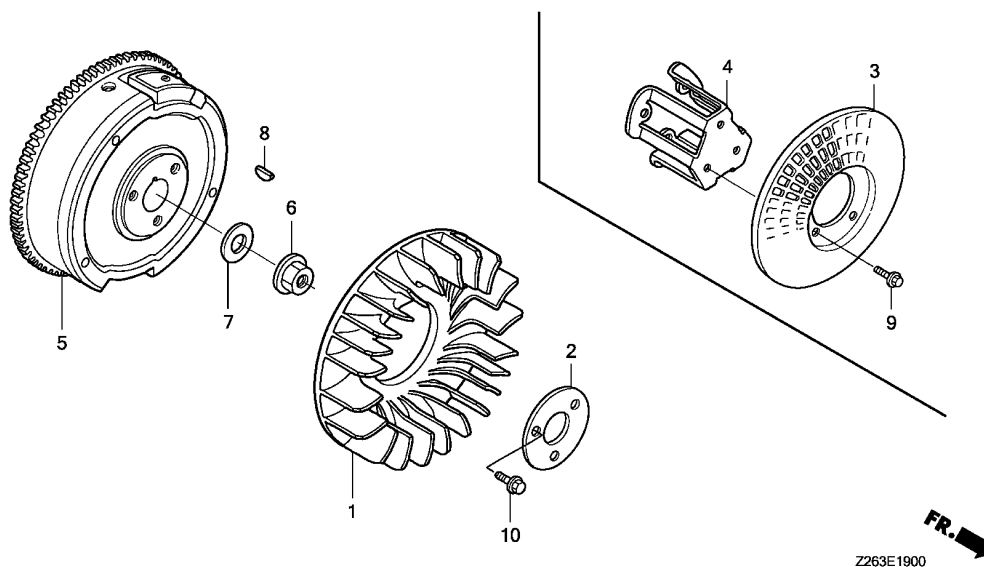

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G7	FAN, ENGINE COOLING	0.8
2	1141H0	PLATE, COOLING FAN SETTING ...	0.8
3	6201A5	GRID, SCREEN	0.7
4	6201A6	HOLDER, SCREEN GRID	0.8
5	2161B5	FLYWHEEL	1.0


Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1			
1	19511-ZJ1-000	FAN, COOLING	1	1	-		
2	19513-ZJ1-000	PLATE, COOLING FAN SETTING ..	1	1	-		
3	28452-ZJ1-811	GRID, SCREEN(P.T.O.)	(1)	(1)	-		
4	28454-ZJ1-801	HOLDER, SCREEN GRID	(1)	(1)	-		
5	31110-ZJ1-850	FLYWHEEL COMP.	1	1	-		
6	90201-ZG3-000	NUT, FLANGE, 20MM	1	1	-		
7	90401-ZG3-000	WASHER, 20MM	1	1	-		
8	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	1	1	-		
9	95701-06012-00	BOLT, FLANGE, 6X12	(3)	(3)	-		
10	95701-08016-00	BOLT, FLANGE, 8X16	3	3	-		

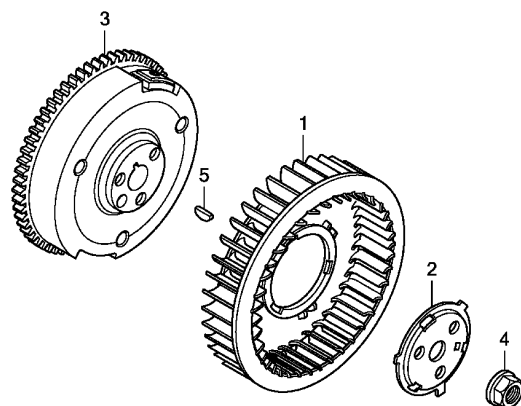

FR. →
Z263E1901

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141J0	FAN, ENGINE COOLING(A)	1.3
3	2161Q5	FLYWHEEL(A)	1.4

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	19511-Z6L-000	FAN, COOLING	- 1	- 1		
2	19513-Z6L-000	PLATE, COOLING FAN SETTING ..	- 1	- 1		
3	31110-Z6L-003	FLYWHEEL COMP.	- 1	- 1		
4	90201-Z6L-000	NUT, SPECIAL(20MM)	- 1	- 1		
5	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	- 1	- 1		

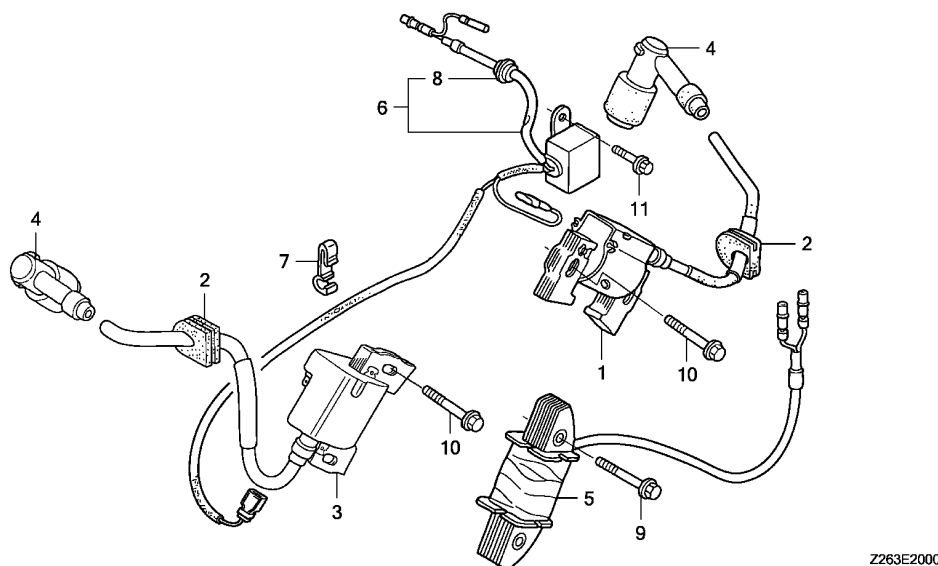


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A3	COIL, IGNITION :LEFT	0.8
3	6141A4	COIL, IGNITION :RIGHT	0.8
4	6141C3	TERMINAL, HIGH TENSION :LEFT ..	0.1
	6141C4	TERMINAL, HIGH TENSION :RIGHT ..	0.1
5	6131C3	COIL, CHARGE	1.1
6	614106	DIODE, ENGINE STOP	0.9

Ref. No.	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
			EM 10000 K1		ET 12000 K1		
1	30500-ZJ1-844	COIL ASSY., IGNITION	1	-	1	-----	2178156 R,RG,RH
	30500-ZJ1-845		1	-	1	-----	2178157 -----
2	30518-ZJ1-000	GROMMET, HIGH TENSION CORD ..	2	-	2	-----	
3	30550-ZJ1-844	COIL ASSY., IGNITION	1	-	1	-----	2178156 R,RG,RH
	30550-ZJ1-845		1	-	1	-----	2178157 -----
4	30700-ZJ1-841	CAP ASSY., NOISE SUPPRESSOR ..	2	-	2	-----	
5	31630-ZJ1-003	COIL ASSY., CHARGE(12V/3A) ..	1	-	1	-----	2178156 R,RG,RH
	31630-ZJ1-013		1	-	1	-----	2178157 -----
6	31740-ZJ1-851	DIODE ASSY., ENGINE STOP	1	-	1	-----	2180002 R,RG,RH
	31740-ZJ1-852		1	-	1	-----	2180003 -----
7	32763-PA0-000	CLAMP, CORD	1	-	1	-----	
8	63312-ZA7-000	GROMMET, TOOL	1	-	1	-----	
9	90014-ZE6-000	BOLT, FLANGE, 6X35(CT200) ...	2	-	2	-----	
10	90031-ZE1-000	BOLT, FLANGE, 6X32(CT200) ...	2	-	2	-----	
11	95701-06008-00	BOLT, FLANGE, 6X8	1	-	1	-----	

E-20-1

IGNITION COIL(2)

F 8

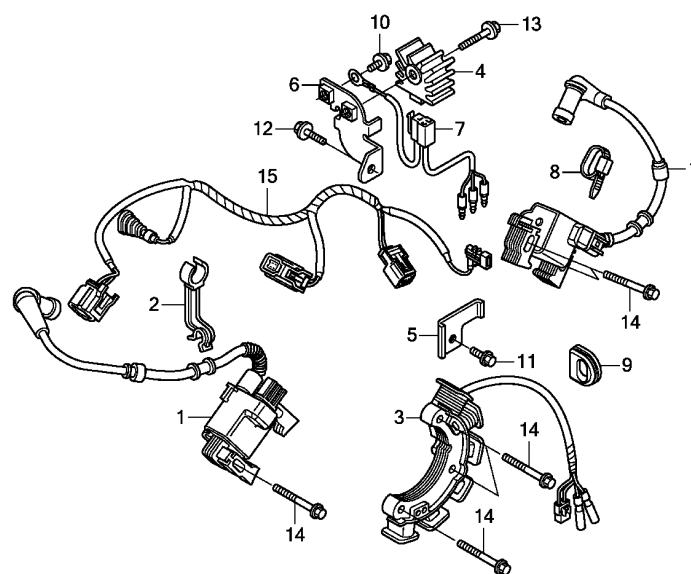


Z263E2001

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141G1	COIL, IGNITION(A) :LEFT	0.5
	6141G2	COIL, IGNITION(A) :RIGHT	0.4
	6141G3	COIL, IGNITION(A) :ALL	0.6
3	6131F3	COIL, CHARGE(A)	1.5
4	6131B7	RECTIFIER, REGULATOR	0.2
15	6111C0	HARNESS, ENGINE WIRE	0.4

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	30500-Z6L-003	COIL ASSY., IGNITION	- 2	- 2	----- KH,MH,RGH,RRH,UH	
	30500-Z6L-033		- 2	-	----- LDH,SH,SKH	
2	30551-Z6L-000	CLAMP, HIGH TENSION CORD ...	- 1	- 1		
3	31630-ZCL-003	COIL ASSY., CHARGE	- 1	- 1	----- KH,MH,RGH,RRH,UH	
	31630-ZCL-013		- 1	-	----- LDH,SH,SKH	
4	31750-735-013	RECTIFIER COMP., REGULATOR(5A)	- 1	- 1		
5	32114-Z6L-000	BRACKET, HARNESS	- 1	- 1		
6	32115-Z6L-000	BRACKET, REGULATOR RECTIFIER	- 1	- 1		
7	32183-Z6L-000	HARNESS ASSY., REGULATOR RECTIFIER	- 1	- 1		
8	90650-KV6-003	BAND, WIRE, 95MM	- 1	- 1		
9	91601-Z6L-000	GROMMET, CORD	- 1	- 1		
10	95701-06008-00	BOLT, FLANGE, 6X8	- 1	- 1		
11	95701-06012-00	BOLT, FLANGE, 6X12	- 1	- 1		
12	95701-06014-00	BOLT, FLANGE, 6X14	- 1	- 1		
13	95701-06030-00	BOLT, FLANGE, 6X30	- 1	- 1		
14	95701-06032-00	BOLT, FLANGE, 6X32	- 7	- 7		
15	32110-Z6L-810	HARNESS ASSY., ENGINE WIRE ..	- 1	- 1		

2

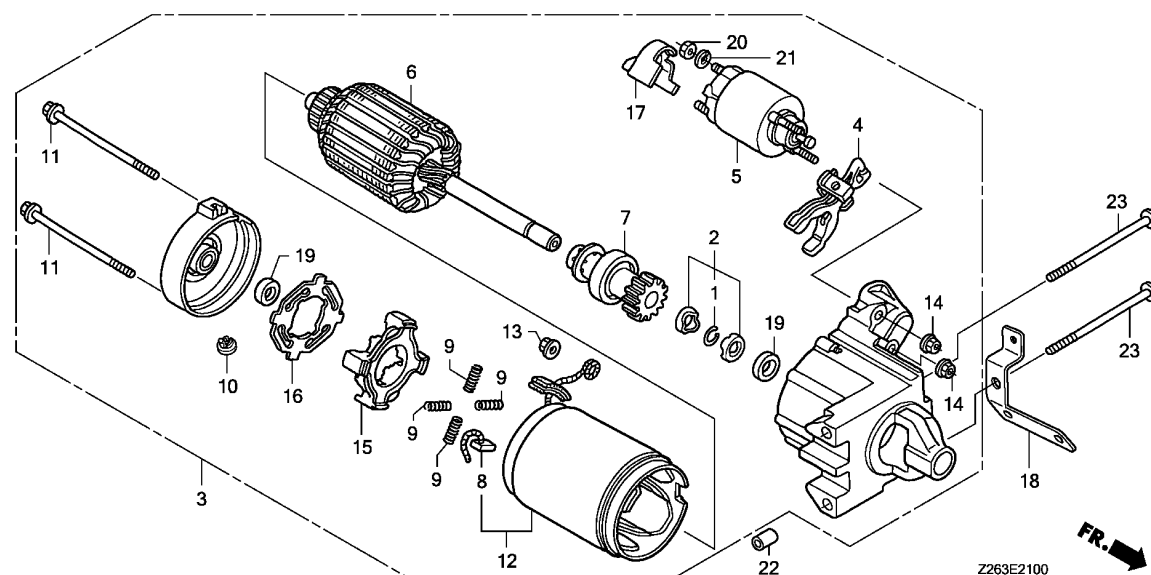


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	6121D5	MOTOR, STARTER	0.3
4	6121B7	LEVER, PINION DRIVE	0.4
5	6121C9	SWITCH, STARTER MAGNETIC	0.5
6	6121A0	ARMATURE, STARTER	0.6
7	6121B0	CLUTCH, OVERRUNNING	0.5
8	6121A9	BRUSH, STARTER	0.6
12	6121D1	YOKE, STARTER	0.6
19	6121A3	BEARING, ARMATURE	0.5

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	30201-PH9-004	RING, SNAP(DENSO)	1	1	-	
2	30202-PZ1-003	COLLAR SET, CLUTCH STOP	1	1	-	
3	31200-ZJ1-841	MOTOR ASSY., STARTER	1	1	-	2180002 R,RG,RH
	31200-ZJ1-842		1	1	-	2180003
4	31203-PH9-004	LEVER, PINION DRIVE	1	1	-	2180002 R,RG,RH
5	31204-ZJ1-H01	SWITCH ASSY., MAGNET	1	1	-	2180003
	31204-ZJ1-H02		1	1	-	
6	31206-ZG4-801	ARMATURE COMP.	1	1	-	
7	31207-ZJ1-H01	CLUTCH COMP., OVERRUNNING ...	1	1	-	
8	31211-PH9-004	BRUSH	4	4	-	
9	31212-PH9-004	SPRING, BRUSH	4	4	-	
10	31213-P64-N01	COVER	1	1	-	
11	31214-PH9-004	BOLT, THROUGH	2	2	-	
12	31218-P64-N01	YOKE COMP.	1	1	-	
13	31220-PH9-004	NUT, HEX., 8MM	1	1	-	
14	31223-PA0-006	NUT, HEX.	2	2	-	
15	31231-PH9-004	HOLDER, BRUSH	1	1	-	
16	31233-PH9-004	INSULATOR, BRUSH HOLDER	1	1	-	
17	31234-ZJ1-H01	COVER, TERMINAL	1	1	-	2180002 R,RG,RH
	31234-ZJ1-H02		1	1	-	2180003
18	32103-ZJ1-D20	BRACKET, WIRE HARNESS CLIP(A)	1	1	-	
19	91002-ZG4-801	BEARING A	2	2	-	
20	94001-08200-0S	NUT, HEX., 8MM	1	1	-	
21	94111-08000	WASHER, SPRING, 8MM	1	1	-	
22	94301-10120	DOWEL PIN, 10X12	2	2	-	
23	95701-08110-00	BOLT, FLANGE, 8X110	2	2	-	

E-21-1

STARTER MOTOR(2)

F10

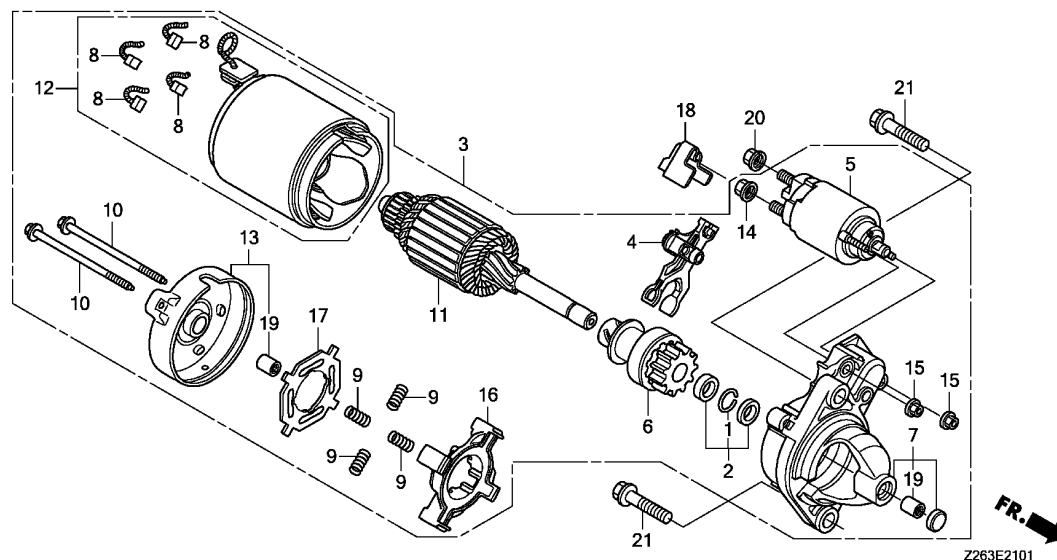

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
3	6121E0	MOTOR, STARTER(A)	0.4
5	6121F5	SWITCH, STARTER MAGNETIC(A) ..	0.6
6	6121D8	CLUTCH, OVERRUNNING(A)	0.8
8	6121D7	BRUSH, STARTER(A)	0.7
11	6121C4	ARMATURE, STARTER(A)	0.9
12	6121G7	YOKE, STARTER(A)	0.6
16	6121B6	HOLDER, STARTER BRUSH	0.5

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	30201-PH9-004	RING, SNAP(DENSO)	-	1	-	1
2	30202-PZ1-003	COLLAR SET, CLUTCH STOP	-	1	-	1
3	31200-Z6L-003	MOTOR ASSY., STARTER	-	1	-	1
4	31203-PH9-004	LEVER, PINION DRIVE	-	1	-	1
5	31204-ZJ1-H02	SWITCH ASSY., MAGNET	-	1	-	1
6	31207-ZE9-H01	CLUTCH COMP., OVERRUNNING ...	-	1	-	1
7	31208-Z6L-003	HOUSING COMP., DRIVE SIDE	-	1	-	1
8	31211-PH9-004	BRUSH	-	4	-	4
9	31212-PH9-004	SPRING, BRUSH	-	4	-	4
10	31214-PH9-004	BOLT, THROUGH	-	2	-	2
11	31217-Z0A-003	ARMATURE COMP.	-	1	-	1
12	31218-P64-N01	YOKE COMP.	-	1	-	1
13	31219-Z6L-003	FRAME COMP., COMMUTATOR END ..	-	1	-	1
14	31220-PH9-004	NUT, HEX., 8MM	-	1	-	1
15	31223-PA0-006	NUT, HEX.	-	2	-	2
16	31231-PH9-004	HOLDER, BRUSH	-	1	-	1
17	31233-PH9-004	INSULATOR, BRUSH HOLDER	-	1	-	1
18	31234-Z6L-000	COVER, TERMINAL	-	1	-	1
19	91002-ZG4-801	BEARING A	-	2	-	2
20	94070-08080	NUT-WASHER, 8MM	-	1	-	1
21	95701-10040-00	BOLT, FLANGE, 10X40	-	2	-	2


2

E-22

CONTROL(1)

F11

FR.

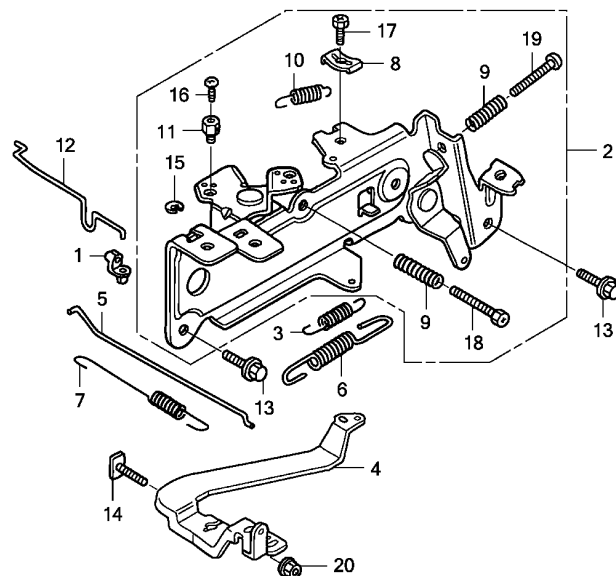

Z263E2200

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1161A5	CONTROL, THROTTLE/GOVERNOR ...	0.5
3	1161C1	SPRING, STARTER	0.2
4	1161A0	ARM, GOVERNOR	0.4
5	1161B1	ROD, GOVERNOR	0.3
6	1161C5	SPRING, GOVERNOR	0.2
7	1161C2	SPRING, THROTTLE RETURN	0.3
10	1161B7	SPRING, CABLE RETURN	0.2
12	8101R5	ROD, GOVERNOR CHOKE CONTROL ..	0.2


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	16263-883-W10	JOINT, ROD	1	1	-	
2	16500-ZJ1-D20	CONTROL ASSY.	1	1	-	
3	16534-ZJ1-840	SPRING, STARTER	1	1	-	
4	16551-ZJ1-840	ARM, GOVERNOR	1	1	-	
5	16555-ZJ1-840	ROD, GOVERNOR	1	1	-	
6	16561-ZJ1-860	SPRING, GOVERNOR(MANUAL)	1	1	-	
7	16562-ZJ1-840	SPRING, THROTTLE RETURN	1	1	-	
8	16576-891-000	HOLDER, CABLE	1	1	-	
9	16584-883-300	SPRING, CONTROL ADJUSTING ...	2	2	-	
10	16592-ZJ1-000	SPRING, CABLE RETURN	1	1	-	
11	16594-883-010	HOLDER, WIRE	1	1	-	
12	16611-ZJ1-840	ROD, CHOKE CONTROL	1	1	-	
13	90014-952-000	BOLT, FLANGE, 6X14(CT200) ...	2	2	-	
14	90015-ZE3-790	BOLT, GOVERNOR ARM	1	1	-	
15	90605-230-000	CIRCLIP, 5MM	1	1	-	
16	92301-04006-0H	BOLT, RECESSED, 4X6	1	1	-	
17	92301-05016-0A	BOLT, RECESSED, 5X16	1	1	-	
18	92301-05025-0A	BOLT, RECESSED, 5X25	1	1	-	
19	93500-05035-0A	SCREW, PAN, 5X35	1	1	-	
20	94050-06000	NUT, FLANGE, 6MM	1	1	-	

E-22-1

CONTROL(2)

F12

FR.

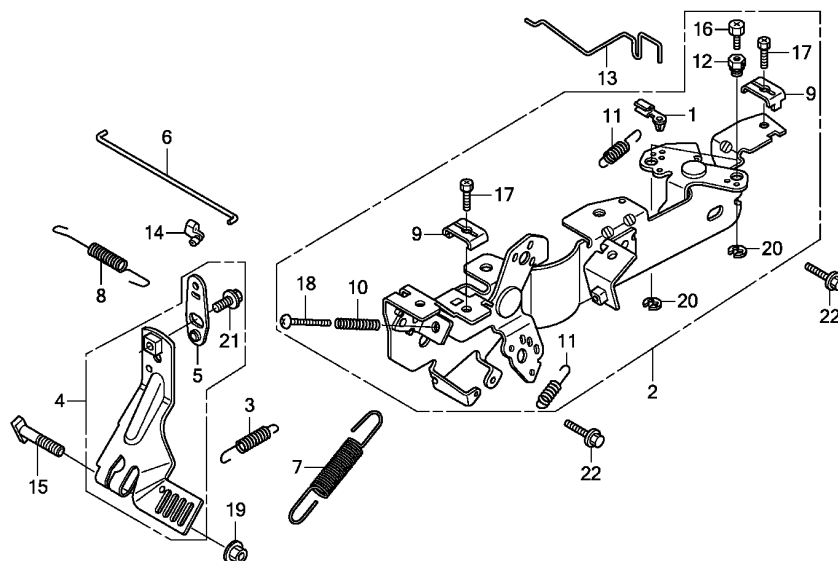

Z263E2201

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	1161D1	CONTROL, THROTTLE/GOVERNOR(A)	0.7
3	1161F9	SPRING, STARTER(A)	0.6
4	1161D0	ARM, GOVERNOR(A)	0.3
6	1161C9	ROD, GOVERNOR(A)	0.2
7	1161D4	SPRING, GOVERNOR(A)	0.6
8	1161D3	SPRING, THROTTLE RETURN(A)	0.2
13	8101Q2	ROD, CHOKE CONTROL	1.1


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	16263-Z0G-010	JOINT, ROD	-	1	-	1
2	16500-Z6L-822	CONTROL ASSY.	-	1	-	1
3	16534-Z6L-000	SPRING, STARTER	-	1	-	1
4	16550-Z6L-020	ARM COMP., GOVERNOR	-	1	-	1
5	16553-Z6L-010	ARM, SUB	-	1	-	1
6	16555-Z6L-010	ROD, GOVERNOR	-	1	-	1
7	16561-Z6L-000	SPRING, GOVERNOR	-	1	-	1
8	16562-Z6L-010	SPRING, THROTTLE RETURN	-	1	-	1
9	16576-891-000	HOLDER, CABLE	-	2	-	2
10	16584-883-300	SPRING, CONTROL ADJUSTING	-	1	-	1
11	16592-ZJ1-000	SPRING, CABLE RETURN	-	2	-	2
12	16594-883-010	HOLDER, WIRE	-	2	-	2
13	16611-Z6L-010	ROD, CHOKE CONTROL	-	1	-	1
14	17957-Z6L-003	BUSH, LINKAGE	-	1	-	1
15	90015-ZE3-790	BOLT, GOVERNOR ARM	-	1	-	1
16	92301-04006-0H	BOLT, RECESSED, 4X6	-	2	-	2
17	92301-05016-0A	BOLT, RECESSED, 5X16	-	2	-	2
18	93500-05040-0A	SCREW, PAN, 5X40	-	1	-	1
19	94050-06000	NUT, FLANGE, 6MM	-	1	-	1
20	94540-05018	E-RING, 5MM	-	2	-	2
21	95701-06010-00	BOLT, FLANGE, 6X10	-	1	-	1
22	95701-06014-00	BOLT, FLANGE, 6X14	-	2	-	2

2

F-1

CONTROL BOX(EM10000)

G 1

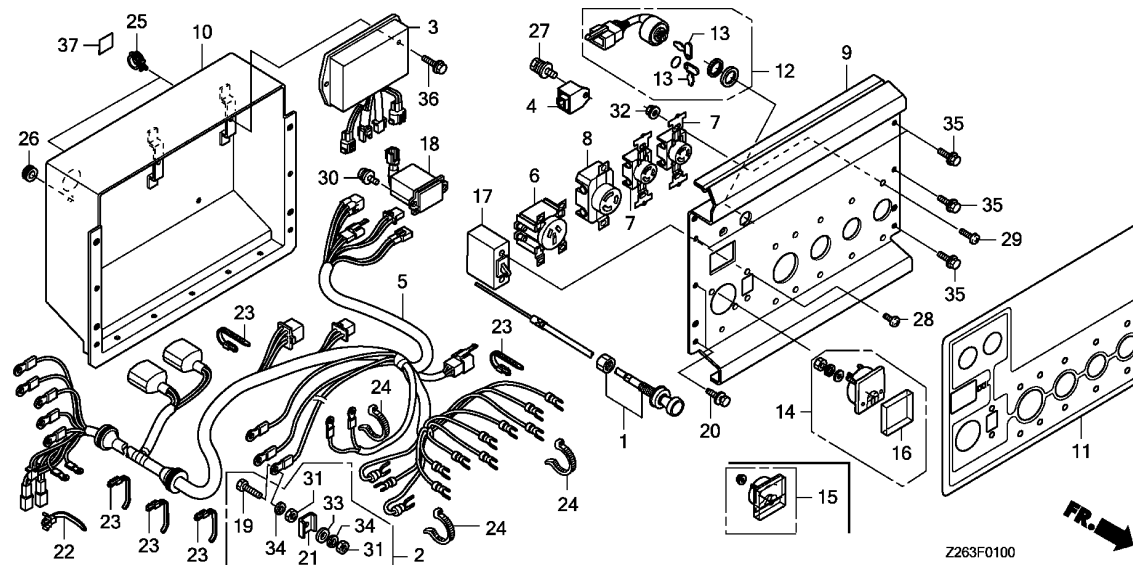

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	8111A9	CABLE, CHOKE	0.9
3	6201C0	REGULATOR, AUTOMATIC VOLTAGE	0.9
4	6201A8	RECTIFIER, GENERATOR (CONTROL PANEL)	0.9
5	6111B9	HARNESS, CONTROL WIRE	1.2
6	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.9
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	1.0
9	6221N9	PANEL, GENERATOR CONTROL	1.6
11	6221C5	MARK, CONTROL PANEL	1.6
12	6151E1	SWITCH, COMBINATION	0.9
14	8121B4	METER, VOLT	0.9
15	8121B4	METER, VOLT	0.9
17	6131C4	BREAKER, CIRCUIT	0.9
18	812113	METER, HOUR	0.9

Z263F0100



Ref. No.	Part No.	Description	Reqd. QTY	EM 10000 K1	ET 12000 K1	Serial No.	Parts catalogue code
1	17950-Z26-000	CABLE COMP., CHOKE	1	-	-	-	
2	31428-899-840	TERMINAL SET, EARTH	1	-	-	-	
3	31700-Z26-S61	REGULATOR ASSY., AUTOMATIC VOLTAGE	1	-	-	-	
4	31710-ZS9-A02	RECTIFIER ASSY.	1	-	-	-	----- K
	31710-ZS9-A01		1	-	-	-	1000025 R,RG
			1	-	-	-	1000374 RH
	31710-ZS9-A02		1	-	-	-	1000026 R,RG
			1	-	-	-	1000375 RH
5	32150-Z26-S60	HARNESS ASSY., CONTROL WIRE	1	-	-	-	
6	32330-ZS9-A00	CONSENT ASSY.(60A/250V)	1	-	-	-	
7	32330-Z26-S61	CONSENT(20A/250V)	2	-	-	-	
8	32331-Z26-S61	CONSENT(30A-250V)	1	-	-	-	
9	32345-Z26-S70ZA	PANEL COMP., CONTROL *NH105*...MAT BLACK (#15-#20)	1	-	-	-	----- K,R,RG
	32345-Z26-S60ZB	*NH105*...MAT BLACK (#15-#20)	1	-	-	-	----- RH
10	32350-Z26-S60ZB	COVER COMP., CONTROL BOX *NH105*...MAT BLACK (#15-#20)	1	-	-	-	
11	32366-Z26-D60	MARK, PANEL(R)	1	-	-	-	----- K,R
	32366-Z26-S70	MARK, PANEL(RG)	1	-	-	-	----- RG
	32366-Z26-S60	MARK, PANEL(RH)	1	-	-	-	----- RH
12	35100-ZA0-023	SWITCH ASSY., COMBINATION	1	-	-	-	----- K
	35100-ZA0-013		1	-	-	-	1000094 R,RG
			1	-	-	-	1000398 RH
	35100-ZA0-023		1	-	-	-	1000095 R,RG
			1	-	-	-	1000399 RH
13	35111-880-013	KEY COMP.	2	-	-	-	

3

F-1

CONTROL BOX(EM10000)

G 2


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000	ET 12000		
			K1	K1		
14	37450-ZB4-651	METER ASSY., VOLT(300V)	1	-	-	RH
15	37450-ZD8-F61	VOLTMETER ASSY.	1	-	-	K,R,RG
16	37451-ZB4-003	LENS, METER	1	-	-	RH
17	38220-Z26-D61	BREAKER, CIRCUIT(40A)	1	-	-	K,R
	38220-Z26-S71	BREAKER, CIRCUIT(38A)	1	-	-	RG
	38220-Z26-S61	BREAKER, CIRCUIT(39A)	1	-	-	1000551 RH
	38220-Z26-S62		1	-	-	1000552 RH
18	39700-ZC6-003	METER ASSY., HOUR	1	-	-	
19	90011-899-840	BOLT, HEX., 6X28	1	-	-	
20	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM)(ZN)	2	-	-	
21	90501-ZA7-640	RETAINER, 6MM	1	-	-	
22	90672-SB2-003	STRAP, CABLE, 105MM(BLACK) ..	1	-	-	
23	90672-ZB4-003	TIE, CABLE	5	-	-	
24	90672-ZB7-811	TIE, CABLE	3	-	-	
25	90684-ZA0-601	CLIP, HARNESS	2	-	-	
26	91651-Z08-E31	GROMMET, CHOKE CABLE	1	-	-	
27	93403-06014-08	BOLT-WASHER, 6X14	1	-	-	
28	93500-04006-1G	SCREW, PAN, 4X6	2	-	-	
29	93500-04012-1G	SCREW, PAN, 4X12	10	-	-	
30	93893-05016-18	SCREW-WASHER, 5X16	2	-	-	
31	94001-06390-0S	NUT, HEX., 6MM	2	-	-	
32	94050-04080	NUT, FLANGE, 4MM	10	-	-	
33	94101-06800	WASHER, PLAIN, 6MM	1	-	-	
34	94111-06800	WASHER, SPRING, 6MM	2	-	-	
35	95701-06012-00	BOLT, FLANGE, 6X12	4	-	-	
36	95701-08016-00	BOLT, FLANGE, 8X16	2	-	-	
37	87117-Z26-S60	MARK, FUSE	1	-	-	

3

F-1-1

CONTROL BOX(ET12000)

G 3

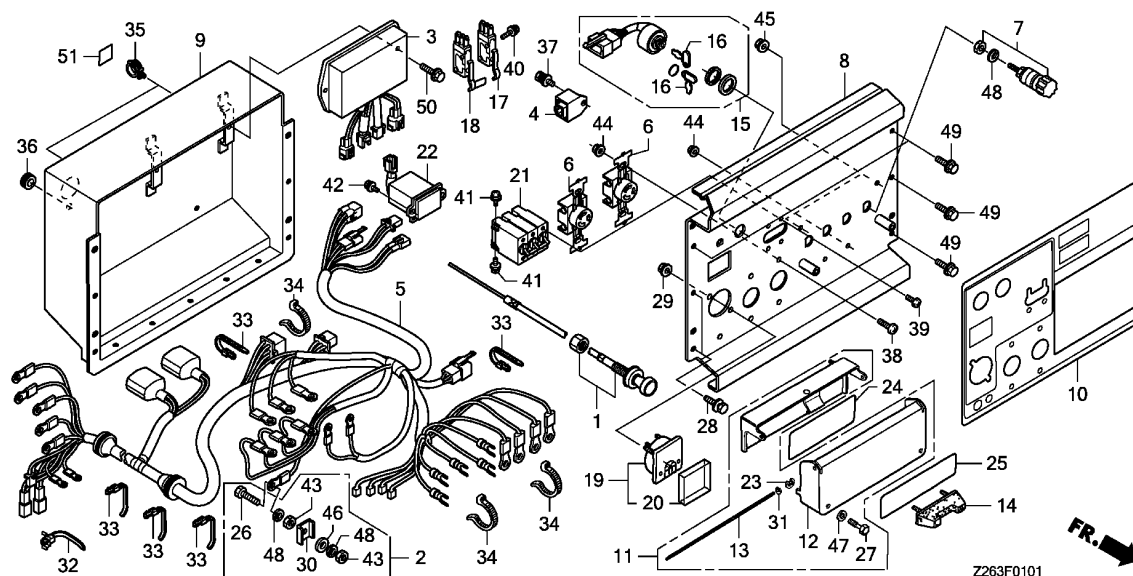

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	8111A9	CABLE, CHOKE	0.9
3	6201C0	REGULATOR, AUTOMATIC VOLTAGE ..	0.9
4	6201A8	RECTIFIER, GENERATOR (CONTROL PANEL)	0.9
5	6111B9	HARNESS, CONTROL WIRE	1.2
6	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	0.9
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	1.0
7	6221M9	TERMINAL, ALTERNATING CURRENT ..	0.8
8	6221N9	PANEL, GENERATOR CONTROL	1.6
10	6221C5	MARK, CONTROL PANEL	1.6
15	6151E1	SWITCH, COMBINATION	0.9
19	8121B4	METER, VOLT	0.9
21	6131C4	BREAKER, CIRCUIT	0.9
22	812113	METER, HOUR	0.9

3

Ref. No.	Part No.	Description	Reqd. QTY	EM 10000 K1	ET 12000 K1	Serial No.	Parts catalogue code
1	17950-Z26-000	CABLE COMP., CHOKE	-	-	1	-	
2	31428-899-840	TERMINAL SET, EARTH	-	-	1	-	
3	31700-Z26-U61	REGULATOR ASSY., AUTOMATIC VOLTAGE	-	-	1	-	
4	31710-ZS9-A01	RECTIFIER ASSY.	-	-	1	-	1000015 R,RG
			-	-	1	-	1000329 RH
	31710-ZS9-A02		-	-	1	-	1000016 R,RG
			-	-	1	-	1000330 RH
5	32150-Z26-U60	HARNESS ASSY., CONTROL WIRE ..	-	-	1	-	
6	32330-Z26-S61	CONSENT(20A/250V)	-	-	2	-	
7	32335-ZA0-901	TERMINAL, A.C.	-	-	4	-	
8	32345-Z26-U60ZA	PANEL COMP., CONTROL *NH105*...MAT BLACK (#15-#20) ..	-	-	1	-	
9	32350-Z26-S60ZB	COVER COMP., CONTROL BOX *NH105*...MAT BLACK (#15-#20) ..	-	-	1	-	
10	32366-Z26-M60	MARK, PANEL(R)	-	-	1	-	R
	32366-Z26-U70	MARK, PANEL(RG)	-	-	1	-	RG
	32366-Z26-U60	MARK, PANEL(RHT)	-	-	1	-	RH
11	32730-ZA0-900	COVER ASSY., A.C. TERMINAL ..	-	-	1	-	
12	32731-ZA0-900	COVER, A.C. TERMINAL	-	-	1	-	
13	32734-ZA0-900	BAR, 2.9X208	-	-	1	-	
14	32736-ZA0-901	GUIDE COMP., CORD	-	-	1	-	
15	35100-ZA0-013	SWITCH ASSY., COMBINATION ...	-	-	1	-	1000051 R,RG
			-	-	1	-	1000329 RH
	35100-ZA0-023		-	-	1	-	1000052 R,RG
			-	-	1	-	1000330 RH

F-1-1

CONTROL BOX(ET12000)

G 4


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
16	35111-880-013	KEY COMP.	-	2	-	
17	35410-ZA0-900	SWITCH, MICRO	-	1	-	
18	35420-ZA0-900	SWITCH A, MICRO	-	1	-	
19	37450-ZC6-650	VOLTMETER ASSY.(500V)	-	1	-	
20	37451-ZA0-A10	LENS, METER	-	1	-	
21	38220-Z26-M61	BREAKER, CIRCUIT(17A)	-	1	-	----- R
	38220-Z26-U71	BREAKER, CIRCUIT(16A)	-	1	-	----- RG
	38220-Z26-U61		-	1	-	----- 1000329 RH
	38220-Z26-U62		-	1	-	1000330 ----- RH
22	39700-ZC6-003	METER ASSY., HOUR	-	1	-	
23	50287-703-000	STOPPER, TOOL BOX LATCH	-	2	-	
24	87558-Z26-M60	MARK, A.C. CAUTION	-	1	-	----- R
	87558-Z26-U70		-	1	-	----- RG
	87558-Z26-U60		-	1	-	----- RH
25	87559-Z26-M60	MARK, A.C. TERMINAL	-	1	-	----- R
	87559-Z26-U70		-	1	-	----- RG
	87559-Z26-U60		-	1	-	----- RH
26	90011-899-840	BOLT, HEX., 6X28	-	1	-	
27	90107-ZA0-900	BOLT, SPECIAL, 6MM	-	2	-	
28	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM)(ZN)	-	2	-	
29	90201-ZB4-003	NUT, FLANGE, 3MM	-	2	-	
30	90501-ZA7-640	RETAINER, 6MM	-	1	-	
31	90653-ZA0-900	E-RING, 2.5MM	-	1	-	
32	90672-SB2-003	STRAP, CABLE, 105MM(BLACK) ..	-	1	-	
33	90672-ZB4-003	TIE, CABLE	-	5	-	
34	90672-ZB7-811	TIE, CABLE	-	3	-	
35	90684-ZA0-601	CLIP, HARNESS	-	2	-	
36	91651-Z08-E31	GROMMET, CHOKE CABLE	-	1	-	
37	93403-06014-08	BOLT-WASHER, 6X14	-	1	-	
38	93500-04012-1G	SCREW, PAN, 4X12	-	4	-	
39	93892-03006-17	SCREW-WASHER, 3X6	-	4	-	
40	93892-03025-18	SCREW-WASHER, 3X25	-	2	-	
41	93892-04008-00	SCREW-WASHER, 4X8	-	6	-	
42	93893-05016-18	SCREW-WASHER, 5X16	-	2	-	
43	94001-06390-0S	NUT, HEX., 6MM	-	2	-	
44	94050-04080	NUT, FLANGE, 4MM	-	6	-	
45	94050-06080	NUT, FLANGE, 6MM	-	2	-	
46	94101-06800	WASHER, PLAIN, 6MM	-	1	-	
47	94102-08700	WASHER, PLAIN, 8MM	-	2	-	
48	94111-06800	WASHER, SPRING, 6MM	-	6	-	
49	95701-06012-00	BOLT, FLANGE, 6X12	-	4	-	
50	95701-08016-00	BOLT, FLANGE, 8X16	-	2	-	
51	87117-Z26-S60	MARK, FUSE	-	1	-	

3

F-1-2

CONTROL BOX(EM10000K1)

G 5

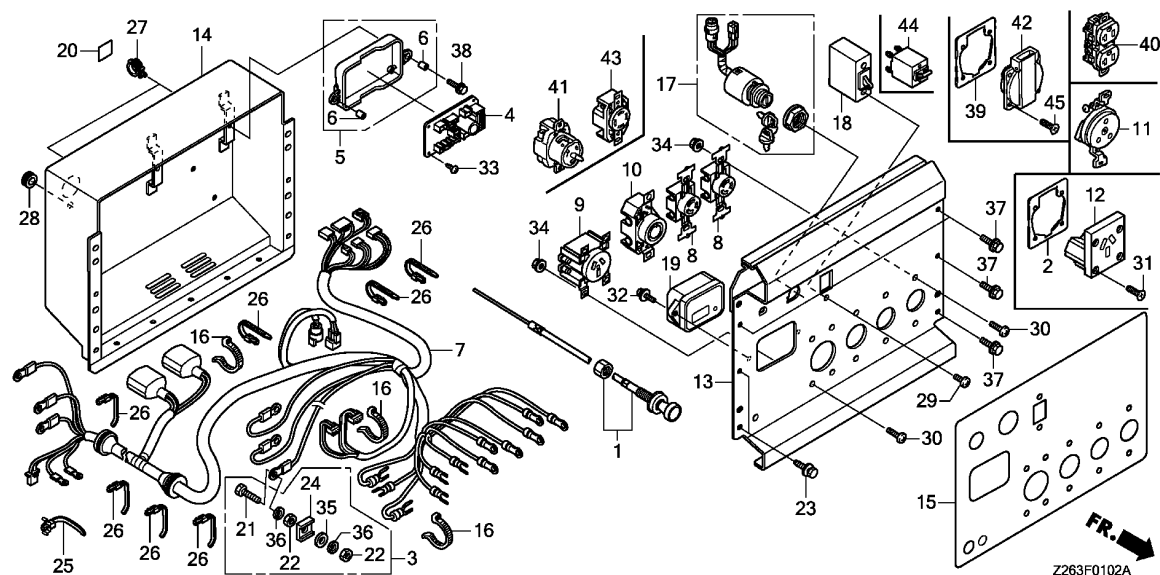

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	8111J0	CABLE, CHOKE(A)	1.0
4	6201C0	REGULATOR, AUTOMATIC VOLTAGE ..	1.0
7	6111F9	HARNESS, CONTROL WIRE(A)	1.4
9		(8,10,40,41,43)	
	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	1.1
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	1.2
		(12,42)	
11	6221J4	SOCKET, CONTROL PANEL	1.1
	6221J5	SOCKET, CONTROL PANEL :ALL ..	1.2
13	6221T2	PANEL, GENERATOR CONTROL(A) ..	1.8
15	6221T8	MARK, CONTROL PANEL(A)	1.8
17	6151E1	SWITCH, COMBINATION	1.0
18		(44)	
	6131F6	BREAKER, CIRCUIT(A)	1.0
19	8121D9	MONITOR, MULTI	1.0

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	17950-Z26-E81	CABLE COMP., CHOKE	-	1	-	
2	31426-ZA8-761	PLATE, CONSENT SETTING	-	3	-	----- UH
3	31428-Z22-000	TERMINAL SET, EARTH	-	1	-	
4	31700-Z26-E80	REGULATOR UNIT, AUTOMATIC VOLTAGE	-	1	-	
5	31705-Z26-300	CASE, AUTOMATIC VOLTAGE REGULATOR	-	1	-	
6	31706-Z26-300	COLLAR, AUTOMATIC VOLTAGE REGULATOR CASE	-	2	-	
7	32150-Z26-E80	HARNESS ASSY., CONTROL WIRE ..	-	1	-	----- KH,RGH,RRH,SH
	32150-Z26-E30		-	1	-	----- LDH
	32150-Z26-C80		-	1	-	----- MH,SKH,UH
8	32330-Z15-R60	RECEPTACLE(20A/250V)	-	2	-	----- KH,RGH,RRH,SH
9	32330-ZS9-A00	CONSENT ASSY.(60A/250V)	-	1	-	----- KH,MH,RGH,RRH,SH,SKH,UH
10	32331-Z26-E81	RECEPTACLE(30A-250V)	-	1	-	----- KH,RGH,RRH,SH
	32332-Z22-E31	RECEPTACLE(30A-125V)	-	1	-	----- LDH
11	32331-ZA8-720	SOCKET(16A/250V)	-	3	-	----- MH
12	32332-Z07-C81	SOCKET(15A/250V)	-	3	-	----- UH
13	32345-Z26-E80ZA	PANEL COMP., CONTROL(K)	-	1	-	----- KH,RGH,RRH,SH
	NH105...MAT BLACK (#15-#20)		-	1	-	----- LDH
	32345-Z26-E30ZA	PANEL COMP., CONTROL(LD)	-	1	-	----- LDH
	NH105...MAT BLACK (#15-#20)		-	1	-	----- MH
	32345-Z26-E20ZA	PANEL COMP., CONTROL(M)	-	1	-	----- MH
	NH105...MAT BLACK (#15-#20)		-	1	-	----- SKH,UH
	32345-Z26-C80ZA	PANEL COMP., CONTROL	-	1	-	
	NH105...MAT BLACK (#15-#20)		-	1	-	

3

F-1-2

CONTROL BOX(EM10000K1)

G 6


Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
14	32350-Z26-E80ZA	COVER COMP., CONTROL BOX *NH105*...MAT BLACK (#15-#20)	- 1	- -		
15	32366-Z26-E80	MARK, PANEL(K)	- 1	- -	-----	KH
	32366-Z26-E30	MARK, PANEL(LD)	- 1	- -	-----	LDH
	32366-Z26-E20	MARK, PANEL(M)	- 1	- -	-----	MH
	32366-Z26-T70	MARK, PANEL(RG)	- 1	- -	-----	RGH
	32366-Z26-E60	MARK, PANEL(R)	- 1	- -	-----	RRH
	32366-Z26-C70	MARK, PANEL(S)	- 1	- -	-----	SH
	32366-Z26-T20	MARK, PANEL(SK)	- 1	- -	-----	SKH
	32366-Z26-C80	MARK, PANEL(U)	- 1	- -	-----	UH
16	32903-Z22-000	TIE, CABLE(C)	- 3	- -		
17	35100-Z26-003	SWITCH ASSY., COMBINATION ...	- 1	- -		
18	38220-Z26-E81	BREAKER, CIRCUIT(38A)	- 1	- -	-----	KH,RGH
	38220-Z26-E61	BREAKER, CIRCUIT(40A)	- 1	- -	-----	MH,RRH
	38220-Z26-C71	BREAKER, CIRCUIT(45A)	- 1	- -	-----	SH,SKH
	38220-Z26-C81	BREAKER, CIRCUIT(36A)	- 1	- -	-----	UH
19	39700-Z26-003	MONITOR ASSY., MULTI	- 1	- -		
20	87117-Z26-E80	MARK, FUSE	- 1	- -		
21	90111-Z22-000	BOLT, HEX., 6X28	- 1	- -		
22	90112-Z22-000	NUT, HEX., 6MM	- 2	- -		
23	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM)(ZN)	- 2	- -		
24	90501-ZA7-640	RETAINER, 6MM	- 1	- -		
25	90672-Z22-003	CABLE, STRAP	- 1	- -		
26	90672-ZB4-000	TIE, CABLE	- 7	- -		
27	90684-ZA0-601	CLIP, HARNESS	- 2	- -		
28	91651-Z26-E80	GROMMET, CHOKE CABLE	- 1	- -		
29	93500-04006-1G	SCREW, PAN, 4X6	- 2	- -		
30	93500-04012-0G	SCREW, PAN, 4X12	- 10	- -	-----	KH,LDH,MH,RGH,RRH,SH
			- 4	- -	-----	SKH,UH
31	93600-04020-1G	SCREW, FLAT, 4X20	- 12	- -	-----	UH
32	93893-06016-08	SCREW-WASHER, 6X16	- 2	- -		
33	93911-24120	SCREW, TAPPING, 4X10(P0)	- 4	- -		
34	94050-04080	NUT, FLANGE, 4MM	- 10	- -	-----	KH,LDH,MH,RGH,RRH,SH
			- 4	- -	-----	SKH,UH
35	94101-06000	WASHER, PLAIN, 6MM	- 1	- -		
36	94111-06000	WASHER, SPRING, 6MM	- 2	- -		
37	95701-06012-00	BOLT, FLANGE, 6X12	- 4	- -		
38	95701-06016-00	BOLT, FLANGE, 6X16	- 2	- -		
39	31426-Z18-000	PLATE SET, CONSENT	- 3	- -	-----	SKH
40	32330-Z21-A31	RECEPTACLE(20A/125V)	- 2	- -	-----	LDH
41	32331-ZC6-630	RECEPTACLE(50A/125-250V)	- 1	- -	-----	LDH
42	32331-ZT3-C60	RECEPTACLE(16A/250V)	- 3	- -	-----	SKH
43	32334-Z22-A31	RECEPTACLE(30A-125/250V)	- 1	- -	-----	LDH
44	38220-Z26-E31	BREAKER, CIRCUIT(41A)	- 1	- -	-----	LDH
45	93600-04012-1G	SCREW, FLAT, 4X12	- 12	- -	-----	SKH

3

F-1-3

CONTROL BOX(ET12000K1)


G 7

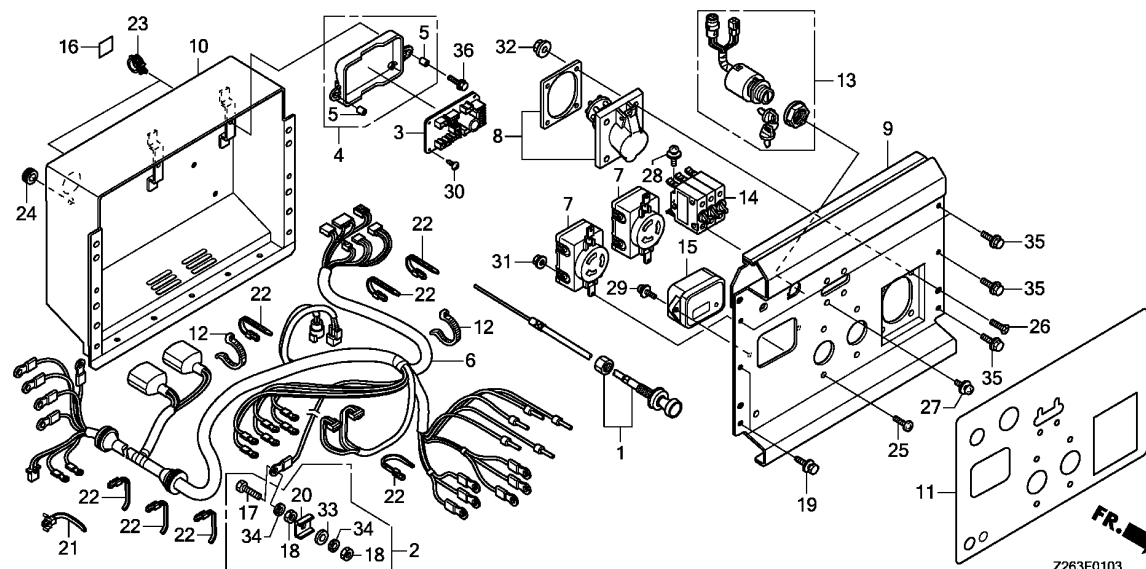


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	8111J0	CABLE, CHOKE(A)	1.0
3	6201C0	REGULATOR, AUTOMATIC VOLTAGE ..	1.0
6	6111F9	HARNESS, CONTROL WIRE(A)	1.4
8		(7)	
	6221D5	RECEPTACLE/CONSENT, CONTROL PANEL	1.1
	6221E5	RECEPTACLE/CONSENT, CONTROL PANEL :ALL	1.2
9	6221T2	PANEL, GENERATOR CONTROL(A) ..	1.8
11	6221T8	MARK, CONTROL PANEL(A)	1.8
13	6151E1	SWITCH, COMBINATION	1.0
14	6131F6	BREAKER, CIRCUIT(A)	1.0
15	8121D9	MONITOR, MULTI	1.0

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	17950-Z26-E81	CABLE COMP., CHOKE	-	-	1	
2	31428-Z22-000	TERMINAL SET, EARTH	-	-	1	
3	31700-Z26-L60	REGULATOR UNIT, AUTOMATIC VOLTAGE	-	-	1	
4	31705-Z26-300	CASE, AUTOMATIC VOLTAGE REGULATOR	-	-	1	
5	31706-Z26-300	COLLAR, AUTOMATIC VOLTAGE REGULATOR CASE	-	-	2	
6	32150-Z26-L60	HARNESS ASSY., CONTROL WIRE ..	-	-	1	
7	32330-Z15-R60	RECEPTACLE(20A/250V)	-	-	2	
8	32333-Z26-L60	RECEPTACLE(32A-240/415V)	-	-	1	
9	32345-Z26-L60ZA	PANEL COMP., CONTROL *NH105*...MAT BLACK (#15-#20)	-	-	1	
10	32350-Z26-E80ZA	COVER COMP., CONTROL BOX *NH105*...MAT BLACK (#15-#20)	-	-	1	
11	32366-Z26-V70	MARK, PANEL	-	-	1	----- RGH
	32366-Z26-P60		-	-	1	----- RRR
12	32903-Z22-000	TIE, CABLE(C)	-	-	2	
13	35100-Z26-003	SWITCH ASSY., COMBINATION ...	-	-	1	
14	38220-Z26-V71	BREAKER, CIRCUIT(16A)	-	-	1	----- RGH
	38220-Z26-P61	BREAKER, CIRCUIT(17A)	-	-	1	----- RRR
15	39700-Z26-003	MONITOR ASSY., MULTI	-	-	1	
16	87117-Z26-E80	MARK, FUSE	-	-	1	
17	90111-Z22-000	BOLT, HEX., 6X28	-	-	1	
18	90112-Z22-000	NUT, HEX., 6MM	-	-	2	

3

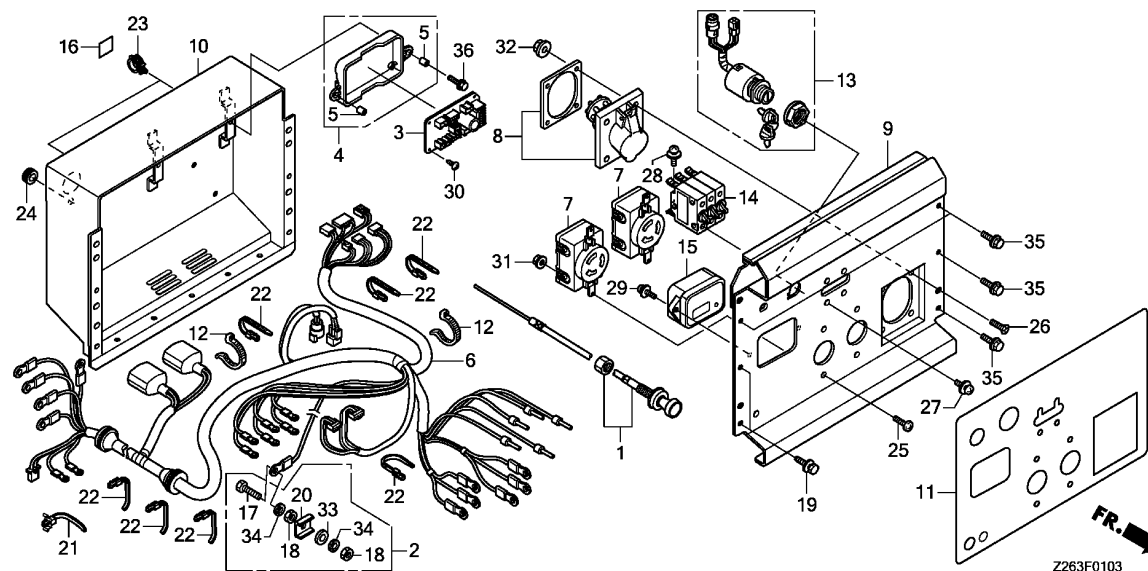

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
19	90148-SE0-003	BOLT, EARTH, 6X16 (WASHER 12.5MM)(ZN)	-	-	-	2
20	90501-ZA7-640	RETAINER, 6MM	-	-	-	1
21	90672-Z22-003	CABLE, STRAP	-	-	-	1
22	90672-ZB4-000	TIE, CABLE	-	-	-	7
23	90684-ZA0-601	CLIP, HARNESS	-	-	-	2
24	91651-Z26-E80	GROMMET, CHOKE CABLE	-	-	-	1
25	93500-04012-0G	SCREW, PAN, 4X12	-	-	-	4
26	93600-05016-0G	SCREW, FLAT, 5X16	-	-	-	4
27	93892-03006-17	SCREW-WASHER, 3X6	-	-	-	4
28	93892-04008-00	SCREW-WASHER, 4X8	-	-	-	6
29	93893-06016-08	SCREW-WASHER, 6X16	-	-	-	2
30	93911-24120	SCREW, TAPPING, 4X10(P0)	-	-	-	4
31	94050-04080	NUT, FLANGE, 4MM	-	-	-	4
32	94050-05080	NUT, FLANGE, 5MM	-	-	-	4
33	94101-06000	WASHER, PLAIN, 6MM	-	-	-	1
34	94111-06000	WASHER, SPRING, 6MM	-	-	-	2
35	95701-06012-00	BOLT, FLANGE, 6X12	-	-	-	4
36	95701-06016-00	BOLT, FLANGE, 6X16	-	-	-	2

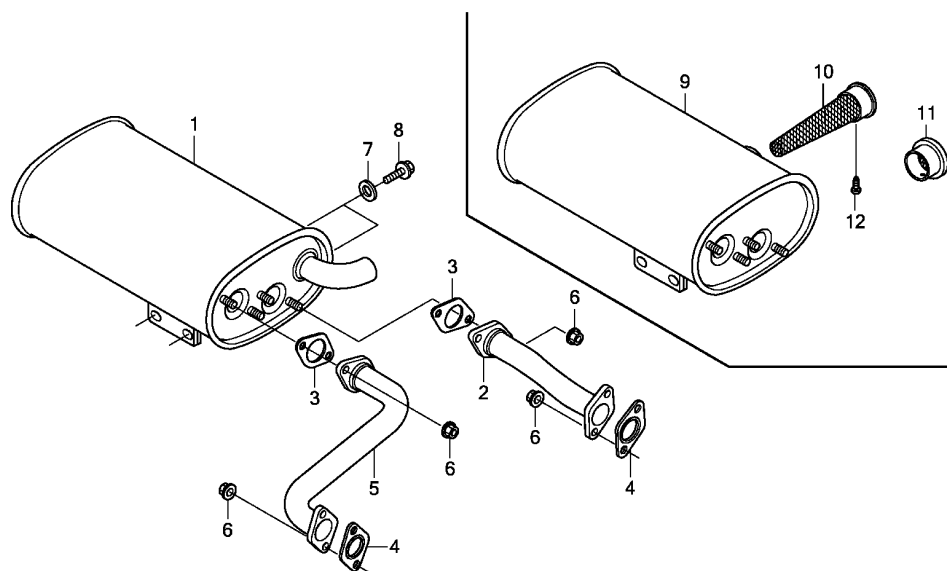

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.6
2	3131C7	PIPE, EXHAUST :LEFT	0.6
	3131T1	PIPE, EXHAUST(A) :LEFT	0.7
		.NOTE: K1 type	
3	3131J1	GASKET, EXHAUST PIPE :LEFT ...	0.6
	3131J2	GASKET, EXHAUST PIPE :RIGHT ..	0.6
	3131T3	GASKET, EXHAUST PIPE(B) :LEFT	0.7
		.NOTE: K1 type	
	3131T4	GASKET, EXHAUST PIPE(B) :RIGHT	0.7
		.NOTE: K1 type	
4	3131J9	GASKET, EXHAUST PIPE(A) :LEFT	0.6
	3131K0	GASKET, EXHAUST PIPE(A) :RIGHT	0.6
	3131T5	GASKET, EXHAUST PIPE(C) :LEFT	0.7
		.NOTE: K1 type	
	3131T6	GASKET, EXHAUST PIPE(C) :RIGHT	0.7
		.NOTE: K1 type	
5	3131C8	PIPE, EXHAUST :RIGHT	0.6
	3131T2	PIPE, EXHAUST(A) :RIGHT	0.7
		.NOTE: K1 type	
9	3131F7	MUFFLER, EXHAUST(A)	0.7
		.NOTE: K1 type	
10	3131A1	ARRESTER, SPARK	0.2
		.INCLUDES: Spark arrester check	

Z263F1500A




Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
1	18310-Z26-003	MUFFLER COMP.	1	-	1	-		
2	18330-Z26-003	PIPE COMP., R. EX.	1	-	1	-		
	18330-Z26-E80		-	1	-	1		
3	18333-ZB4-801	GASKET, EX. PIPE	2	2	-	2	----- K,KH,LDH,MH,RGH,RRH,SH,SKH,UH	
	18333-ZB4-800		2	-	-	-	----- R,RG,RH	
			-	-	2	-	----- RH	
			-	-	2	-	1000947 R,RG	
	18333-ZB4-801		-	-	2	-	1000948 R,RG	
4	18333-ZJ1-000	GASKET, EX. PIPE	2	2	2	2		
5	18340-Z26-003	PIPE COMP., L. EX.	1	-	1	-		
	18340-Z26-E80		-	1	-	1		
6	94050-08000	NUT, FLANGE, 8MM	8	8	8	8		
7	94103-08800	WASHER, PLAIN, 8MM	2	2	2	2		
8	95701-08030-08	BOLT, FLANGE, 8X30	2	2	2	2		
9	18310-Z26-E80	MUFFLER COMP.	-	1	-	1		
10	18355-Z26-C30	ARRESTER, SPARK	-	1	-	-	----- UH	
11	18390-Z26-E80	PIPE COMP., EX. TAIL	-	1	-	1	----- KH,LDH,MH,RGH,RRH,SH,SKH	
12	90002-ZE2-U91	SCREW, TAPPING, 4X8	-	1	-	1		

F-16

FUEL TANK


G10

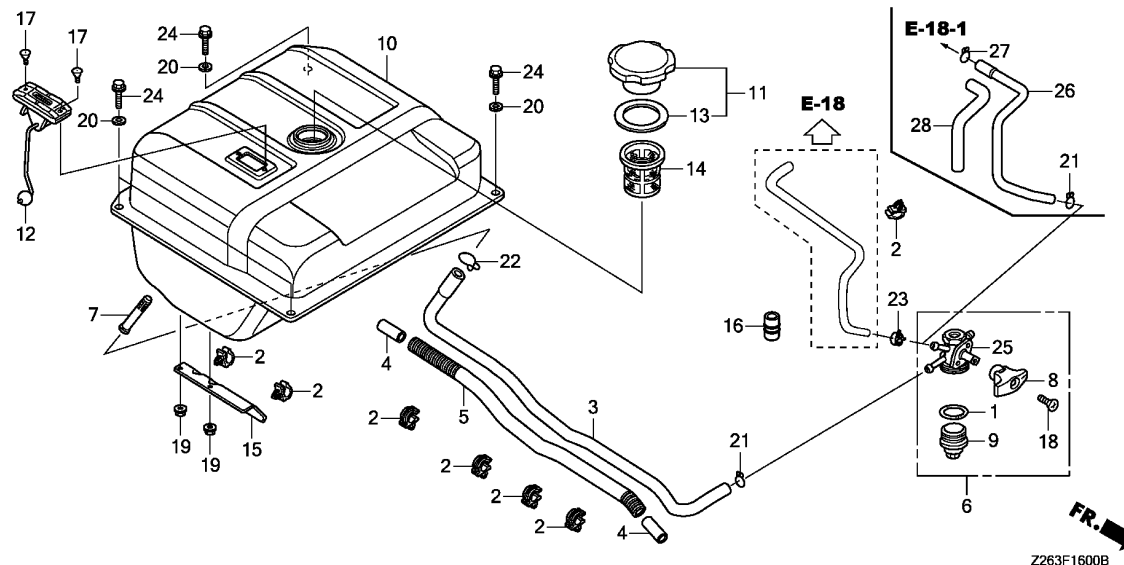


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101L6	PACKING, FUEL STRAINER CUP ...	0.1
3	3101F1	TUBE, FUEL TANK	0.2
6	3101A3	COCK, FUEL	0.1
7	3101H8	STRAINER, FUEL	0.2
10	3101H7	TANK, FUEL	0.3
	3101D0	TANK, FUEL(A)	0.4
.NOTE: K1 type			
11	3101M7	CAP, FUEL FILLER	0.1
12	6171A1	METER/GAUGE UNIT, FUEL	0.1
14	3101A6	FILTER, FUEL	0.1
25	3101A3	COCK, FUEL	0.1

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
1	16173-001-004	PACKING, FUEL STRAINER CUP ..	1	1	1	1		
2	16731-ZE2-003	CLIP, TUBE	7	7	7	7		
3	16852-Z26-000	TUBE, FUEL TANK	1	1	1	1		
4	16854-Z26-000	RUBBER, SUPPORTER	2	2	2	2		
5	16865-Z26-000	PROTECTOR, TUBE	1	1	1	1		
6	16950-Z26-003	COCK ASSY., FUEL	1	1	1	1		
7	16952-ZA0-000	STRAINER, FUEL	1	1	1	1		
8	16953-Z03-003	LEVER, COCK	1	1	1	1		
9	16967-MA2-771	CUP, FUEL STRAINER	1	1	1	1		
10	17510-Z26-000ZA	TANK COMP., FUEL						
	R280.....POWER RED		1	1	1	1		
11	17620-Z22-000	CAP COMP., FUEL FILLER	1	1	-	1	-----	K, KH, LDH, MH, RGH, RRH, SH, SKH, UH
	17620-899-013		1	-	-	-	-----	1000010 RH
			1	-	-	-	-----	1000816 R, RG
	17620-Z22-000		1	-	-	-	-----	1000011 RH
			1	-	-	-	-----	1000817 R, RG
	17620-899-013		-	-	1	-	-----	1000050 RH
			-	-	1	-	-----	1000650 R, RG
	17620-Z22-000		-	-	1	-	-----	1000051 RH
			-	-	1	-	-----	1000651 R, RG
12	17630-Z26-003	METER ASSY., FUEL	1	-	1	-		
	17630-Z26-E80		-	1	-	1		
13	17631-899-000	PACKING, FUEL FILLER CAP	1	1	1	1		
14	17670-Z26-S60	FILTER COMP., FUEL	1	1	1	1		
15	17719-Z26-000	HOLDER, FUEL TUBE	1	1	1	1		
16	90854-ZB3-000	RUBBER, FUEL (9X15X20)	1	1	1	1		

3

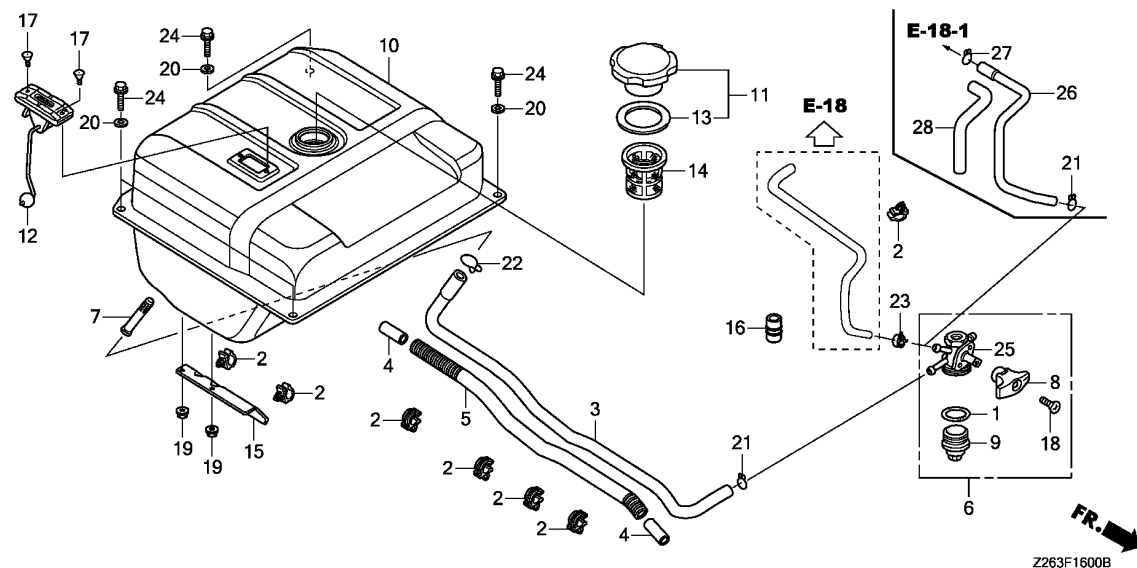

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1				
17	93600-05010-0A	SCREW, FLAT, 5X10	2	2	2	2		
18	93700-04018-0G	SCREW, OVAL, 4X18	1	1	1	1		
19	94050-05000	NUT, FLANGE, 5MM	2	2	2	2		
20	94103-06700	WASHER, PLAIN, 6MM	4	4	4	4		
21	95002-02080	CLIP, TUBE(B8)	1	2	1	2		
22	95002-02100	CLIP, TUBE(B10)	1	1	1	1		
23	95002-40850-08	CLAMP, TUBE(D8.5)	1	-	1	-		
24	95701-06016-07	BOLT, FLANGE, 6X16	4	4	4	4		
25	16951-Z26-003	BODY COMP., COCK	1	1	1	1		
26	16853-Z26-E80	TUBE, FUEL COCK	-	1	-	1		
27	95002-50000	CLIP, TUBE(C9)	-	1	-	1		
28	95003-25012-20	TUBE, VINYL, 9X11X120 (95003-25001-10M)	-	1	-	1		

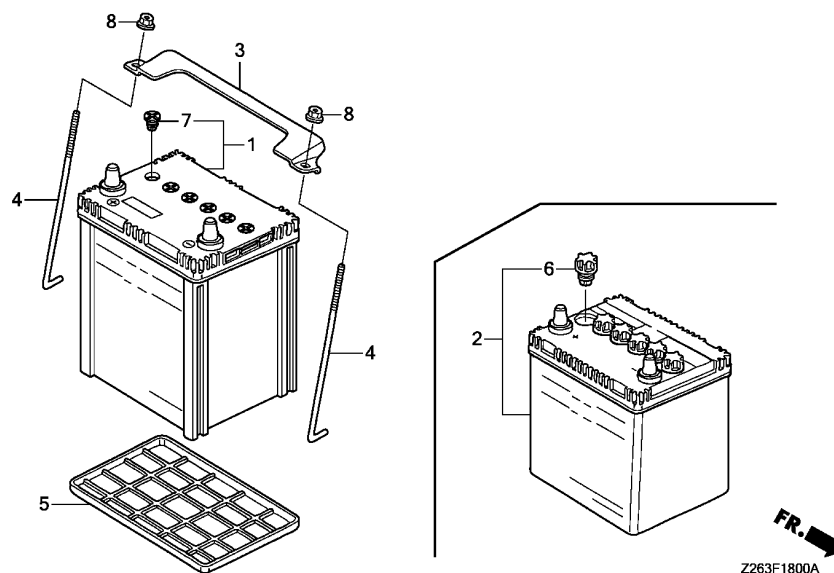


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6101A7	(2) BATTERY	0.2
5	410180	BOX, BATTERY	0.1

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1		ET 12000 K1			
1	31500-Z26-U61	BATTERY ASSY.(40B19R)	1	-	1	-	----- RH	
	31500-Z26-C31	BATTERY ASSY.(40B19R) (S)	-	1	-	1	-----	
2	31500-751-612	BATTERY (YUASA)	1	-	-	-	----- K	
	31500-750-612	BATTERY ASSY.(32A19RT-S)	1	-	-	-	1001034 R,RG	
	31500-751-612	BATTERY (YUASA)	1	-	-	-	1001035 R,RG	
	31500-750-612	BATTERY ASSY.(32A19RT-S)	-	-	1	-	1000923 R,RG	
	31500-751-612	BATTERY (YUASA)	-	-	1	-	1000924 R,RG	
3	31512-ZA0-000	PLATE, BATTERY SETTING	1	1	1	1	-----	
4	31514-Z26-U60	BOLT, BATTERY SETTING	2	2	2	2	----- KH,LDH,MH,RGH,RH,RRH,SH,SKH,UH	
	90001-728-760		2	-	2	-	----- K,R,RG	
5	31521-SD5-010	BOX, BATTERY	1	1	1	1	-----	
6	31542-ZA0-651	PLUG, VENT(YUASA)	6	-	-	-	----- K	
	31542-ZA0-007		6	-	-	-	1001034 R,RG	
	31542-ZA0-651		6	-	-	-	1001035 R,RG	
	31542-ZA0-007		-	-	6	-	1000923 R,RG	
	31542-ZA0-651		-	-	6	-	1000924 R,RG	
7	31542-Z26-U61	PLUG, VENT	6	-	6	-	----- RH	
	31542-TM8-A01	PLUG, VENT(MF) (YUASA)	-	6	-	6	-----	
8	94050-06000	NUT, FLANGE, 6MM	2	2	2	2	-----	

F-19

WIRE HARNESS

G13

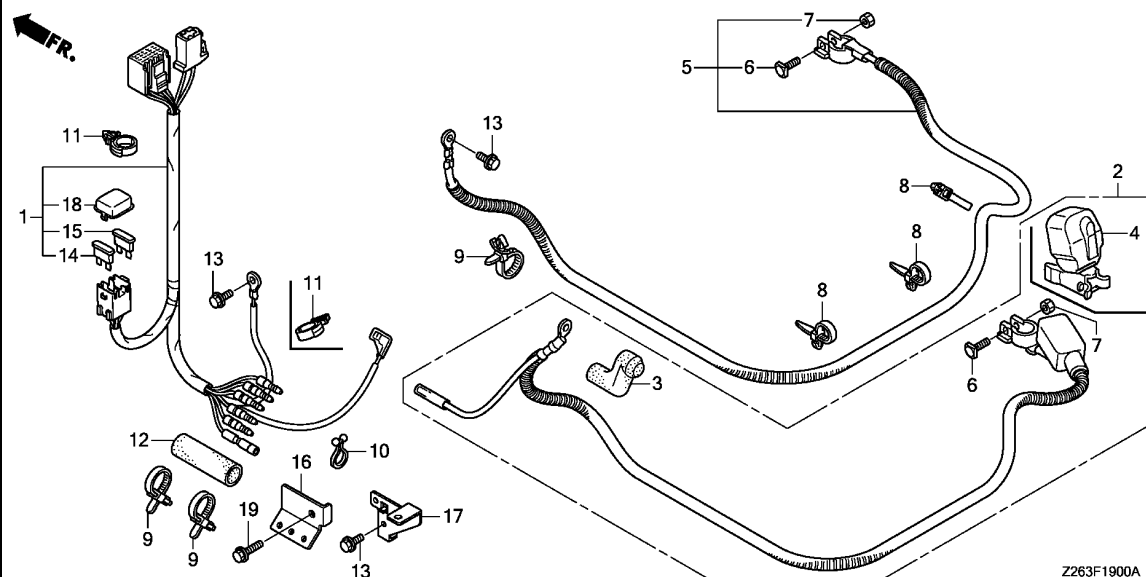


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6111D3	HARNESS, SUB WIRE	0.3
2	610115	CABLE, BATTERY STARTER	0.4
5	6111A4	CABLE, EARTH	0.4
14		(15)	
	8121A7	FUSE, BLADE	0.1

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
1	32110-Z26-S60	HARNESS ASSY., ENGINE WIRE ..	1	1	1	1		
	32110-Z26-E80		1	1	1	1		
2	32410-Z26-S70	CABLE ASSY., STARTING	1	1	1	1	----- K,R,RG	
	32410-Z26-U60		1	1	1	1	----- RH	
	32410-Z26-C30	CABLE ASSY., STARTER	1	1	1	1		
3	32411-ZW1-003	COVER, STARTER TERMINAL	1	1	1	1		
4	32418-PND-300	COVER, BATTERY TERMINAL	1	1	1	1		
5	32600-Z26-S70	CABLE ASSY., EARTH	1	1	1	1	----- K,R,RG	
	32600-Z26-U60		1	1	1	1	----- RH	
	32600-Z26-C30		1	1	1	1		
6	32601-SK7-900	BOLT, BATTERY TERMINAL	2	2	2	2		
7	32602-SK7-900	NUT, BATTERY TERMINAL	2	2	2	2		
8	90672-ZB4-003	TIE, CABLE	3	3	3	3		
	90672-ZB4-000		3	3	3	3		
9	90676-Z26-003	BAND, WIRE HARNESS	3	3	3	3		
10	90683-GS9-670	BAND, TUBE	1	1	1	1		
11	90684-ZA0-601	CLIP, HARNESS	2	1	2	1		
12	91451-Z26-000	TUBE, CORD	1	1	1	1		
	91451-Z26-E80		1	1	1	1		
13	95701-06012-00	BOLT, FLANGE, 6X12	2	2	2	2		
	95701-06010-00	BOLT, FLANGE, 6X10	2	3	2	3		
14	98200-30500	FUSE, BLADE(5A)	1	1	1	1		
15	98200-31000	FUSE, BLADE(10A)	1	1	1	1		
	98200-32000	FUSE, BLADE(20A)	1	1	1	1		
16	32103-Z26-E80	BRACKET, WIRE HARNESS CLIP(A) ..	1	1	1	1		
17	32104-Z26-E80	BRACKET, WIRE HARNESS CLIP(B) ..	1	1	1	1		

F-19


WIRE HARNESS

G14

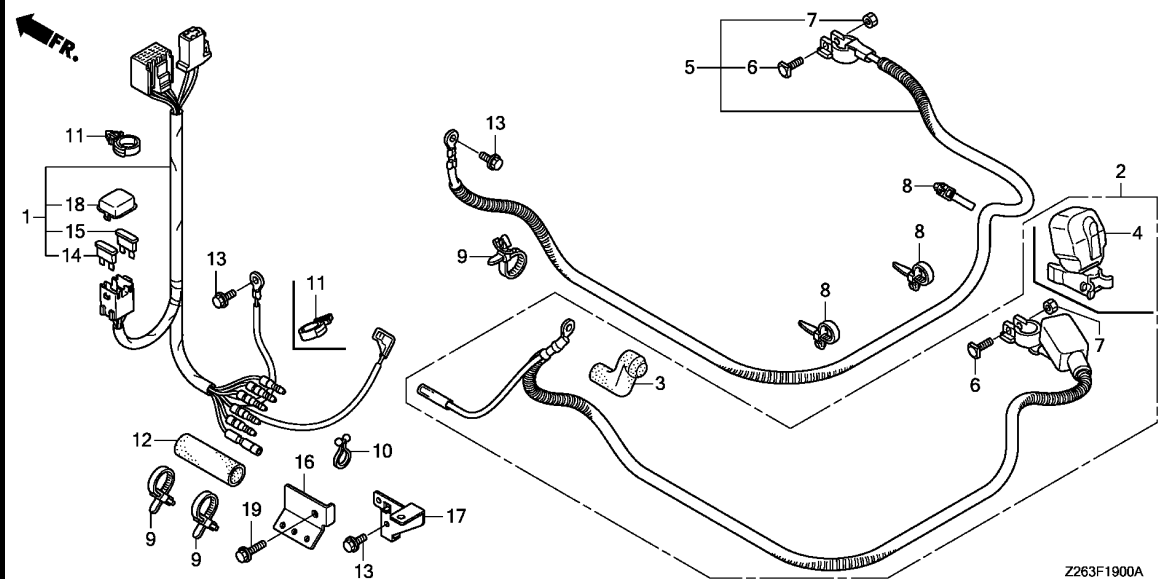


Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	K1	ET 12000	K1		
18	38224-SB2-003	CASE, FUSE(2P)	1	1	1	1		
19	95701-06020-00	BOLT, FLANGE, 6X20	-	1	-	1		

3

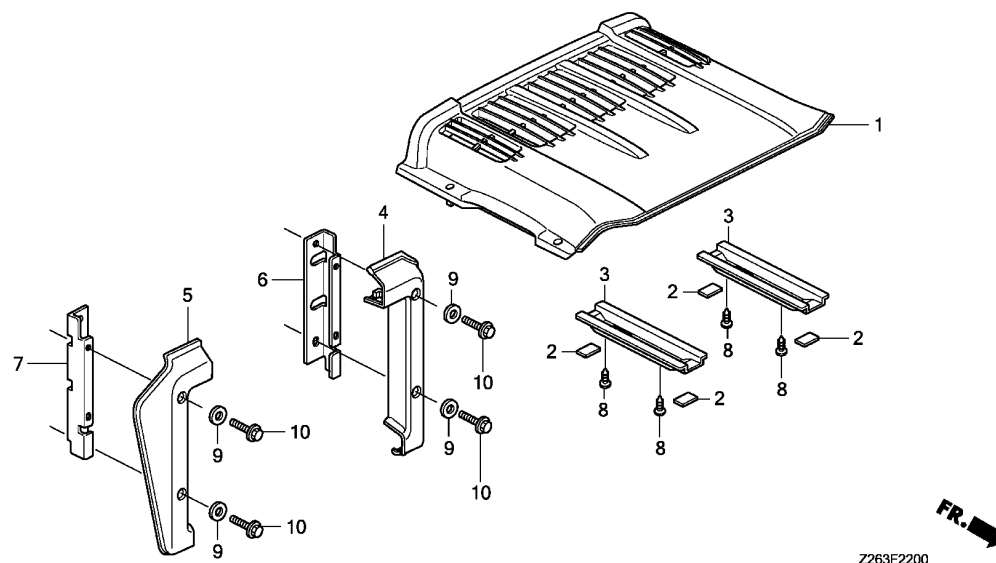


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4131K5	COVER, MAINTENANCE	0.1

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1				
1	63151-Z26-000ZA	COVER, MAINTENANCE						
		R280.....POWER RED	1	1	1	1		
2	63153-Z26-000	SHEET, MAINTENANCE COVER	4	4	4	4		
3	63159-Z26-000	BEAM, MAINTENANCE COVER	2	2	2	2		
4	63211-Z26-000ZA	COVER, R. SIDE						
		R280.....POWER RED	1	-	1	-		
	63211-Z26-E80ZA	*TBLACK*.....BLACK	-	1	-	1		
5	63221-Z26-000ZA	COVER, L. SIDE						
		R280.....POWER RED	1	-	1	-		
	63221-Z26-E80ZA	*TBLACK*.....BLACK	-	1	-	1		
6	63252-Z26-000	GUARD, R. CONTROL PANEL	1	1	1	1		
7	63253-Z26-000	GUARD, L. CONTROL PANEL	1	1	1	1		
8	93913-25380	SCREW, TAPPING, 5X14(P0)	4	4	4	4		
9	94101-06000	WASHER, PLAIN, 6MM	4	4	4	4		
10	96001-06025-00	BOLT, FLANGE, 6X25	4	4	4	4		

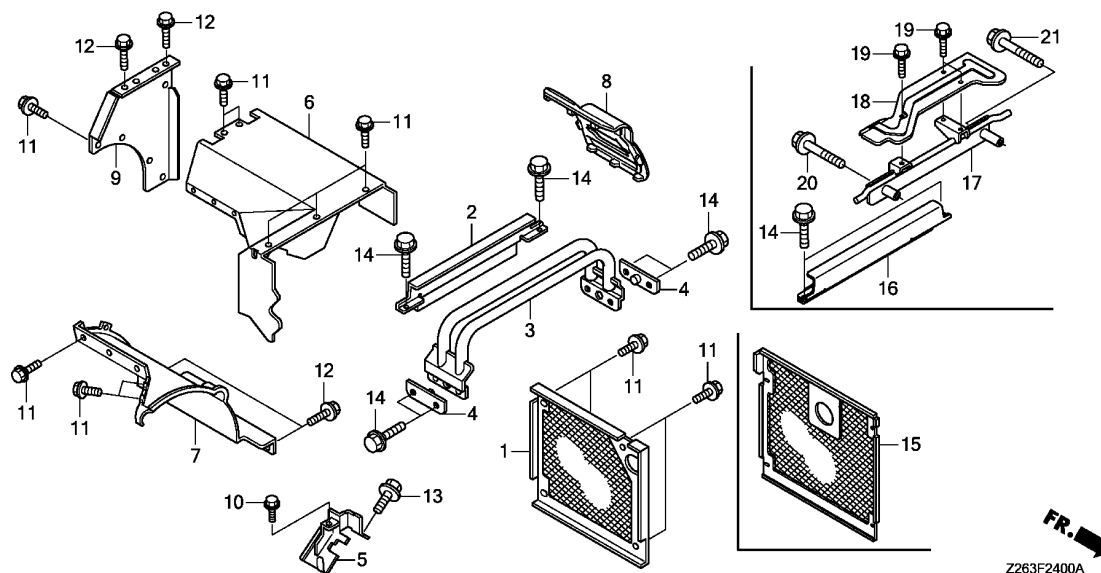

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131D6	(15) PROTECTOR, EXHAUST MUFFLER ...	0.1
3	4101CH	HANGER, GENERATOR	0.1
6	4141AB	DUCT, GENERATOR UPPER AIR(A) -	0.5
		.NOTE: K1 type	
	4141U9	DUCT, GENERATOR UPPER AIR	0.4
7	4141AA	DUCT, GENERATOR LOWER(A)	0.8
		.NOTE: K1 type	
	4141V1	DUCT, GENERATOR LOWER	0.6
8	4141AD	SEAL, GENERATOR DUCT(A)	0.8
		.NOTE: K1 type	
	4141V2	SEAL, GENERATOR DUCT	0.6
9	4141AC	DUCT, GENERATOR REAR(A)	0.4
		.NOTE: K1 type	
	4141V0	DUCT, GENERATOR REAR	0.3
17	1111BS	STAY, STOPPER	0.6
		.NOTE: K1 type	

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
1	18320-Z26-000	PROTECTOR COMP., MUFFLER	1	-	1	-		
2	50328-Z26-000	BRACKET, FUEL TANK	1	-	1	-		
3	53150-Z26-000	HANGER COMP.	1	1	1	1		
4	53157-Z26-000	PLATE, HANGER	2	2	2	2		
5	63156-Z26-000	PLATE, DUCT	1	-	1	-		
6	63315-Z26-000	DUCT COMP., UPPER AIR	1	-	1	-		
	63315-Z26-E80		-	1	-	1		
7	63318-Z26-000	DUCT COMP., LOWER	1	1	1	1		
8	63319-Z26-000	SEAL, DUCT	1	1	1	1		
9	63328-Z26-000	DUCT, RR.	1	1	1	1		
10	90101-P4V-010	BOLT, FLANGE, 5X12	1	-	1	-		
11	95701-06012-07	BOLT, FLANGE, 6X12	19	19	19	19		
12	95701-06016-07	BOLT, FLANGE, 6X16	4	4	4	4		
13	95701-08012-00	BOLT, FLANGE, 8X12	1	-	1	-		
14	95701-08016-07	BOLT, FLANGE, 8X16	6	6	6	6		
15	18320-Z26-E80ZA	PROTECTOR COMP., MUFFLER *NH105*...MAT BLACK (#15-#20)	-	1	-	1		
16	50328-Z26-E80ZA	BRACKET, FUEL TANK *NH105*...MAT BLACK (#15-#20)	-	1	-	1		
17	50329-Z26-E80	STAY, STOPPER	-	1	-	1		
18	50335-Z26-E80	PLATE	-	1	-	1		
19	95701-06012-00	BOLT, FLANGE, 6X12	-	3	-	3		
20	95701-08050-00	BOLT, FLANGE, 8X50	-	1	-	1		
21	95701-08065-00	BOLT, FLANGE, 8X65	-	1	-	1		

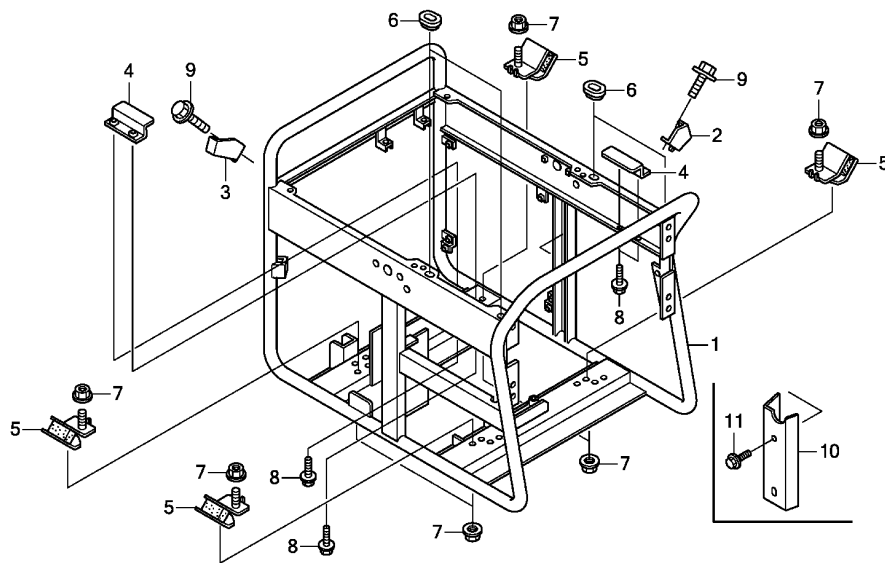


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4101H6	FRAME, MAININCLUDES: Engine removal and installation	2.3
	4101ES	FRAME, MAIN(A)INCLUDES: Engine removal and installation .NOTE: K1 type	2.5
5	4101V0	RUBBER, BOTTOM :LEFT FRONTINCLUDES: Engine removal and installation .NOTE: Same time for two units or more	2.0
	4101VOA	.Replace bottom rubber all add	0.1
	4101V1	RUBBER, BOTTOM :RIGHT FRONT .. .INCLUDES: Engine removal and installation .NOTE: Same time for two units or more	2.0
	4101V1A	.Replace bottom rubber all add	0.1
	4101V3	RUBBER, BOTTOM :LEFT REARINCLUDES: Engine removal and installation .NOTE: Same time for two units or more	2.0
+	4101V3A	.Replace bottom rubber all add	0.1


Z263F2500A




Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	50310-Z26-000	FRAME COMP.	1	1	-	
	50310-Z26-E80ZA	*NH105*...MAT BLACK (#15-#20)	-	1	-	1
2	50323-Z26-000	STOPPER, R. SIDE	1	-	1	-
3	50324-Z26-000	STOPPER, L. SIDE	1	-	1	-
4	50329-Z26-000	STAY, STOPPER	2	-	2	-
5	68325-Z26-000	RUBBER, BOTTOM	4	-	4	-
	68325-Z26-E80		-	4	-	4
6	91651-Z26-000	GROMMET, COVER	4	4	4	4
7	94050-10000	NUT, FLANGE, 10MM	8	8	8	8
8	95701-06016-07	BOLT, FLANGE, 6X16	4	-	4	-
9	95701-08020-00	BOLT, FLANGE, 8X20	2	-	2	-
10	63332-Z26-E80	SHROUD, SIDE FRAME	-	1	-	1
11	95701-06012-07	BOLT, FLANGE, 6X12	-	2	-	2

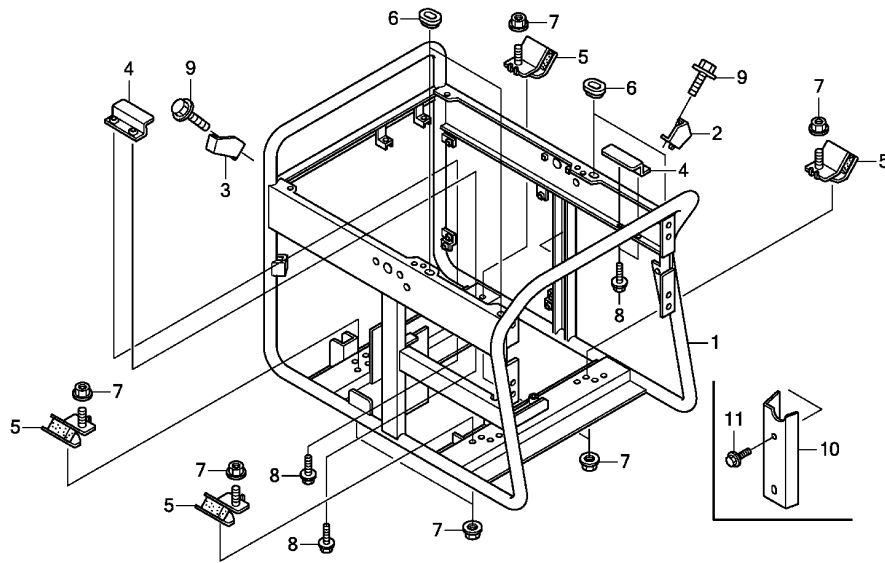

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 5 4101V4		RUBBER, BOTTOM :RIGHT REARINCLUDES: Engine removal and installation .NOTE: Same time for two units or more	2.0
4101V4A		.Replace bottom rubber all add	0.1
4101EH		RUBBER, BOTTOM(A) :LEFT FRONT .INCLUDES: Engine removal and installation .NOTE: K1 type .NOTE: Same time for two units or more	2.2
4101EHA		.Replace one bottom rubber add	0.1
4101EJ		RUBBER, BOTTOM(A) :LEFT REAR .INCLUDES: Engine removal and installation .NOTE: K1 type .NOTE: Same time for two units or more	2.2
4101EJA		.Replace one bottom rubber add	0.1
4101EK		RUBBER, BOTTOM(A) :RIGHT FRONT .INCLUDES: Engine removal and installation .NOTE: K1 type	2.2
+			

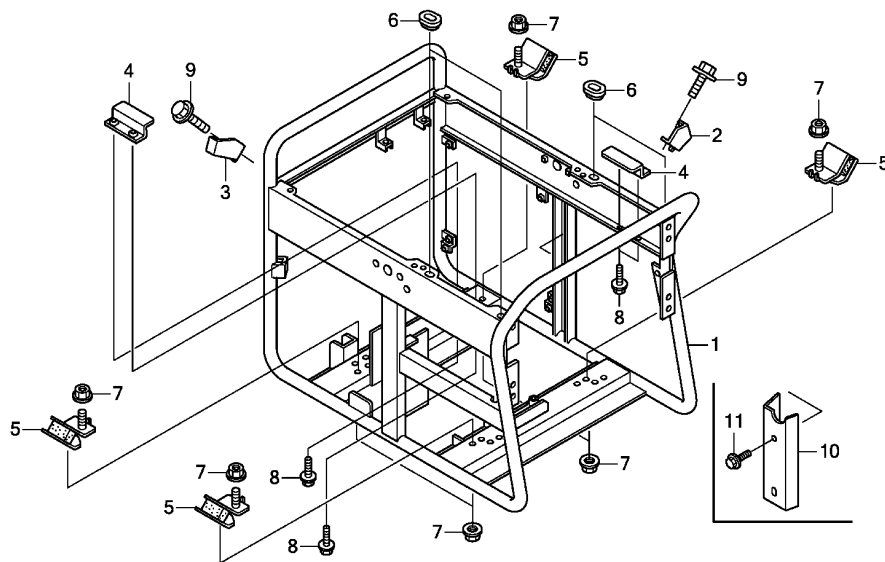


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
+ 5		.NOTE: Same time for two units or more	
4101EKA		.Replace one bottom rubber add	0.1
4101EL		RUBBER, BOTTOM(A) :RIGHT REAR	2.2
		.INCLUDES: Engine removal and installation	
		.NOTE: K1 type	
		.NOTE: Same time for two units or more	
4101ELA		.Replace one bottom rubber add	0.1

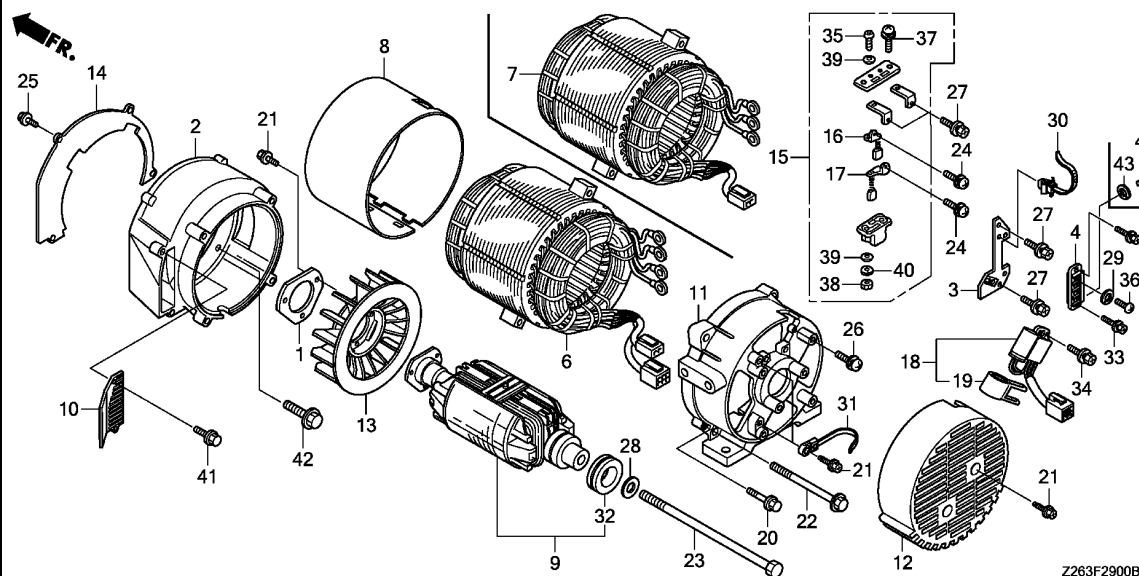


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	6201B5	HOUSING, GENERATOR :FRONT	1.6
4	6201C1	TERMINAL, ALTERNATING CURRENT OUTPUT	0.3
6	6201B9	STATOR, GENERATOR	1.5
9	6201A9	ROTOR, GENERATOR	1.6
11	6201B6	HOUSING, GENERATOR :REAR	1.1
12	6201C7	COVER, GENERATOR END	0.1
13	6201B7	FAN, GENERATOR COOLING	1.5
15	6171B7	BRUSH ASSEMBLY, GENERATOR	0.3
16	6171B8	BRUSH, GENERATOR	0.4
18	6131B7	RECTIFIER, REGULATOR	0.3

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM	ET				
			10000	12000				
			K1	K1				
1	19513-Z26-S61	PLATE, COOLING FAN	1	1	1	1		
2	31109-Z26-003	HOUSING, FR.	1	1	1	1		
3	31117-Z26-S61	BRACKET, A.C. OUT TERMINAL ..	1	-	1	-		
	31117-Z26-E81		-	1	-	1		
4	31118-880-000	TERMINAL, A.C. OUT	1	1	1	1		
5	31119-ZC6-003	MARK	1	-	-	-		
	31119-Z26-E81		-	1	-	-		
	31119-ZA0-901	MARK, A.C. OUTPUT	-	-	1	1		
6	31120-Z26-D61	STATOR ASSY.(R)	1	-	-	-	-----	K,R
	31120-Z26-S61	STATOR ASSY.(RH)	1	-	-	-	-----	RG,RH
	31120-Z26-M61	STATOR ASSY.	-	-	1	-	-----	R
	31120-Z26-U61		-	-	1	-	-----	RG,RH
7	31120-Z26-E81	STATOR ASSY.	-	1	-	-	-----	KH,RGH
	31120-Z26-E31		-	1	-	-	-----	LDH
	31120-Z26-E61		-	1	-	-	-----	MH,RRH
	31120-Z26-C71		-	1	-	-	-----	SH,SKH
	31120-Z26-C81		-	1	-	-	-----	UH
	31120-Z26-L61		-	-	-	1	-----	RGH
	31120-Z26-P61		-	-	-	1	-----	RRH
8	31127-Z26-S61	COVER, BAND	1	1	1	1		
9	31130-Z26-S61	ROTOR COMP.	1	1	1	1		
10	31168-Z26-000	DUCT, GENERATOR	1	-	1	-		
	31168-Z26-E80		-	1	-	1		
11	31171-Z26-S61	HOUSING, RR.	1	1	1	1		
12	31186-Z26-S61	COVER, GENERATOR END	1	1	1	1		
13	31191-Z26-S61	FAN, GENERATOR COOLING	1	1	1	1		
14	31235-Z26-S61	BRACKET, FR.	1	1	1	1		

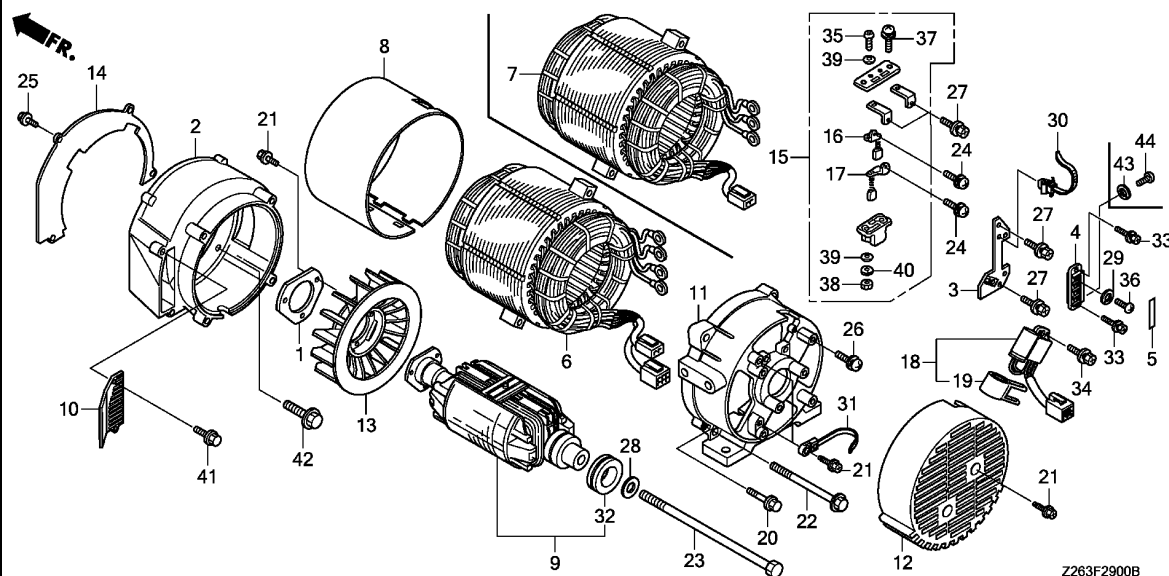

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1				
15	31295-Z08-E31	BRUSH ASSY.	1	1	1	1		
16	31296-ZC6-003	BRUSH(A)	1	1	1	1		
17	31297-ZC6-003	BRUSH(B)	1	1	1	1		
18	31600-KA2-752	RECTIFIER COMP., REGULATE ...	1	-	1	-		
19	31601-KA2-751	RUBBER, CUSHION	1	-	1	-		
20	90020-ZW5-000	BOLT, FLANGE, 6X45	2	-	2	-		
	95701-06045-08		-	2	-	2		
21	90032-875-003	SCREW, TAPPING, 5X14	7	7	7	7		
22	90101-Z26-S61	BOLT, FLANGE, 8X170	4	4	4	4		
23	90101-Z26-000	BOLT, HEX., 10X278	1	1	1	1		
24	90102-Z08-E30	SCREW-WASHER, 4X8	2	2	2	2		
25	90102-Z26-003	BOLT, FLANGE, 5X12	4	4	4	4		
26	90103-Z08-E30	SCREW-WASHER, 6X12	1	1	1	1		
27	90104-Z08-E31	BOLT-WASHER, 6X15	4	4	4	4		
28	90504-ZA0-000	WASHER, 10.5MM	1	1	1	1		
29	90506-ZA0-003	WASHER, SPRING, 6MM	4	2	4	4	-----	K,R,RG,RGH,RH,RRH,SH,SKH
			-	4	-	-	-----	KH,MH,RGH,RRH,UH
			-	3	-	-	-----	LDH
30	90672-SA0-003	STRAP, CABLE, 118MM(BLACK) ..	1	1	1	1		
31	90673-ZB4-003	TIE, CABLE	2	2	2	2		
32	91051-ZC6-003	BEARING ASSY.(6306NCX)	1	1	1	1		
33	93403-05020-08	BOLT-WASHER, 5X20	2	2	2	2		
34	93403-06020-08	BOLT-WASHER, 6X20	1	-	1	-		
35	93500-04016-1H	SCREW, PAN, 4X16	2	2	2	2		

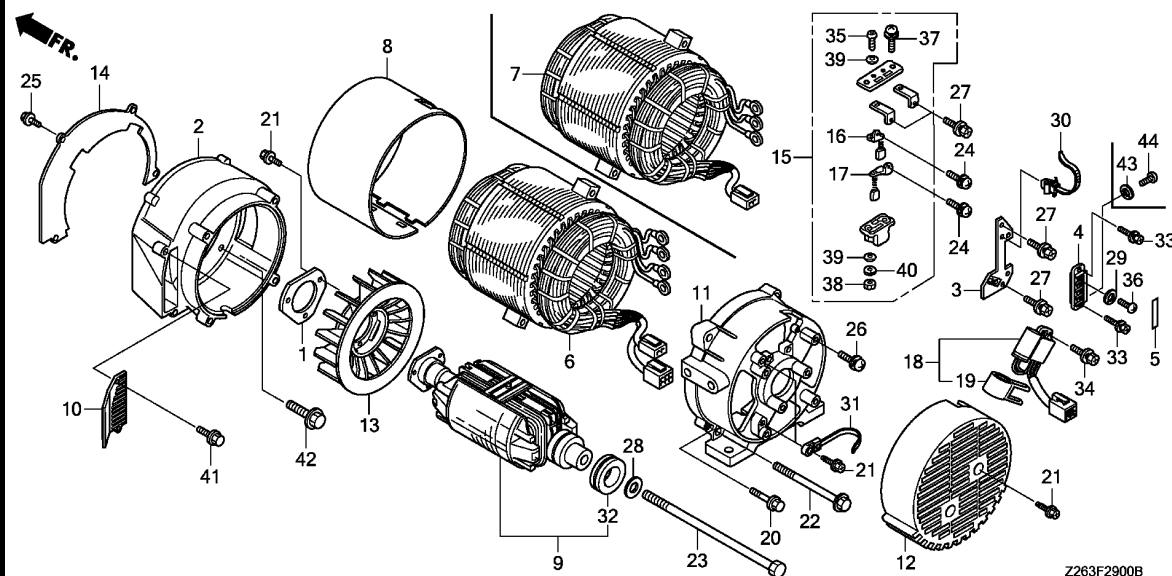


Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
36	93500-06008-3J	SCREW, PAN, 6X8	4	2	4	4	-----	K,R,RG,RGH,RH,RRH,SH,SKH
			-	4	-	-	-----	KH,MH,RGH,RRH,UH
			-	3	-	-	-----	LDH
37	93893-05010-18	SCREW-WASHER, 5X10	2	2	2	2		
38	94002-04080-0S	NUT, HEX., 4MM	2	2	2	2		
39	94102-04800	WASHER, PLAIN, 4MM	4	4	4	4		
40	94111-04800	WASHER, SPRING, 4MM	2	2	2	2		
41	95701-06012-00	BOLT, FLANGE, 6X12	2	2	2	2		
42	95701-10025-08	BOLT, FLANGE, 10X25	4	-	4	-		
	90105-Z26-000	BOLT, HEX., 3/8-16UNCX25	-	4	-	4		
43	90506-ZA0-003	WASHER, SPRING, 6MM	-	2	4	4	-----	R,RG,RGH,RH,RRH,SH,SKH
			-	3	-	-	-----	LDH
44	93500-06008-3J	SCREW, PAN, 6X8	-	2	4	4	-----	R,RG,RGH,RH,RRH,SH,SKH
			-	3	-	-	-----	LDH

F-31

LABEL

H 7

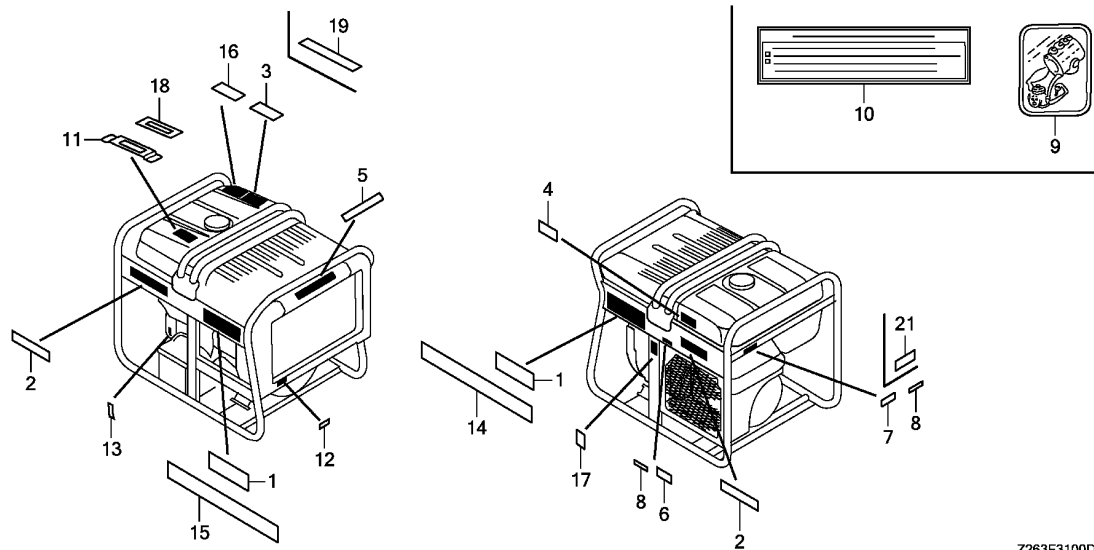


Z263F3100D

Ref. L.O.N. (Relative ref. Number)
No. Description F.R.T.


NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1		
1	87101-Z26-000	MARK, EMBLEM(EM10000)	2	-	-	
	87101-Z26-U60	MARK, EMBLEM(ET12000)	-	2	-	
2	87102-Z26-000	MARK, EMBLEM(HONDA)	2	2	-	
3	87150-Z15-D20	MARK, CAUTION(E,S,L)	1	1	-	K,R
	87150-Z26-S70	MARK, CAUTION(RG)	1	1	-	RG
	87150-Z15-S60	MARK, CAUTION(C)	1	1	-	RH
	87150-Z25-A61	MARK, CAUTION(EC)	-	1	1	RGH
	87150-Z26-S20	MARK, CAUTION(SKH)	-	1	-	SKH
4	87152-Z26-D80	MARK, SPEC(K)	1	-	-	K
	87152-Z26-D60	MARK, SPEC(R)	1	-	-	R
	87152-Z26-S71	MARK, SPEC(RG)	1	-	-	RG
	87152-Z26-S60	MARK, SPEC(RH)	1	-	-	RH
	87152-Z26-E80	MARK, SPEC(KH)	-	1	-	KH
	87152-Z26-M60	MARK, SPEC(R)	-	1	-	R
	87152-Z26-U72	MARK, SPEC(RG)	-	1	-	RG
	87152-Z26-U60	MARK, SPEC(RH)	-	1	-	RH
5	87531-Z26-000	MARK, HONDA	1	1	1	
6	87539-ZR4-F60	LABEL, EX. CAUTION	1	-	-	K,R
	87539-Z26-S60	MARK, EX. CAUTION	1	1	-	RH
7	87540-Z26-S60	MARK, HOT CAUTION	1	1	-	RH
	87540-Z26-T70	MARK, HOT CAUTION(RG)	-	1	1	RGH
8	87540-Z26-S70	MARK, HOT CAUTION	2	2	-	RG
9	87541-ZB4-000	MARK, OIL CHECK	1	1	-	K,R
10	87560-Z26-M60	MARK, A.C. TERMINAL(S)	-	1	-	R
	87561-Z26-M60	MARK, A.C. TERMINAL(L)	-	1	-	R
	87559-Z26-M60	MARK, A.C. TERMINAL	-	1	-	RG
11	87565-ZR6-T60	PLATE, FUEL INDICATION	1	-	-	

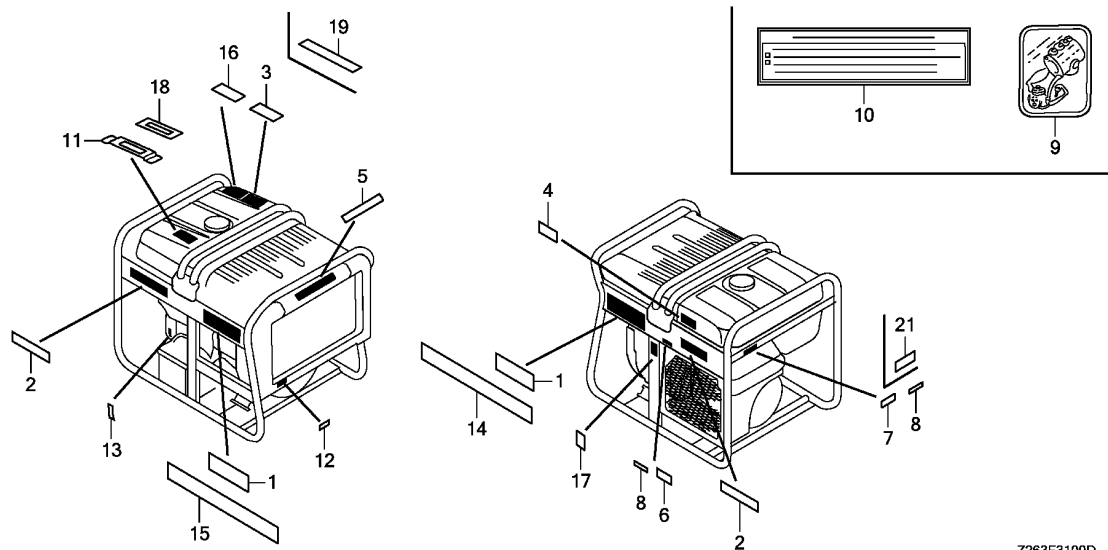

Z263F3100D

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
12	87592-Z26-D60	MARK, FUEL COCK	1	1	1	1	-----	K,KH,LDH,MH,R,RG,RGH,RRH,SH,SKH,UH
	87592-Z26-S60		1	-	1	-	-----	RH
13	87178-Z32-000	MARK, DIRECTION	1	1	-	-	-----	K,KH
14	87101-Z26-E80	MARK, R. EMBLEM(EM10000)	-	1	-	-	-----	
	87101-Z26-U70	MARK, R. EMBLEM(ET12000)	-	-	-	1	-----	
15	87102-Z26-E80	MARK, L. EMBLEM(EM10000)	-	1	-	-	-----	
	87102-Z26-U70	MARK, L. EMBLEM(ET12000)	-	-	-	1	-----	
16	87516-Z28-S70	LABEL, OPERATOR WARNING(RG) .	-	1	-	1	-----	RGH
17	87539-Z26-E80	MARK, EX. CAUTION	-	1	-	1	-----	KH,LDH,MH,RRH,SH
	87539-Z26-S70		-	1	-	1	-----	RGH
	87539-Z26-S20		-	1	-	-	-----	SKH
	87539-Z26-C80		-	1	-	-	-----	UH
18	87565-Z22-620	MARK, FUEL INDICATION	-	1	-	1	-----	
19	87150-Z26-E80	MARK, CAUTION	-	1	-	1	-----	KH,LDH,MH,RRH,SH
	87150-Z26-C80	MARK, CAUTION(U)	-	1	-	-	-----	UH
21	87539-Z30-S10	MARK, EX. CAUTION	-	1	-	-	-----	SKH

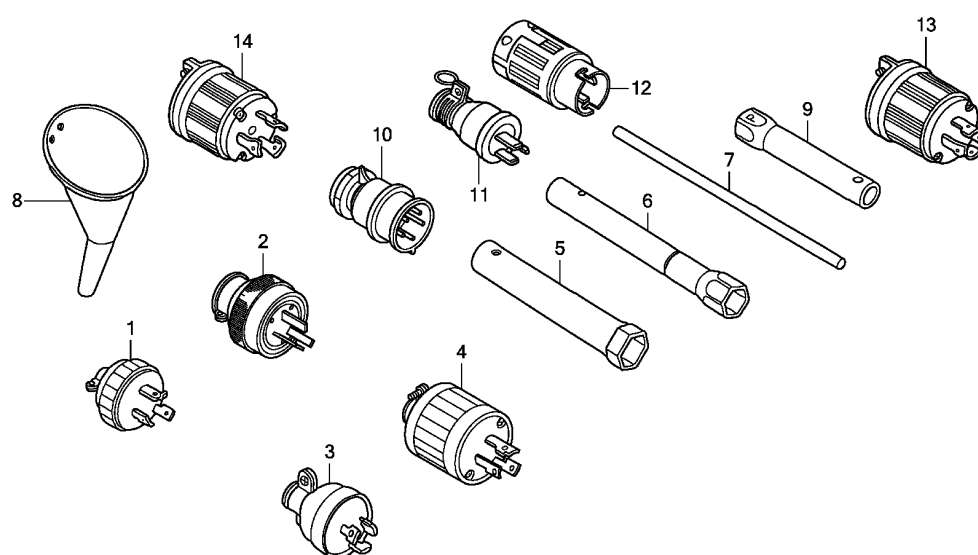


Z263F3200C

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
----------	--------	---------------------------------------	--------

NO INFORMATION

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000	ET 12000	K1	K1		
1	32310-ZD8-F61	PLUG ASSY. (20A/250V)	2	-	2	-	-----	K,R, RG
2	32310-ZS9-A00	PLUG ASSY. (60A/250V)	1	1	-	-	-----	K, KH, MH, R, RG, RGH, RH, RRH, SH, SKH, UH
3	32310-Z15-R60	PLUG ASSY., CONSENT (20A-250V)	2	2	2	2	-----	KH, RGH, RH, RRH, SH
4	32310-Z26-S61	PLUG ASSY. (30A/250V)	1	1	-	-	-----	K, KH, R, RG, RGH, RH, RRH, SH
5	89216-ZR6-T60	WRENCH, PLUG	1	-	1	-	-----	RH
6	99004-21003	WRENCH, BOX (P21)	1	-	1	-	-----	K, R, RG
7	99005-01000	BAR A, HANDLE	1	1	1	1	-----	
8	89115-740-000	FUNNEL, OIL	-	1	-	1	-----	
9	99004-16170	WRENCH, BOX (P16X17)	-	1	-	1	-----	
10	32311-Z26-L60	PLUG (32A-240/415V)	-	-	-	1	-----	
11	32310-836-000	PLUG ASSY., CONSENT (15A/125V)	-	4	-	-	-----	LDH
12	32310-Z26-E30	PLUG ASSY. (50A-125 /250V) ...	-	1	-	-	-----	LDH
13	32310-ZP0-K30	PLUG ASSY. (30A-125/250V)	-	1	-	-	-----	LDH
14	32311-ZP0-K30	PLUG ASSY. (30A/125V)	-	1	-	-	-----	LDH

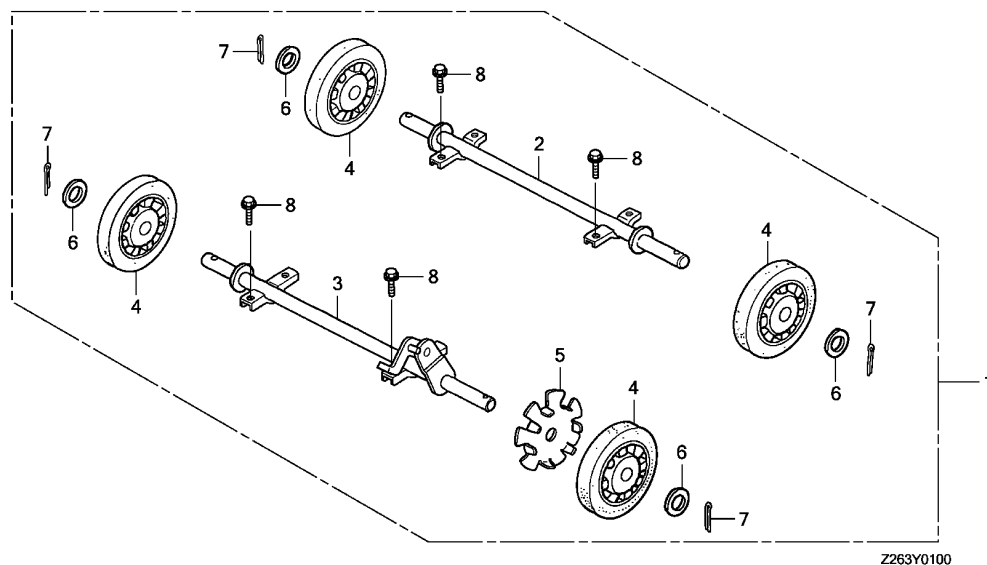


Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	7101B6	WHEEL KIT	0.4
2	2091E3	SHAFT, WHEEL :RIGHT	0.3
3	2091E2	SHAFT, WHEEL :LEFT	0.2
4	7101L7	WHEEL :LEFT FRONT	0.1
	7101L8	WHEEL :RIGHT FRONT	0.1
	7101H3	WHEEL :LEFT REAR	0.1
	7101H4	WHEEL :RIGHT REAR	0.1

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1				
1	06710-Z26-000	WHEEL KIT(4-WHEELS)	(1)	(1)	(1)	(1)		
2	42310-Z26-000	SHAFT COMP., R. WHEEL	(1)	(1)	(1)	(1)		
3	42320-Z26-000	SHAFT COMP., L. WHEEL	(1)	(1)	(1)	(1)		
4	42710-ZB4-003	WHEEL COMP.	(4)	(4)	(4)	(4)		
5	42753-880-810	PLATE, LOCK	(1)	(1)	(1)	(1)		
6	94102-20000	WASHER, PLAIN, 20MM	(4)	(4)	(4)	(4)		
7	94201-40280	PIN, SPLIT, 4.0X28	(4)	(4)	(4)	(4)		
8	95701-08016-07	BOLT, FLANGE, 8X16	(8)	(8)	(8)	(8)		

FOP-2

HOOK KIT

H11

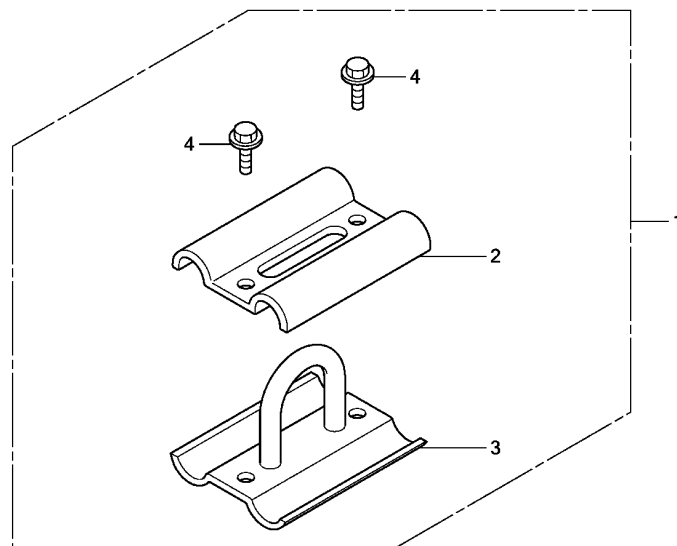

Z263Y0200

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4101U9	HANGER KIT	0.1

3

Ref. No.	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
			EM 10000 K1	ET 12000 K1				
1	06531-Z26-000	HOOK KIT	(1)	(1)	(1)	(1)		
2	53154-Z26-000	BRACKET, HANGER	(1)	(1)	(1)	(1)		
3	53155-Z26-000	HOOK, HANGER	(1)	(1)	(1)	(1)		
4	95701-08020-07	BOLT, FLANGE, 8X20	(2)	(2)	(2)	(2)		

PART NO. INDEX

11

Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.
06000				13102-ZJ1-841	D13	34	2	15410-Z6L-000	D10	31	7	16221-Z6L-000	E15	52	19	16951-Z26-003	G11	76	25
06531-Z26-000	H11	92	1	13103-ZJ1-840	D13	34	2	15411-ZJ1-840	D8	29	9	16221-ZJ1-840	E13	50	20	16952-ZA0-000	G10	75	7
06710-Z26-000	H10	91	1	13103-ZJ1-841	D13	34	2	15423-Z6L-000	D10	31	8	16263-883-W10	F11	64	1	16953-Z03-003	G10	75	8
				13104-ZJ1-840	D13	34	2	15424-Z6L-000	D7	28	4	16263-Z0G-010	F12	65	1	16958-GJ6-000	F3	56	6
				13104-ZJ1-841	D13	34	2		D10	31	9	16500-Z6L-822	F12	65	2	16967-MA2-771	G10	75	9
11000				13111-Z6L-000	D14	35	3	15427-ZJ1-000	D8	29	10	16500-ZJ1-D20	F11	64	2				
11100-Z6L-801	D7	28	1	13111-ZJ1-840	D13	34	3	15558-ZJ1-003	D5	26	5	16510-Z6L-010	D10	31	12	17000			
11100-Z6L-840	D7	28	1	13200-ZJ1-841	D13	34	4	15571-ZM7-003	D7	28	5	16510-ZJ1-840	D8	29	12	17101-Z6L-010	D3	24	10
11300-Z6L-010	D10	31	1	13210-Z6L-000	D14	35	4	15572-Z6L-000	D7	28	6	16511-Z6L-310	D10	31	13	17101-ZJ1-840	D1	22	13
11300-ZJ1-853	D8	29	1	13211-Z6L-003	D14	35	5	15600-Z6L-000	D3	24	7	16511-ZJ1-840	D8	29	13	17151-Z6L-010	D3	24	11
11381-ZJ1-840	D8	29	2	13310-Z6L-650	D12	33	1	15611-MB0-000	D1	22	11	16512-Z6L-310	D10	31	14	17151-ZJ1-841	D1	22	14
11911-Z6L-000	D3	24	1	13310-ZJ1-890	D12	33	1	15625-Z6L-000	D3	24	8	16512-ZJ1-840	D8	29	14	17210-Z6L-010	F2	55	1
11911-ZJ1-840	D1	22	1					15625-ZJ1-840	D1	22	12	16513-Z6L-000	D10	31	15	17210-ZJ1-842	F1	54	1
				14000				15655-Z6L-000	D10	31	10	16513-ZE2-000	D8	29	15	17218-Z6L-000	F2	55	2
12000				14100-Z6L-000	E4	41	2	15655-ZJ1-861	D8	29	11	16531-Z0A-000	D8	29	16	17218-ZJ1-840	F1	54	2
12000-ZJ1-406	D5	26	1	14100-ZJ1-842	D15	36	2	15721-Z6L-000	E15	52	1	16531-Z6L-000	D10	31	16	17219-ZJ1-840	F1	54	3
12000-ZJ1-416	D5	26	1	14410-Z6L-000	E4	41	3	15772-Z51-000	E13	50	2	16534-ZJ1-840	F11	64	3	17220-Z6L-000	F2	55	3
12105-ZA0-701	D8	29	3	14410-ZJ1-840	D15	36	3					16541-Z6L-010	D7	28	7	17220-ZJ1-840	F1	54	4
12110-Z6L-010	D3	24	2	14431-Z6L-000	E4	41	4	16000				16541-ZJ1-840	D5	26	6	17223-Z6L-000	F2	55	4
12120-Z6L-010	D3	24	3	14431-ZE2-010	D15	36	4	16010-Z6L-003	E15	52	2	16550-Z6L-020	F12	65	4	17228-Z6L-000	E15	52	20
12204-ZE2-306	D1	22	2	14451-ZE1-013	D15	36	5	16010-ZG8-000	E13	50	3	16551-ZJ1-840	F11	64	4	17228-ZG8-003	E13	50	21
12205-ZJ1-405	D1	22	3	14461-Z6L-000	E4	41	5	16011-KCK-910	E13	50	4	16553-Z6L-010	F12	65	5	17229-Z6L-000	E16	53	29
12208-Z6L-003	E4	41	1	14568-Z6L-000	E4	41	6	16013-Z6L-003	E15	52	3	16555-Z6L-010	F12	65	6	17229-ZJ1-840	F1	54	5
12209-ZE8-003	D15	36	1	14568-ZJ1-841	D15	36	6	16013-ZV4-005	E13	50	5	16555-ZJ1-840	F11	64	5	17230-Z6L-000	F2	55	5
12210-ZJ1-406	D1	22	4	14576-ZJ1-840	D15	36	7	16015-Z6L-003	E15	52	4	16561-Z6L-000	F12	65	7	17230-ZJ1-840	F1	54	6
12216-ZE2-300	D1	22	5	14711-Z6L-000	E4	41	7	16015-Z6L-003	E15	52	4	16561-ZJ1-860	F11	64	6	17230-ZJ1-841	F1	54	6
12220-ZJ1-405	D1	22	6	14711-ZE3-000	D15	36	8	16016-Z6L-003	E13	50	6	16562-Z6L-010	F12	65	8	17232-Z2E-000	F2	55	6
12251-ZJ1-841	D1	22	7	14721-Z6L-000	E4	41	8	16016-Z6L-003	E15	52	5	16562-ZJ1-840	F11	64	7	17233-ZJ1-840	F1	54	7
12311-Z6L-000	D3	24	4	14721-ZE3-000	D15	36	9	16016-Z6L-801	E16	53	31	16576-891-000	F11	64	8	17234-ZJ1-840	F1	54	8
12311-Z6L-800	D3	24	5	14730-Z6L-000	E4	41	9	16016-ZJ1-010	E13	50	7		F12	65	9	17235-Z6L-300	F2	55	7
12311-ZJ1-840	D1	22	8	14730-ZJ1-841	D15	36	10	16024-124-760	E13	50	8	16584-883-300	F11	64	9	17236-Z6L-300	F2	55	8
12312-Z6L-000	D3	24	6	14730-ZJ1-842	D15	36	10		E15	52	6		F12	65	10	17238-ZE7-010	E15	52	21
12314-ZJ1-840	D1	22	9	14735-Z6L-000	E4	41	10	16028-ZG8-000	E13	50	9	16592-ZJ1-000	F11	64	10	17238-ZJ4-830	F1	54	9
12356-Z6L-000	D7	28	2	14751-Z6L-000	E4	41	11	16075-ZJ1-000	E13	50	10		F12	65	11	17369-KB4-670	E15	52	22
12356-ZJ1-000	D5	26	2	14751-ZE2-003	D15	36	11	16081-Z6L-003	E15	52	7	16594-883-010	F11	64	11	17410-Z6L-000	E15	52	23
12357-ZJ1-840	E13	50	1	14760-ZJ1-840	D15	36	12	16100-Z9E-023	E15	52	8		F12	65	12	17410-ZJ1-840	E13	50	22
12358-ZJ1-000	D5	26	3	14763-Z6L-000	E4	41	12	16100-ZCL-D01	E15	52	8	16611-Z6L-010	F12	65	13	17417-Z6L-000	F2	55	9
12358-ZJ1-003	D5	26	3	14764-Z6L-000	E4	41	13	16100-ZJ1-W04	E13	50	11	16611-ZJ1-840	F11	64	12	17510-Z26-000ZA	G10	75	10
12367-Z6L-000	D7	28	3	14764-ZJ1-840	D15	36	13	16113-Z6L-003	E15	52	9	16700-Z6L-003	F4	57	1	17620-899-013	G10	75	11
12372-ZE2-300	D5	26	4	14771-ZE1-000	E4	41	14	16124-ZE0-005	E15	52	10	16700-ZL8-013	F3	56	1	17620-Z22-000	G10	75	11
12391-ZE2-020	D1	22	10	14771-ZE2-000	D15	36	14	16126-Z6L-003	E15	52	11	16711-Z6L-000	F4	57	2	17630-Z26-003	G10	75	12
				14773-ZE2-000	D15	36	15	16126-ZJ1-841	E13	50	12	16711-ZJ1-840	F3	56	2	17630-Z26-E80	G10	75	12
				14775-ZE2-010	D15	36	16	16134-Z6L-801	E16	53	32	16715-Z6L-000	E12	49	1	17631-899-000	G10	75	13
				14781-ZE2-000	D15	36	17	16148-141-881	E13	50	13	16715-ZJ1-840	E11	48	1	17670-Z26-S60	G10	75	14
				14791-ZE2-010	D15	36	18		E15	52	12	16722-Z6L-010	D3	24	9	17719-Z26-000	G10	75	15
13000								16150-ZJ1-841	E13	50	14	16731-ZE2-003	G10	75	2	17721-ZY3-000	F4	57	7
13010-Z5H-004	D13	34	1	15000				16155-Z6L-003	E15	52	13	16850-ZCL-D00	F4	57	3	17950-Z26-000	G1	66	1
13010-Z6L-003	D14	35	1	15120-ZJ1-010	D8	29	4	16166-Z9E-003	E15	52	14	16850-ZJ1-840	F3	56	3		G3	68	1
13010-ZJ1-841	D13	34	1	15124-ZJ1-003	D8	29	5	16166-ZJ0-000	E13	50	15	16852-Z26-000	G10	75	3	17950-Z26-E81	G5	70	1
13011-Z5H-004	D13	34	1	15133-Z6L-000	D10	31	2	16173-001-004	G10	75	1	16852-ZJ1-840	F3	56	4		G7	72	1
13011-ZJ1-841	D13	34	1	15140-Z6L-010	D10	31	3	16176-Z2G-D51	E15	52	15	16853-Z26-E80	G11	76	26	17957-Z6L-003	F12	65	14
13012-Z5H-004	D13	34	1	15220-Z6L-000	D10	31	4	16178-548-004	E13	50	16	16854-Z26-000	G10	75	4				
13012-ZJ1-841	D13	34	1	15232-Z6L-000	D10	31	5	16198-ZJ1-840	E13	50	17	16860-ZCL-D00	F4	57	4	18000			
13013-Z5H-004	D13	34	1	15232-ZJ1-000	D8	29	6		E15	52	16	16865-Z26-000	G10	75	5	18310-Z26-003	G9	74	1
13013-ZJ1-841	D13	34	1	15348-ZJ1-840	D8	29	7	16200-Z6L-003	E15	52	17	16870-Z6L-000	F4	57	5	18310-Z26-E80	G9	74	9
13101-Z6L-010	D14	35	2	15400-RTA-004	D10	31	6	16211-Z6L-000	E15	52	18	16882-Z6L-000	F4	57	6	18320-Z26-000	G16	81	1
13101-ZJ1-840	D13	34	2	15400-ZJ1-004	D8	29	8	16211-ZJ0-830	E13	50	19	16882-ZJ1-840	F3	56	5	18320-Z26-E80ZA	G16	81	15
13101-ZJ1-841	D13	34	2									16950-Z26-003	G10	75	6				

4

PART NO. INDEX

12

Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.
18330-Z26-003	G9	74	2	31000				31234-Z6L-000	F10	63	17	32150-Z26-C80	G5	70	7	32366-Z26-U70	G3	68	10
18330-Z26-E80	G9	74	2					31234-ZJ1-H01	F9	62	17	32150-Z26-E30	G5	70	7	32366-Z26-V70	G7	72	11
18333-ZB4-800	G9	74	3	31109-Z26-003	H4	85	2	31234-ZJ1-H02	F9	62	17	32150-Z26-E80	G5	70	7	32410-Z26-C30	G13	78	2
18333-ZB4-801	G9	74	3	31110-Z6L-003	F6	59	3	31235-Z26-S61	H4	85	14	32150-Z26-L60	G7	72	6	32410-Z26-S70	G13	78	2
18333-ZJ1-000	G9	74	4	31110-ZJ1-850	F5	58	5	31295-Z08-E31	H5	86	15	32150-Z26-S60	G1	66	5	32410-Z26-U60	G13	78	2
18340-Z26-003	G9	74	5	31117-Z26-E81	H4	85	3	31296-ZC6-003	H5	86	16	32150-Z26-U60	G3	68	5	32411-ZW1-003	G13	78	3
18340-Z26-E80	G9	74	5	31117-Z26-S61	H4	85	3	31297-ZC6-003	H5	86	17	32183-Z6L-000	F8	61	7	32418-PND-300	G13	78	4
18355-Z26-C30	G9	74	10	31118-880-000	H4	85	4	31426-Z18-000	G6	71	39	32310-836-000	H9	90	11	32600-Z26-C30	G13	78	5
18390-Z26-E80	G9	74	11	31119-Z26-E81	H4	85	5	31426-ZA8-761	G5	70	2	32310-Z15-R60	H9	90	3	32600-Z26-S70	G13	78	5
				31119-ZA0-901	H4	85	5	31428-899-840	G1	66	2	32310-Z26-E30	H9	90	12	32600-Z26-U60	G13	78	5
19000				31119-ZC6-003	H4	85	5					32310-Z26-S61	H9	90	4	32601-SK7-900	G13	78	6
				31120-Z26-C71	H4	85	7					32310-ZD8-F61	H9	90	1	32602-SK7-900	G13	78	7
19111-MF5-000	F3	56	7	31120-Z26-C81	H4	85	7	31428-Z22-000	G5	70	3	32310-ZP0-K30	H9	90	13	32730-ZA0-900	G3	68	11
19511-Z6L-000	F6	59	1	31120-Z26-D61	H4	85	6					32310-ZS9-A00	H9	90	2	32731-ZA0-900	G3	68	12
19511-ZJ1-000	F5	58	1	31120-Z26-E31	H4	85	7	31500-750-612	G12	77	2	32311-Z26-L60	H9	90	10	32734-ZA0-900	G3	68	13
19513-Z26-S61	H4	85	1	31120-Z26-E61	H4	85	7	31500-751-612	G12	77	2	32311-ZP0-K30	H9	90	14	32736-ZA0-901	G3	68	14
19513-Z6L-000	F6	59	2	31120-Z26-E81	H4	85	7	31500-Z26-C31	G12	77	1	32330-Z15-R60	G5	70	8	32763-PA0-000	F7	60	7
19513-ZJ1-000	F5	58	2	31120-Z26-L61	H4	85	7	31500-Z26-U61	G12	77	1					32903-Z22-000	G6	71	16
19610-Z6L-000ZB	E12	49	2	31120-Z26-M61	H4	85	6	31511-ZJ1-000	D5	26	8	32330-Z21-A31	G6	71	40				
19611-ZJ1-840ZA	E11	48	2	31120-Z26-P61	H4	85	7	31512-ZA0-000	G12	77	3	32330-Z26-S61	G1	66	7				
19612-ZJ1-841	E11	48	3	31120-Z26-S61	H4	85	6	31514-Z26-U60	G12	77	4					33000			
19614-ZJ1-841	E11	48	4	31120-Z26-U61	H4	85	6	31521-SB5-010	G12	77	5	32330-ZS9-A00	G1	66	6				
19619-Z0A-300	E12	49	3	31127-Z26-S61	H4	85	8	31542-TM8-A01	G12	77	7					33713-GC2-000	E11	48	7
	F2	55	10	31130-Z26-S61	H4	85	9	31542-Z26-U61	G12	77	7	32331-Z26-E81	G5	70	10				
19621-Z6L-000	E12	49	4	31168-Z26-000	H4	85	10	31542-ZA0-007	G12	77	6	32331-Z26-S61	G1	66	8				
19631-Z6L-000	E12	49	5	31168-Z26-E80	H4	85	10	31542-ZA0-651	G12	77	6	32331-ZA8-720	G5	70	11				
19631-ZJ1-850	E11	48	5	31171-Z26-S61	H4	85	11	31600-KA2-752	H5	86	18	32331-ZC6-630	G6	71	41	34150-ZJ1-842	E11	48	8
19632-ZJ1-841	E11	48	6	31186-Z26-S61	H4	85	12	31601-KA2-751	H5	86	19	32331-ZT3-C60	G6	71	42	34150-ZJ1-843	E11	48	8
19641-Z6L-000	E12	49	6	31191-Z26-S61	H4	85	13	31630-ZCL-003	F8	61	3	32332-Z07-C81	G5	70	12				
19642-Z6L-000	E12	49	7	31200-Z6L-003	F10	63	3	31630-ZCL-013	F8	61	3	32332-Z22-E31	G5	70	10				
19682-ZJ1-840	D1	22	15	31200-ZJ1-841	F9	62	3	31630-ZJ1-003	F7	60	5	32333-Z26-L60	G7	72	8				
				31200-ZJ1-842	F9	62	3	31630-ZJ1-013	F7	60	5	32334-Z22-A31	G6	71	43	35100-Z26-003	G6	71	17
25000				31203-PH9-004	F9	62	4	31700-Z26-E80	G5	70	4	32335-ZA0-901	G3	68	7				
								31700-Z26-L60	G7	72	3	32345-Z26-C80ZA	G5	70	13	35100-ZA0-013	G1	66	12
25523-VD6-010	D5	26	7	31204-ZJ1-H01	F9	62	5	31700-Z26-S61	G1	66	3	32345-Z26-E20ZA	G5	70	13				
				31204-ZJ1-H02	F9	62	5	31700-Z26-U61	G3	68	3	32345-Z26-E30ZA	G5	70	13	35100-ZA0-023	G1	66	12
28000								31705-Z26-300	G5	70	5	32345-Z26-E80ZA	G5	70	13				
				31206-ZG4-801	F9	62	6					32345-Z26-L60ZA	G7	72	9	35111-880-013	G1	66	13
28452-ZJ1-811	F5	58	3	31207-ZE9-H01	F10	63	6	31706-Z26-300	G5	70	6	32345-Z26-S60ZB	G1	66	9				
28454-ZJ1-801	F5	58	4	31207-ZJ1-H01	F9	62	7					32345-Z26-S70ZA	G1	66	9	35410-ZA0-900	G4	69	17
				31208-Z6L-003	F10	63	7	31710-ZS9-A01	G1	66	4	32345-Z26-U60ZA	G3	68	8	35420-ZA0-900	G4	69	18
30000				31211-PH9-004	F9	62	8					32350-Z26-E80ZA	G6	71	14	35480-Z6L-003	D7	28	8
								31710-ZS9-A02	G1	66	4					35480-ZJ1-841	D5	26	9
30201-PH9-004	F9	62	1	31212-PH9-004	F9	62	9					32350-Z26-S60ZB	G1	66	10	35480-ZJ1-842	D5	26	9
	F10	63	1					31740-ZJ1-851	F7	60	6								
30202-PZ1-003	F9	62	2	31213-P64-N01	F9	62	10	31740-ZJ1-852	F7	60	6	32366-Z26-C70	G6	71	15				
	F10	63	2	31214-PH9-004	F9	62	11	31750-Z35-013	F8	61	4	32366-Z26-C80	G6	71	15				
												32366-Z26-D60	G1	66	11	37450-ZB4-651	G2	67	14
30500-Z6L-003	F8	61	1	31217-Z0A-003	F10	63	11					32366-Z26-E20	G6	71	15	37450-ZC6-650	G4	69	19
30500-Z6L-033	F8	61	1	31218-P64-N01	F9	62	12	32000				32366-Z26-E30	G6	71	15	37450-ZD8-F61	G2	67	15
30500-ZJ1-844	F7	60	1									32366-Z26-E60	G6	71	15	37451-ZA0-A10	G4	69	20
30500-ZJ1-845	F7	60	1					32103-Z26-E80	G13	78	16	32366-Z26-E80	G6	71	15	37451-ZB4-003	G2	67	16
30518-ZJ1-000	F7	60	2	31219-Z6L-003	F10	63	13	32103-ZJ1-D20	F9	62	18	32366-Z26-E80	G6	71	15				
30550-ZJ1-844	F7	60	3	31220-PH9-004	F9	62	13	32104-Z26-E80	G13	78	17	32366-Z26-M60	G3	68	10				
30550-ZJ1-845	F7	60	3					32104-ZJ1-D20	D8	29	17	32366-Z26-P60	G7	72	11				
30551-Z6L-000	F8	61	2	31223-PA0-006	F9	62	14	32110-Z26-E80	G13	78	1	32366-Z26-S60	G1	66	11				
30700-ZJ1-841	F7	60	4					32110-Z26-S60	G13	78	1	32366-Z26-S70	G1	66	11	38220-Z26-C71	G6	71	18
30701-887-790	F3	56	8	31231-PH9-004	F9	62	15	32110-Z6L-810	F8	61	15	32366-Z26-T20	G6	71	15	38220-Z26-C81	G6	71	18
								32114-Z6L-000	F8	61	5	32366-Z26-T70	G6	71	15	38220-Z26-D61	G2	67	17
				31233-PH9-004	F9	62	16	32115-Z6L-000	F8	61	6	32366-Z26-U60	G3	68	10	38220-Z26-E31	G6	71	44

PART NO. INDEX

13

Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.
38220-Z26-E61	G6	71	18	63312-ZA7-000	F7	60	8	87539-ZR4-F60	H7	88	6	90101-P4V-010	G16	81	10		G4	69	33
38220-Z26-E81	G6	71	18	63315-Z26-000	G16	81	6	87540-Z26-S60	H7	88	7	90101-Z26-000	H5	86	23		G13	78	8
38220-Z26-M61	G4	69	21	63315-Z26-E80	G16	81	6	87540-Z26-S70	H7	88	8	90101-Z26-S61	H5	86	22	90672-ZB7-811	G2	67	24
38220-Z26-P61	G7	72	14	63318-Z26-000	G16	81	7	87540-Z26-T70	H7	88	7	90102-Z08-E30	H5	86	24		G4	69	34
38220-Z26-S61	G2	67	17	63319-Z26-000	G16	81	8	87541-ZB4-000	H7	88	9	90102-Z26-003	H5	86	25	90673-ZB4-003	H5	86	31
38220-Z26-S62	G2	67	17	63328-Z26-000	G16	81	9	87558-Z26-M60	G4	69	24	90103-Z08-E30	H5	86	26	90676-Z26-003	G13	78	9
38220-Z26-S71	G2	67	17	63332-Z26-E80	H1	82	10	87558-Z26-U60	G4	69	24	90104-Z08-E31	H5	86	27	90682-959-661	E13	50	24
38220-Z26-U61	G4	69	21					87558-Z26-U70	G4	69	24	90105-Z26-000	H6	87	42	90683-GS9-670	G13	78	10
38220-Z26-U62	G4	69	21	68000				87559-Z26-M60	G4	69	25	90107-ZA0-900	G4	69	27	90684-ZA0-601	G2	67	25
38220-Z26-U71	G4	69	21						H7	88	10	90111-Z22-000	G6	71	21		G4	69	35
38220-Z26-V71	G7	72	14	68325-Z26-000	H1	82	5	87559-Z26-U60	G4	69	25		G7	72	17		G6	71	27
38224-SB2-003	G14	79	18	68325-Z26-E80	H1	82	5	87559-Z26-U70	G4	69	25	90112-Z22-000	G6	71	22		G8	73	23
								87560-Z26-M60	H7	88	10		G7	72	18		G13	78	11
39000				80000				87561-Z26-M60	H7	88	10	90148-SE0-003	G2	67	20	90702-GB6-910	D15	36	24
								87565-Z22-620	H8	89	18		G4	69	28	90705-Z6L-000	D14	35	8
39700-Z26-003	G6	71	19	80101-310-000	E11	48	9	87565-ZR6-T60	H7	88	11		G6	71	23	90707-Z6L-000	D10	31	19
	G7	72	15	80152-958-680	F4	57	8	87592-Z26-D60	H8	89	12		G8	73	19		E4	41	18
39700-ZC6-003	G2	67	18					87592-Z26-S60	H8	89	12	90201-Z6L-000	F6	59	4	90708-Z6L-000	D10	31	20
	G4	69	22	84000								90201-ZB4-003	G4	69	29	90709-Z6L-000	D7	28	10
								89000				90201-ZG3-000	F5	58	6	90741-ZE2-000	F5	58	8
42000				84601-HA7-670	E12	49	8					90206-Z6L-000	E4	41	16		F6	59	5
								89115-740-000	H9	90	8	90206-ZE1-000	D15	36	21	90802-Z6L-000	F2	55	12
42310-Z26-000	H10	91	2	87000				89216-ZR6-T60	H9	90	5	90313-ZJ1-840	E11	48	13	90854-ZB3-000	G10	75	16
42320-Z26-000	H10	91	3									90314-ZJ1-840	E13	50	23	90902-Z6L-000	D10	31	21
42710-ZB4-003	H10	91	4	87101-Z26-000	H7	88	1	90000				90325-044-000	F2	55	11				
42753-880-810	H10	91	5	87101-Z26-E80	H8	89	14	90001-Z28-760	G12	77	4	90380-GM9-740	E12	49	10	91000			
				87101-Z26-U60	H7	88	1	90001-Z6L-000	D14	35	6	90401-ZG3-000	F5	58	7	91001-ZJ1-841	D5	26	12
50000				87101-Z26-U70	H8	89	14	90001-ZN1-000	D13	34	5	90401-ZJ1-000	D12	33	2	91002-ZG4-801	F9	62	19
				87102-Z26-000	H7	88	2	90002-ZE2-U91	G9	74	12	90402-Z6L-000	D12	33	2		F10	63	19
50287-703-000	G4	69	23	87102-Z26-E80	H8	89	15	90002-Z6L-000	E16	53	30	90403-Z6L-000	D10	31	17	91002-ZJ1-841	D5	26	13
50310-Z26-000	H1	82	1	87102-Z26-U70	H8	89	15	90003-ZJ1-840	F1	54	10	90404-Z6L-000	D7	28	9	91051-ZC6-003	H5	86	32
50310-Z26-E80ZA	H1	82	1	87117-Z26-E80	G6	71	20	90005-896-000	D15	36	19	90441-ZE2-010	D1	22	20	91201-Z6L-003	D7	28	11
50323-Z26-000	H1	82	2		G7	72	16	90005-Z6L-000	E12	49	9	90446-357-000	D15	36	22	91201-ZE9-003	D5	26	14
50324-Z26-000	H1	82	3	87117-Z26-S60	G2	67	37	90005-Z6L-000	E12	49	9	90501-ZA7-640	D8	29	20	91201-ZJ1-841	D5	26	15
50328-Z26-000	G16	81	2		G4	69	51	90005-ZCK-000	E12	49	9		G2	67	21	91202-Z6L-003	D10	31	22
50328-Z26-E80ZA	G16	81	16	87150-Z15-D20	H7	88	3	90006-Z6L-000	D3	24	12		G4	69	30	91202-ZJ1-841	D8	29	22
50329-Z26-000	H1	82	4	87150-Z15-S60	H7	88	3	90011-899-840	G2	67	19		G6	71	24	91203-Z6L-003	D7	28	12
50329-Z26-E80	G16	81	17	87150-Z25-A61	H7	88	3		G4	69	26	90504-ZA0-000	H5	86	28	91301-Z6L-003	D10	31	23
50335-Z26-E80	G16	81	18	87150-Z26-C80	H8	89	19	90011-ZJ1-841	D1	22	16	90506-ZA0-003	H5	86	29	91302-MB6-830	D5	26	16
				87150-Z26-E80	H8	89	19	90012-Z6L-000	E4	41	15		H6	87	43	91302-Z6L-003	D10	31	24
53000				87150-Z26-S20	H7	88	3	90012-ZE0-010	D15	36	20	90551-ZE1-000	D13	34	6	91302-ZE9-003	D8	29	23
				87150-Z26-S70	H7	88	3	90013-883-000	E11	48	10		D14	35	7	91308-PH9-000	D11	32	25
53150-Z26-000	G16	81	3	87152-Z26-D60	H7	88	4	90014-952-000	F1	56	9	90602-ZE1-000	D8	29	21	91308-Z6L-003	D7	28	13
53154-Z26-000	H11	92	2	87152-Z26-D80	H7	88	4		F3	64	13		D10	31	18		D11	32	26
53155-Z26-000	H11	92	3	87152-Z26-E80	H7	88	4		F11	64	13		D15	36	23	91309-Z6L-000	D7	28	14
53157-Z26-000	G16	81	4	87152-Z26-M60	H7	88	4	90014-ZE2-000	D1	22	17		E4	41	17	91353-671-004	D5	26	17
				87152-Z26-S60	H7	88	4	90014-ZE6-000	F7	60	9	90605-Z30-000	F11	64	15	91402-ZJ1-841	E13	50	25
63000				87152-Z26-S71	H7	88	4	90015-883-000	D8	29	18	90650-KV6-003	F8	61	8	91451-Z26-000	G13	78	12
				87152-Z26-U60	H7	88	4	90015-ZE3-790	F11	64	14	90653-ZA0-900	G4	69	31	91451-Z26-E80	G13	78	12
63151-Z26-000ZA	G15	80	1	87152-Z26-U72	H7	88	4		F12	65	15	90672-SA0-003	H5	86	30	91601-Z6L-000	F8	61	9
63153-Z26-000	G15	80	2	87178-Z32-000	H8	89	13	90018-PN3-000	D8	29	19	90672-SB2-003	G2	67	22	91601-ZJ1-840	F3	56	10
63156-Z26-000	G16	81	5	87516-Z28-S70	H8	89	16	90018-ZE1-000	E11	48	11		G4	69	32	91651-Z08-E31	G2	67	26
63159-Z26-000	G15	80	3	87531-Z26-000	H7	88	5	90018-ZJ1-840	D1	22	19	90672-Z22-003	G6	71	25		G4	69	36
63211-Z26-000ZA	G15	80	4	87539-Z26-C80	H8	89	17	90020-ZW5-000	H5	86	20		G8	73	21	91651-Z26-000	H1	82	6
63211-Z26-E80ZA	G15	80	4	87539-Z26-E80	H8	89	17	90029-888-000	D5	26	10	90672-ZB4-000	G6	71	26	91651-Z26-E80	G6	71	28
63221-Z26-000ZA	G15	80	5	87539-Z26-S20	H8	89	17	90031-ZE1-000	D5	26	11		G8	73	22		G8	73	24
63221-Z26-E80ZA	G15	80	5	87539-Z26-S60	H7	88	6		F7	60	10		G13	78	8				
63252-Z26-000	G15	80	6	87539-Z26-S70	H8	89	17	90032-875-003	H5	86	21	90672-ZB4-003	G2	67	23				
63253-Z26-000	G15	80	7	87539-Z30-S10	H8	89	21	90042-ZJ1-840	E11	48	12								

4

PART NO. INDEX

I 4

Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.	Part Number	Address	Page	Ref.
92000				94000															
92301-04006-0H	F11	64	16	94001-06390-0S	G2	67	31	95002-02100	F3	56	13	95701-08016-07	G16	81	14				
	F12	65	16		G4	69	43		G11	76	21		H10	91	8				
92301-05016-0A	F11	64	17	94001-08200-0S	F9	62	20		F3	56	14	95701-08020-00	D1	22	22				
	F12	65	17	94002-04080-0S	H6	87	38	95002-40850-08	F4	57	10		H1	82	9				
92301-05025-0A	F11	64	18	94050-04080	G2	67	32		G11	76	22	95701-08020-07	H11	92	4				
92800-14000	D5	26	18		G4	69	44	95002-50000	F3	56	15	95701-08030-08	G9	74	8				
92800-20000	D7	28	15		G6	71	34	95002-70000	G11	76	23	95701-08045-00	D11	32	30				
92900-08022-0E	D3	24	13		G8	73	31	95003-25012-20	F4	57	11	95701-08050-00	D9	30	28				
92900-10040-0B	D7	28	16	94050-05000	E11	48	15	95003-25015-20	G11	76	27		G16	81	20				
					G11	76	19	95701-06008-00	F7	60	11	95701-08065-00	G16	81	21				
93000				94050-05080	G8	73	32		F8	61	10	95701-08110-00	F9	62	23				
93403-05020-08	H5	86	33	94050-06000	E11	48	16		F12	65	21	95701-10025-08	H6	87	42				
93403-06014-08	G2	67	27		F2	55	13	95701-06010-00	G13	78	13	95701-10040-00	F10	63	21				
	G4	69	37		F11	64	20	95701-06012-00	F5	58	9	95701-10080-00	D1	22	23				
93403-06020-08	H5	86	34		F12	65	19		F8	61	11	95801-06120-00	E14	51	29				
93500-03008-0A	D7	28	17	94050-06080	G4	69	45		G2	67	35	96000							
93500-04006-1G	G2	67	28	94050-08000	G9	74	6		G4	69	49	96001-06025-00	G15	80	10				
	G6	71	29	94050-10000	D3	24	14		G6	71	37	96140-60030-10	D6	27	24				
93500-04012-0G	G6	71	30		D5	26	19		G8	73	35	96211-12000	D9	30	29				
	G8	73	25		H1	82	7		G13	78	13	96600-06016-00	D9	30	30				
93500-04012-1G	G2	67	29	94070-08080	F10	63	20		G16	81	19	98000							
	G4	69	38	94101-06000	G6	71	35		H6	87	41								
93500-04012-1H	E15	52	24		G8	73	33	95701-06012-07	G16	81	11	98079-52876	D1	22	24				
93500-04016-1H	H5	86	35		G15	80	9		H1	82	11	98079-5485V	D1	22	24				
93500-05035-0A	F11	64	19	94101-06800	D9	30	24	95701-06014-00	D7	28	20	98079-5487V	D2	23	24				
93500-05040-0A	F12	65	18		D16	37	25		F4	57	12	98079-5585V	D2	23	24				
93500-06008-3J	H6	87	36		G2	67	33		F8	61	12	98079-5587G	D3	24	17				
					G4	69	46	95701-06016-00	F12	65	22	98079-5587V	D2	23	24				
93600-04012-1G	G6	71	45	94102-04800	H6	87	39		D7	28	21	98200-30500	G13	78	14				
93600-04020-1G	G6	71	31	94102-08700	G4	69	47		E12	49	12	98200-31000	G13	78	15				
93600-05010-0A	G11	76	17	94102-08800	D5	26	20		G6	71	38	98200-32000	G13	78	15				
93600-05016-0G	G8	73	26	94102-20000	H10	91	6		G8	73	36								
93700-04018-0G	G11	76	18	94103-06700	G11	76	20	95701-06016-07	G11	76	24	99000							
93892-03006-17	G4	69	39	94103-08800	G9	74	7		G16	81	12	99004-16170	H9	90	9				
	G8	73	27	94109-14000	D5	26	21		H1	82	8	99004-21003	H9	90	6				
93892-03025-18	G4	69	40	94109-20000	D7	28	18	95701-06018-00	F2	55	14	99005-01000	H9	90	7				
93892-04008-00	G4	69	41	94111-04800	H6	87	40	95701-06020-00	D9	30	26	99101-ZH8-0980	E16	53	27				
	G8	73	28	94111-06000	G6	71	36		D11	32	27	99101-ZH8-1020	E16	53	27				
93892-04014-18	E14	51	26		G8	73	34		E12	49	13	99101-ZH8-1100	E16	53	27				
93892-05010-18	E16	53	25	94111-06800	G2	67	34	95701-06022-00	G14	79	19	99201-ZG8-1000	E14	51	30				
93892-05012-18	E14	51	27		G4	69	48	95701-06025-00	E4	41	19	99201-ZG8-1020	E14	51	30				
93893-05010-18	H6	87	37	94111-08000	F9	62	21	95701-06028-00	D16	37	27	99201-ZG8-1050	E14	51	30				
93893-05016-18	G2	67	30	94201-40280	H10	91	7		D11	32	28	99204-ZE2-0400	E16	53	28				
	G4	69	42	94251-08000	D5	26	22		F1	54	11								
93893-06016-08	G6	71	32	94251-10000	D7	28	19	95701-06030-00	D3	24	15								
	G8	73	29	94301-08140	D9	30	25		F8	61	13								
93894-06016-00	F3	56	11	94301-10120	F9	62	22	95701-06032-00	F8	61	14								
	F4	57	9	94301-12200	D1	22	21	95701-06045-08	H5	86	20								
93911-24120	G6	71	33	94305-60282	D16	37	26	95701-06075-09	D6	27	23								
	G8	73	30	94540-05018	F12	65	20	95701-06090-00	D11	32	29								
93913-25380	G15	80	8					95701-08012-00	G16	81	13								
93913-25580	E11	48	14	95000				95701-08016-00	D3	24	16								
	E12	49	11						D9	30	27								
				95001-45410-50	F3	56	12		F5	58	10								
				95002-02080	E14	51	28		G2	67	36								
					E16	53	26		G4	69	50								

PART NAME INDEX

J 1

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
[A]				BOLT, FLANGE, 6X10	F12	65	21	BOLT, FLANGE, 8X16	F5	58	10
ALERT UNIT, OIL	E11	48	8		G13	78	13		G2	67	36
ARMATURE COMP.	F9	62	6	BOLT, FLANGE, 6X106	E16	53	30		G4	69	50
	F10	63	11	BOLT, FLANGE, 6X12	E11	48	10		G16	81	14
ARM COMP., GOVERNOR	F12	65	4		F5	58	9		H10	91	8
ARM, GOVERNOR	F11	64	4		F8	61	11	BOLT, FLANGE, 8X170	H5	86	22
ARM, SUB	F12	65	5		G2	67	35	BOLT, FLANGE, 8X20	D1	22	22
ARM, THROTTLE LINKAGE	E13	50	12		G4	69	49		H1	82	9
	E15	52	11		G6	71	37		H11	92	4
ARM, VALVE ROCKER	D15	36	4		G8	73	35	BOLT, FLANGE, 8X30	G9	74	8
	E4	41	4		G13	78	13	BOLT, FLANGE, 8X45	D11	32	30
ARRESTER, SPARK	G9	74	10		G16	81	11	BOLT, FLANGE, 8X50	D9	30	28
							19		G16	81	20
[B]					H1	82	11	BOLT, FLANGE, 8X55	D3	24	12
BALL, STEEL, #12	D9	30	29	BOLT, FLANGE, 6X120	H6	87	41	BOLT, FLANGE, 8X65	G16	81	21
BALL, STEEL, #15	D10	31	21	BOLT, FLANGE, 6X14	E14	51	29	BOLT, GOVERNOR ARM	F11	64	14
BAND, TUBE	G13	78	10		D1	22	18		F12	65	15
BAND, WIRE HARNESS	G13	78	9		D7	28	20	BOLT, HEAD COVER	D1	22	17
BAND, WIRE, 95MM	F8	61	8		F3	56	9	BOLT, HEX., 10X278	H5	86	23
BARREL ASSY., CYLINDER	D5	26	1		F4	57	12	BOLT, HEX., 3/8-16UNCX25	H6	87	42
BAR A, HANDLE	H9	90	7		F8	61	12	BOLT, HEX., 6X28	G2	67	19
BAR, 2.9X208	G3	68	13		F11	64	13		G4	69	26
BASE COMP., OIL FILTER	D10	31	7	BOLT, FLANGE, 6X16	F12	65	22		G6	71	21
BASE, OIL FILTER	D8	29	9		D5	26	10		G7	72	17
BATTERY	G12	77	2		D7	28	21	BOLT, PIVOT, 8MM	D15	36	20
BATTERY ASSY.	G12	77	1		E12	49	12	BOLT, RECESSED, 4X6	F11	64	16
			2		G6	71	38		F12	65	16
BEAM, MAINTENANCE COVER	G15	80	3		G8	73	36	BOLT, RECESSED, 5X16	F11	64	17
BEARING A	F9	62	19		G11	76	24		F12	65	17
	F10	63	19		G16	81	12	BOLT, RECESSED, 5X25	F11	64	18
BEARING ASSY.	H5	86	32	BOLT, FLANGE, 6X18	H1	82	8	BOLT, SEALING	D7	28	4
BEARING A, CONNECTING ROD	D14	35	5	BOLT, FLANGE, 6X20	F2	55	14		D8	29	3
BEARING, NEEDLE, 8X12X10	D5	26	13		D9	30	26		D10	31	9
BEARING, NEEDLE, 8X12.7X11.1	D5	26	12		D11	32	27	BOLT, SOCKET, 6X16	D9	30	30
BEARING, RADIAL BALL, 6003	D6	27	24		E12	49	13	BOLT, SOCKET, 8X45	D1	22	16
BODY COMP., COCK	G11	76	25		G14	79	19	BOLT, SPECIAL, 5MM	F1	54	10
BOLT-WASHER, 5X20	H5	86	33	BOLT, FLANGE, 6X22	E4	41	19	BOLT, SPECIAL, 6MM	G4	69	27
BOLT-WASHER, 6X14	G2	67	27	BOLT, FLANGE, 6X23	E11	48	11	BOLT, STUD, 10X40	D7	28	16
	G4	69	37	BOLT, FLANGE, 6X25	D16	37	27	BOLT, STUD, 6X71	E11	48	12
BOLT-WASHER, 6X15	H5	86	27		G15	80	10	BOLT, STUD, 8X22	D1	22	19
BOLT-WASHER, 6X20	H5	86	34	BOLT, FLANGE, 6X28	D8	29	18		D3	24	13
BOLT, BATTERY SETTING	G12	77	4		D11	32	28	BOLT, THROUGH	F9	62	11
BOLT, BATTERY TERMINAL	G13	78	6		F1	54	11		F10	63	10
BOLT, CONNECTING ROD, 6X37	D13	34	5	BOLT, FLANGE, 6X30	D3	24	15	BOX, BATTERY	G12	77	5
BOLT, CONNECTING ROD, 7X38	D14	35	6		F8	61	13	BRACKET, A.C. OUT TERMINAL	H4	85	3
BOLT, DRAIN PLUG, 14MM	D5	26	18	BOLT, FLANGE, 6X32	D5	26	11	BRACKET, FR.	H4	85	14
BOLT, DRAIN PLUG, 20MM	D7	28	15		F7	60	10	BRACKET, FUEL TANK	G16	81	2
BOLT, EARTH, 6X16	G2	67	20		F8	61	14				16
	G4	69	28	BOLT, FLANGE, 6X35	F7	60	9	BRACKET, HANGER	H11	92	2
	G6	71	23	BOLT, FLANGE, 6X45	H5	86	20	BRACKET, HARNESS	F8	61	5
	G8	73	19	BOLT, FLANGE, 6X75	D6	27	23	BRACKET, REGULATOR RECTIFIER	F8	61	6
BOLT, FLANGE, 10X25	H6	87	42	BOLT, FLANGE, 6X8	E11	48	17	BRACKET, WIRE HARNESS CLIP	D8	29	17
BOLT, FLANGE, 10X40	F10	63	21		F7	60	11		F9	62	18
BOLT, FLANGE, 10X80	D1	22	23		F8	61	10		G13	78	16
BOLT, FLANGE, 5X12	G16	81	10	BOLT, FLANGE, 6X90	D11	32	29	BREAKER, CIRCUIT	G2	67	17
	H5	86	25	BOLT, FLANGE, 8X110	F9	62	23		G4	69	21
BOLT, FLANGE, 5X16	D15	36	19	BOLT, FLANGE, 8X12	G16	81	13		G6	71	18
				BOLT, FLANGE, 8X16	D3	24	16				44
					D9	30	27				

PART NAME INDEX

J 2

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
BREAKER, CIRCUIT	G7	72	14	CLIP, HARNESS	G13	78	11	COVER, BREATHER	D7	28	2
BRUSH	F9	62	8	CLIP, HIGH TENSION CORD	F3	56	8	COVER, CYLINDER HEAD	D3	24	4
	F10	63	8	CLIP, PISTON PIN, 18MM	D13	34	6				5
	H5	86	16		D14	35	7	COVER, FAN	E11	48	2
			17	CLIP, PURSE LOCK	E13	50	25	COVER, FUEL PUMP	E11	48	1
BRUSH ASSY.	H5	86	15	CLIP, TUBE	E14	51	28		E12	49	1
BUSH, LINKAGE	F12	65	14		E16	53	26	COVER, GENERATOR END	H4	85	12
					F3	56	13	COVER, HEAD	D1	22	8
							14	COVER, HEAD FILLER	D1	22	9
[C]					F4	57	10	COVER, L. SIDE	G15	80	5
CABLE ASSY., EARTH	G13	78	5				11	COVER, MAINTENANCE	G15	80	1
CABLE ASSY., STARTER	G13	78	2		G10	75	2	COVER, OIL FILTER	D8	29	7
CABLE ASSY., STARTING	G13	78	2		G11	76	21	COVER, R. SIDE	G15	80	4
CABLE COMP., CHOKE	G1	66	1				22	COVER, STARTER TERMINAL	G13	78	3
	G3	68	1				27	COVER, TERMINAL	F9	62	17
	G5	70	1	CLIP, VALVE GUIDE	D1	22	5		F10	63	18
	G7	72	1	CLUTCH COMP., OVERRUNNING	F9	62	7	CRANKCASE ASSY.	D7	28	1
CABLE, STRAP	G6	71	25		F10	63	6	CRANKSHAFT COMP.	D12	33	1
	G8	73	21	COCK ASSY., FUEL	G10	75	6	CUP, FUEL STRAINER	G10	75	9
CAMSHAFT ASSY.	D15	36	2	COIL ASSY., CHARGE	F7	60	5				
	E4	41	2		F8	61	3				
CAP ASSY., NOISE SUPPRESSOR ..	F7	60	4	COIL ASSY., IGNITION	F7	60	1	[D]			
CAP ASSY., OIL FILLER	D3	24	7				3	DIODE ASSY., ENGINE STOP	F7	60	6
CAP COMP., FUEL FILLER	G10	75	11		F8	61	1	DOWEL PIN, 10X12	F9	62	22
CAP, ADJUSTING SCREW	E16	53	32	COLLAR A, AIR CLEANER	F1	54	9	DOWEL PIN, 12X20	D1	22	21
CAP, CHOKE DUST	E13	50	13	COLLAR B, TAILLIGHT	E11	48	7		D7	28	10
	E15	52	12	COLLAR SET, CLUTCH STOP	F9	62	2	DOWEL PIN, 8X10	D10	31	19
CAP, OIL FILLER	D1	22	11		F10	63	2		E4	41	18
CAP, SEALING	F2	55	12	COLLAR, AIR CLEANER	E15	52	21	DOWEL PIN, 8X12	D15	36	24
CARBURETOR ASSY.	E13	50	11	COLLAR, AUTOMATIC VOLTAGE				DOWEL PIN, 8X14	D9	30	25
	E15	52	8	REGULATOR CASE	G5	70	6		D10	31	20
CARTRIDGE, OIL FILTER	D8	29	8		G7	72	5	DOWEL PIN, 9X10	D14	35	8
	D10	31	6	COLLAR, FAN COVER	E12	49	3	DUCT COMP., LOWER	G16	81	7
CASE COMP., AIR CLEANER	F1	54	4		F2	55	10	DUCT COMP., UPPER AIR	G16	81	6
	F2	55	3	COLLAR, FILTER SETTING	D5	26	7	DUCT, GENERATOR	H4	85	10
CASE, AUTOMATIC VOLTAGE				COLLAR, VALVE LIFTER	E4	41	12	DUCT, RR.	G16	81	9
REGULATOR	G5	70	5	CONSENT	G1	66	7				
	G7	72	4				8	[E]			
CASE, FUSE	G14	79	18		G3	68	6	ELBOW COMP., AIR CLEANER	E13	50	22
CHAMBER SET, FLOAT	E13	50	6	CONSENT ASSY.	G1	66	6		E15	52	23
	E15	52	4		G5	70	9	ELEMENT COMP., AIR CLEANER	F1	54	1
CIRCLIP, 5MM	F11	64	15	CONTROL ASSY.	F11	64	2		F2	55	1
CLAMPER, CORD	D5	26	8		F12	65	2	E-RING, 2.5MM	G4	69	31
CLAMP, CORD	F7	60	7	COVER	F9	62	10	E-RING, 5MM	F12	65	20
CLAMP, HIGH TENSION CORD	F8	61	2	COVER ASSY., AIR CLEANER	F1	54	6				
CLAMP, TUBE	F3	56	15	COVER ASSY., A.C. TERMINAL	G3	68	11				
	G11	76	23	COVER ASSY., CRANKCASE	D8	29	1				
CLIP B, CABLE	E13	50	24		D10	31	1				
CLIP, AIR CLEANER	F1	54	3	COVER ASSY., OIL PUMP	D8	29	4	FAN, COOLING	F5	58	1
CLIP, BREATHER TUBE	E13	50	2	COVER COMP., AIR CLEANER	F2	55	5		F6	59	1
	E15	52	22	COVER COMP., CONTROL BOX	G1	66	10	FAN, GENERATOR COOLING	H4	85	13
CLIP, GOVERNOR HOLDER	D8	29	21		G3	68	9	FILTER COMP., FUEL	G10	75	14
	D10	31	18		G6	71	14	FILTER, BREATHER	D7	28	3
	D15	36	23		G7	72	10	FILTER, OUTER	F1	54	2
	E4	41	17	COVER COMP., FAN	E12	49	2		F2	55	2
CLIP, HARNESS	G2	67	25	COVER, A.C. TERMINAL	G3	68	12	FLOAT SET	E13	50	5
	G4	69	35	COVER, BAND	H4	85	8		E15	52	3
	G6	71	27	COVER, BATTERY TERMINAL	G13	78	4	FLYWHEEL COMP.	F5	58	5
	G8	73	23	COVER, BREATHER	D5	26	2		F6	59	3

PART NAME INDEX

J 3

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
FRAME COMP.	H1	82	1	HOLDER, CABLE	F12	65	9	[M]			
FRAME COMP., COMMUTATOR END ..	F10	63	13	HOLDER, FUEL TUBE	G10	75	15	MANIFOLD, INTAKE	D1	22	13
FUNNEL, OIL	H9	90	8	HOLDER, GOVERNOR WEIGHT	D8	29	14		D3	24	10
FUSE, BLADE	G13	78	14		D10	31	14	MARK	H4	85	5
			15	HOLDER, OIL FILTER	D8	29	19	MARK, A.C. CAUTION	G4	69	24
[G]					D10	31	8	MARK, A.C. OUTPUT	H4	85	5
GASKET SET	E13	50	3	HOLDER, SCREEN GRID	F5	58	4	MARK, A.C. TERMINAL	G4	69	25
	E15	52	2	HOLDER, WIRE	F11	64	11		H7	88	10
GASKET, CASE COVER	D8	29	2		F12	65	12	MARK, CAUTION	H7	88	3
GASKET, CYLINDER HEAD	D1	22	7	HOOK KIT	H11	92	1		H8	89	19
GASKET, EX. PIPE	G9	74	3	HOOK, HANGER	H11	92	3	MARK, DIRECTION	H8	89	13
			4	HOSE, FUEL, 4.5X410	F3	56	12	MARK, EMBLEM	H7	88	1
GASKET, INTAKE MANIFOLD	D1	22	14	HOUSING COMP., DRIVE SIDE	F10	63	7				2
GAUGE COMP., OIL LEVEL	D8	29	11	HOUSING, FR.	H4	85	2	MARK, EX. CAUTION	H7	88	6
	D10	31	10	HOUSING, RR.	H4	85	11		H8	89	17
GEAR COMP., OIL PUMP	D10	31	3	[I]							21
GOVERNOR ASSY.	D8	29	12	INSULATOR, BRUSH HOLDER	F9	62	16	MARK, FUEL COCK	H8	89	12
	D10	31	12		F10	63	17	MARK, FUEL INDICATION	H8	89	18
GRID, SCREEN	F5	58	3	INSULATOR, CARBURETOR	E13	50	19	MARK, FUSE	G2	67	37
GROMMET, AIR CLEANER	F2	55	6		E15	52	18		G4	69	51
GROMMET, CHOKE CABLE	G2	67	26	[J]					G6	71	20
	G4	69	36						G7	72	16
	G6	71	28	JET SET, MAIN, #100	E14	51	30	MARK, HONDA	H7	88	5
	G8	73	24	JET SET, MAIN, #102	E14	51	30	MARK, HOT CAUTION	H7	88	7
GROMMET, CORD	F8	61	9	JET SET, MAIN, #105	E14	51	30				8
GROMMET, COVER	H1	82	6	JET SET, PILOT, #40	E16	53	28	MARK, L. EMBLEM	H8	89	15
GROMMET, HIGH TENSION CORD ...	F7	60	2	JET SET, #52	E13	50	14	MARK, OIL CHECK	H7	88	9
GROMMET, PUMP STAY	F3	56	10	JET, MAIN, #102	E16	53	27	MARK, PANEL	G1	66	11
GROMMET, RESERVE TANK	F3	56	7	JET, MAIN, #110	E16	53	27		G3	68	10
GROMMET, TOOL	F7	60	8	JET, MAIN, #98	E16	53	27		G6	71	15
GUARD, L. CONTROL PANEL	G15	80	7	JOINT, FUEL RETURN	F4	57	7		G7	72	11
GUARD, R. CONTROL PANEL	G15	80	6	JOINT, FUEL TUBE	F3	56	6	MARK, R. EMBLEM	H8	89	14
GUIDE COMP., CORD	G3	68	14	JOINT, ROD	F11	64	1	MARK, SPEC	H7	88	4
GUIDE, EX. VALVE	D1	22	3		F12	65	1	METER ASSY., FUEL	G10	75	12
GUIDE, IN. VALVE	D1	22	2	[K]				METER ASSY., HOUR	G2	67	18
GUIDE, PUSH ROD	D15	36	18	KEY COMP.	G1	66	13		G4	69	22
[H]					G4	69	16	METER ASSY., VOLT	G2	67	14
HANGER COMP.	G16	81	3	KEY, SPECIAL WOODRUFF, 25X18 ..	F5	58	8	MONITOR ASSY., MULTI	G6	71	19
HANGER, ENGINE	D1	22	1		F6	59	5		G7	72	15
	D3	24	1	KNOB, AIR CLEANER COVER	F2	55	7	MOTOR ASSY., STARTER	F9	62	3
HARNESS ASSY., CONTROL WIRE ..	G1	66	5						F10	63	3
	G3	68	5					MUFFLER COMP.	G9	74	1
	G5	70	7	[L]							9
	G7	72	6	LABEL, EX. CAUTION	H7	88	6	[N]			
HARNESS ASSY., ENGINE WIRE ...	F8	61	15	LABEL, OPERATOR WARNING	H8	89	16	NOZZLE, MAIN	E13	50	15
	G13	78	1	LENS, METER	G2	67	16		E15	52	14
HARNESS ASSY., REGULATOR	F8	61	7		G4	69	20	NUT-WASHER, 8MM	F10	63	20
RECTIFIER	F8	61	7	LEVER, COCK	G10	75	8	NUT, BATTERY TERMINAL	G13	78	7
HEAD COMP., CYLINDER	D1	22	4	LEVER, PINION DRIVE	F9	62	4	NUT, FENDER SETTING	E12	49	8
	D3	24	2		F10	63	4		D3	24	14
			3	LIFTER ASSY., VALVE	D15	36	10	NUT, FLANGE, 10MM	D5	26	19
HOLDER, BRUSH	F9	62	15		E4	41	9		H1	82	7
	F10	63	16					NUT, FLANGE, 20MM	F5	58	6
HOLDER, CABLE	F11	64	8					NUT, FLANGE, 3MM	G4	69	29
								NUT, FLANGE, 4MM	G2	67	32
									G4	69	44

PART NAME INDEX

J 4

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
NUT, FLANGE, 4MM	G6	71	34	PACKING, INTAKE MANIFOLD	D3	24	11	PUMP ASSY., FUEL	F3	56	1
	G8	73	31	PACKING, OIL FILLER CAP	D1	22	12		F4	57	1
NUT, FLANGE, 5MM	E11	48	15		D3	24	8	[R]			
	G8	73	32	PACKING, OIL PASS	D7	28	13				
	G11	76	19		D11	32	26	RECEPTACLE	G5	70	8
NUT, FLANGE, 6MM	E11	48	16	PANEL COMP., CONTROL	G1	66	9		G6	71	40
	F2	55	13		G3	68	8				10
	F11	64	20		G5	70	13				41
	F12	65	19		G7	72	9				42
	G4	69	45	PIN, DECOMPER	D15	36	7				43
	G12	77	8	PIN, GOVERNOR WEIGHT	D8	29	15				7
NUT, FLANGE, 8MM	G9	74	6		D10	31	15		G7	72	7
NUT, HEX.	F9	62	14	PIN, LOCK, 10MM	D7	28	19	RECTIFIER ASSY.	G1	66	4
	F10	63	15	PIN, LOCK, 8MM	D5	26	22		G3	68	4
NUT, HEX., 4MM	H6	87	38	PIN, PISTON	D13	34	3	RECTIFIER COMP., REGULATE	H5	86	18
NUT, HEX., 6MM	G2	67	31		D14	35	3	RECTIFIER COMP., REGULATOR	F8	61	4
	G4	69	43	PIN, SPLIT, 4.0X28	H10	91	7	REGULATOR ASSY., AUTOMATIC			
	G6	71	22	PIN, SPRING, 6X28	D16	37	26	VOLTAGE	G1	66	3
	G7	72	18	PIPE COMP., EX. TAIL	G9	74	11		G3	68	3
NUT, HEX., 8MM	F9	62	13	PIPE COMP., L. EX.	G9	74	5	REGULATOR UNIT, AUTOMATIC			
			20	PIPE COMP., OIL LEVEL	D10	31	11	VOLTAGE	G5	70	4
	F10	63	14	PIPE COMP., R. EX.	G9	74	2		G7	72	3
NUT, INSERT, 6MM	E13	50	23	PISTON	D13	34	2	RETAINER, 6MM	G2	67	21
NUT, PIVOT ADJUSTING	D15	36	21		D14	35	2		G4	69	30
NUT, SPECIAL	F6	59	4	PIVOT, ROCKER ARM	D15	36	5		G6	71	24
NUT, SQUARE, 5MM	E11	48	13	PLATE	E15	52	9		G8	73	20
NUT, TAPPET ADJUSTING	E4	41	16		G16	81	18	RETAINER, EX. VALVE SPRING	D15	36	15
NUT, TOOL BOX SETTING	F2	55	11	PLATE SET, CONSENT	G6	71	39	RETAINER, IN. VALVE SPRING	D15	36	14
[O]				PLATE, AIR CLEANER SETTING	F1	54	8		E4	41	14
OIL SEAL, 10X16X5	D7	28	12	PLATE, BATTERY SETTING	G12	77	3	RING SET, PISTON	D13	34	1
OIL SEAL, 38X58X9	D5	26	15	PLATE, CONSENT SETTING	G5	70	2		D14	35	1
	D7	28	11	PLATE, COOLING FAN	H4	85	1	RING, SNAP	F9	62	1
	D8	29	22	PLATE, COOLING FAN SETTING	F5	58	2		F10	63	1
	D10	31	22		F6	59	2	ROD ASSY., CONNECTING	D13	34	4
OIL SEAL, 8X14X5	D5	26	14	PLATE, DUCT	G16	81	5		D14	35	4
O-RING	E13	50	10	PLATE, FUEL INDICATION	H7	88	11	ROD COMP., PUSH	E4	41	3
O-RING, 11.8X2.4	D8	29	23	PLATE, HANGER	G16	81	4	ROD, CHOKE CONTROL	F11	64	12
O-RING, 13X3.0	D5	26	16	PLATE, LOCK	H10	91	5		F12	65	13
O-RING, 14MM	D5	26	17	PLATE, SIDE	E11	48	3	ROD, GOVERNOR	F11	64	5
O-RING, 14.8X2.4	D10	31	23						F12	65	6
O-RING, 37.9X2.4	D7	28	14	PLATE, STOPPER	D7	28	6	ROD, PUSH	D15	36	3
O-RING, 5.8X1.9	E13	50	16	PLUG	H9	90	10	ROTATOR, VALVE	D15	36	17
O-RING, 8.8X1.9	D11	32	25	PLUG ASSY.	H9	90	1	ROTOR COMP.	H4	85	9
O-RING, OIL PUMP	D10	31	24					ROTOR, OIL PUMP OUTER	D8	29	5
[P]									D10	31	2
PACKING, AIR CLEANER	E13	50	21	PLUG ASSY., CONSENT	H9	90	3	RUBBER, BOTTOM	H1	82	5
	E15	52	20					RUBBER, CUSHION	H5	86	19
PACKING, AIR CLEANER CASE	F2	55	9	PLUG, SPARK	D1	22	24	RUBBER, FUEL	G10	75	16
PACKING, BREATHER COVER	D5	26	3		D2	23	24	RUBBER, RR. FENDER	F4	57	8
PACKING, CARBURETOR	E13	50	20		D3	24	17	RUBBER, RR. FENDER CUSHION	E11	48	9
	E15	52	19	PLUG, VENT	G12	77	6	RUBBER, SUPPORTER	G10	75	4
PACKING, FUEL FILLER CAP	G10	75	13					[S]			
PACKING, FUEL STRAINER CUP	G10	75	1	PROTECTOR COMP., MUFFLER	G16	81	1	SCREEN, FUEL STRAINER	E15	52	15
PACKING, HEAD COVER	D1	22	10					SCREEN, OIL FILTER	D8	29	10
	D3	24	6	PROTECTOR, FAN COVER	E12	49	4	SCREW-WASHER, 3X25	G4	69	40
				PROTECTOR, TUBE	G10	75	5	SCREW-WASHER, 3X6	G4	69	39

PART NAME INDEX

J 5

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
SCREW-WASHER, 3X6	G8	73	27	SHAFT COMP., R. WHEEL	H10	91	2	SWITCH ASSY., COMBINATION	G7	72	13
SCREW-WASHER, 4X14	E14	51	26	SHAFT COMP., VALVE LIFTER	D15	36	12	SWITCH ASSY., MAGNET	F9	62	5
SCREW-WASHER, 4X8	G4	69	41		E4	41	10		F10	63	5
	G8	73	28	SHAFT, GOVERNOR ARM	D5	26	6	SWITCH ASSY., OIL LEVEL	D5	26	9
	H5	86	24		D7	28	7		D7	28	8
SCREW-WASHER, 5X10	E16	53	25	SHAFT, ROCKER ARM	E4	41	5	SWITCH A, MICRO	G4	69	18
	H6	87	37	SHEET, MAINTENANCE COVER	G15	80	2	SWITCH, MICRO	G4	69	17
SCREW-WASHER, 5X12	E14	51	27	SHROUD	E11	48	5				
SCREW-WASHER, 5X16	G2	67	30				6	[T]			
	G4	69	42	SHROUD, HEAD	D1	22	15	TANK COMP., FUEL	G10	75	10
SCREW-WASHER, 6X12	H5	86	26	SHROUD, L. LOWER	E12	49	7	TERMINAL SET, EARTH	G1	66	2
SCREW-WASHER, 6X16	F3	56	11	SHROUD, R. LOWER	E12	49	6		G3	68	2
	F4	57	9	SHROUD, SIDE FRAME	H1	82	10		G5	70	3
	G6	71	32	SHROUD, UPPER	E12	49	5		G7	72	2
	G8	73	29	SLIDER, GOVERNOR	D8	29	16	TERMINAL, A.C.	G3	68	7
SCREW SET	E13	50	7		D10	31	16	TERMINAL, A.C. OUT	H4	85	4
			9	SOCKET	G5	70	11	TIE, CABLE	G2	67	23
	E15	52	5				12				24
	E16	53	31	SPRING, AIR CLEANER CASE COVER	F2	55	8				33
SCREW SET, DRAIN	E13	50	8	SPRING, BRUSH	F9	62	9		G4	69	34
	E15	52	6		F10	63	9				16
SCREW, FLAT, 4X12	G6	71	45	SPRING, CABLE RETURN	F11	64	10		G6	71	26
SCREW, FLAT, 4X20	G6	71	31		F12	65	11				12
SCREW, FLAT, 5X10	G11	76	17	SPRING, CONTROL ADJUSTING	F11	64	9		G7	72	22
SCREW, FLAT, 5X16	G8	73	26		F12	65	10		G8	73	8
SCREW, FLOAT	E15	52	7	SPRING, GOVERNOR	F11	64	6		G13	78	31
SCREW, OVAL, 4X18	G11	76	18		F12	65	7	TUBE B, FUEL	H5	86	4
SCREW, PAN, 3X8	D7	28	17	SPRING, RELIEF VALVE	D8	29	6	TUBE COMP. A, FUEL	F3	56	3
SCREW, PAN, 4X12	E15	52	24		D10	31	5	TUBE COMP. B, FUEL	F4	57	4
	G2	67	29	SPRING, STARTER	F11	64	3	TUBE COMP., FUEL	F3	56	3
	G4	69	38		F12	65	3	TUBE, BREATHER	E13	50	1
	G6	71	30	SPRING, THROTTLE RETURN	F11	64	7		E15	52	1
	G8	73	25		F12	65	8	TUBE, CORD	G13	78	12
SCREW, PAN, 4X16	H5	86	35	SPRING, VALVE	D15	36	11	TUBE, DIAPHRAGM	F3	56	5
SCREW, PAN, 4X6	G2	67	28		E4	41	11		F4	57	6
	G6	71	29	SPRING, VALVE LIFTER	D15	36	13	TUBE, DRAIN	E13	50	17
SCREW, PAN, 5X35	F11	64	19		E4	41	13		E15	52	16
SCREW, PAN, 5X40	F12	65	18	SPRING, WEIGHT RETURN	D15	36	6	TUBE, FUEL COCK	G11	76	26
SCREW, PAN, 6X8	H6	87	36		E4	41	6	TUBE, FUEL TANK	G10	75	3
			44	STATOR ASSY.	H4	85	6	TUBE, PURGE	F4	57	5
SCREW, SPECIAL, 4X10	E12	49	9				7	TUBE, VINYL, 9X11X120	G11	76	28
SCREW, SPECIAL, 6X15	E12	49	10	STAY COMP., AIR CLEANER				TUBE, VINYL, 9X11X150	F3	56	16
SCREW, TAPPET ADJUSTING	E4	41	15		ELEMENT	F2	55				
SCREW, TAPPING, 4X10	G6	71	33	STAY, FUEL PUMP	F3	56	2				
	G8	73	30		F4	57	2				
SCREW, TAPPING, 4X8	G9	74	12	STAY, FUEL TUBE GROMMET	D3	24	9				
SCREW, TAPPING, 5X14	G15	80	8	STAY, STOPPER	G16	81	17	[V]			
	H5	86	21		H1	82	4	VALVE ASSY., SOLENOID	E13	50	18
SCREW, TAPPING, 5X20	E11	48	14	STOPPER, L. SIDE	H1	82	3		E15	52	17
	E12	49	11	STOPPER, R. SIDE	H1	82	2	VALVE COMP., FLOAT	E15	52	13
SCREW, THROTTLE STOP	E15	52	10	STOPPER, TOOL BOX LATCH	G4	69	23	VALVE SET, FLOAT	E13	50	4
SEAL, AIR CLEANER CASE	E16	53	29	STRAINER COMP., OIL	D10	31	4	VALVE, BREATHER	D5	26	4
	F1	54	5	STRAINER, FUEL	G10	75	7	VALVE, EX.	D15	36	9
SEAL, AIR CLEANER COVER	F1	54	7	STRAP, CABLE, 105MM	G2	67	22		E4	41	8
SEAL, DUCT	G16	81	8		G4	69	32	VALVE, IN.	D15	36	8
SEAL, VALVE STEM	D15	36	1	STRAP, CABLE, 118MM	H5	86	30		E4	41	7
	E4	41	1	SWITCH ASSY., COMBINATION	G1	66	12	VALVE, OIL OUTLET	D7	28	5
SEAT, VALVE SPRING	D15	36	16		G3	68	15	VALVE, OIL SHUT-OFF	D5	26	5
SHAFT COMP., L. WHEEL	H10	91	3		G6	71	17	VOLTMETER ASSY.	G2	67	15
									G4	69	19

PART NAME INDEX

J 6

Part name	Address	Page	Ref.	Part name	Address	Page	Ref.	Part name	Address	Page	Ref.
[W]											
WASHER COMP., HEAD COVER	D1	22	20								
WASHER, 10.5MM	H5	86	28								
WASHER, 20MM	F5	58	7								
WASHER, 6X16	D8	29	20								
	D10	31	17								
WASHER, CRANKSHAFT THRUST	D12	33	2								
WASHER, DRAIN PLUG, 14MM	D5	26	21								
WASHER, DRAIN PLUG, 20MM	D7	28	18								
WASHER, PLAIN	D7	28	9								
WASHER, PLAIN, 20MM	H10	91	6								
WASHER, PLAIN, 4MM	H6	87	39								
WASHER, PLAIN, 6MM	D9	30	24								
	D16	37	25								
	G2	67	33								
	G4	69	46								
	G6	71	35								
	G8	73	33								
	G11	76	20								
	G15	80	9								
WASHER, PLAIN, 8MM	D5	26	20								
	G4	69	47								
	G9	74	7								
WASHER, SPRING, 4MM	H6	87	40								
WASHER, SPRING, 6MM	G2	67	34								
	G4	69	48								
	G6	71	36								
	G8	73	34								
	H5	86	29								
	H6	87	43								
WASHER, SPRING, 8MM	F9	62	21								
WASHER, THRUST, 17.2MM	D15	36	22								
WEIGHT, GOVERNOR	D8	29	13								
	D10	31	13								
WHEEL COMP.	H10	91	4								
WHEEL KIT	H10	91	1								
WRENCH, BOX	H9	90	6								
			9								
WRENCH, PLUG	H9	90	5								
[Y]											
YOKE COMP.	F9	62	12								
	F10	63	12								

1

FOREWORD INDEX

2

ENGINE GROUP

3

FRAME GROUP

4

PART NUMBER INDEX

5

PART NAME INDEX



February 22, 2013



PARTS CATALOGUE NEWS

Honda Motor Co., Ltd.

Customer Service Technology Development Division

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	001

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
E-3-1	1	E	11100-Z6L-840	*PART NO. DELETION				
		D	11100-Z6L-801	CRANKCASE ASSY.....	- 1	- 1	-----	-----
F-1-3	14	E	38220-Z26-V71	*PART NO. DELETION				
		D	38220-Z26-V72	BREAKER, CIRCUIT (16A).....	- -	- 1	-----	----- RGH

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE



PARTS CATALOGUE NEWS

Honda Motor Co., Ltd.

Customer Service Technology Development Division

PARTS CATALOGUE - CORRECTED


Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	002

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		

E-12-1 FAN COVER (2)

ILLUSTRATION CORRECTED

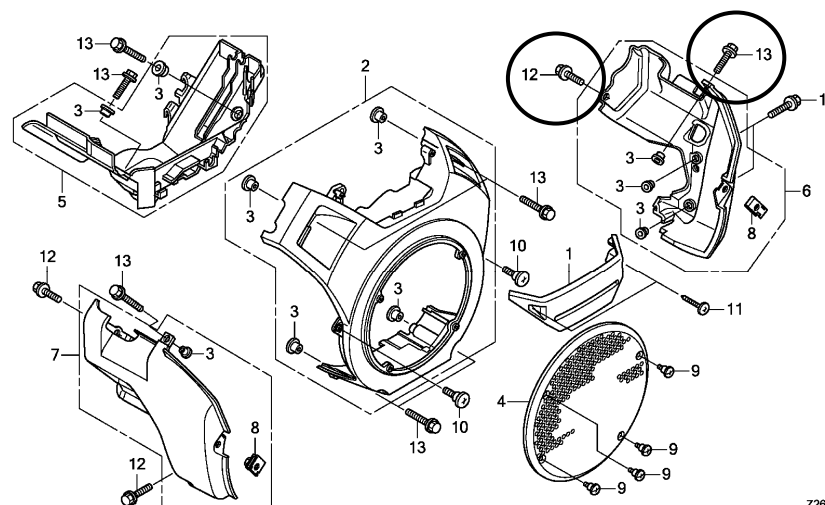

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE



PARTS CATALOGUE NEWS

Honda Motor Co., Ltd.
Customer Service Technology Development Division
PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	003

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code								
					EM 10000 K1	ET 12000 K1										
F-1-2 CONTROL BOX (EM10000K1)																
<table><tr><th>Ref. No.</th><th>(Relative ref. Number)</th><th>Description</th><th>FRT</th></tr><tr><td>46</td><td>6201C0</td><td>REGULATOR, AUTOMATIC VOLTAGE</td><td>1.0</td></tr></table>									Ref. No.	(Relative ref. Number)	Description	FRT	46	6201C0	REGULATOR, AUTOMATIC VOLTAGE	1.0
Ref. No.	(Relative ref. Number)	Description	FRT													
46	6201C0	REGULATOR, AUTOMATIC VOLTAGE	1.0													
F-1-2	4	E	31700-Z26-E80	*PART NO. DELETION												
	46	D	31720-Z26-C30	CASE ASSY., AUTOMATIC VOLTAGE REGULATOR	1		LDH									

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE


PARTS CATALOGUE NEWS

BOOKNo. : 13Z26704

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
		D	31720-Z26-C70		-	1	-	SH, SKH
		D	31720-Z26-C80		-	1	-	UH
		D	31720-Z26-E60		-	1	-	MH, RRH
		D	31720-Z26-E80		-	1	-	KH, RGH

F-1-3 CONTROL BOX (ET12000K1)

Ref. No.	(Relative ref. Number)	Description	FRT
37	6201C0	REGULATOR, AUTOMATIC VOLTAGE	1.0

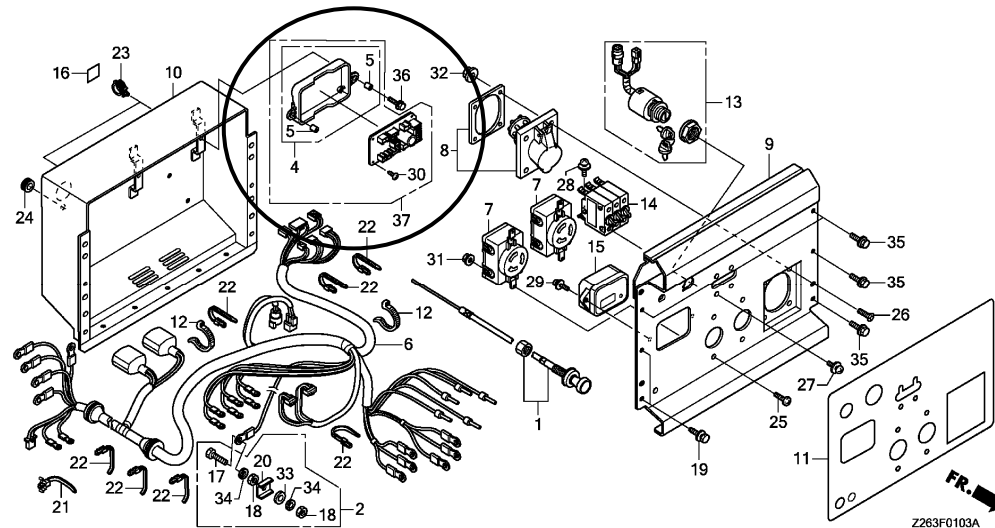

F-1-3	37	E	31700-Z26-L60	*PART NO. DELETION				
		D	31720-Z26-P60	CASE ASSY., AUTOMATIC VOLTAGE REGULATOR	-	-	1	RRH
		D	31720-Z26-V70		-	-	1	RGH

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

April 13, 2015



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	004

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
E-20-1	3	E	31630-ZCL-003	*PARTS NO. DELETION				
		T	31630-ZCL-013	COIL ASSY., CHARGE.....	- 1	- 1		
F-31	4	E	87152-Z26-E80	*PART NO. DELETION				

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

October 01, 2015



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	005

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY				Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1				
F-31	4		87152-Z26-S71	MARK, SPEC (RG).....	1	-	-	-	----- 1001204	RG
		A	87152-Z26-S72		1	-	-	-	1001205 -----	RG

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

November 20, 2015



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	006

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
E-12-1	9	L	90005-Z6L-000	SCREW, SPECIAL, 4X10.....	- 4	- 4	----- 1002443	KH, MH, RGH, RRH, UH
		T	90005-ZCK-000		- 4	- 4	1002444 -----	KH, MH, RGH, RRH, UH
					- 4	- -	----- -----	LDH, SH, SKH

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.


PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	007

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		

F-1-2 CONTROL BOX (EM10000K1)

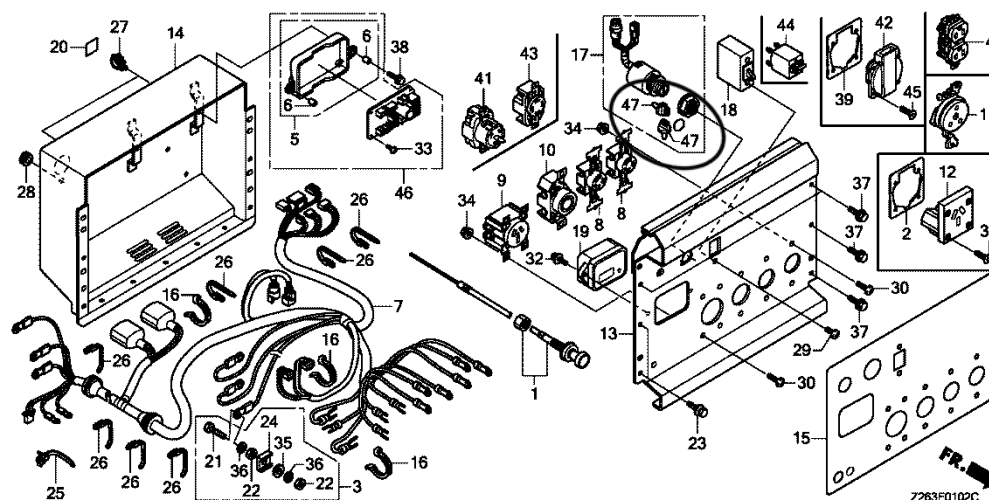


F-1-2	47	D	35110-ZV5-V50	KEY ASSY., COMBINATION SWITCH (W05)	-	2	-	-
-------	----	---	---------------	--	---	---	---	---

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

PARTS CATALOGUE NEWS

BOOKNo. :13Z26704

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
F-1-3				CONTROL BOX (ET12000K1)				

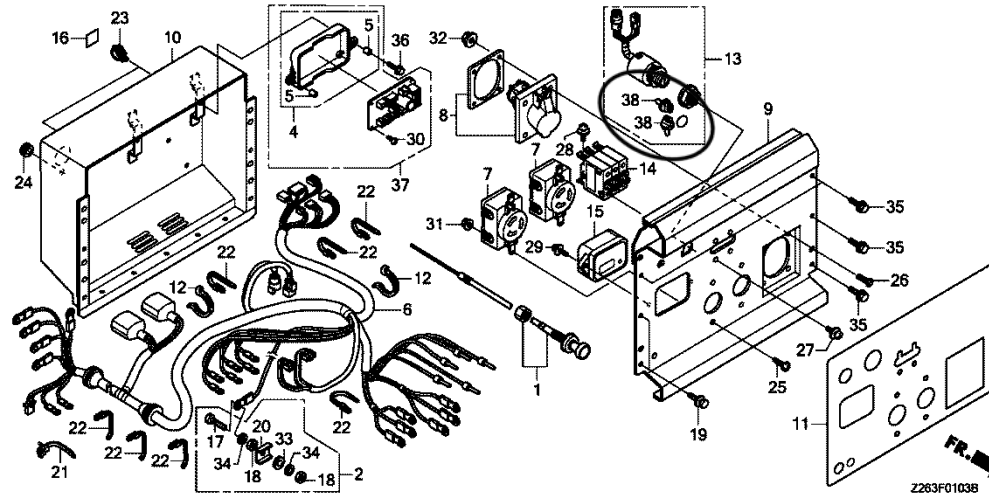

Z263F01038

F-1-3	38	D	35110-ZV5-V50	KEY ASSY., COMBINATION SWITCH (W05)	-	-	-	2
-------	----	---	---------------	--	---	---	---	---

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

September 22, 2016



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	008

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
E-8-1	2	E	13101-Z6L-010	*PART NO. DELETION				
		D	13101-Z6L-020	PISTON.....	- 2	- 2		

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

March 20, 2017



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	009

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY		Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1		
E-15-1	5	E	17230-Z6L-000	*PARTS NO. DELETION				
		D	17230-Z6L-010	COVER COMP., AIR CLEANER.....	- 1	- 1		
	7	E	17235-Z6L-300	*PARTS NO. DELETION				
		D	17235-Z6L-310	KNOB, AIR CLEANER COVER.....	- 2	- 2		

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO.DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE

June 09, 2017



PARTS CATALOGUE NEWS

Service Technology Department, Power Products Operations
Service Division, Honda Motor Co., Ltd.

PARTS CATALOGUE - CORRECTED

Printed in Japan

CODE NO.	13Z26704
PARTS CATALOGUE NEWS	EM10000 EM10000K1 ET12000 ET12000K1
NEWS NO.	010

Block No.	Ref. No.	Note	Part No.	Description	Reqd. QTY			Serial No.	Parts catalogue code
					EM 10000 K1	ET 12000 K1			
E-20-1	1	E	30500-Z6L-013	*PART NO. DELETION					
		T	30500-Z6L-033	COIL ASSY., IGNITION.....	-	2	-	2	
F-15	3	L	18333-ZB4-800	GASKET, EX. PIPE.....	2	-	-	-----	1000767 RH
					2	-	-	-----	1001096 R, RG
					-	-	2	-----	1000437 RH
					-	-	2	-----	1000947 R, RG
					2	2	-	-----	----- K, KH, LDH, MH, RGH, RRH, SH, SKH, UH
					2	-	-	-----	1000768 ----- RH
	9	E	18310-Z26-E80	*PART NO. DELETION	2	-	-	-----	1001097 ----- R, RG
					-	-	2	-----	1000438 ----- RH
					-	-	2	-----	1000948 ----- R, RG
		D	18310-Z26-E81	MUFFLER COMP.....	-	1	-	1	

NOTE A:PART NO. CHANGE D:NEWLY PROVIDED E:PART NO. DELETION K:REQUIRED NO. CORRECTION L:APPLICATION SERIAL NO. CORRECTION
M:PART DESCRIPTION CORRECTION T:APPLICATION CORRECTION Z:REMARKS CHANGE